



# Aeronautical Application (Aero App)

iOS User Manual Version 1.2406

NSN76440152335389

**Publication Date: July 25, 2024**

## Acknowledgements

The Aeronautical Application (Aero App) User Manual was produced by Hilton Software. Hilton Software expresses great appreciation to everyone who contributed to the content quality. Hilton Software and NGA sincerely appreciate your feedback and commitment to continually improve Aero App.





---

## Table of Contents

|                                                        |    |
|--------------------------------------------------------|----|
| 1 Introduction.....                                    | 12 |
| 2 About the User Manual .....                          | 13 |
| 3 Getting Started .....                                | 13 |
| 3.1 System Requirements .....                          | 13 |
| 3.2 Use Dark Mode on Aero App.....                     | 14 |
| 3.2.1 Enable Dark Mode With Siri .....                 | 14 |
| 3.2.2 Enable Dark Mode Through Control Center.....     | 14 |
| 3.2.3 Enable Dark Mode Through Device Settings .....   | 14 |
| 3.3 Contextual Help .....                              | 15 |
| 4 Multitasking on iOS.....                             | 16 |
| 4.1 Switch Between Apps in Split View .....            | 19 |
| 4.2 Close Apps in Split View .....                     | 20 |
| 5 Troubleshooting.....                                 | 21 |
| 6 Accounts .....                                       | 22 |
| 6.1 Aero User Database (AUD) Account Registration..... | 22 |
| 6.2 NGA GEOAxis Account Registration .....             | 23 |
| 6.3 Flight Service Account Registration .....          | 24 |
| 6.4 ASPS Account Registration .....                    | 25 |
| 7 Aero App Installation.....                           | 26 |
| 7.1 Where to Obtain Aero App.....                      | 26 |
| 7.1.1 Install Aero App From Aero App DVD .....         | 26 |
| 7.1.1.1 Sideload Files with iTunes .....               | 27 |
| 7.1.1.2 Sideload Files with Finder .....               | 29 |
| 7.1.2 Install Aero App From Apple App Store .....      | 30 |
| 7.1.3 Install Aero App From Aero App Website .....     | 30 |
| 8 Where to Obtain Aero App Data.....                   | 32 |
| 9 Aero App Data Overview .....                         | 32 |
| 9.1 Aero App Maps .....                                | 33 |
| 9.2 Air Force Weather .....                            | 33 |
| 9.3 Core Data .....                                    | 33 |
| 9.4 Core Data Delta Files .....                        | 33 |

---

|                                                                         |    |
|-------------------------------------------------------------------------|----|
| 9.5 Electronic – Instrument Procedure Library (E-IPL) .....             | 34 |
| 9.6 FAA Sectionals .....                                                | 34 |
| 9.7 Georeference.....                                                   | 34 |
| 9.8 Giant Reports.....                                                  | 34 |
| 9.9 Helicopter and Terminal Area Chart (TAC) Maps .....                 | 35 |
| 9.10 Map Library .....                                                  | 35 |
| 9.11 Maxar .....                                                        | 35 |
| 9.12 Temporary Flight Restrictions (TFRs) .....                         | 36 |
| 9.13 Terrain .....                                                      | 36 |
| 9.14 User Files .....                                                   | 36 |
| 10 Download Data .....                                                  | 37 |
| 10.1 Background Downloading .....                                       | 37 |
| 10.2 Download Data Through Amazon Web Services (AWS) .....              | 38 |
| 10.2.1 Download Data Using Aero User Database (AUD) .....               | 40 |
| 10.2.1.1 Download Map Library Data Using Aero User Database (AUD) ..... | 42 |
| 10.2.2 Download Data Using GEOAxis .....                                | 44 |
| 10.2.3 Download Data Using Mobile Device Management (MDM) .....         | 46 |
| 10.3 Download Data Using Aero Data Server (ADS) .....                   | 48 |
| 10.3.1 Aero Data Server (ADS) Discover .....                            | 48 |
| 10.3.1.1 Download Map Library Data Using Aero Data Server (ADS) .....   | 50 |
| 10.4 Easy Buttons .....                                                 | 52 |
| 10.5 Download Data From the Aero App Website .....                      | 54 |
| 11 Sideload Data .....                                                  | 56 |
| 11.1 Sideload Data From Aero App DVD .....                              | 56 |
| 11.1.1 Sideload Data with iTunes .....                                  | 56 |
| 11.1.2 Sideload Data with Finder .....                                  | 58 |
| 11.2 Sideload User Maps.....                                            | 60 |
| 11.2.1 Sideload User Maps with iTunes .....                             | 60 |
| 11.2.2 Sideload User Maps with Finder .....                             | 61 |
| 11.3 Sideload User GeoPackages .....                                    | 63 |
| 11.3.1 Sideload User GeoPackages with iTunes .....                      | 63 |
| 11.3.2 Sideload User GeoPackages with Finder.....                       | 65 |
| 11.4 Sideload User Waypoints .....                                      | 66 |

---

|                                                         |     |
|---------------------------------------------------------|-----|
| 11.4.1 Sideload User Waypoints with iTunes .....        | 67  |
| 11.4.2 Sideload User Waypoints with Finder .....        | 68  |
| 11.5 Sideload Common Route Definition (CRD) Files ..... | 70  |
| 11.5.1 Sideload CRD Files with iTunes .....             | 70  |
| 11.5.2 Sideload CRD Files with Finder .....             | 71  |
| 11.6 Sideload Pins .....                                | 73  |
| 11.6.1 Sideload Pins with iTunes .....                  | 73  |
| 11.6.2 Sideload Pins with Finder .....                  | 76  |
| 11.7 Sideload Hazards .....                             | 78  |
| 11.7.1 Sideload Hazards with iTunes .....               | 78  |
| 11.7.2 Sideload Hazards with Finder .....               | 81  |
| 11.8 Sideload Documents .....                           | 83  |
| 11.8.1 Sideload Documents with iTunes .....             | 83  |
| 11.8.2 Sideload Documents with Finder .....             | 85  |
| 11.9 Sideload KML/KMZ .....                             | 87  |
| 11.9.1 Sideload KML/KMZ Files with iTunes .....         | 87  |
| 11.9.2 Sideload KML/KMZ Files with Finder .....         | 89  |
| 12 Updating Aero App Data .....                         | 91  |
| 12.1 Data Notifications .....                           | 91  |
| 13 Manage Data .....                                    | 92  |
| 13.1 Data Status .....                                  | 92  |
| 13.2 Manage Data Downloads .....                        | 93  |
| 13.3 Delta Files .....                                  | 95  |
| 13.3.1 Download Delta Files (Faster) .....              | 95  |
| 13.3.2 Download Compatible Files .....                  | 98  |
| 13.4 Share Data via AirDrop .....                       | 101 |
| 13.4.1 Receiving Map/Cycle Files Through AirDrop .....  | 103 |
| 13.5 Upload Data to ADS .....                           | 105 |
| 13.5.1 Sharing Incompatible Files .....                 | 106 |
| 13.6 File Manager .....                                 | 107 |
| 14 Aero App Menus .....                                 | 108 |
| 14.1 Collapsible Route Panel .....                      | 110 |
| 14.1.1 Add .....                                        | 111 |

---

|                                                             |     |
|-------------------------------------------------------------|-----|
| 14.1.1.1 Add Military Training Routes (MTRs) to Route ..... | 113 |
| 14.1.1.2 Add Airways to Route .....                         | 115 |
| 14.1.2 Edit .....                                           | 117 |
| 14.1.3 Route Manager.....                                   | 118 |
| 14.1.3.1 Actions.....                                       | 118 |
| 14.1.3.1.1 Load Route .....                                 | 119 |
| 14.1.3.1.1.1 Load a CRD File .....                          | 120 |
| 14.1.3.1.2 Save Route .....                                 | 121 |
| 14.1.3.1.2.1 Save a CRD File.....                           | 122 |
| 14.1.3.1.3 Reverse Route .....                              | 123 |
| 14.1.3.1.4 Clear Route .....                                | 123 |
| 14.1.3.1.4.1 Delete Imported and Saved Routes .....         | 124 |
| 14.1.3.2 Add.....                                           | 125 |
| 14.1.3.2.1 Add Air Refueling Route .....                    | 125 |
| 14.1.3.2.1.1 View Air Refueling Route.....                  | 128 |
| 14.1.3.2.2 Flight Plan.....                                 | 129 |
| 14.1.3.2.3 Preferred Route .....                            | 130 |
| 14.1.3.2.3.1 Preferred Route with DP and STAR .....         | 131 |
| 14.1.3.2.4 Add Search and Rescue (SAR) Pattern .....        | 133 |
| 14.1.3.3 Send.....                                          | 135 |
| 14.1.3.3.1 AirDrop Route .....                              | 135 |
| 14.1.3.3.1.1 Send Route Using AirDrop .....                 | 135 |
| 14.1.3.3.1.2 Receive Route Through AirDrop .....            | 135 |
| 14.1.3.3.2 Flight Plans .....                               | 136 |
| 14.1.3.3.2.1 Credentials.....                               | 136 |
| 14.1.3.3.2.2 New Aircraft .....                             | 138 |
| 14.1.3.3.2.3 Aircraft .....                                 | 140 |
| 14.1.3.3.2.4 New Flight Plan .....                          | 142 |
| 14.1.3.3.2.5 Flight Plans.....                              | 145 |
| 14.1.3.3.2.5.1 Actions for Filed Flight Plans .....         | 147 |
| 14.1.3.4 Show .....                                         | 150 |
| 14.1.3.4.1 Doghouses.....                                   | 150 |
| 14.1.3.4.1.1 Edit Doghouses .....                           | 153 |

---

|                                                                                               |     |
|-----------------------------------------------------------------------------------------------|-----|
| 14.1.3.4.2 Dropped Pins .....                                                                 | 154 |
| 14.1.3.4.3 Dropped Hazards.....                                                               | 155 |
| 14.1.3.4.4 Point Shapes .....                                                                 | 156 |
| 14.1.3.4.5 Routes .....                                                                       | 157 |
| 14.1.3.4.6 User Waypoints.....                                                                | 159 |
| 14.1.3.4.7 Route Line Transparency .....                                                      | 160 |
| 14.2 Search .....                                                                             | 161 |
| 14.2.1 Giant Report.....                                                                      | 162 |
| 14.2.2 Add an Identifier to Favorites.....                                                    | 163 |
| 14.3 Active Point.....                                                                        | 164 |
| 14.3.1 Identifier Information .....                                                           | 164 |
| 14.3.1.1 Download Host Nation Charts.....                                                     | 167 |
| 14.3.2 Airport Chart Options .....                                                            | 169 |
| 14.3.2.1 Draw on Airport Diagram (APD) and Instrument Approach Procedure<br>(IAP) Charts..... | 170 |
| 14.3.2.2 Contract Fuel Locations on APDs .....                                                | 171 |
| 14.3.3 Continuation of Airport Charts.....                                                    | 172 |
| 14.3.4 Weather and Potential Hazard Information .....                                         | 175 |
| 14.3.4.1 Internet .....                                                                       | 175 |
| 14.3.4.1.1 METARs and Terminal Aerodrome Forecasts (TAFs).....                                | 175 |
| 14.3.4.1.2 Notice of Airmen (NOTAMs) Website .....                                            | 177 |
| 14.3.4.2 METARs .....                                                                         | 178 |
| 14.3.4.3 Terminal Aerodrome Forecasts (TAFs) .....                                            | 178 |
| 14.3.4.4 Winds and Temps .....                                                                | 179 |
| 14.3.4.5 Pilot Reports (PIREPs).....                                                          | 180 |
| 14.3.4.6 Notice to Airmen (NOTAMs) .....                                                      | 180 |
| 14.4 Map .....                                                                                | 181 |
| 14.4.1 Flight Information Panel.....                                                          | 181 |
| 14.4.1.1 GPS Reception Connection Status .....                                                | 182 |
| 14.4.1.2 Speed .....                                                                          | 182 |
| 14.4.1.3 Zulu Time.....                                                                       | 182 |
| 14.4.1.4 Track .....                                                                          | 182 |
| 14.4.1.5 Altitude .....                                                                       | 183 |
| 14.4.1.6 Center Target Coordinates .....                                                      | 183 |

---

|                                                                   |     |
|-------------------------------------------------------------------|-----|
| 14.4.1.7 Distance and Bearing .....                               | 183 |
| 14.4.1.8 Breadcrumbs .....                                        | 184 |
| 14.4.1.8.1 View Breadcrumbs in KML .....                          | 186 |
| 14.4.1.8.2 View Breadcrumbs in Route List .....                   | 187 |
| 14.4.1.8.3 View Breadcrumbs in SQLite File .....                  | 188 |
| 14.4.2 Timer .....                                                | 189 |
| 14.4.3 Air Force Weather (AF Wx) .....                            | 191 |
| 14.4.3.1 Air Force Weather (AF Wx) on Map View .....              | 192 |
| 14.4.3.2 Air Force Weather (AF Wx) on Route Panel .....           | 193 |
| 14.4.3.3 Air Force Weather (AF Wx) Information on Wx Menu .....   | 194 |
| 14.4.4 Automatic Dependent Surveillance – Broadcast (ADS-B) ..... | 195 |
| 14.4.4.1 Connecting to ADS-B Receiver via Wi-Fi .....             | 195 |
| 14.4.4.2 Connecting to ADS-B Receiver via Bluetooth .....         | 195 |
| 14.4.4.2.1 ADS-B Information .....                                | 196 |
| 14.4.5 Map Manager .....                                          | 197 |
| 14.4.5.1 Maps .....                                               | 197 |
| 14.4.5.1.1 Aero Maps .....                                        | 198 |
| 14.4.5.1.1.1 FAA Visual Flight Rule (VFR) .....                   | 198 |
| 14.4.5.1.1.2 Instrument Flight Rule (IFR) High .....              | 199 |
| 14.4.5.1.1.3 Instrument Flight Rule (IFR) Low .....               | 199 |
| 14.4.5.1.1.4 Maxar (online) .....                                 | 200 |
| 14.4.5.1.2 Base Map .....                                         | 201 |
| 14.4.5.1.2.1 Earth Base Map .....                                 | 201 |
| 14.4.5.1.2.2 Gray Base Map .....                                  | 201 |
| 14.4.5.1.3 Maxar (Offline) .....                                  | 202 |
| 14.4.5.1.3.1 Maxar (Offline) .....                                | 202 |
| 14.4.5.1.4 Helicopter and Terminal Area Chart (TAC) Maps .....    | 205 |
| 14.4.5.1.4.1 Helicopter (Gulf Coast) .....                        | 205 |
| 14.4.5.1.4.2 Helicopter (Routes) .....                            | 205 |
| 14.4.5.1.4.3 Terminal Area Charts (TACs) .....                    | 206 |
| 14.4.5.1.5 Map Library .....                                      | 207 |
| 14.4.5.1.5.1 Map Library .....                                    | 207 |
| 14.4.5.1.6 User GeoPackages .....                                 | 208 |

---

|                                                                           |     |
|---------------------------------------------------------------------------|-----|
| 14.4.5.1.6.1 User GeoPackages.....                                        | 208 |
| 14.4.5.1.7 User Maps .....                                                | 209 |
| 14.4.5.1.7.1 User Maps.....                                               | 209 |
| 14.4.5.2 Overlays .....                                                   | 210 |
| 14.4.5.2.1 Aero Overlays.....                                             | 210 |
| 14.4.5.2.1.1 Air Defense Identification Zone (ADIZ) .....                 | 210 |
| 14.4.5.2.1.2 Airports.....                                                | 211 |
| 14.4.5.2.1.3 Air Refueling Routes.....                                    | 211 |
| 14.4.5.2.1.4 Airspaces (B, C, D) .....                                    | 212 |
| 14.4.5.2.1.5 Airways – Low.....                                           | 212 |
| 14.4.5.2.1.6 Airways – High.....                                          | 213 |
| 14.4.5.2.1.7 Arresting Gear.....                                          | 213 |
| 14.4.5.2.1.8 Air Route Traffic Control Centers (ARTCCs) – Low .....       | 214 |
| 14.4.5.2.1.9 Air Route Traffic Control Centers (ARTCCs) – High.....       | 214 |
| 14.4.5.2.1.10 Flight Information Regions (FIR) .....                      | 215 |
| 14.4.5.2.1.11 Upper Flight Information Region (UIR) .....                 | 215 |
| 14.4.5.2.1.12 Fuel Locations .....                                        | 216 |
| 14.4.5.2.1.13 Hazards.....                                                | 216 |
| 14.4.5.2.1.14 International Boundaries.....                               | 217 |
| 14.4.5.2.1.15 Mountainous Areas .....                                     | 217 |
| 14.4.5.2.1.16 Military Training Routes (MTRs) Instrument Route (IR) ..... | 218 |
| 14.4.5.2.1.17 Military Training Routes (MTRs) Visual Route (VR) .....     | 218 |
| 14.4.5.2.1.18 Military Training Routes (MTRs) Slow Speed Route (SR) ..... | 219 |
| 14.4.5.2.1.19 Pins .....                                                  | 219 |
| 14.4.5.2.1.20 Runways .....                                               | 220 |
| 14.4.5.2.1.21 Search and Rescue (SAR) Grids .....                         | 220 |
| 14.4.5.2.1.22 Special Use Airspaces (SUAs) .....                          | 221 |
| 14.4.5.2.1.23 Terrain .....                                               | 222 |
| 14.4.5.2.1.24 Temporary Flight Restrictions (TFRs) .....                  | 223 |
| 14.4.5.2.1.24.1 View Textual Temporary Flight Restrictions (TFRs).....    | 225 |
| 14.4.5.2.1.25 Time Zones.....                                             | 226 |
| 14.4.5.2.1.26 User Images.....                                            | 226 |
| 14.4.5.2.1.27 Vertical Obstructions (VOs).....                            | 227 |

---

|                                                              |     |
|--------------------------------------------------------------|-----|
| 14.4.5.2.2 Traffic.....                                      | 228 |
| 14.4.5.2.2.1 Traffic .....                                   | 228 |
| 14.4.5.2.3 User Overlays .....                               | 229 |
| 14.4.5.2.3.1 User Overlays.....                              | 229 |
| 14.4.5.2.3.2 Share KML/KMZ .....                             | 231 |
| 14.4.5.2.3.2.1 Sharing KML/KMZ Files Through AirDrop.....    | 232 |
| 14.4.5.2.3.2.2 Receiving KML/KMZ Files Through AirDrop ..... | 233 |
| 14.4.5.2.3.2.3 Sharing KML/KMZ Files Through Email .....     | 235 |
| 14.4.5.2.3.2.4 Receiving KML/KMZ Files Through Email .....   | 236 |
| 14.4.5.2.4 Weather .....                                     | 239 |
| 14.4.5.2.4.1 METARs.....                                     | 239 |
| 14.4.5.2.4.2 ADS-B Weather .....                             | 240 |
| 14.4.6 Map Options .....                                     | 241 |
| 14.4.6.1 Location .....                                      | 241 |
| 14.4.6.1.1 Breadcrumbs .....                                 | 242 |
| 14.4.6.1.2 Distance Rings .....                              | 243 |
| 14.4.6.2 Ownship .....                                       | 244 |
| 14.4.6.2.1 Show Ownship and Ownship Icon.....                | 244 |
| 14.4.6.2.2 Snap to Location.....                             | 245 |
| 14.4.6.2.3 North Up.....                                     | 245 |
| 14.4.7 Split Screen .....                                    | 246 |
| 14.4.7.1 APD and IAP for Destination Airport.....            | 246 |
| 14.4.7.2 PDF Support.....                                    | 248 |
| 14.4.8 Move Map to Location .....                            | 249 |
| 14.4.9 Snap to Location .....                                | 250 |
| 14.4.10 Center Target .....                                  | 251 |
| 14.4.10.1 Measure Distance and Bearing Between Points.....   | 251 |
| 14.4.11 Drag and Drop .....                                  | 252 |
| 14.4.12 Identifier Menu .....                                | 254 |
| 14.4.12.1 Actions.....                                       | 255 |
| 14.4.12.1.1 Create User Waypoint .....                       | 255 |
| 14.4.12.1.2 Direct-To on Empty Route .....                   | 257 |
| 14.4.12.1.2.1 Direct-To on Existing Route.....               | 258 |



---

|                                                                                                   |     |
|---------------------------------------------------------------------------------------------------|-----|
| 14.4.12.1.3 Drop Pin .....                                                                        | 261 |
| 14.4.12.1.3.1 Photo Pin .....                                                                     | 261 |
| 14.4.12.1.3.2 Pin .....                                                                           | 263 |
| 14.4.12.1.3.2.1 Add Pin to Route .....                                                            | 264 |
| 14.4.12.1.3.2.2 View Pin Information .....                                                        | 265 |
| 14.4.12.1.4 Drop Hazard .....                                                                     | 266 |
| 14.4.12.1.5 Add to Route .....                                                                    | 268 |
| 14.4.12.2 Add.....                                                                                | 269 |
| 14.4.12.2.1 Add Departure Procedure (DP) or Standard Terminal Arrival Route (STAR) to Route ..... | 269 |
| 14.4.12.3 Show .....                                                                              | 272 |
| 14.4.12.3.1 Show on Map .....                                                                     | 272 |
| 14.4.12.3.2 Instrument Approach Procedure (IAP) on Map .....                                      | 273 |
| 14.4.12.3.3 Info and Wx (Information and Weather) .....                                           | 274 |
| 14.4.12.3.4 Minimum Vectoring Altitude (MVA) .....                                                | 275 |
| 14.4.12.3.5 Nearest.....                                                                          | 276 |
| 14.4.12.3.6 Orbit .....                                                                           | 277 |
| 14.4.12.3.6.1 Orbit Altitude.....                                                                 | 280 |
| 14.4.13 Estimated Time Enroute (ETE) and Estimated Time of Arrival (ETA) .....                    | 284 |
| 14.5 General .....                                                                                | 285 |
| 14.5.1 Charts.....                                                                                | 285 |
| 14.6 Weather (Wx) Images .....                                                                    | 289 |
| 14.7 Calcs (Calculations).....                                                                    | 291 |
| 14.7.1 E6B Calculator.....                                                                        | 291 |
| 14.7.2 Fuel Check .....                                                                           | 295 |
| 14.8 Notepad .....                                                                                | 296 |
| 14.9 Help .....                                                                                   | 297 |
| 14.9.1 User Manual Access .....                                                                   | 298 |
| 14.10 Data .....                                                                                  | 300 |
| 14.11 Settings .....                                                                              | 301 |
| 14.11.1 Miscellaneous.....                                                                        | 301 |
| 14.11.2 Reset .....                                                                               | 302 |
| 14.11.3 Route.....                                                                                | 302 |

---

|                                                                                    |     |
|------------------------------------------------------------------------------------|-----|
| 14.11.4 User Interface .....                                                       | 302 |
| 15 Appendix A   Uninstall Aero App.....                                            | 304 |
| 16 Appendix B   User Waypoints and Coordinates.....                                | 305 |
| 17 Appendix C   Hazards and Pins SQLite Files .....                                | 306 |
| 17.1 Specifications for Hazards .....                                              | 306 |
| 17.1.1 Hazards SQLite Table .....                                                  | 308 |
| 17.2 Specifications for Pins.....                                                  | 308 |
| 17.2.1 Pins SQLite Table .....                                                     | 310 |
| 18 Appendix D   PDF Viewer.....                                                    | 311 |
| 18.1 Multiple Page.....                                                            | 311 |
| 18.2 PDF Search.....                                                               | 312 |
| 18.3 PDF Markup.....                                                               | 313 |
| 18.4 Share or Copy.....                                                            | 314 |
| 18.5 Print.....                                                                    | 314 |
| 19 Appendix E   FAA Addendum .....                                                 | 315 |
| 19.1 Downloading FAA Data .....                                                    | 315 |
| 19.2 FAA Special Procedure.....                                                    | 315 |
| 19.3 ILS-1 Maneuvers.....                                                          | 316 |
| 19.4 Add Instrument Approach Procedure (IAP) to Route .....                        | 318 |
| 19.5 Departure Procedures (DPs) and Standard Terminal Arrival Routes (STARs) ..... | 320 |
| 19.5.1 Add FAA Uncertified Procedure to Route .....                                | 320 |
| 19.5.2 Show DPs and STARs .....                                                    | 322 |
| 19.6 Controlling Obstacle .....                                                    | 325 |
| 19.7 Authorized Aircraft Service Centers.....                                      | 330 |
| 19.8 Import and Display Scheduled Flight Inspection Itineraries .....              | 332 |
| 19.9 Add KML Coordinates to Route .....                                            | 334 |
| 19.9.1 Show KML Coordinates in Show Routes .....                                   | 335 |
| 20 Appendix F   Acronyms and Glossary .....                                        | 336 |

## 1 Introduction

The aeronautical multi-platform application, Aero App, is a collaborative effort reaching across NGA and other government agencies, focused on supporting the Warfighters and NGA Vision.

The design of Aero App is to enhance the use of Aeronautical Flight Information Publication (FLIP) data and manage individual FLIP products. The key offerings of Aero App are as follows:

- Provides an interactive, high-performance, worldwide Map.
- Provides a library of current nationwide VFR Sectionals, worldwide IFR High and Low charts, Helicopter and TAC Maps, and a designated place to store and use personalized user maps.
- Various overlays such as Airports, Air Refueling Routes, Airspaces, Airways, Arresting Gear, ARTCCs, FIRs, International boundaries, MTRs, Pins, and many more including User Overlays.
- View detailed airport information and charts such as APD, IAP, Dep, Arr, Min, and more.
- View critical charts and documents such as Supplements, Planning, user documents, and Legends.
- View weather information such as METARs, TAFs, Winds, Temps, PIREPs, NOTAMs, and Air Force Weather.
- Create, save, edit, or delete points within the Map's Route Panel.
- View navigation data such as Graphic Charts, CONUS Chart Graphics, Military Training Routes, and more.
- Use the integrated E6B calculator for flight planning on ground and air operations. Various calculations include Altitude, Cold Wx, Conversions, Coordinates, Descent, Distance, IFR Climb, Rwy Winds, and Winds Aloft.
- Manage and make modifications to files that have been downloaded and loaded onto Aero App.
- Load and view PDF format.

## 2 About the User Manual

The Aero App user manual is a comprehensive guide that describes the use and understanding of Aero App. It provides detailed information on worldwide Map coverage, including aeronautical overlays and user maps, as well as displaying Air Force Weather, airport, and other navigation information. Pilots can view georeferenced FLIP and FAA charts that show your ownship location, as well as Electronic-Instrument Procedure Library (E-IPL) and Host Nation charts, and much more. Whether you're an experienced pilot or new to the field, the Aero App user manual is an essential resource that will assist you in your mission effortlessly.

## 3 Getting Started

The Aero App User Manual provides detailed instructions on using Aero App. It covers procedures such as app installation, data loading, and utilizing integrated features. Additionally, it includes conceptual explanations for the app's features, tools, overlays, and other offerings. Before getting started, it's important to ensure that your system meets the outlined system requirements, which are further detailed in the next section.

### 3.1 System Requirements

To install and utilize Aero App for iOS, it is important to ensure that your device meets the necessary requirements. These include having a compatible operating system and sufficient memory and disk space. The system requirements are listed below:

- Required
  - iPad running iOS 16.0 or later
  - iPad with Apple A12X processor or later
  - 16 GB of available storage (for the installation of Aero App and one complete data cycle)
- Optional
  - USB cable to connect the iPad to a stand-alone computer
  - The latest version of iTunes, available at <https://www.apple.com/itunes>.
- Internet connection if downloading data or Aero App via the internet

## 3.2 Use Dark Mode on Aero App

Apple's iOS 13 introduced Dark Mode, a color scheme that uses light-colored text, icons, and graphical user interface elements on a dark background.

### 3.2.1 Enable Dark Mode With Siri

The simplest way to enable Dark Mode is by telling Siri to turn it on.

1. Say "Hey, Siri" until the listening indicator appears.
2. Tell Siri "Turn on Dark Mode." Your iPad will switch over to Dark Mode.
3. To disable Dark Mode, tell Siri "Turn off Dark Mode." Your iPad will switch to light mode.

### 3.2.2 Enable Dark Mode Through Control Center

Dark Mode can also be enabled through your iPad's Control Center.

1. Swipe down from the upper right corner of your iPad to display the Control Center.
2. Hold down the Brightness control to display Dark Mode, Night Shift, and True Tone modes.



---

**NOTE:** Alternatively, if Dark Mode control is included in the Control Center, users can enable dark mode directly from the control or tap again to switch to light mode.

---

3. Enable the **Dark Mode** button and your iPad will switch to dark mode.
4. To disable Dark Mode, tap on the **Dark Mode** button again and your iPad will switch to light mode.


### 3.2.3 Enable Dark Mode Through Device Settings

The third method to enable Dark Mode is through your iPad's settings.

1. Open the **Settings** app on your iPad.
2. Tap **Display & Brightness**.
3. Navigate to the **APPEARANCE** section. Options for Light and Dark are available.
4. Tap **Dark** and your iPad will switch over to dark mode.
5. To disable Dark Mode, tap **Light** and your iPad will switch to light mode.
6. Enable the **Automatic** option to allow your device to automatically switch from light to dark mode based on the selected appearance schedule.

### 3.3 Contextual Help

Contextual help in Aero App offers a great first-time experience for users to become familiar with specific tools and features. In Aero App, views that support contextual help are marked with an orange icon located at the top right of the view. Explore Aero App and tap on the icon to learn more.

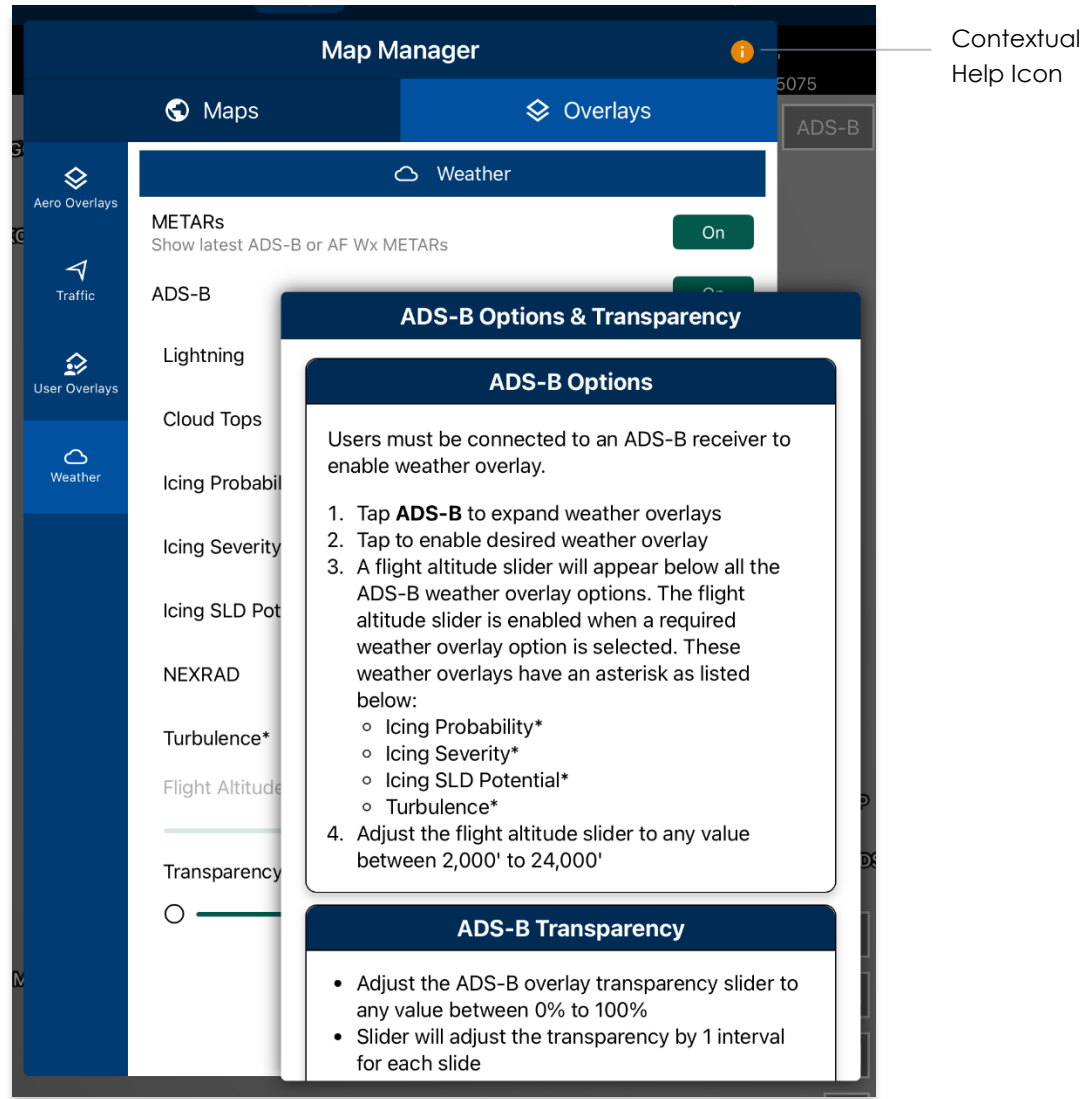


## 4 Multitasking on iOS

Aero App for iOS offers multitasking capabilities, enabling users to seamlessly switch between different apps in split-screen view. Users with earlier operating systems (iOS 15 or earlier) may display different multitasking configuration options from devices running iOS 16 or later.

The Route Panel view may not be available for pages on Aero App other than the Map when the screen is too narrow. Increasing the screen's width in split-screen mode may resolve this issue.

1. With Aero App open, tap on the **three dots** located at the top of the screen.
2. A popup will display with the following options:
  - Full Screen
  - Split View
  - Slide Over (not supported)
  - Close button

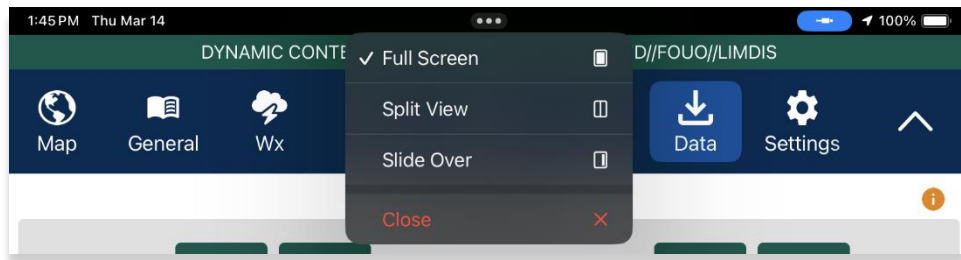


3. Select **Split View**.




**NOTE:** Slide Over is not supported by Aero App.

4. Aero App will be pushed to the left side of the screen. Users will be prompted to choose another app. Select desired app for side-by-side app experience.

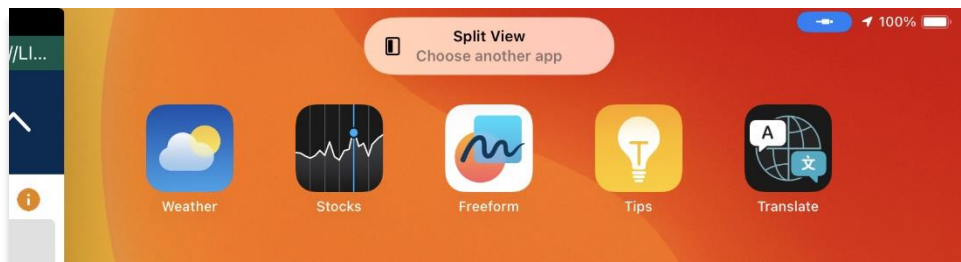

**NOTE:** Not all apps support Multitasking.

5. A divider is located between both apps to allow resizing of views when adjusted. Adjust your views to desired size preference.

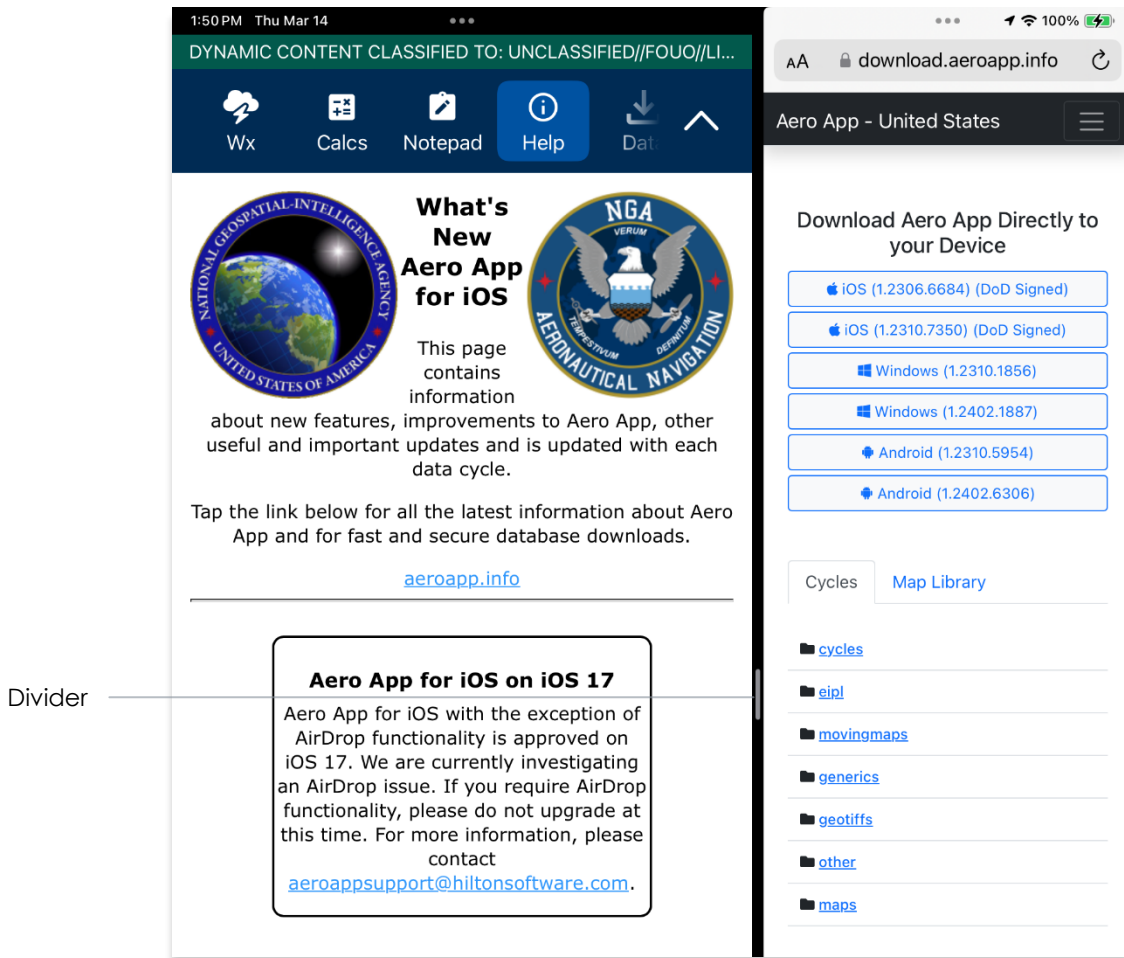


**NOTE:** For best practice, Aero App should be at 60/40 size to allow seamless user experience.




**NOTE:** Multitasking is available on both portrait and landscape mode.



6. To move the split view app to the opposite side of the screen, tap on the **three dots** and select **Split View** again.
7. Options for the *Left Split* and *Right Split* are available. Select desired side preference.

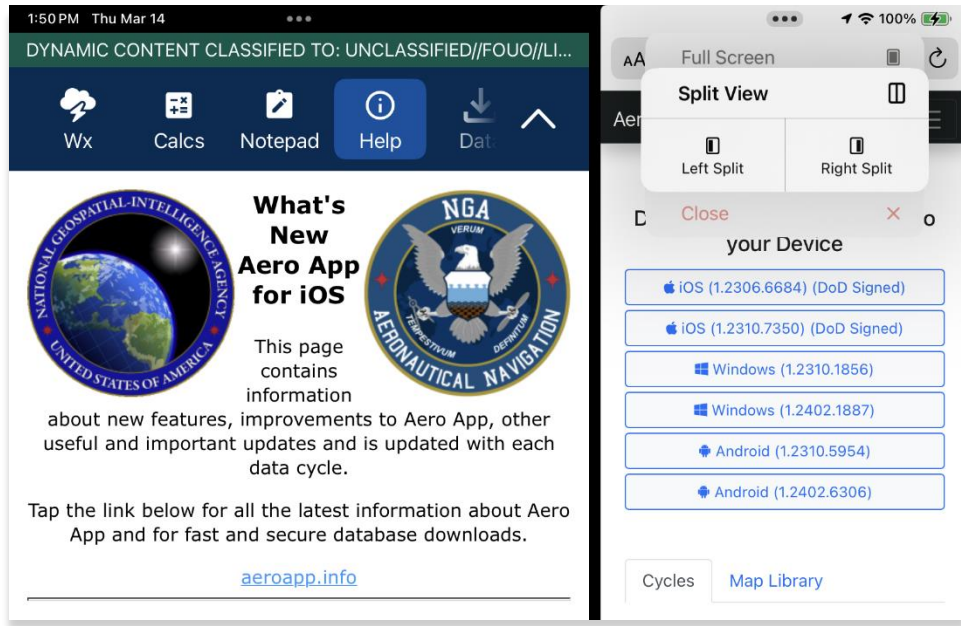


8. Alternatively, users can hold and drag the **three dots** to the desired side of the screen.

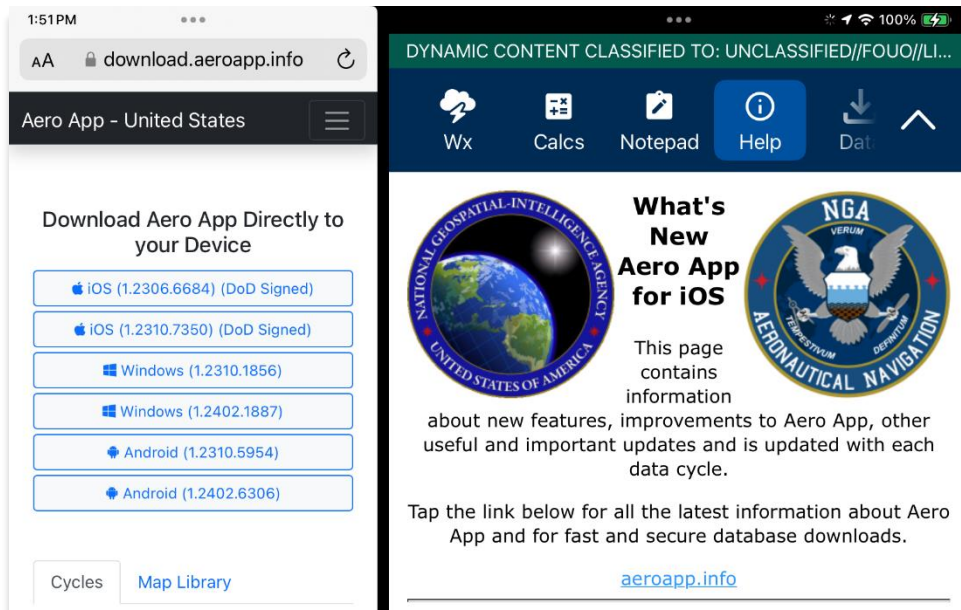

## 4.1 Switch Between Apps in Split View

Users can switch between different apps of their choosing.


1. To switch to another app in Split View, hold and drag the **three dots** to the bottom edge of the screen.
2. Users will be prompted to choose another app. Select desired app for side-by-side app experience.

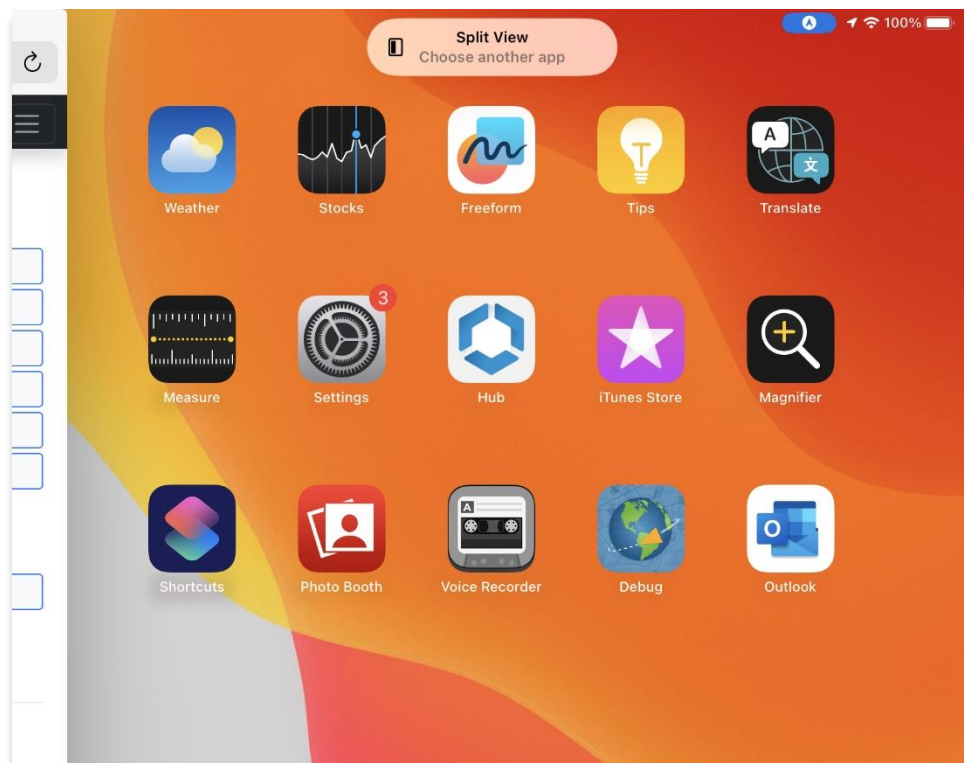


## 4.2 Close Apps in Split View

There are several methods to close apps in Split View. The following options are available to users:

- **Close button** – tap the **three dots** on the app that you want to close. Multitasking configuration options will be displayed. Tap the **Close** button and your app will be viewed in Full Screen mode.

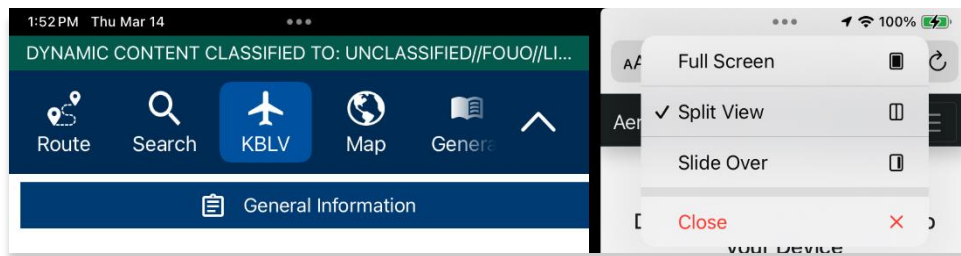

- **Drag to bottom** – hold and drag the **three dots** to the bottom edge of the screen and users will be directed to the Home Screen.
- **Drag divider to the edge** – drag the **divider** in the direction of the app that you want to close. The second app will disappear, and the first app be viewed in Full Screen mode.

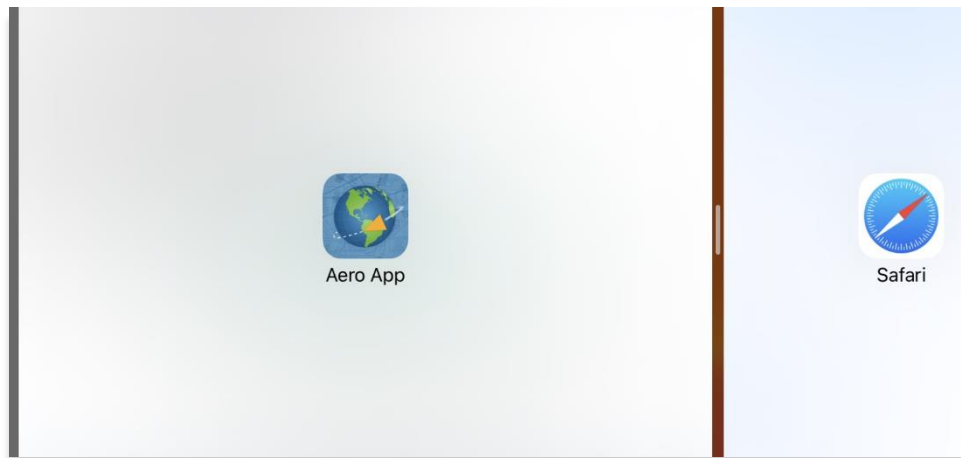

## 5 Troubleshooting

If you have problems that cannot be resolved, contact the Aero App Support Team:

**Phone:** 954-323-2244 ext. 412

**Email:** [aeroappsupport@hiltonsoftware.com](mailto:aeroappsupport@hiltonsoftware.com)

**Contact Form:** <https://aeroapp.info/contactus/>

**Hours of Operation:** Monday - Friday 1000-1800 EST


## 6 Accounts

To utilize Aero App's offerings, certain features require an active account respective to the action being made. Detailed information regarding the various account registration options will be provided in the sections to follow.

### 6.1 Aero User Database (AUD) Account Registration

Aero User Database (AUD) provides authentication for DOD and government foreign partners seeking access to Aero App software and data. Users who chose Aero User Database as a form of authentication for Aero App must register for an account.

1. Open an internet browser of choice.
2. Enter [userdb.aeroapp.info/auth/register](https://userdb.aeroapp.info/auth/register) in the address bar.
3. The Aero User Database form displays. All fields are required to create an account; therefore, all fields must be filled.

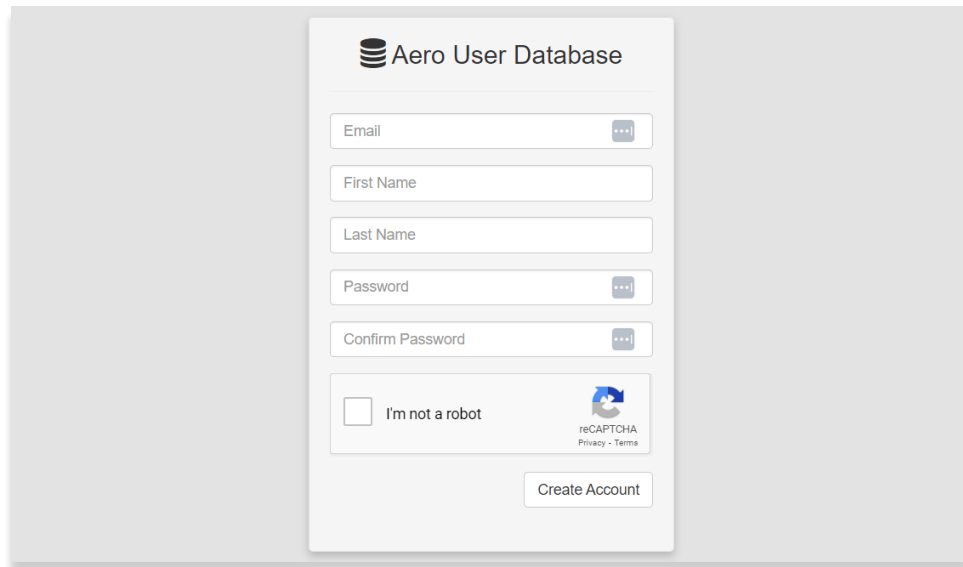A screenshot of the Aero User Database registration form. The form is titled "Aero User Database" and features a database icon. It contains several input fields: "Email" (with a dropdown arrow), "First Name", "Last Name", "Password" (with a dropdown arrow), and "Confirm Password" (with a dropdown arrow). Below these fields is a checkbox labeled "I'm not a robot" and a reCAPTCHA logo with links for "Privacy" and "Terms". At the bottom of the form is a "Create Account" button.

**NOTE:** A valid .mil and .gov email is required to create an account.

4. Click **Create Account** once all required fields have been filled. Once registered, a verification email will be sent to the user-registered email address.
5. Follow the instructions provided in the email to verify your AUD account.



**NOTE:** If a verification email is not found within your email inbox, ensure to check the junk folder, or contact the Aero App Support Team at [aeroappsupport@hiltonsoftware.com](mailto:aeroappsupport@hiltonsoftware.com) for assistance.

## 6.2 NGA GEOAxis Account Registration

GEOAxis is NGA's Enterprise Identity and Access Management authentication system. GEOAxis unifies logins between AWS and the NGA App Store, which negates CAC access. Users who choose to use GEOAxis as a form of authentication for Aero App must register for an account. The initial registration requires users to have a CAC-enabled PC with their CAC card.

1. Open an internet browser of choice.
2. Enter <https://access.geoaxis.gs.mil/oam/west/servlet/login.jsp> in the address bar.
3. Select one of the listed credentials to authenticate.
4. Follow the prompts.



**NOTE:** A valid .mil email is required to create an account.



**NOTE:** For technical assistance, contact the NGA Enterprise Service Center at 1-(800)-455-0899.


## 6.3 Flight Service Account Registration

A Flight Service account is required for those using the Flight Plan feature on Aero App.

1. Open an internet browser of choice.
2. Enter [1800wxbrief.com](http://1800wxbrief.com) in the address bar.
3. Navigate to the *Login* section of the page.
4. Select **Create Account**. You will be redirected to an Account Creation page.
5. Follow the prompts and select **Create Account** once completed.

Once an account has been created, users must authorize NGA Aeronautical Application (Aero App) as the service provider. This will allow Aero App to connect to your account and perform actions on your behalf.

6. Log in using your Flight Service credentials.
7. Navigate to the *navigation bar* located at the top of the page.
8. Hover over **Account** to view additional account options.
9. Select **Service Provider Authorization**. The Service Provider Authorization page will be displayed.

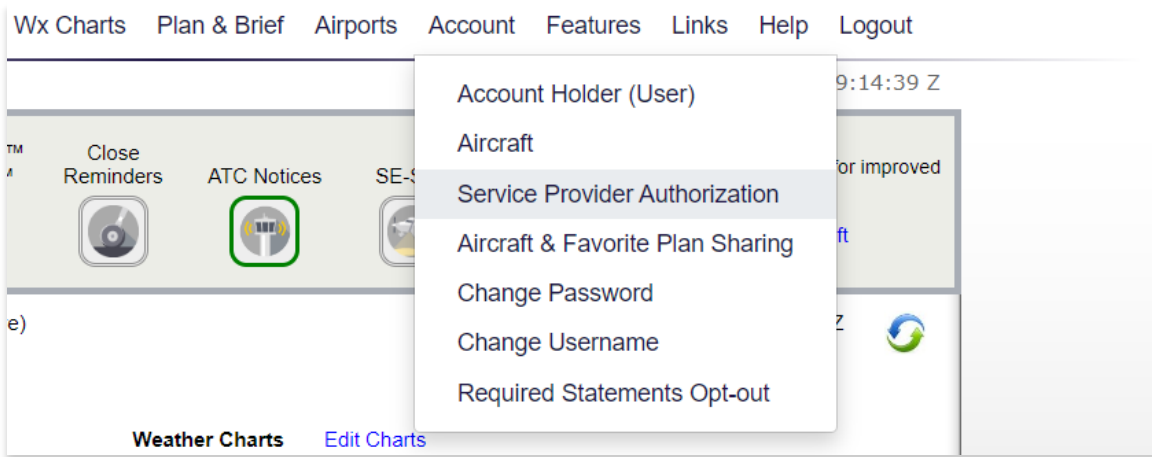

10. A button to *Edit* and *Save* is available. Select **Edit**.
11. From the provided table, locate *NGA Aeronautical Application (Aero App)* and select **Yes** on the radio buttons.
12. Click **Save**.

## 6.4 ASPS Account Registration

Pilots are required to possess an Aeronautical Source Packaging Service (ASPS) account to obtain Host Nation charts.

1. Open an internet browser of choice.
2. Enter [asps.leidos.com](https://asps.leidos.com) in the address bar.
3. Select **Request Account**.
4. Follow the prompts.
5. Select **Request Account** once complete.

The screenshot shows a web browser window with the address bar displaying [asps.leidos.com](https://asps.leidos.com). The page header includes the NGA logo and the text 'UNCLASSIFIED//LIMDIS'. Below the header, the page title is 'Aero Browser - Aeronautical Source Packaging Service'. The main content area contains a registration form with the following fields:

- E-mail:
- First Name:
- Last Name:
- Phone:
- Organization:
- Gov't POC:  (with a red asterisk and a note: "Enter person other than yourself, i.e. your supervisor")
- Justification:

Below the form, there is a checkbox labeled 'I accept the ASPS User Agreement' and a 'Request Account' button. A 'Back to Login' link is located at the bottom left of the form area.



---

## 7 Aero App Installation

There are several methods to install Aero App. The following sections ahead will expand on the different installation options.

### 7.1 Where to Obtain Aero App

Aero App (National Stock Number [NSN] 7644016004225) can be installed from the following sources:

- **Aero App DVD** – National Geospatial Intelligence Agency (NGA) distributes the Aero App DVD to appropriate personnel.
  - **Defense Logistics Agency (DLA)** – If you have any questions or need additional information, contact Jorge Diaz ([Jorge.Diaz@dla.mil](mailto:Jorge.Diaz@dla.mil)).
  - **National Geospatial-Intelligence Agency (NGA)** – Aero App data can be downloaded via NIPRnet at (<https://dbgia.geointel.nga.mil/efb/index.cfm>). This link requires a PKI-enabled CAC card for access. See your security team for a PKI certificate if you receive the following message: "Certificate-based authentication failed."
- **Aero App Website** – Aero App's website ([aeroapp.info](http://aeroapp.info)) that requires GEOAxIS or Aero User Database credentials.

#### 7.1.1 Install Aero App From Aero App DVD

NGA distributes the Aero App DVD to appropriate personnel. For additional information, contact Jorge Diaz ([Jorge.Diaz@dla.mil](mailto:Jorge.Diaz@dla.mil)) from the Defense Logistics Agency.

1. Connect an iPad to your PC.
2. Insert the Aero App DVD into your PC's disk drive.



---

**NOTE:** Those who do not have a DVD disk drive on their computer may need to purchase an external DVD drive to read the Aero App DVD.

---

3. Open a new *File Explorer* window then locate and double-click on the **DVD drive**.
4. From the Aero App DVD drive, double-click on the **app-iOS** folder to view contents.

Depending on the operating system of your computer, users will require different steps in installing Aero App. The following sections ahead will provide the necessary steps for each operating system.

### 7.1.1.1 Sideload Files with iTunes


Install iTunes on Windows to transfer files via iTunes. An internet connection and account registration are not required when performing a sideload. Users with Mac running macOS Catalina must refer to [Section 7.1.1.2](#).

1. Connect an iPad to your PC.
2. Open **iTunes** or automatically connect.




**NOTE:** To automatically connect to iTunes, enable the **Automatically sync when this iPad is connected** feature. iTunes will automatically open once you connect your iPad to your computer.


3. Click the **iPad** icon and your iPad information will display.
4. Open the File Explorer window that displays the app-iOS contents described in [Section 7.1.1.1](#).
5. Drag and drop the iOS IPA file (**AeroApp-<version-number>.ipa**) from the Aero App DVD drive into the *On My Device* section of iTunes.

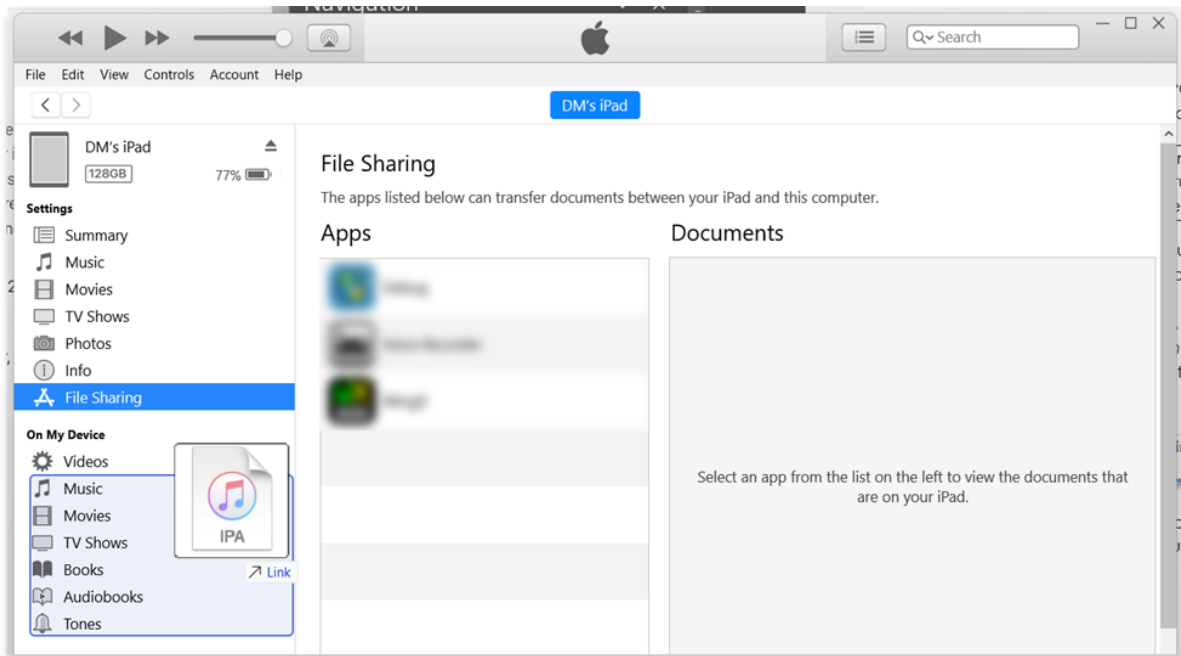

- Click the **Sync** button on the bottom right of the iTunes window. The status bar displays the status of the transfer.



- Click **File Sharing**. The apps currently installed on your device will be listed. A successful sideload will display Aero App on the list.

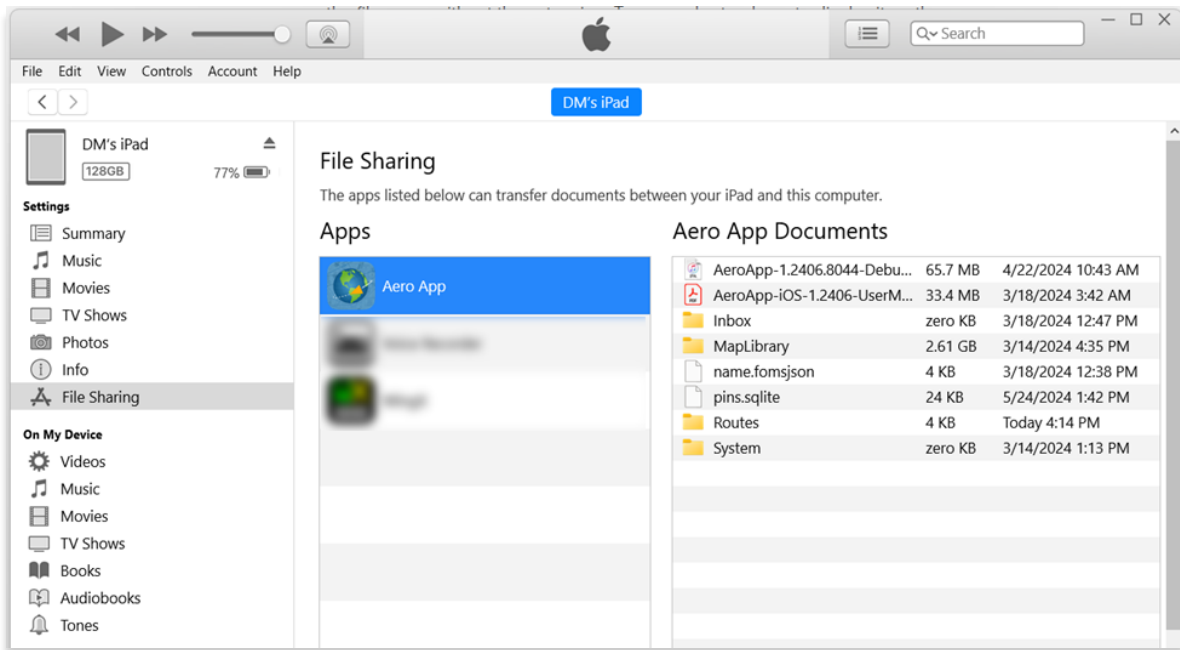

- Return to your iPad's home screen and the Aero App icon should display as shown below.



Aero App




**NOTE:** Users may be prompted with an Untrusted Enterprise Developer message when they attempt to open Aero App for the first time. To resolve this, go to the iPad's General settings. Navigate to VPN & Device Management, select U.S. Department of Defense, then select the Trust "U.S. Department of Defense" button.

### 7.1.1.2 Sideload Files with Finder

Users with a Mac running macOS Catalina or later must use Finder to sideload files.

1. Connect an iPad to a Mac.
2. Open a **Finder** window.
3. Select your **iPad** from the sidebar of the Finder window below the *Locations* section.
4. Drag and drop the iOS IPA file (**AeroApp-<version-number>.ipa**) from the Aero App DVD drive into the Finder app. Aero App will begin to install onto your iPad.

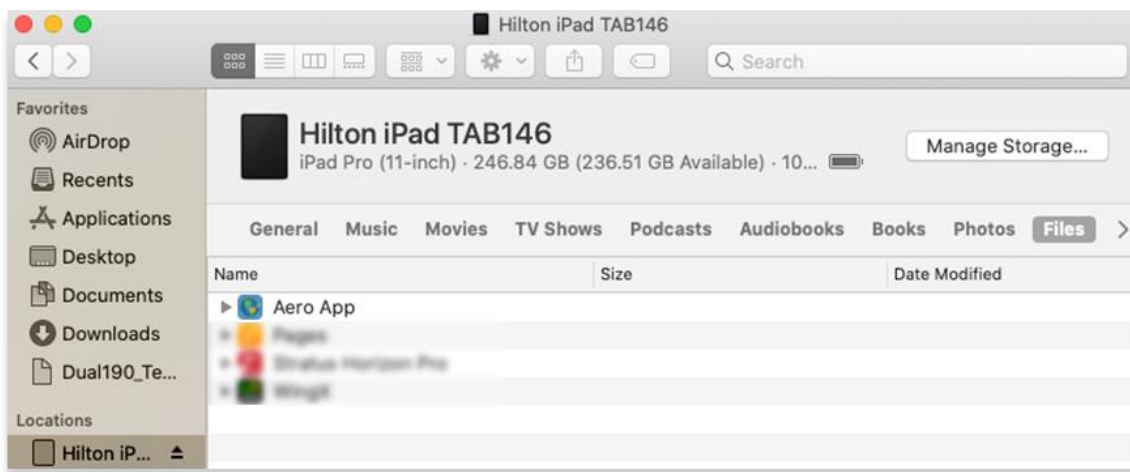

5. Return to your iPad's home screen and the Aero App icon should display as shown below.



**NOTE:** Users may be prompted with an Untrusted Enterprise Developer message when they attempt to open Aero App for the first time. To resolve this, go to the iPad's General settings. Navigate to VPN & Device Management, select U.S. Department of Defense, then select the Trust "U.S. Department of Defense" button.

### 7.1.2 Install Aero App From Apple App Store


Aero App is available on the Apple App Store. Users must possess an Apple ID and an active internet (Wi-Fi or cellular) connection to use the Apple App Store. To create a new Apple ID, visit the [Apple Support website](#).

1. Go to the Apple App store on your iPad.
2. Navigate to the search bar and enter **Aero App** in the text field.
3. A collection of related apps will be listed. Select Aero App to view additional app information or tap **Get** to directly install Aero App on your device.

### 7.1.3 Install Aero App From Aero App Website

Users must possess a GEOAxis or Aero User Database credentials prior to downloading Aero App software from the Aero App website. Refer to [Section 6](#) for additional information.


1. Open an internet browser of choice.
2. Enter [www.aeroapp.info](http://www.aeroapp.info) in the address bar.
3. Navigate to the *Downloads* menu. Option placement will vary depending on display size.
  - On larger screens, hover over **Downloads** from the navigation bar to reveal additional download options.

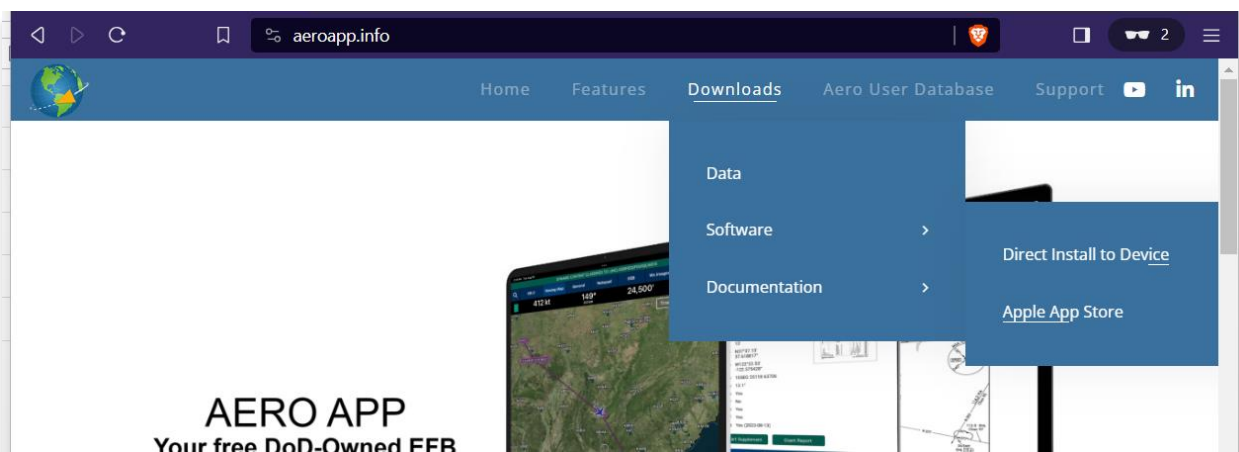

- On smaller screens, click the hamburger button and select **DOWNLOADS** to display additional download options.



- Select **Software**.
- Users are presented with two methods to download Aero App:
  - Direct Install to Device
  - Apple App Store
- Select **Direct Install to Device**.
- Log in using *GEOAxis* or *Aero User Database* credentials. The Select Partner popup will appear for Aero User Database users who have access to multiple government foreign partners.
- Navigate to the *Download Aero App Directly to your Device* section then select **iOS (<version number>) (DoD Signed)**. Aero App will begin to install onto your device.

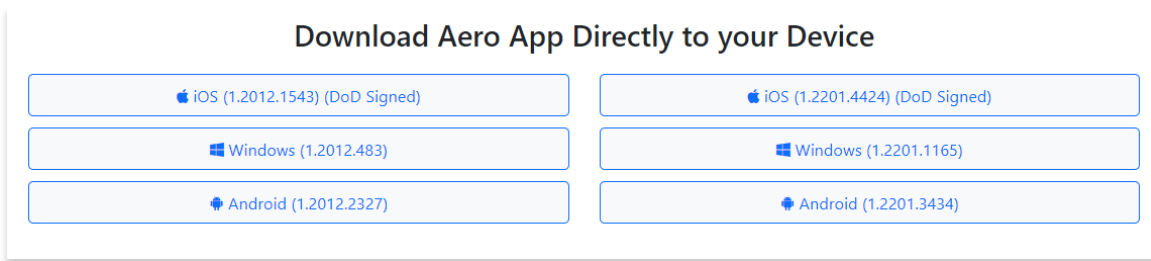

**NOTE:** Users may be prompted with an Untrusted Enterprise Developer message when they attempt to open Aero App for the first time. To resolve this, go to the iPad's General settings. Navigate to VPN & Device Management, select U.S. Department of Defense, then select the Trust "U.S. Department of Defense" button.

---

## 8 Where to Obtain Aero App Data

To obtain Aero App data, refer to the detailed instructions outlined in the following sections. Users can easily download Aero App data from the following sources:

- **Aero App DVD** – a physical DVD provided by the Defense Logistics Agency.
- **Aero Data Server (ADS)** – a server that handles the deployment of Aero App data to clients through mobile devices over a locally hosted Wi-Fi network (check with an administrator for computer configuration).
- **Aero App Website** – Aero App's website ([aeroapp.info](http://aeroapp.info)) that requires GEOAxis or Aero User Database credentials.
- **Aero App** – data can be downloaded directly from AWS. GEOAxis, and Aero User Database credentials are required, or set up your device with Mobile Device Management (MDM).

## 9 Aero App Data Overview

The following data is available for download:

- Aero App Maps
- Air Force Weather (AF Wx)
- Core Data
- Core Data Delta Files
- Maxar
- Electronic – Instrument Procedure Library (E-IPL)
- FAA Sectionals
- Georeference
- Giant Reports
- Helicopter and Terminal Area Chart (TAC) Maps
- Map Library
- Temporary Flight Restrictions (TFRs)
- Terrain
- User Files



---

**NOTE:** Some products and/or data may be limited in their distribution. This may include but is not limited to E-IPL, AMC Giant Reports, Air Force Weather, Maxar imagery, and Contract Fuel Information. Contact NGA Aeronautical Dissemination Program office at [aerodistro@nga.mil](mailto:aerodistro@nga.mil) if you have questions regarding access to these products and/or data.

---

## 9.1 Aero App Maps

Aero App includes an advanced Map that displays VFR and worldwide IFR charts. Aero App enables pilots to easily download maps for their region of interest. Refer to [Section 14.4.5.1](#) for additional information on Maps.

## 9.2 Air Force Weather

Air Force Weather (AF Wx) is timely and accurate weather information from the Air Force. Aero App enables users to view real-time weather information for METARs and TAFs. Refer to [Section 14.4.3](#) for additional information on Air Force Weather (AF Wx).

## 9.3 Core Data

Core Data includes Global zip file and the Africa, Alaska, Canada, CONUS 1, CONUS 2, CSA, EEA, ENAME, and PAA region files. Usable data products in the Core Data include, but not limited to, FLIP charts, Supplements, Planning Documents, Legends, Map Overlays including Airports, Air Refueling Routes, Airways, ARTCCs, and many more. Users can choose to download zero or multiple regions. However, the Global zip file is always required. Refer to [Section 10](#) for additional information in downloading data on Aero App.



---

**NOTE:** Users have the option to sideload data onto Aero App. Refer to [Section 11](#) for additional information.

---

## 9.4 Core Data Delta Files

Core Data Delta Files are significantly smaller files that contain only data that has changed from the previous cycle. Downloading Core Data Delta Files significantly reduces download time.

Aero App will automatically download the delta files if the previous cycle is already loaded in Aero App – this process is transparent to the user. After downloading the delta files, Aero App will apply Deltas to create the new cycle.



---

## 9.5 Electronic – Instrument Procedure Library (E-IPL)

Electronic – Instrument Procedure Library (E-IPL) charts are translations of Host Nation procedures drawn in the familiar DOD approach format. E-IPL charts are intended to fill gaps in instrument procedure coverage in existing DOD FLIP charts. E-IPL charts are available for download from ADS and AWS.



---

**NOTE:** E-IPL full cycle is available every 28 days.

---

## 9.6 FAA Sectionals

FAA Sectionals are Sectional Aeronautical Charts designed for visual navigation used for a flight under Visual Flight Rules and can be displayed as base maps on Aero App's Map. Users with GEOAxis and Aero User Database (AUD) credentials will have access to FAA Sectionals. Refer to [Section 14.5.1](#) to reference how to load FAA Sectional Charts. Refer to [Section 14.4.5.1.1.1](#) to reference how to display FAA Sectionals on the Map.



---

**NOTE:** All FAA Sectionals, Helicopter and TAC Maps, and IFR Enroute charts are updated on a 56-day cycle.

---

## 9.7 Georeference

Georeference is an alignment of accurate location data to a map coordinate system for Aero App. Aero App enables users to show their ownship on Airport Diagrams, Instrument Approach Procedures, and on the Map, perfectly georeferenced. Refer to [Section 14.11.1](#) on how to show Ownship on APD and IAP and show Airport Ring on APD and IAP.

## 9.8 Giant Reports

Giant Reports are the U.S. Air Force's assessment on what is considered safe operations for a specific ICAO. The PDF document can be downloaded and viewed within Aero App. Refer to [Section 14.2.1](#) for additional information on Giant Reports.

---

## 9.9 Helicopter and Terminal Area Chart (TAC) Maps

Aero App can display Helicopter - Gulf Coast charts, Helicopter – Route charts, and Terminal Area Charts (TACs) on the Map.

Displaying Helicopter and Terminal Area Charts directly on the Map results in perfect alignment on the underlining sectional (or other base map).

Georeferencing and spatial accuracy ensure that these charts can be used for an accurate, non-primary means of navigation. Refer to [Section 14.4.5.1.4](#) for additional information on Helicopter and Terminal Area Chart (TAC) Maps.



---

**NOTE:** All FAA Sectionals, Helicopter and TAC Maps, and IFR Enroute charts are updated on a 56-day cycle.

---

## 9.10 Map Library

Aero App includes Map Library charts that can be displayed on the Map. Map Library includes maps such as NavPlan charts, range charts, maps for Search and Rescue mission, and many others. Map Library can be downloaded from AWS using Aero User Database credentials or directly from ADS, depending on ADS's availability of files. Map Library data is available to DOD and specific government foreign partners. For information on downloading Map Library charts, refer to [Section 10.2.1.1](#) and [Section 10.3.1.1](#). For information on overlaying Map Library charts on the Map, refer to [Section 14.4.5.1.5](#).

## 9.11 Maxar

Maxar is a satellite imagery service that offers a visual depiction of ground conditions to enhance situational awareness. Maxar images can be zoomed, panned, and viewed online or downloaded for offline use. For Maxar online (Wi-Fi or cellular required) refer to [Section 14.4.5.1.1.4](#) and for Maxar offline (no internet connected required after initial download) refer to [Section 14.4.5.1.3](#).

*"Maxar is the first company to deliver native 30cm resolution imagery, delivering clearer, richer images that empower better decision making through improved situational awareness."* – Maxar

## 9.12 Temporary Flight Restrictions (TFRs)

Temporary Flight Restrictions (TFRs) are restricted areas for air travel. Aero App enables users to display graphical and textual TFRs on demand when connected to cellular data, Wi-Fi, or ADS-B receiver. Refer to [Section 14.4.5.2.1.24](#) for additional information in displaying TFRs on the Map.

## 9.13 Terrain

Aero App includes Terrain Coloring and Terrain Analysis that provides situational awareness to flight crews. Users can choose to display Terrain on the Map that includes an altitude-based color system that depicts the proximity of the pilot's ownship relative to terrain. For additional information on Terrain overlay, refer to [Section 14.4.5.2.1.23](#). Terrain Analysis data is exclusive to the Orbit Line of Sight feature and is required for download prior to use. For more information on Orbit Line of Sight, refer to [Section 14.4.12.3.6.1](#).

Terrain Coloring and Terrain Analysis data can be downloaded from AWS using GEOAxis or Aero User Database credentials, or directly from ADS. Terrain data will be listed under Other in the Data Download view and is available to select government foreign partners.

## 9.14 User Files

The library of User Files, including User Map files and other PDFs, is displayed on the File Manager page, which provides file management capabilities.

## 10 Download Data


Aero App allows users to download data directly from the app. Sources such as Amazon Web Services (AWS) and Aero Data Server (ADS) are accessible within Aero App. Alternatively, users can visit the Aero App website ([aeroapp.info](http://aeroapp.info)) and download data directly to their devices.

An active internet connection (Wi-Fi or cellular) is required to experience an interruption-free downloading session.

### 10.1 Background Downloading

Aero App has background downloading capabilities that enable users to download data while switching screens within Aero App or while using another application. The sections ahead will elaborate on how to download data from Aero App.

1. Select desired method of authentication (AUD, GEOAxis, or MDM).
2. Follow the prompts then tap **Download** to start the downloading process.
3. Tap **Done** to return to the *Data Status* screen.
4. Navigate to desired screen within Aero App or an application in which you would like to proceed in normal operations.
5. Once the downloading is complete, a popup will notify users that the download was successful.

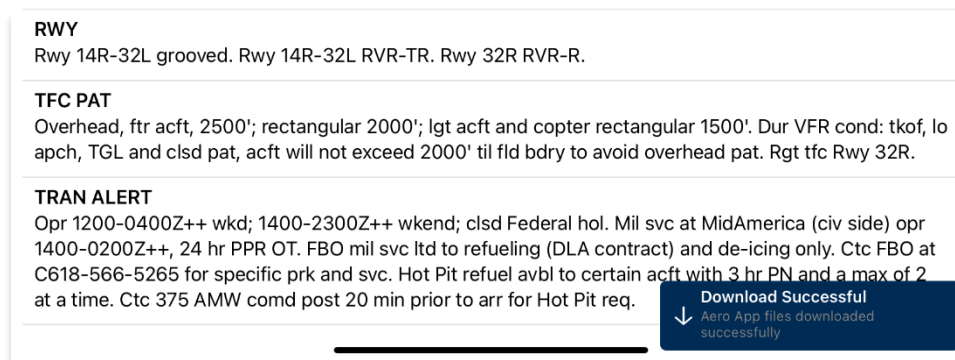

Download Status

6. Navigate back to the **Data Status** screen. Notice the files you have selected to download display **Found**. This indicates that the files have successfully downloaded with any interruptions.



**NOTE:** In addition to switching screens within Aero App or using another application, users can lock their devices and the download will continue. A notification will be displayed on the device's lock screen.

## 10.2 Download Data Through Amazon Web Services (AWS)

Aero App enables users to download data from AWS using Aero User Database (AUD) or GEOAxis credentials or through Mobile Device Management (MDM), which requires users to set up their device with MDM. To obtain core data files, Global must be included when downloading data.

1. Tap **Data** on the **Main Menu**.
2. Tap **Download**.
3. Select the **AWS – Fast Cloud Downloading** option, if necessary.
4. Users are given the option to access data using GEOAxis or Aero User Database (AUD) credentials or set up your device with Mobile Device Management (MDM).

DYNAMIC CONTENT CLASSIFIED TO: UNCLASSIFIED//FOUO//LIMDIS

[Done](#) **Data Sources**

**AWS** Aero Data Server File Manager

### AWS - Fast Cloud Downloading

**Aero User Database** GEOAxis MDM

Username:

Password:

**Connect**

The Aero User Database is used for user authentication and is not related to GEOAxis. Therefore the user name and password may be different to your GEOAxis credentials. CAC access is not required.

To sign up for an account or reset your password, tap on the buttons below.


5. Below each user authentication option, you are presented with the options to *Sign Up For An Account* and *Reset Password*.

**Sign Up For An Account** **Reset Password**

6. Tap **Sign Up for An Account** to create an Aero User Database (AUD) or GEOAxis account.


7. The following options are available for Reset Password:

- Tapping **Reset Password** under **Aero User Database** redirects users to the Aero User Database Management website.

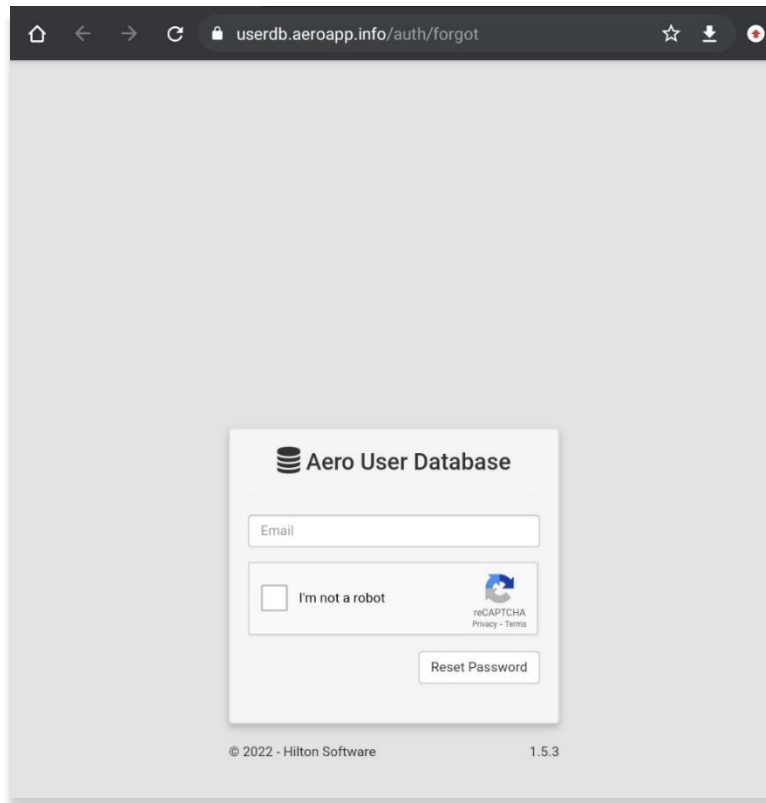

The screenshot shows a web browser window with the address bar displaying 'userdb.aeroapp.info/auth/forgot'. The main content area features a white card titled 'Aero User Database'. Inside the card, there is an 'Email' input field, a checkbox labeled 'I'm not a robot' next to a reCAPTCHA logo, and a 'Reset Password' button. At the bottom of the card, the text '© 2022 - Hilton Software' and '1.5.3' are visible.

- Tapping **Reset Password** under **GEOAxis** will provide instructions for how to reset password.

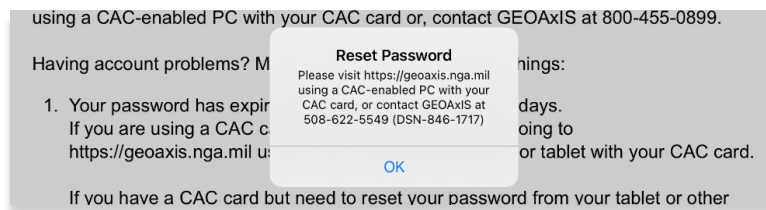

The screenshot shows a modal dialog box titled 'Reset Password' with an 'OK' button. The text inside the dialog reads: 'Please visit https://geoaxis.nga.mil using a CAC-enabled PC with your CAC card, or contact GEOAxis at 508-622-5549 (DSN-846-1717)'. The background is a blurred screenshot of a webpage with text about account problems and password expiration.



**NOTE:** The Background Downloading feature allows users to continue downloading data while switching screens within Aero App or while using another application. Refer to [Section 10.1](#) for additional information.

## 10.2.1 Download Data Using Aero User Database (AUD)

Aero User Database (AUD) allows for authentication of both DOD users and government foreign partners. Aero User Database credentials are not related to GEOAxis credentials and CAC card access is not required.

1. Tap **Data** on the **Main Menu**.
2. Tap **Download**.
3. Select the **AWS** option, if necessary.
4. Tap the **Aero User Database** option.
5. Enter credentials then tap **Connect**.

DYNAMIC CONTENT CLASSIFIED TO: UNCLASSIFIED//FOUO//LIMDIS

Done Data Sources

AWS Aero Data Server File Manager

**AWS - Fast Cloud Downloading**

Aero User Database GEOAxis MDM

Username:

Password:

Connect

User's Credentials —

6. The Select Partner popup will display. Select from partners list.

Select Partner


United States

FAA




**NOTE:** The *Select Partner* popup will appear to those who have access to multiple government foreign partners.

7. The Data Cycle Download screen will open. Users are provided with options to download *Cycles* or *Map Library*. Select **Cycles**.

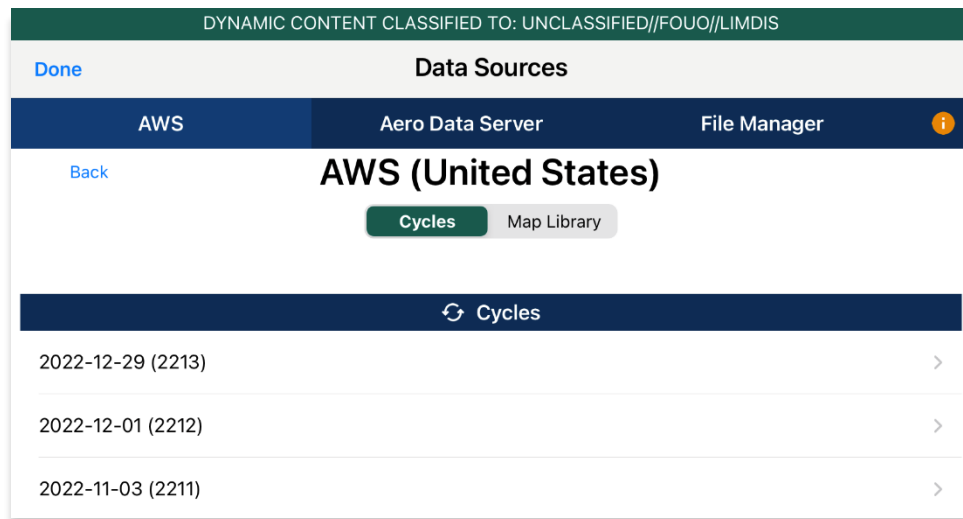

8. Available data pertaining to the respective cycle will be displayed on the screen. Select individual data files or tap regional Easy Buttons for faster data selection.
9. Tap **Download** once desired data files are selected.

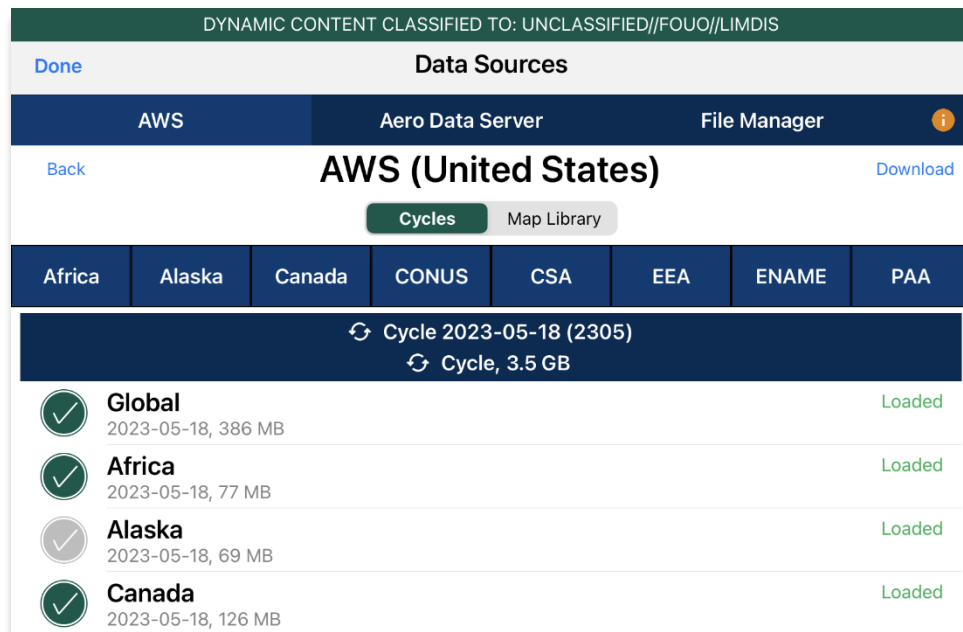

**NOTE:** Refer to [Section 6](#) for additional information regarding registering for an AUD account.



### 10.2.1.1 Download Map Library Data Using Aero User Database (AUD)

Once credentials have been entered and the appropriate government foreign partner has been selected, users will be redirected to the Data Download screen. Follow the steps below to download Map Library data.

1. From the Data Download screen, select **Map Library** from segmented control.
2. Available charts will be displayed. The files are grouped into categories based on map types. Tap on the desired folders to *reveal* files. Tap again to *hide* files.
3. Tap on the header of the date column to display **Created**, **Effective**, or **Expiration** dates.



**NOTE:** Files that have expired will display “Expired” below the date of the file in the date column.

4. Select desired map file(s).
5. Tap **Download** once desired Map Library files have been selected.

DYNAMIC CONTENT CLASSIFIED TO: UNCLASSIFIED//FOUO//LIMDIS

Done **Data Sources**

AWS
Aero Data Server
File Manager i

Back

## macmini

Host: 192.168.98.17 HTTP Port: 5555


Cycles
Map Library

Download All

Map Library i

| Filename                                                                                      | Effective   | Size             |
|-----------------------------------------------------------------------------------------------|-------------|------------------|
| <span style="color: orange;">📁</span> <b>Partner Maps</b>                                     |             | 17.8 GB          |
| <span style="color: orange;">📁</span> <b>Australia NavPlan Coverage</b>                       |             | 3.0 GB           |
| <span style="color: gray;">✓</span> <b>NGA GNC</b><br>mm_nga_gnc_australia-2023-03-03.mbtiles | 03 Mar 2023 | 261 MB Available |
| <span style="color: gray;">✓</span> <b>NGA JNC</b><br>mm_nga_jnc_australia-2023-03-03.mbtiles | 03 Mar 2023 | 372 MB Available |
| <span style="color: gray;">✓</span> <b>NGA JOG</b><br>mm_nga_jog_australia-2023-03-08.mbtiles | 08 Mar 2023 | 1.4 GB Available |
| <span style="color: gray;">✓</span> <b>NGA ONC</b><br>mm_nga_onc_australia-2023-03-03.mbtiles | 03 Mar 2023 | 642 MB Available |
| <span style="color: gray;">✓</span> <b>NGA TPC</b><br>mm_nga_tpc_australia-2023-03-08.mbtiles | 08 Mar 2023 | 358 MB Available |
| <span style="color: orange;">📁</span> <b>Central and South America NavPlan Coverage</b>       |             | 5.6 GB           |
| <span style="color: orange;">📁</span> <b>Colombia NavPlan Coverage</b>                        |             | 2.0 GB           |
| <span style="color: gray;">✓</span> <b>NGA JOG</b><br>mm_nga_jog_colombia-2023-03-22.mbtiles  | 22 Mar 2023 | 2.0 GB Available |

6. To verify that Map Library files were successfully downloaded, navigate to **Map** on the **Main Menu**.
7. Navigate to **Map Manager** located at the lower right of the Map screen. The Map Manager popup will appear.
8. Select **Maps** from the navigation bar.
9. Select **Map Library** from the side menu.
10. Tap on the desired folder to reveal the subfolder. Then tap on the subfolder to reveal the downloaded Map Library chart file.

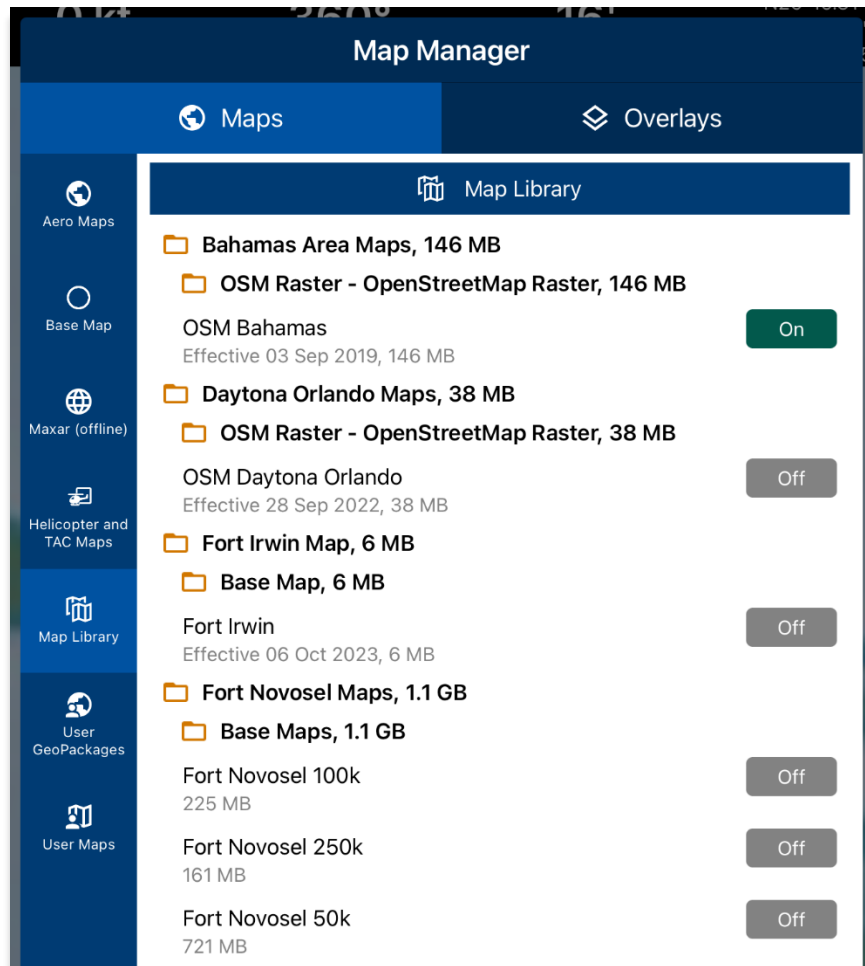

**NOTE:** Map Library charts can be deleted from File Manager or the Map Manager view by swiping left then tapping **Delete**.




**NOTE:** Map Library charts can be displayed on the Map. Refer to [Section 14.4.5.1.5](#) for additional information.


## 10.2.2 Download Data Using GEOAxis

GEOAxis is a form of authentication for Disadvantage Users – users without a CAC card. Users must possess a GEOAxis account to use GEOAxis as their login method to download Aero App data. Refer to [Section 6.2](#) for additional information.


1. Tap **Data** on the **Main Menu**.
2. Tap **Download**.
3. Select the **AWS** option, if necessary.
4. Tap the **GEOAxis** option.

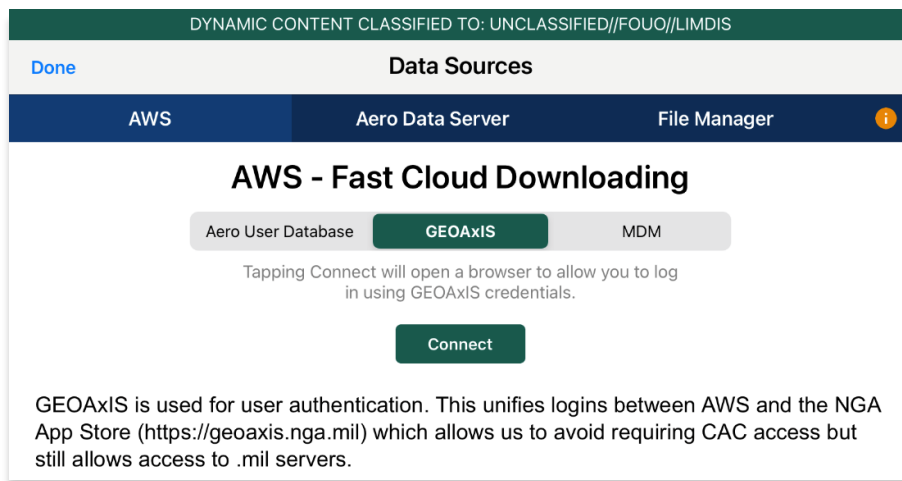


5. Tap **Connect** and users will be redirected to the GEOAxis webpage.
6. Select desired authentication method.

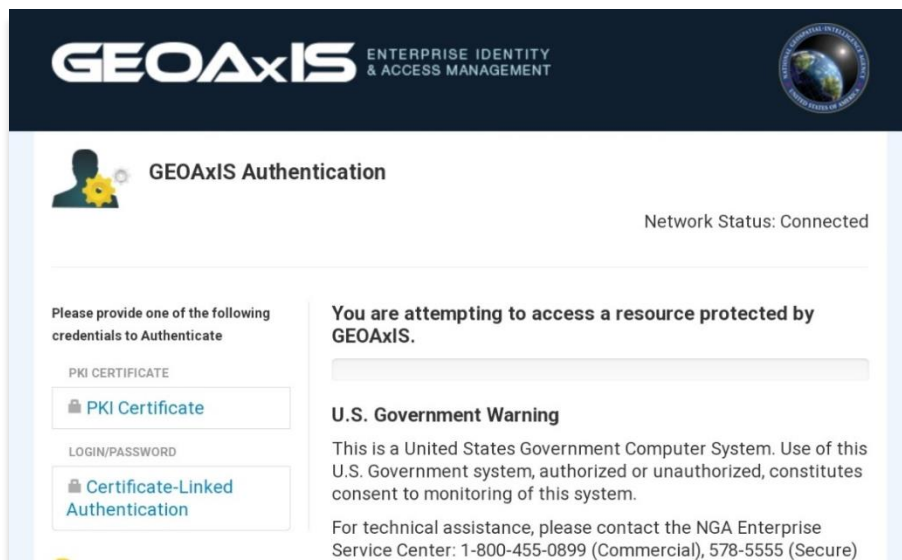

7. Once authenticated, users will be redirected to the AWS download screen. Users are provided with options to download *Cycles* or *Map Library*. Select **Cycles**.

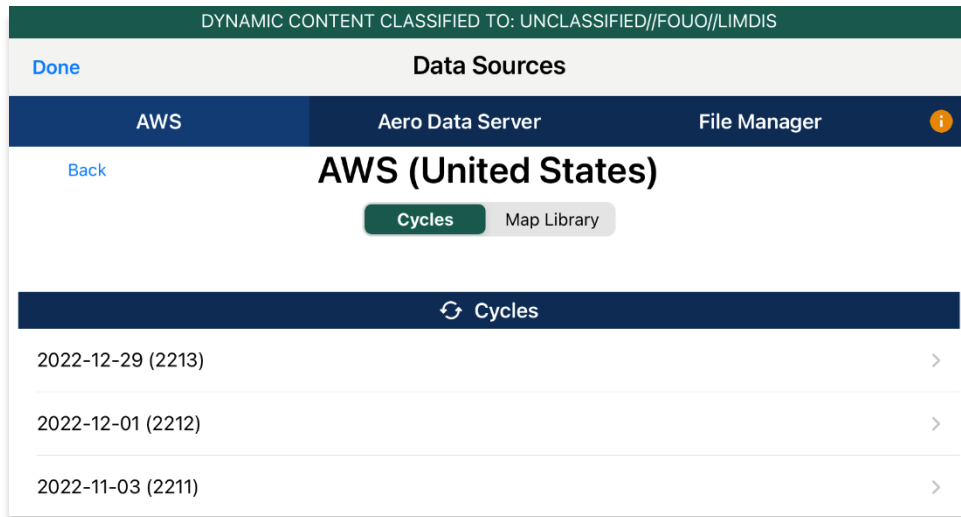


8. Available cycle data will be displayed on the screen. Select individual data files or select regional Easy Buttons for faster data selection.
9. Tap **Download** once desired data files have been selected.

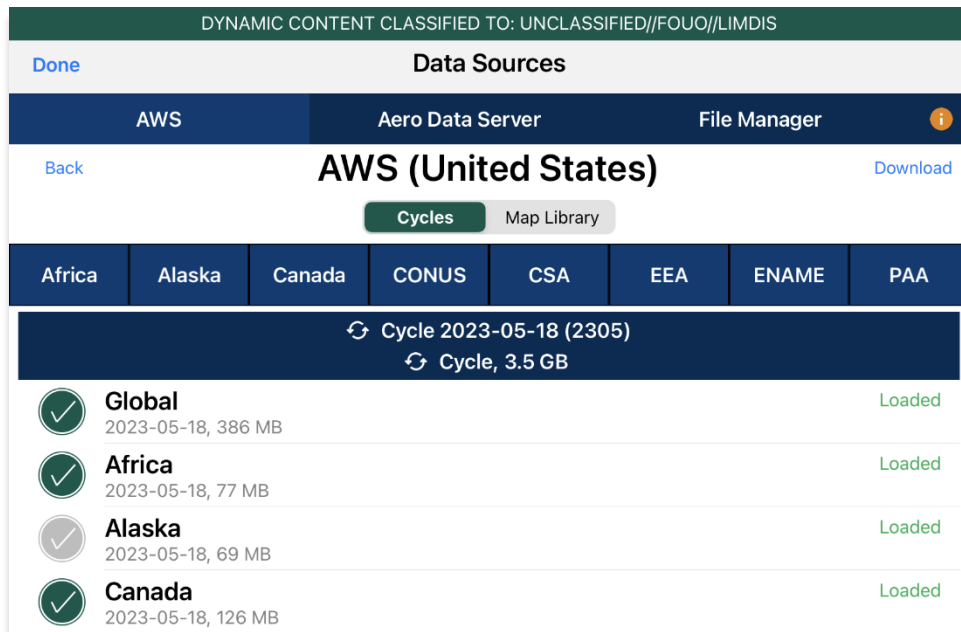

### 10.2.3 Download Data Using Mobile Device Management (MDM)

Mobile Device Management (MDM) is a software that enables the IT department to automate and monitor the user's device. The IT administrator would securely connect the user's device to the organization's network. This allows for devices to be automatically authenticated, thereby negating the need for login credentials.

1. Tap **Data** on the **Main Menu**.
2. Tap **Download**.
3. Select the **AWS** option, if necessary.
4. Tap the **MDM** option.

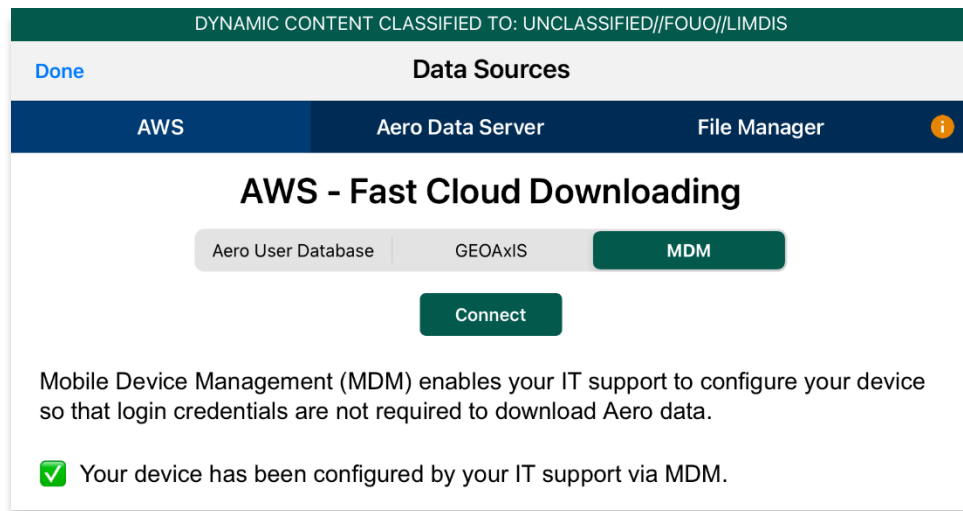


**NOTE:** IT administrator must be contacted to retrieve key value pairs for MDM configuration prior to downloading data; otherwise, the following message will appear as displayed below.

**✗** Your device has not been configured by your IT support via MDM.


5. Tap **Connect**. Users will be redirected to the *Data Download* page.

6. Users are provided with options to download *Cycles* or *Map Library*. Select **Cycles**.

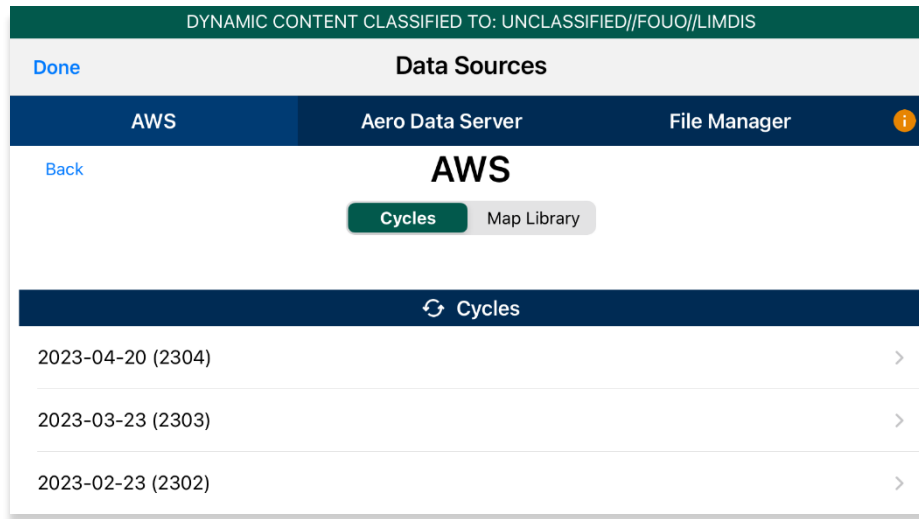

**NOTE:** When selecting *Map Library* to load data using MDM, refer to [Section 10.2.1.1](#) for additional information.

7. Available cycle data will be displayed on the screen. Select individual data files or select region Easy Buttons for faster data selection.
8. Tap **Download** once desired data files have been selected.

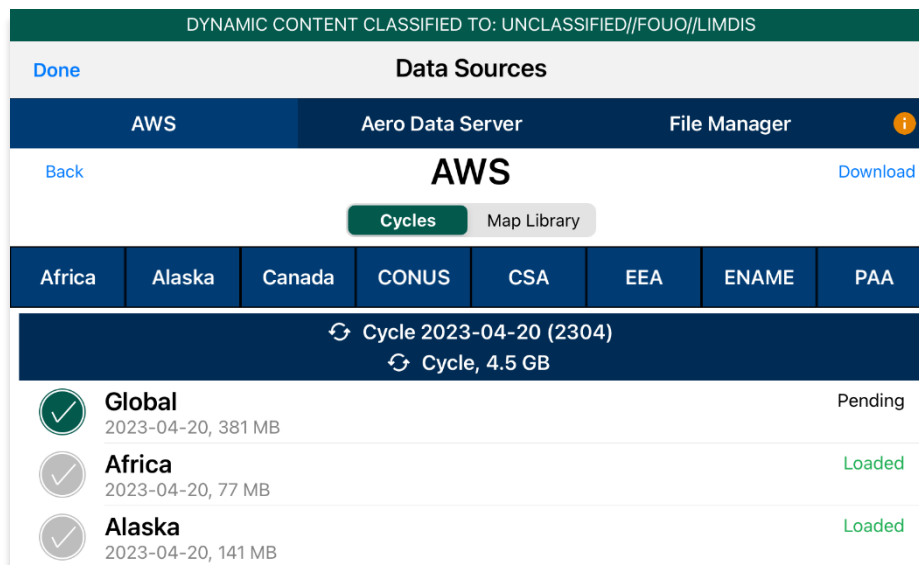

**NOTE:** Maxar cannot be accessed through MDM. To access Maxar (online) and/or download Maxar (offline) tiles, users must log in through *GEOAxis* or *AUD* authentications with the authorized partner selected.

## 10.3 Download Data Using Aero Data Server (ADS)

Aero Data Server (ADS) is a server that enables users to download Aero App data and Map Library charts through a local server connected to the Wi-Fi network. Global is required to be loaded in ADS for Aero App to access cycle, Aero App Maps, E-IPL, and other data, not including User Files or Map Library.

1. Tap **Data** on the **Main Menu**.
2. Tap **Download**.
3. Select the **Aero Data Server** option.
4. Users will be presented with options to Discover, enter Host and Port numbers, and Connect. Tap **Discover** and a list of ADS servers will display.



**NOTE:** The Background Downloading feature allows users to continue downloading data while switching screens within Aero App or while using another application. Refer to [Section 10.1](#) for additional information.

### 10.3.1 Aero Data Server (ADS) Discover

The Aero Data Server (ADS) Discover tool automatically locates servers that share the same Wi-Fi network as your device. In turn, the ADS Discover tool negates having to enter the IP address and port number of a server.

1. Tap **Data** on the **Main Menu**.
2. Tap **Download**.
3. Select the **Aero Data Server** option, then tap **Discover** and all available servers will display.

DYNAMIC CONTENT CLASSIFIED TO: UNCLASSIFIED//FOUO//LIMDIS

Done Data Sources

| AWS                                                                                             | Aero Data Server           | File Manager |
|-------------------------------------------------------------------------------------------------|----------------------------|--------------|
| Discover                                                                                        | Host 192.168.1.7 Port 5556 | Connect      |
| <b>Air Force Base</b><br>IP Address: 192.168.98.119 Port: 5556<br>Est. Bandwidth N/A            |                            |              |
| <b>macmini-Latest 2310</b><br>IP Address: 192.168.98.101 Port: 5555<br>Est. Bandwidth 1000 Mbps |                            |              |
| <b>MarineFord-89P13</b><br>IP Address: 192.168.99.97 Port: 5555<br>Est. Bandwidth 1000 Mbps     |                            |              |

- Alternatively, users can manually connect to a server by entering the host and port numbers, respectively, in provided fields.



**NOTE:** To establish a connection with a secured server, certificates would need to be installed in the ADS device as needed.

- Once entered, tap **Connect** to connect to the server.
- Users will be prompted to the Data Cycle Download screen. Users are provided with options to download *Cycles* or *Map Library*. Select **Cycles**.
- Available cycle data will be displayed on the screen. Select individual data files or select regional Easy Buttons for faster data selection.
- Tap **Download** once desired data files have been selected.



**NOTE:** Aero App will receive data for the latest three cycles loaded on ADS but will only have access to the cycles containing global.



### 10.3.1.1 Download Map Library Data Using Aero Data Server (ADS)

Map Library charts will be available to users who have Map Library files downloaded on ADS. Once the respective server has been selected, users will be redirected to the Data Download screen.

1. From the Data Download screen, select **Map Library** from segmented control.
2. Available charts will be displayed. The files are grouped into categories based on map types. Tap on the desired folders to *reveal* files. Tap again to *hide* files.
3. Tap on the header of the date column to display **Created**, **Effective**, or **Expiration** dates.



**NOTE:** Files that have expired will display “Expired” below the date of the file in the date column.

4. Select desired map file(s).
5. Tap **Download** once desired Map Library files have been selected.

DYNAMIC CONTENT CLASSIFIED TO: UNCLASSIFIED//FOUO//LIMDIS

Done Data Sources

AWS
Aero Data Server
File Manager i

Back

## macmini

Host: 192.168.98.17 HTTP Port: 5555


Cycles
Map Library

Download All

Map Library i

| Filename                                                                                                                                                                                                                    | Effective   | Size             |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|------------------|
| <span style="color: orange;">📁</span> <b>Partner Maps</b>                                                                                                                                                                   |             | 17.8 GB          |
| <span style="color: orange;">📁</span> <b>Australia NavPlan Coverage</b>                                                                                                                                                     |             | 3.0 GB           |
| <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"><input checked="" type="checkbox"/></div> <div> <b>NGA GNC</b><br/> <small>mm_nga_gnc_australia-2023-03-03.mbtiles</small> </div> </div> | 03 Mar 2023 | 261 MB Available |
| <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"><input checked="" type="checkbox"/></div> <div> <b>NGA JNC</b><br/> <small>mm_nga_jnc_australia-2023-03-03.mbtiles</small> </div> </div> | 03 Mar 2023 | 372 MB Available |
| <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"><input checked="" type="checkbox"/></div> <div> <b>NGA JOG</b><br/> <small>mm_nga_jog_australia-2023-03-08.mbtiles</small> </div> </div> | 08 Mar 2023 | 1.4 GB Available |
| <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"><input checked="" type="checkbox"/></div> <div> <b>NGA ONC</b><br/> <small>mm_nga_onc_australia-2023-03-03.mbtiles</small> </div> </div> | 03 Mar 2023 | 642 MB Available |
| <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"><input checked="" type="checkbox"/></div> <div> <b>NGA TPC</b><br/> <small>mm_nga_tpc_australia-2023-03-08.mbtiles</small> </div> </div> | 08 Mar 2023 | 358 MB Available |
| <span style="color: orange;">📁</span> <b>Central and South America NavPlan Coverage</b>                                                                                                                                     |             | 5.6 GB           |
| <span style="color: orange;">📁</span> <b>Colombia NavPlan Coverage</b>                                                                                                                                                      |             | 2.0 GB           |
| <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"><input checked="" type="checkbox"/></div> <div> <b>NGA JOG</b><br/> <small>mm_nga_jog_colombia-2023-03-22.mbtiles</small> </div> </div>  | 22 Mar 2023 | 2.0 GB Available |

6. To verify that Map Library files were successfully downloaded, navigate to **Map** on the **Main Menu**.
7. Navigate to **Map Manager** located at the lower right of the Map screen. The Map Manager popup will appear.
8. Select **Maps** from the navigation bar.
9. Select **Map Library** from the side menu.
10. Tap on the desired folder to reveal the subfolder. Then tap on the subfolder to reveal the downloaded Map Library chart file. Refer to [Section 14.4.5.1.5](#) for additional information.

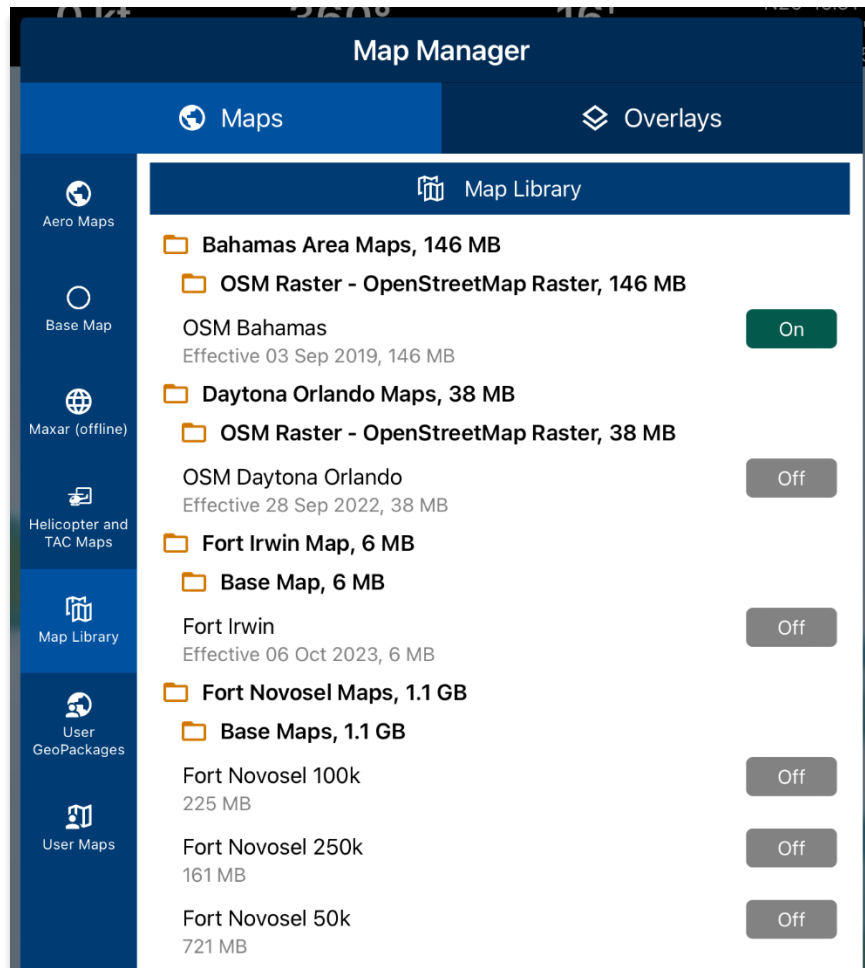


**NOTE:** Map Library charts can be deleted from File Manager or the Map Manager view by swiping left then tapping **Delete**.

## 10.4 Easy Buttons

Easy Button is a feature that bundles regional data files for the selected region. One or more Easy Buttons can be selected for the region(s) of interest. Easy Buttons are available on the AWS – GEOAxIS, Aero User Database and MDM, and Aero Data Server (if available for download).


1. Once you have selected the appropriate data source and the desired cycle, you will be redirected to the Data Cycle Download screen.
2. Tap desired **Easy Button(s)**:
  - Africa
  - Alaska
  - Canada
  - CONUS
  - CSA
  - EEA
  - ENAME
  - PAA
3. A dialog box displays all region files for the preferred region. Tap **No** to cancel or **Yes** to proceed. All related files will be selected once the selection of region is confirmed.

Easy Buttons —

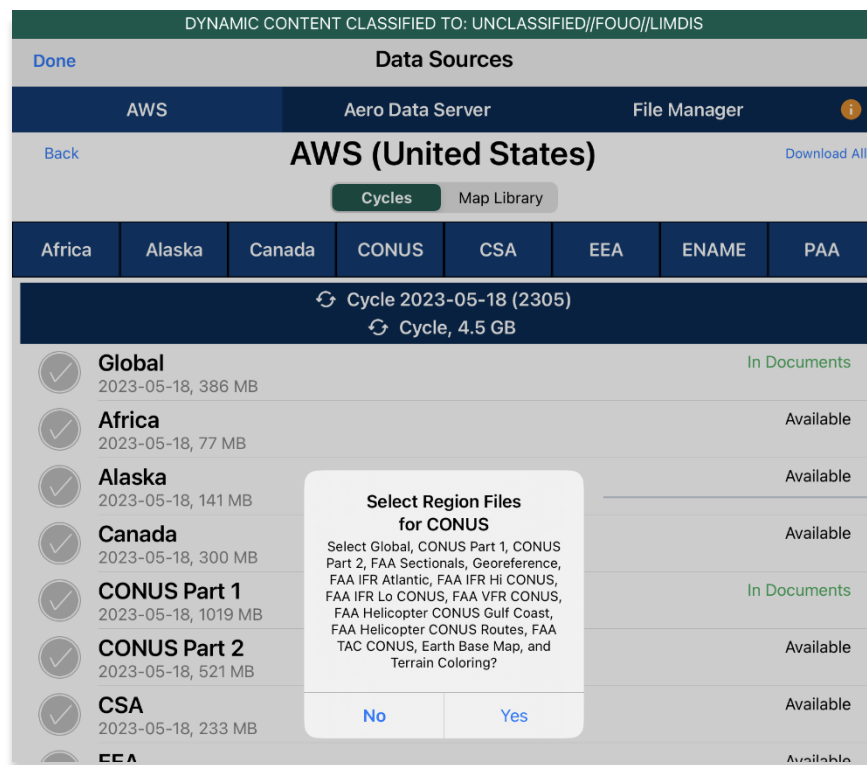

Easy Buttons  
confirmation

4. You can individually select or deselect desired data cycle files. Tap **Download** to begin the download.

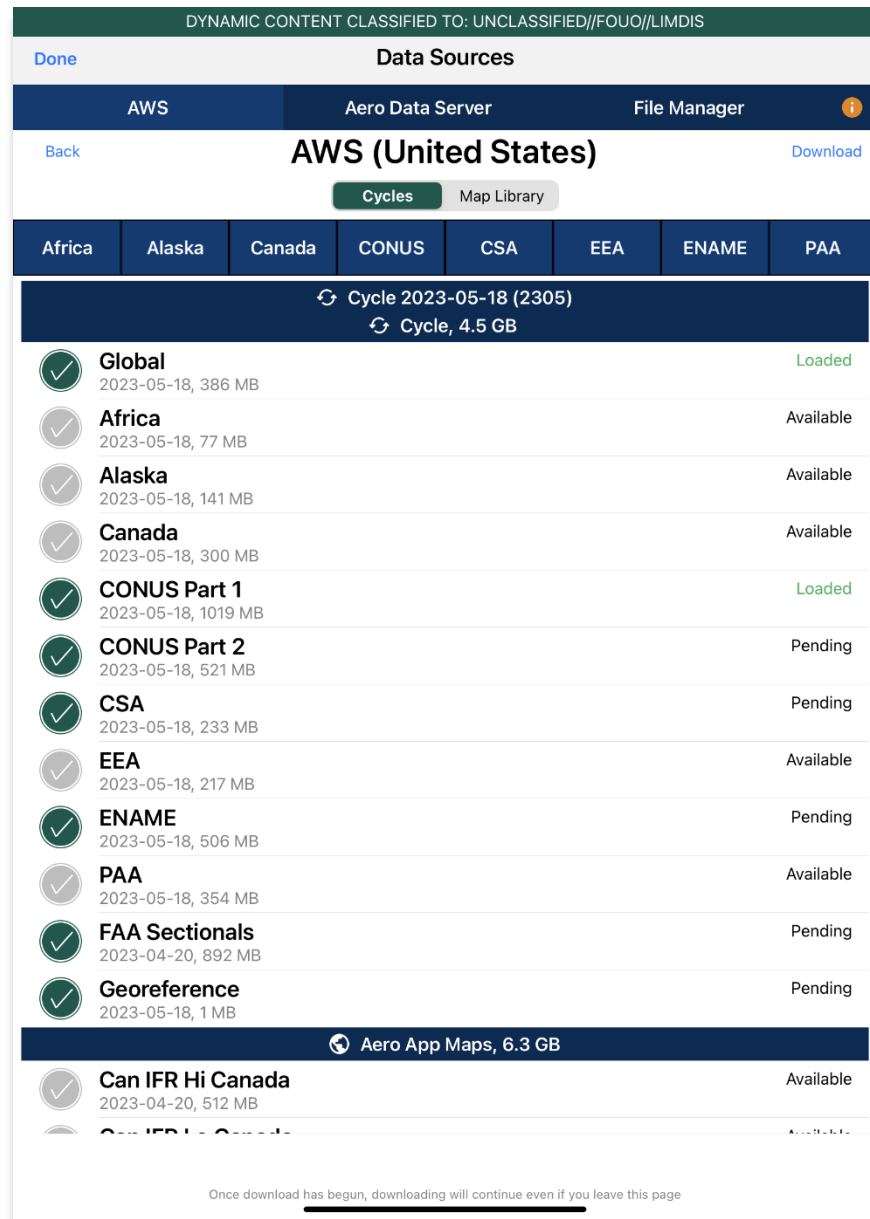

## 10.5 Download Data From the Aero App Website


The Aero App website ([aeroapp.info](https://aeroapp.info)) is a source to download Aero App data directly to your device. An active GEOAxis and Aero User Database credentials are required.

1. From your device, open an internet browser of choice.
2. Enter <https://download.aeroapp.info> in the address bar.




**NOTE:** Alternatively, users can go to [aeroapp.info](https://aeroapp.info) > Downloads > Data and users will be directed to the Data Menu Options page.

3. Log in using your GEOAxis or Aero User Database credentials. The Select Partner popup will be displayed for Aero User Database users who have access to multiple government foreign partners.
4. Navigate to the Cycles section of the page. Select **Cycles** from the list of folders.

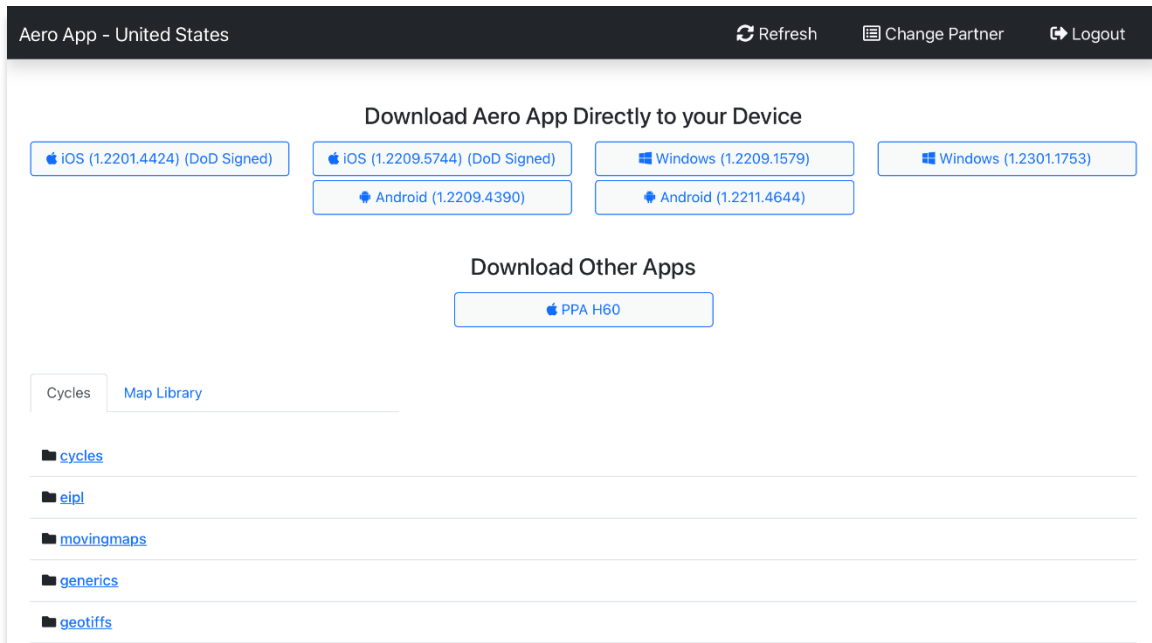

5. Click the **latest cycle** or a **cycle** of choice.

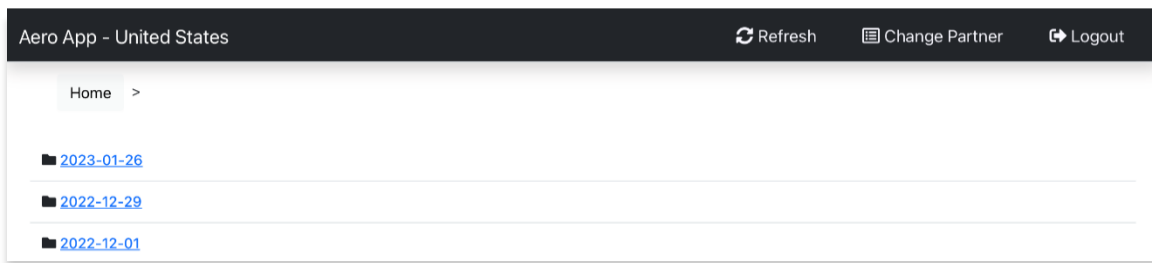


6. Users will be redirected to the download page. Located at the upper right of the screen are options to choose from **Full Data Files**, or **Delta Files** data types. Select desired data type.
7. Click the respective **ZIP** and **SIG** buttons for your region(s) of choice: **Africa**, **Alaska**, **Canada**, **CONUS**, **CSA**, **EEA**, **ENAME**, and/or **PAA**, and other files.




**NOTE:** The Global file must be included to download a complete data cycle.

8. A download confirmation window will appear above the taskbar with options to Open, Save, or Cancel download. Click **Save** or click the up-arrow (icon) and select **Save as**.



9. Once the data has completed the download, select from options to **Open**, **Open folder**, or **View downloads**.
10. Connect an iPad to your PC.
11. Locate device storage on the computer:
  - On Windows, open iTunes
  - On macOS, open Finder and select device under Locations.
12. Click the **iPad** icon and your device information will display.
13. Locate **Aero App** under File Sharing.
14. Go to the bottom of the iTunes screen and click **Add File**. File Explorer will display.

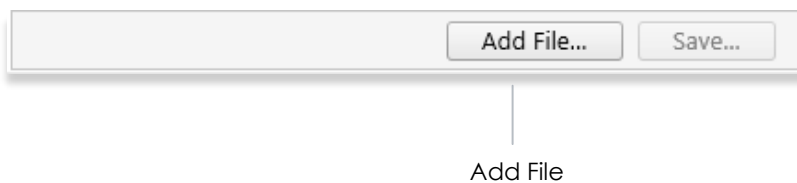

15. Drag the downloaded data files from your Downloads folder onto your iPad.



**NOTE:** Refer to [Section 13](#) on how to load and view data status.

## 11 Sideload Data

Aero App provides users the ability to sideload data from a trusted source into Aero App. Data such as User Maps, GeoPackages, User Waypoints, CRD files, Pins, Documents, and KML/KMZ files can be sideloaded and loaded onto Aero App.

### 11.1 Sideload Data From Aero App DVD

NGA distributes the Aero App DVD to appropriate personnel. For additional information, contact Jorge Diaz ([Jorge.Diaz@dla.mil](mailto:Jorge.Diaz@dla.mil)) from the Defense Logistics Agency.

Ways to sync device:

- On Windows, open iTunes
  - On macOS, open Finder and select device under Locations
1. Insert the Aero App DVD into your computer.
  2. Locate and double click on the DVD drive from File Explorer.


#### 11.1.1 Sideload Data with iTunes

1. Connect your Apple device to a USB or USB-C port of a Windows computer.
2. Open **iTunes**.




**NOTE:** Alternatively, users can enable the **Automatically sync when this iPad is connected** option on iTunes. Go to *Summary* > scroll down to *Options* > enable *Automatically sync when iPad is connected*. iTunes will automatically open once you connect your device to your computer.


3. Allow your computer to recognize your device. Once recognized, an iPad icon will appear. Click the iPad icon and your device information will display.
4. In the left sidebar, click **File Sharing**.
5. Select **Aero App** from the File Sharing section.

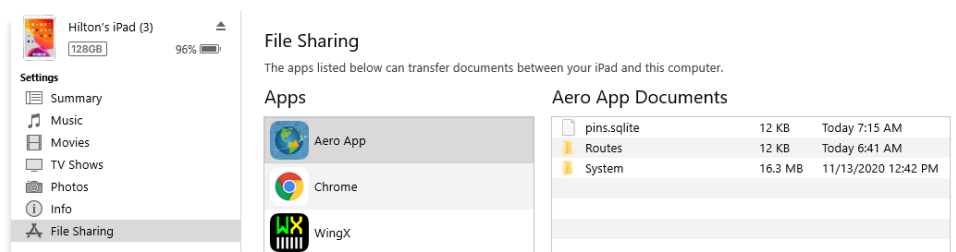

6. Navigate to the Aero App DVD on File Explorer.

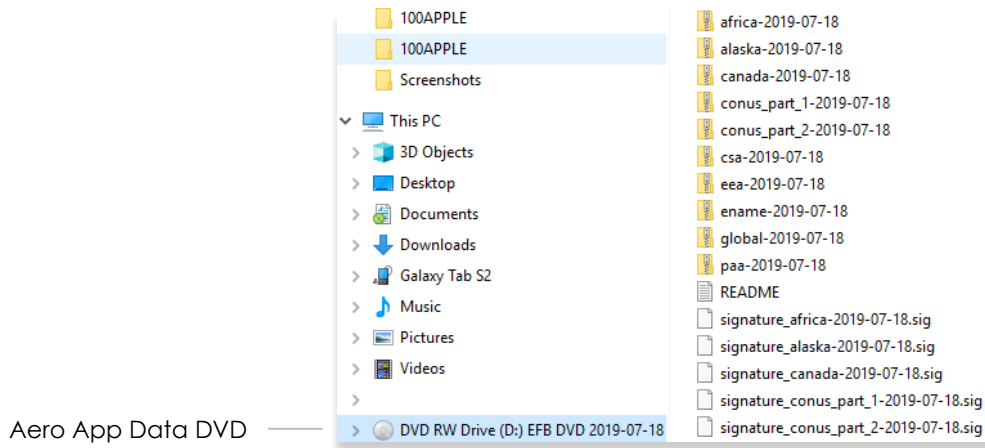

7. Drag and drop desired data files from the Aero App DVD onto Aero App files. Ensure to *include* Global zip and sig file.

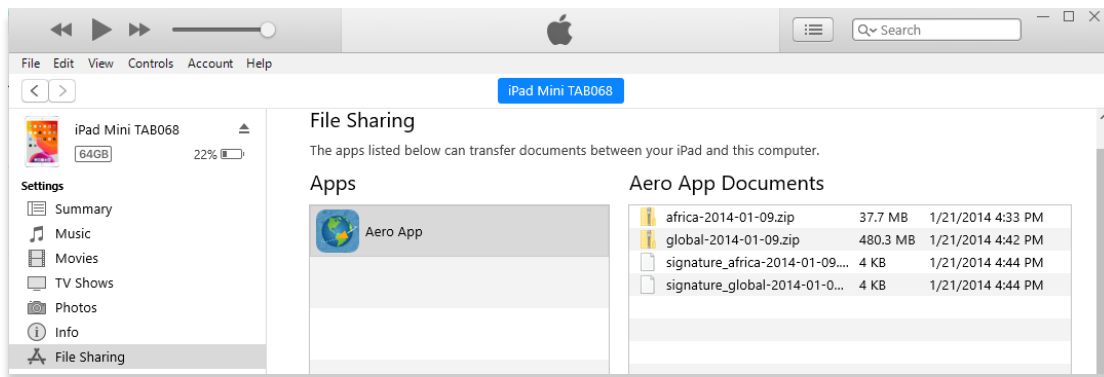

Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Data** on the **Main Menu**.
3. Tap **Download**.
4. Select the **File Manager** option from Data Sources.
5. A successful download will display the downloaded files below the Documents tab of the File Manager page.



**NOTE:** The Global zip and sig file must be included in your sideload.



**NOTE:** Refer to [Section 13](#) on how to load and view data status.




### 11.1.2 Sideload Data with Finder

macOS Catalina has replaced the iTunes application. Connect iPad to a USB or USB-C port of a Mac computer running macOS Catalina or later.


1. Connect your Apple device to a USB or USB-C port of a Mac computer.
2. Click the **Finder** icon in the Dock.
3. Locate your iPad on the left side of the Finder screen under Locations.
4. The top of the screen will display menu options. Click **Files**.




5. Aero App will display under Files. Click the **drop-down arrow** on the left side of Aero App to expand all available folders.

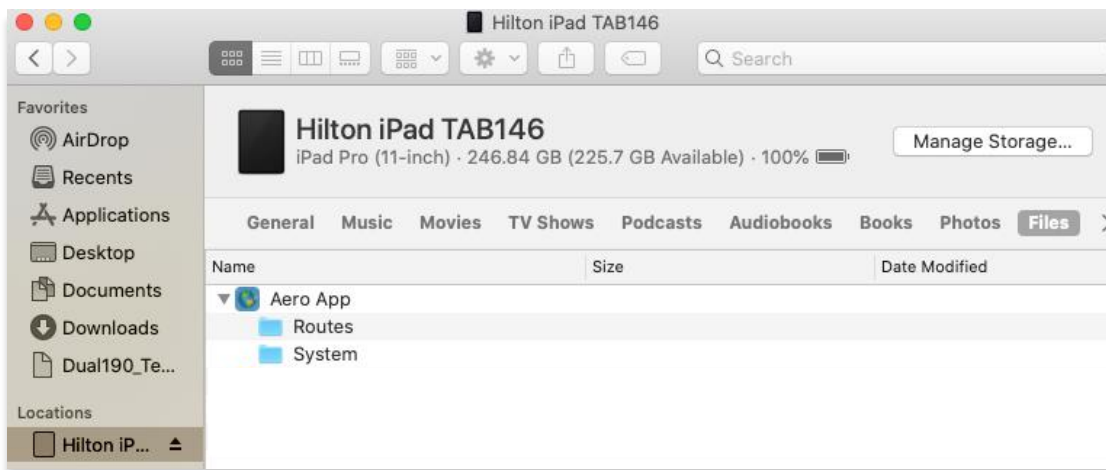

6. Navigate to the Aero App DVD on File Explorer.

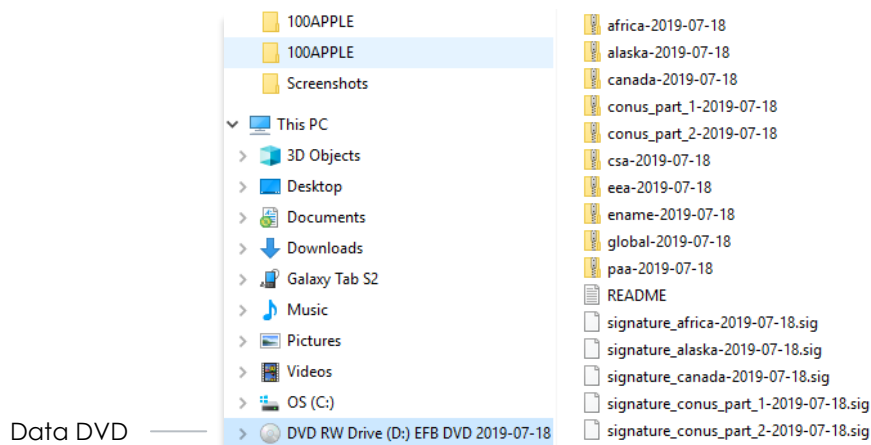

7. Drag and drop desired data files from the Aero App DVD onto Aero App files. Ensure to *include* Global zip and sig file.

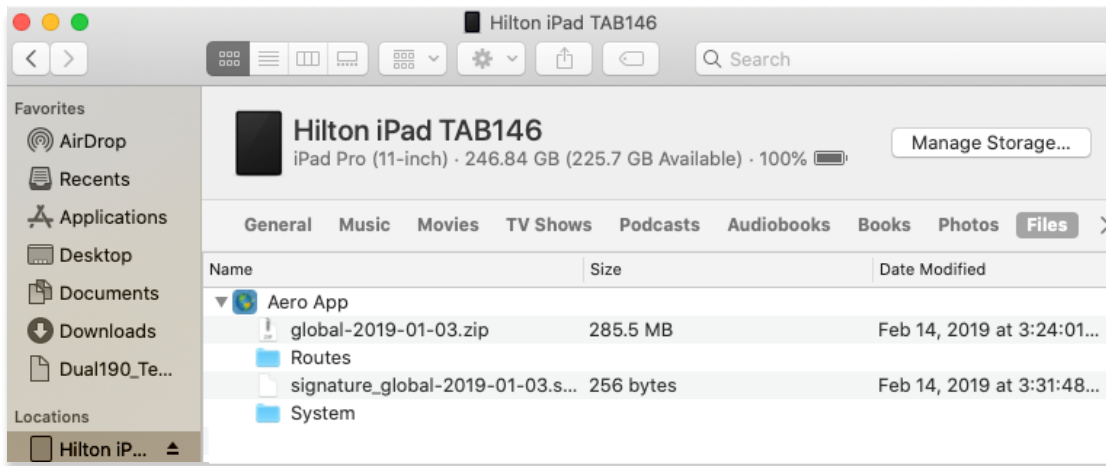

Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Data** on the **Main Menu**.
3. Tap **Download**.
4. Select the **File Manager** option from Data Sources.
5. A successful download will display the downloaded files below the Documents tab of the File Manager page.



**NOTE:** The Global zip and sig file must be included in your sideload.



**NOTE:** Refer to [Section 13](#) on how to load and view data status.

## 11.2 Sideload User Maps

Users can sideload user-generated Maps into Aero App. User Maps are MBTiles files that can be viewed on the map.

Ways to sync device:

- On Windows, open iTunes
- On macOS, open Finder and select device under Locations


### 11.2.1 Sideload User Maps with iTunes

1. Connect your Apple device to a USB or USB-C port of a Windows computer.
2. Open **iTunes**.



**NOTE:** Alternatively, users can enable the **Automatically sync when this iPad is connected** option on iTunes. Go to *Summary* > scroll down to *Options* > enable *Automatically sync when iPad is connected*. iTunes will automatically open once you connect your device to your computer.


3. Allow your computer to recognize your device. Once recognized, an iPad icon will appear. Click the iPad icon and your device information will display.
4. In the left sidebar, click **File Sharing**.
5. Select **Aero App** from the File Sharing section.

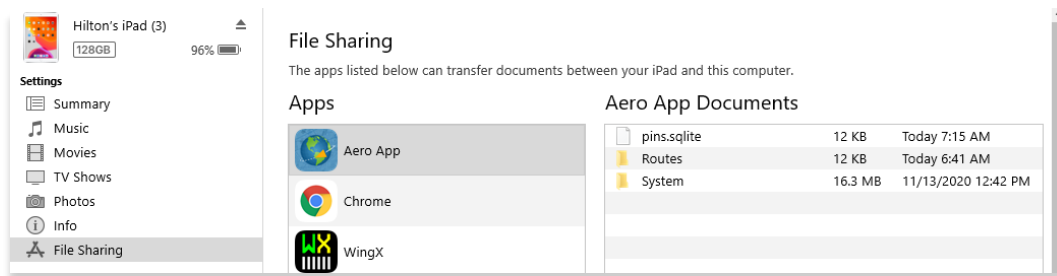

6. Navigate to the file containing User Maps.

|                                                                                                                  |                    |              |              |
|------------------------------------------------------------------------------------------------------------------|--------------------|--------------|--------------|
|  mm_faa_saa.mbtiles           | 11/25/2015 1:40 PM | MBTILES File | 85,645 KB    |
|  mm_gars_grid_30and15.mbtiles | 1/6/2016 10:55 PM  | MBTILES File | 3,051,108 KB |

7. Drag and drop desired User Map file(s) from the Aero App DVD onto Aero App files.

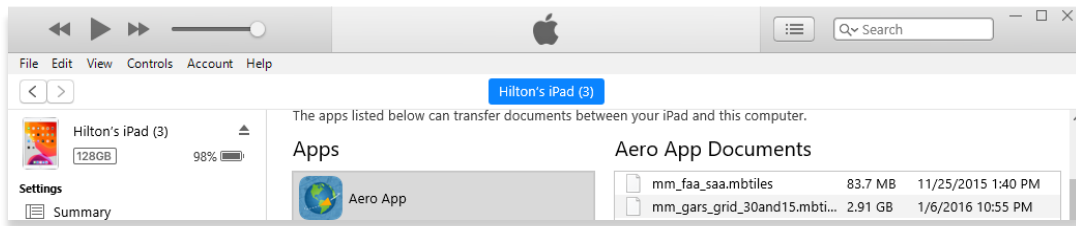

Verify that the sideload was successful. The steps in achieving this are as follows:


1. Open **Aero App**.
2. Tap **Map** on the **Main Menu**.
3. Navigate to **Map Manager** located at the lower right of the Map screen. The Map Manager popup will appear.
4. Select **Maps** from the navigation bar, if necessary.
5. Select **User Maps** from the side menu. A successful sideload will display the User Map(s) in the list.

### 11.2.2 Sideload User Maps with Finder



1. Connect your Apple device to a USB or USB-C port of a Mac computer.
2. Click the **Finder** icon in the Dock.
3. On the Finder window, your device will display on the sidebar. Click your device.
4. The top of the page will display menu options. Click **Files**.

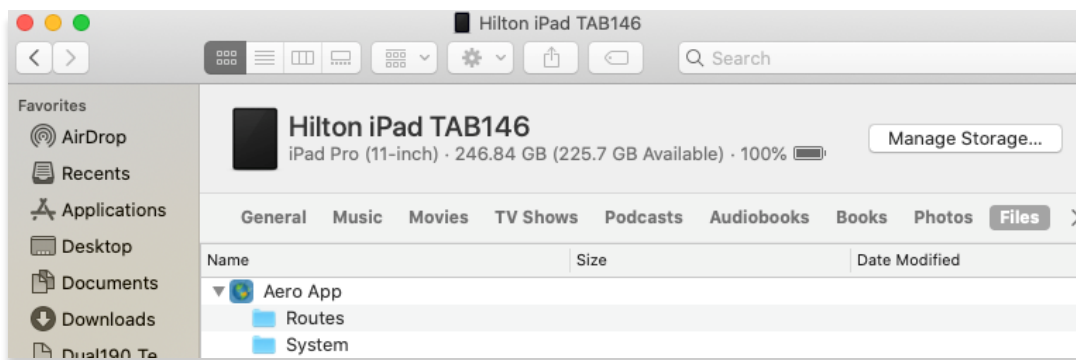


5. Aero App will display under Files. Click the **drop-down arrow** on the left side of Aero App to display all available folders.



6. Navigate to the file containing User Maps.


|                                                                                                                |                    |              |              |
|----------------------------------------------------------------------------------------------------------------|--------------------|--------------|--------------|
|  mm_faa_saa.mbtiles           | 11/25/2015 1:40 PM | MBTILES File | 85,645 KB    |
|  mm_gars_grid_30and15.mbtiles | 1/6/2016 10:55 PM  | MBTILES File | 3,051,108 KB |

7. Drag and drop desired User Map(s) onto Aero App files.

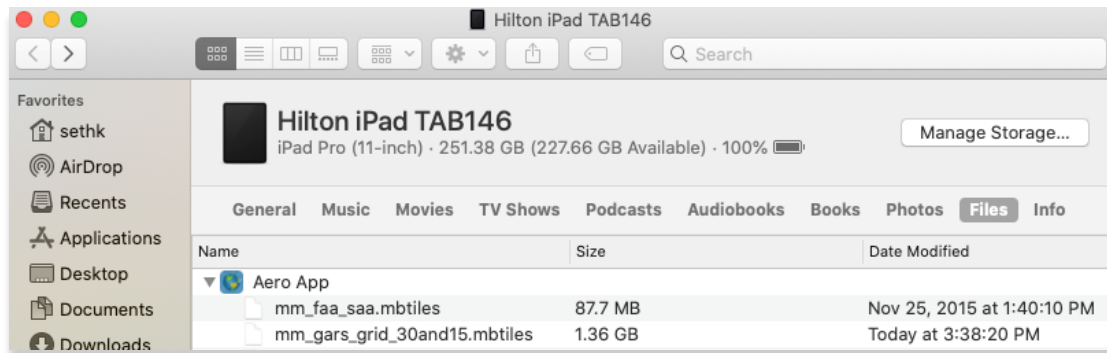

Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Map** on the **Main Menu**.
3. Navigate to **Map Manager** located at the lower right of the Map screen. The Map Manager popup will appear.
4. Select **Maps** from the navigation bar.
5. Select **User Maps** from the side menu. A successful sideload will display the User Map(s) in the list.

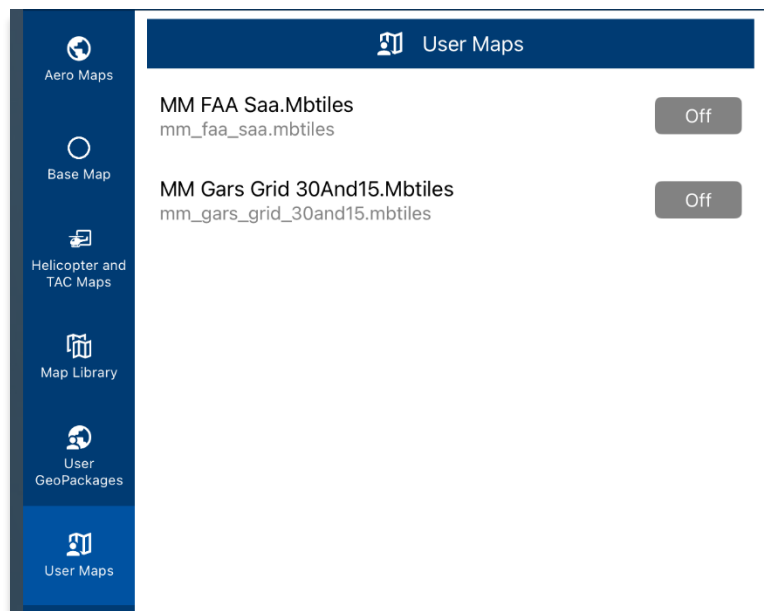

## 11.3 Sideload User GeoPackages

Users can sideload GeoPackages into Aero App to view on the Map.

Ways to sync device:

- On Windows, open iTunes
- On macOS, open Finder and select device under Locations


### 11.3.1 Sideload User GeoPackages with iTunes

1. Connect your Apple device to a USB or USB-C port of a Windows computer.
2. Open **iTunes**.







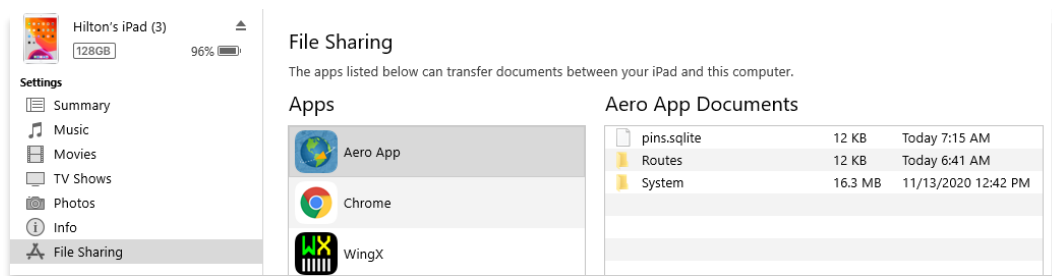

**NOTE:** Alternatively, users can enable the **Automatically sync when this iPad is connected** option on iTunes. Go to *Summary* > scroll down to *Options* > enable *Automatically sync when iPad is connected*. iTunes will automatically open once you connect your device to your computer.


3. Allow your computer to recognize your device. Once recognized, an iPad icon will appear. Click the iPad icon and your device information will display.
4. In the left sidebar, click **File Sharing**.
5. Select **Aero App** from the File Sharing section.



6. Navigate to the file containing GeoPackages.

|                                                                                   |                                       |                    |           |            |
|-----------------------------------------------------------------------------------|---------------------------------------|--------------------|-----------|------------|
|  | NRL_AERO_St-Louis_4-13_v1-1_02JUL2... | 4/22/2021 12:46 PM | GPKG File | 47,124 KB  |
|  | NRL_AERO_USA_0-0_v1-1_02JUL2019....   | 4/22/2021 12:46 PM | GPKG File | 8,940 KB   |
|  | NRL_AERO-Overlay_St-Louis_4-13_v1-... | 4/22/2021 12:46 PM | GPKG File | 35,844 KB  |
|  | NRL_BlueMarble-3395_GLOBAL_0-6_v...   | 11/19/2020 5:18 PM | GPKG File | 29,232 KB  |
|  | NRL_DNC_Norfolk_4-16_v1-0_19OCT2...   | 4/22/2021 12:52 PM | GPKG File | 693,020 KB |
|  | NRL_DNC_San-Diego_4-16_v1-0_18OC...   | 4/22/2021 12:47 PM | GPKG File | 86,504 KB  |

7. Drag and drop desired GeoPackage file(s) onto Aero App files.

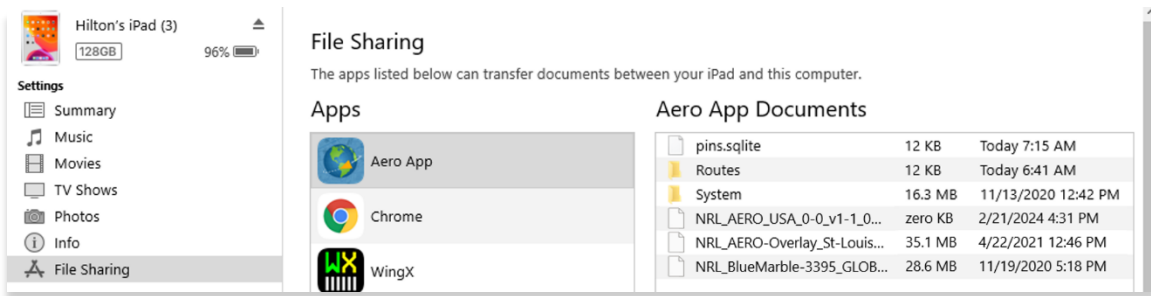


Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Map** on the **Main Menu**.
3. Navigate to **Map Manager** located at the lower right of the Map screen. The Map Manager popup will appear.
4. Select **Maps** from the navigation bar, if necessary.
5. Select **User GeoPackages** from the side menu. A successful sideload will display the name(s) of the GeoPackage(s) in the list.

### 11.3.2 Sideload User GeoPackages with Finder


1. Connect your Apple device to a USB or USB-C port of a Mac computer.
2. Click the **Finder** icon in the Dock.
3. On the Finder window, your device will display on the sidebar. Click your device.
4. The top of the page will display menu options. Click **Files**.



5. Aero App will display under Files. Click the **drop-down arrow** on the left side of Aero App to display all available folders.
6. Navigate to the file containing GeoPackages.

|  |                                       |                    |           |            |
|--|---------------------------------------|--------------------|-----------|------------|
|  | NRL_AERO-Overlay_St-Louis_4-13_v1-... | 4/22/2021 12:46 PM | GPKG File | 35,844 KB  |
|  | NRL_BlueMarble-3395_GLOBAL_0-6_v...   | 11/19/2020 5:18 PM | GPKG File | 29,232 KB  |
|  | NRL_DNC_Norfolk_4-16_v1-0_19OCT2...   | 4/22/2021 12:52 PM | GPKG File | 693,020 KB |
|  | NRL_DNC_San-Diego_4-16_v1-0_18OC...   | 4/22/2021 12:47 PM | GPKG File | 86,504 KB  |

7. Drag and drop desired user GeoPackage(s) onto Aero App files.

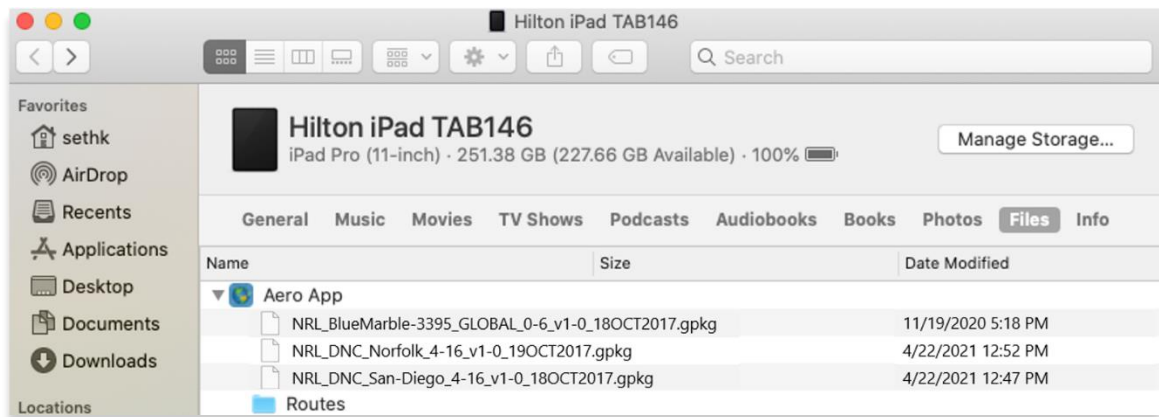

Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Map** on the **Main Menu**.
3. Navigate to **Map Manager** located at the lower right of the Map screen. The Map Manager popup will appear.
4. Select **Maps** from the navigation bar.
5. Select **User GeoPackages** from the side menu. A successful sideload will display the name(s) of the GeoPackage(s) in the list.




## 11.4 Sideload User Waypoints


Users can sideload custom waypoints to view on the map or add to a flight route. Users have the option to create individual user waypoints directly from Aero App or sideload multiple user waypoints at a time.

Aero App supports text files for user waypoints. The user waypoints file should follow the format `{name}-waypoints.txt`. To create a user waypoint, the following steps should be followed:


1. Connect your Apple device to a USB or USB-C port of a Mac or Windows computer.
2. Locate device storage on the computer:
  - On Windows, open iTunes
  - On macOS, open Finder and select device under Locations.
3. Create a folder in your desktop named User Waypoints.
4. Right-click on the folder and open **TextEdit** on your Mac desktop.
5. On the upper left corner of the screen, hover over Format and click **Make Plain Text**.

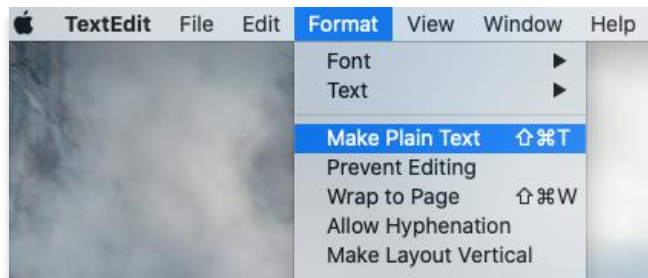

6. The TextEdit will be renamed to Untitled – Edited.
7. Click the drop-down arrow and create a name for the Text Document following the format: **<waypoint name>-waypoints.txt**.

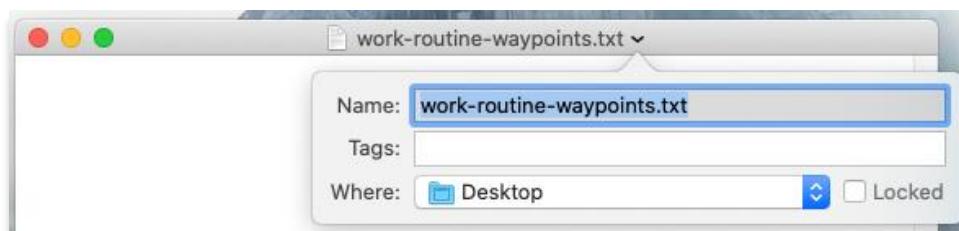

- Click on textfile to open TextEdit. Create the Waypoint following the format:  
**<ID>,<Name>,<Latitude>,<Longitude>.**

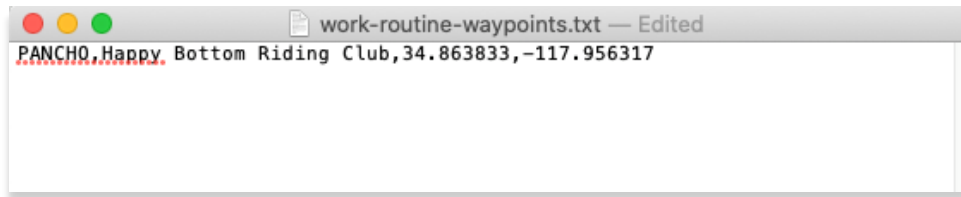

- Once the User Waypoint has been created, click the **exit** button to quit the app. Your data will automatically be saved.



**NOTE:** To create User Waypoints, pilots can use TextEdit on a Mac and Notepad on Windows.


### 11.4.1 Sideload User Waypoints with iTunes

- Connect your Apple device to a USB or USB-C port of a Windows computer.
- Open **iTunes**.



**NOTE:** Alternatively, users can enable the **Automatically sync when this iPad is connected** option on iTunes. Go to *Summary* > scroll down to *Options* > enable *Automatically sync when iPad is connected*. iTunes will automatically open once you connect your device to your computer.


- Allow your computer to recognize your device. Once recognized, an iPad icon will appear. Click the iPad icon and your device information will display.
- In the left sidebar, click **File Sharing**.
- Select **Aero App** from the File Sharing section.

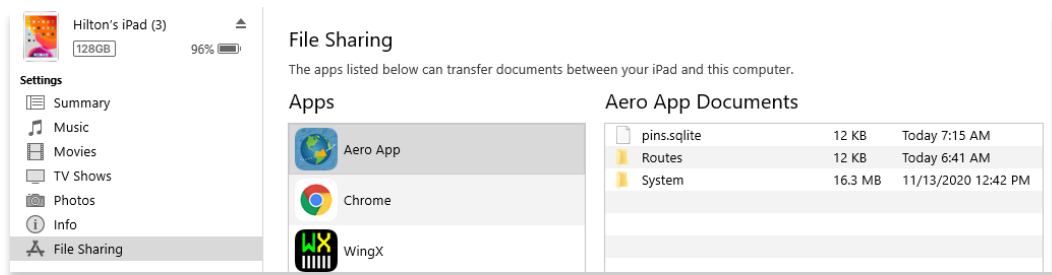

- Navigate to the file containing User Waypoints.

|  |                            |                   |          |            |
|--|----------------------------|-------------------|----------|------------|
|  | initial-waypoints.txt      | Today at 11:43 AM | 53 bytes | Plain Text |
|  | work-routine-waypoints.txt | Today at 11:52 AM | 53 bytes | Plain Text |

7. Drag and drop desired User Waypoint(s) onto Aero App files.

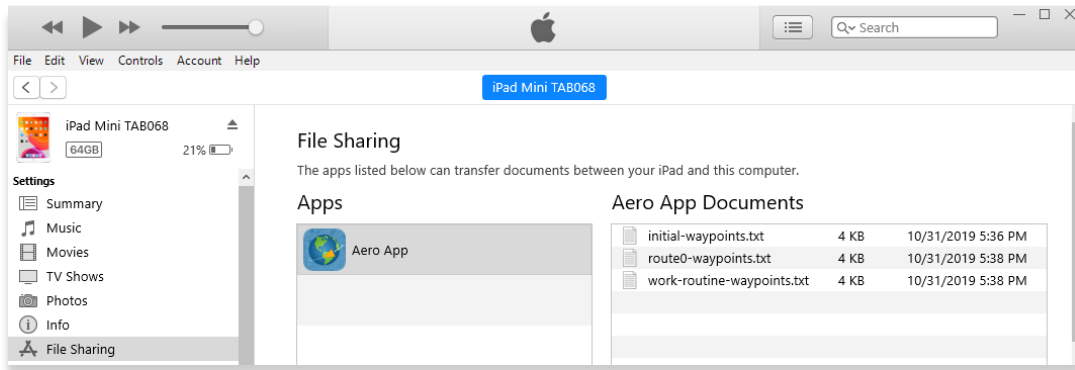

Verify that the sideload was successful. The steps in achieving this are as follows:


1. Open **Aero App**.
2. Tap **Search** on the **Main Menu**.
3. The Search popup will appear. Enter the name of the user waypoint in the text field. The user waypoint(s) will appear under the User Waypoints section.

#### 11.4.2 Sideload User Waypoints with Finder



1. Connect your Apple device to a USB or USB-C port of a Mac computer.
2. Click the **Finder** icon in the Dock.
3. On the Finder window, your device will display in the sidebar. Click your device.
4. The top of the screen will display menu options. Click **Files**.

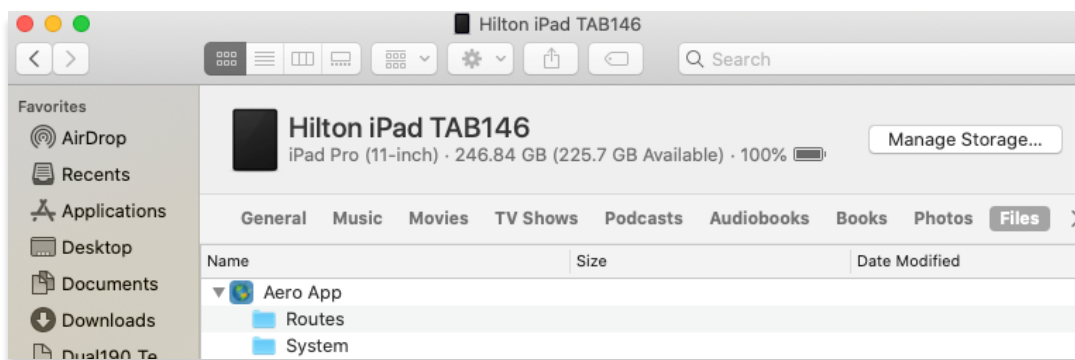

5. Aero App will display under Files. Click the **drop-down arrow** on the left side of Aero App to display all available folders.



6. Navigate to the file containing User Waypoints.


|                                                                                   |                            |                   |          |            |
|-----------------------------------------------------------------------------------|----------------------------|-------------------|----------|------------|
|  | initial-waypoints.txt      | Today at 11:43 AM | 53 bytes | Plain Text |
|  | work-routine-waypoints.txt | Today at 11:52 AM | 53 bytes | Plain Text |

7. Drag and drop desired User Waypoint(s) onto Aero App files.



Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Search** on the **Main Menu**.
3. The Search popup will appear. Enter the name of the user waypoint in the text field. The user waypoint(s) will appear under the User Waypoints section.

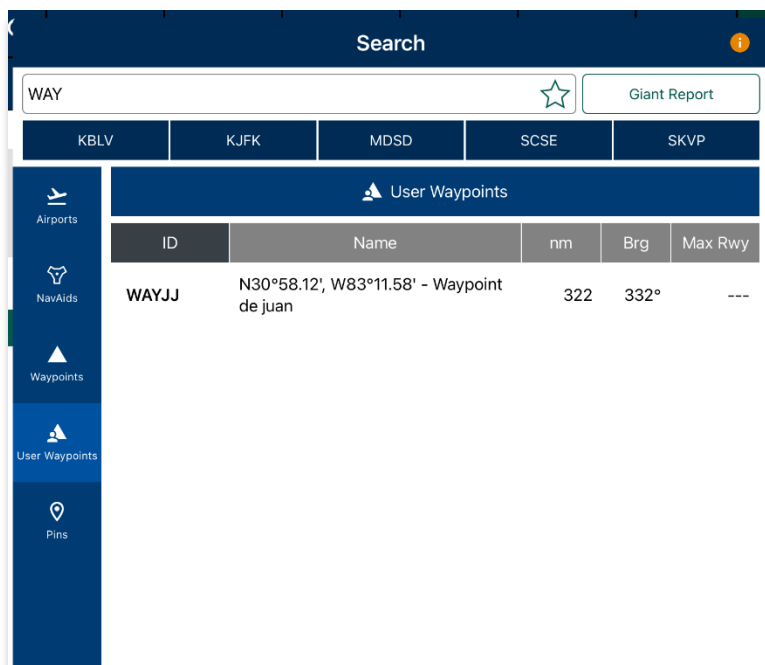

## 11.5 Sideload Common Route Definition (CRD) Files

Aero App enables users to sideload Common Route Definition (CRD) files to view on the map or add to a flight route.

Ways to sync device:

- On Windows, open iTunes
- On macOS, open Finder and select device under Locations


### 11.5.1 Sideload CRD Files with iTunes

1. Connect your Apple device to a USB or USB-C port of a Windows computer.
2. Open **iTunes**.



**NOTE:** Alternatively, users can enable the **Automatically sync when this iPad is connected** option on iTunes. Go to *Summary* > scroll down to *Options* > enable *Automatically sync when iPad is connected*. iTunes will automatically open once you connect your device to your computer.


3. Allow your computer to recognize your device. Once recognized, an iPad icon will appear. Click the iPad icon and your device information will display.
4. In the left sidebar, click **File Sharing**.
5. Select **Aero App** from the File Sharing section.

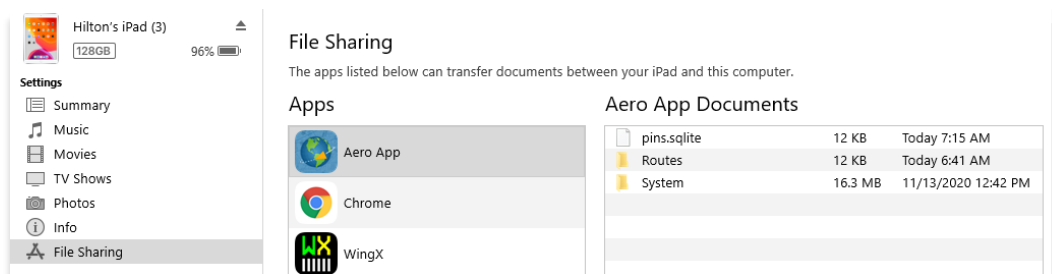

6. Navigate to the folder containing CRD files.

|                               |                    |          |        |
|-------------------------------|--------------------|----------|--------|
| MPS_AWE_CustomData.crd        | 3/15/2016 12:31 PM | CRD File | 41 KB  |
| MPS_CustomData_Two_Routes.crd | 3/15/2016 12:31 PM | CRD File | 38 KB  |
| MPS_ONE.crd                   | 3/15/2016 12:31 PM | CRD File | 75 KB  |
| MPS_two_route.crd             | 3/15/2016 12:31 PM | CRD File | 90 KB  |
| PFPS_CH46EEverything.crd      | 3/15/2016 12:31 PM | CRD File | 113 KB |

7. Drag and drop desired CRD file(s) onto Aero App files.

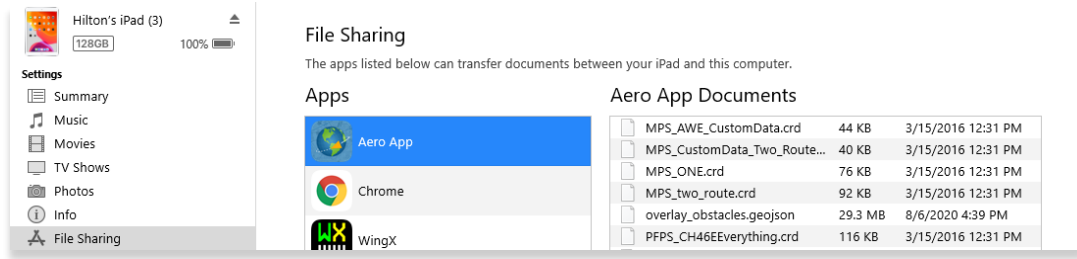


Verify that the sideload was successful. The steps in achieving this are as follows:


1. Open **Aero App**.
2. Tap **Route** on the **Main Menu**. The Route Panel will expand.
3. Tap **Route Manager** located at the bottom of the panel view.
4. Select **Actions** from the side menu, if necessary.
5. Tap **Load** and your CRD file(s) will appear under Load Route.

### 11.5.2 Sideload CRD Files with Finder

1. Connect your Apple device to a USB or USB-C port of a Mac computer.
2. Click the **Finder** icon in the Dock.
3. On the Finder window, your device will display in the sidebar. Click your device.
4. The top of the screen will display menu options. Click **Files**.




5. Aero App will display under Files. Click the **drop-down arrow** on the left side of Aero App to display all available folders.

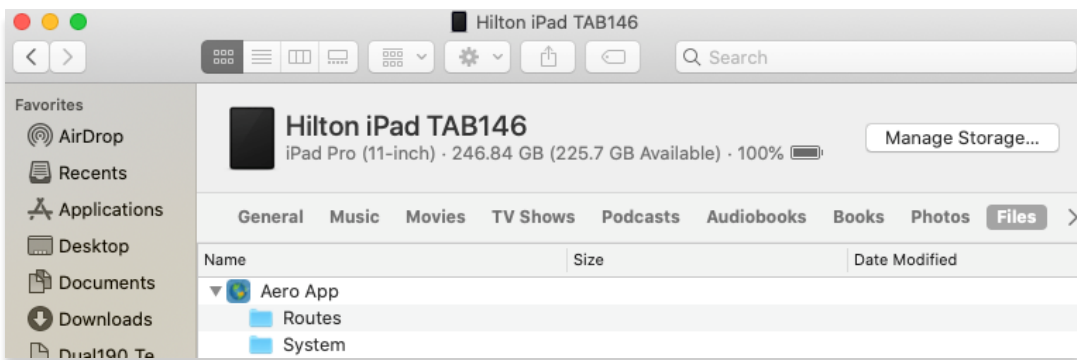

6. Navigate to the folder containing CRD files.


|                               |                    |          |        |
|-------------------------------|--------------------|----------|--------|
| MPS_AWE_CustomData.crd        | 3/15/2016 12:31 PM | CRD File | 41 KB  |
| MPS_CustomData_Two_Routes.crd | 3/15/2016 12:31 PM | CRD File | 38 KB  |
| MPS_ONE.crd                   | 3/15/2016 12:31 PM | CRD File | 75 KB  |
| MPS_two_route.crd             | 3/15/2016 12:31 PM | CRD File | 90 KB  |
| PFPS_CH46EEverything.crd      | 3/15/2016 12:31 PM | CRD File | 113 KB |

7. Drag and drop desired CRD file(s) onto Aero App files.

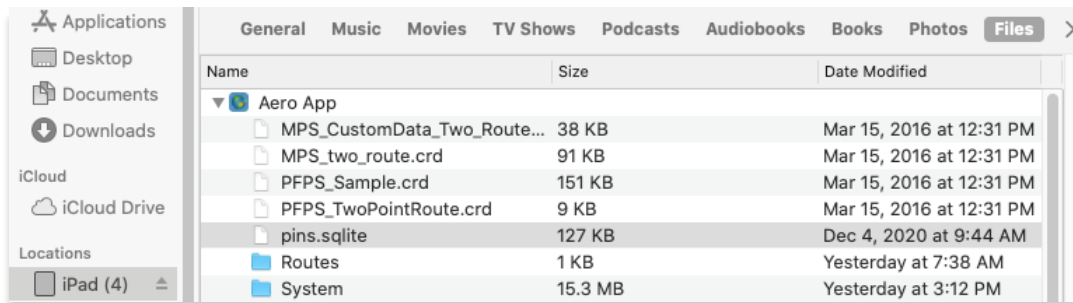

Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Route** on the **Main Menu**. The Route Panel will expand.
3. Tap **Route Manager** located at the bottom of the panel view.
4. Select **Actions** from the side menu, if necessary.
5. Tap **Load** and your CRD file(s) will appear under Load Route.

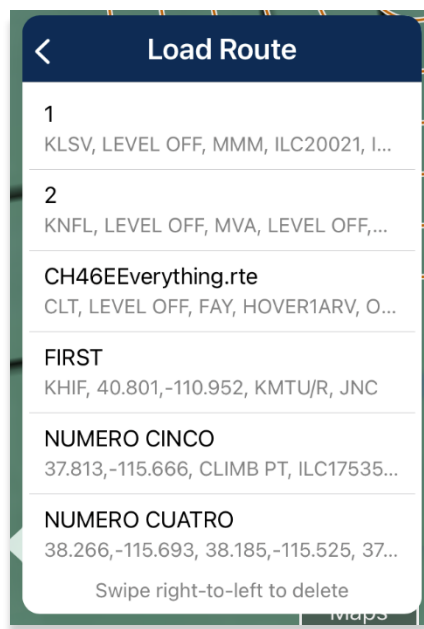

## 11.6 Sideload Pins

Aero App enables users to sideload Pins into Aero App. To sideload Pins, users must create a SQLite file. Refer to [Appendix C | Hazards and Pins SQLite Files](#) for additional information. The Pin SQLite file should follow the format *pins-{name}.sqlite* and be stored in the AeroApp\Pins directory.

A file with the format *pins.sqlite* contains stored pins that were created through the app. These pins are viewed in the Dropped Pins table on Aero App. Refer to [Section 14.1.3.4.2](#) for additional information.

Ways to sync device:

- On Windows, open iTunes
- On macOS, open Finder and select device under Locations


### 11.6.1 Sideload Pins with iTunes

1. Connect your Apple device to a USB or USB-C port of a Windows computer.
2. Open **iTunes**.




**NOTE:** Alternatively, users can enable the **Automatically sync when this iPad is connected** option on iTunes. Go to *Summary* > scroll down to *Options* > enable *Automatically sync when iPad is connected*. iTunes will automatically open once you connect your device to your computer.

3. Allow your computer to recognize your device. Once recognized, an iPad icon will appear. Click the iPad icon and your device information will display.
4. In the left sidebar, click **File Sharing**.
5. Select **Aero App** from the File Sharing section.

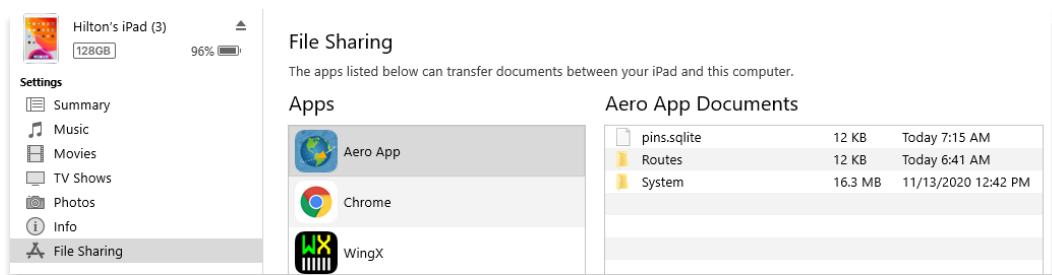




6. Locate the pins.sqlite files you wish to sideload onto Aero App. Rename the SQLite file to the format, *pins-{name}.sqlite*.
7. Drag and drop desired pin SQLite file(s) onto Aero App files.

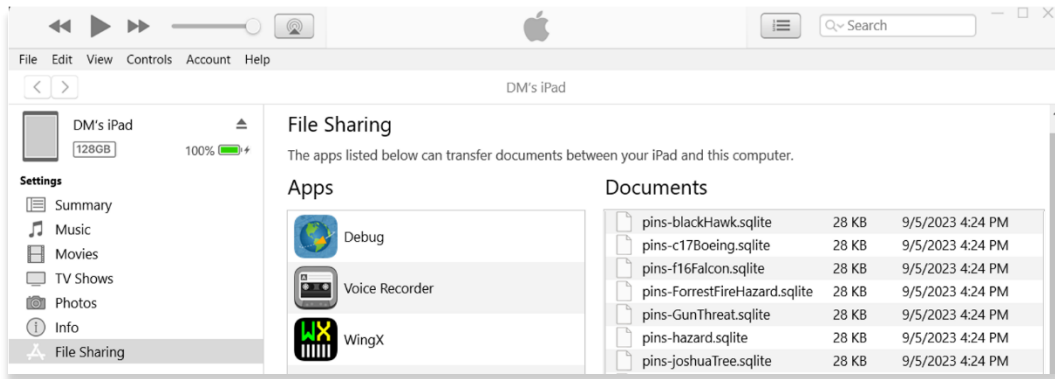


**NOTE:** If the imported file is not renamed, any pins stored in pins.sqlite will be overwritten.

Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Map** on the **Main Menu**.
3. Navigate to **Map Manager** located at the lower right corner of the Map screen. The Map Manager popup will appear.
4. Select **Overlays** from the navigation bar.
5. Select **User Overlays** from the side menu.
6. Locate your imported files. The files should display as *pins-{name}.sqlite*.

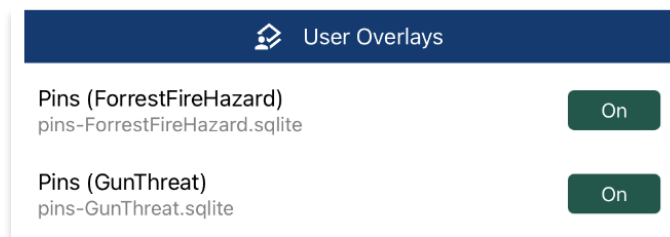

7. Tap to enable your desired imported pins file and the pin will display on the Map.

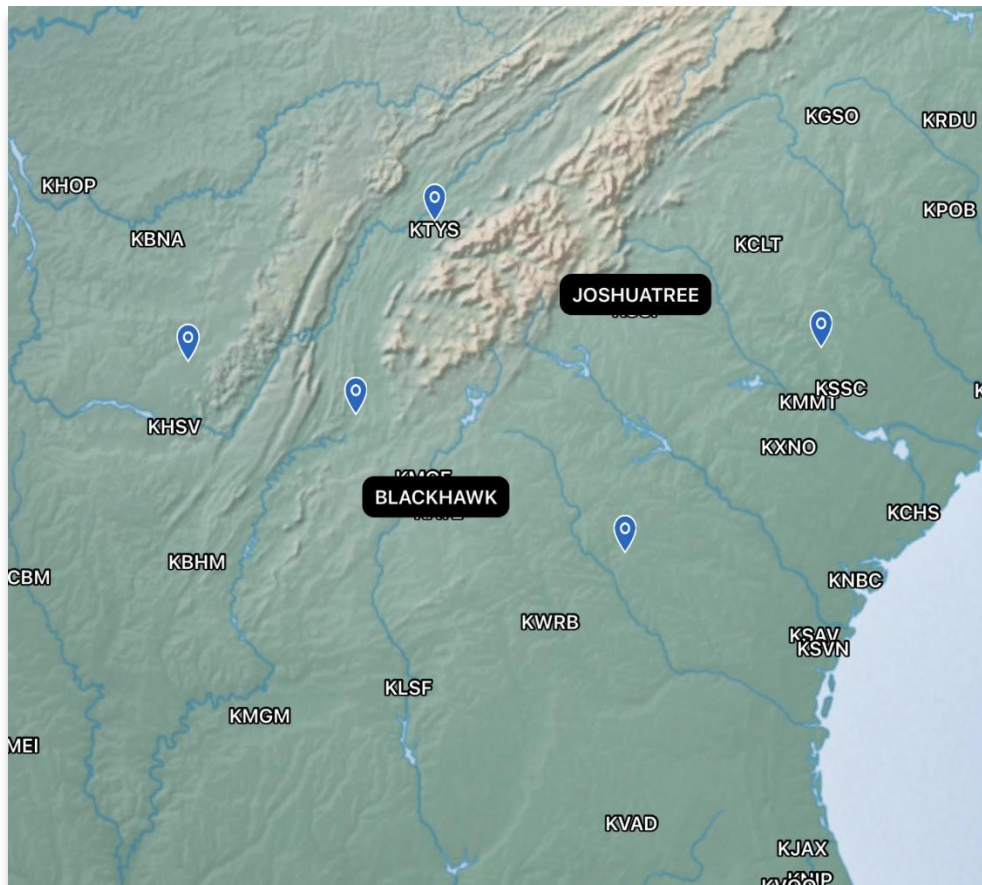


8. To delete an overlay, from the **User Overlays** popup, swipe left to reveal the *delete* button of the file that you choose to permanently remove. Tap **Delete**.

### 11.6.2 Sideload Pins with Finder

1. Connect your Apple device to a USB or USB-C port of a Mac computer.
2. Click the **Finder** icon in the Dock.
3. On the Finder window, your device will display in the sidebar. Click your device.
4. The top of the screen will display menu options. Click **Files**.




5. Aero App will display under Files. Click the **drop-down arrow** on the left side of Aero App to display all available folders.
6. Locate the pins.sqlite files that you wish to sideload onto Aero App. Rename the SQLite file to the format, *pins-{name}.sqlite*.
7. Drag and drop desired pins SQLite file(s) onto Aero App files.

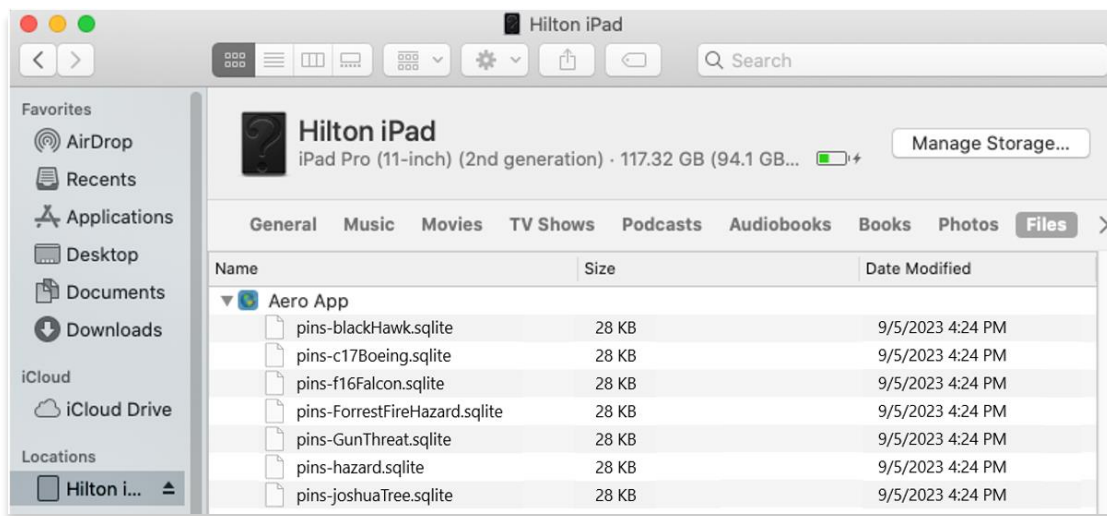

Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Map** on the **Main Menu**.
3. Navigate to **Map Manager** located at the lower right corner of the Map screen.  
The Map Manager popup will appear.
4. Select **Overlays** from the navigation bar.
5. Select **User Overlays** from the side menu.

6. Locate your imported files. The files should display as *pins-{name}.sqlite*.

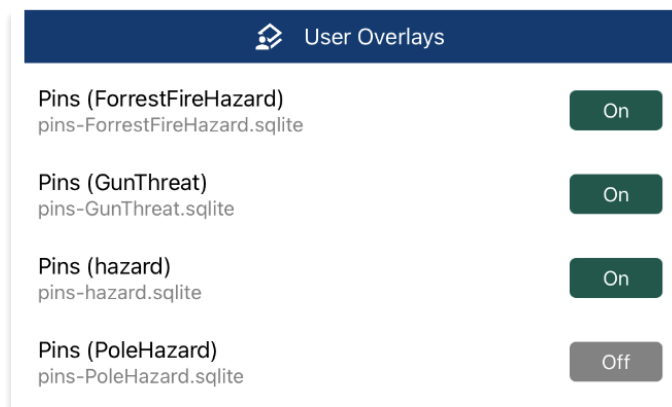

7. Tap to enable your desired imported pins file and the pin will display on the Map.



8. To delete an overlay, from the **User Overlays** popup, swipe left to reveal the *delete* button of the file that you choose to permanently remove. Tap **Delete**.

## 11.7 Sideload Hazards

Aero App enables users to sideload Hazards into Aero App. To sideload Hazards, users must create a SQLite file. Refer to [Appendix C | Hazards and Pins SQLite Files](#) for additional information. The Hazard SQLite file should follow the format *pins-{name}.sqlite* and be stored in the AeroApp\Pins directory.

A file with the format *pins.sqlite* contains stored hazards that were created through the app. These hazards are viewed in the Dropped Hazards table on Aero App. Refer to [Section 14.1.3.4.3](#) for additional information.

Ways to sync device:

- On Windows, open iTunes
- On macOS, open Finder and select device under Locations


### 11.7.1 Sideload Hazards with iTunes

1. Connect your Apple device to a USB or USB-C port of a Windows computer.
2. Open **iTunes**.




**NOTE:** Alternatively, users can enable the **Automatically sync when this iPad is connected** option on iTunes. Go to *Summary* > scroll down to *Options* > enable *Automatically sync when iPad is connected*. iTunes will automatically open once you connect your device to your computer.

3. Allow your computer to recognize your device. Once recognized, an iPad icon will appear. Click the iPad icon and your device information will display.
4. In the left sidebar, click **File Sharing**.
5. Select **Aero App** from the File Sharing section.

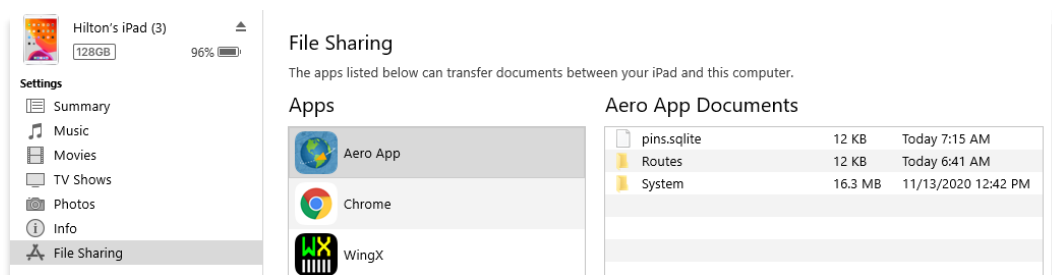


6. Locate the pins.sqlite files you wish to sideload onto Aero App. Rename the SQLite file to the format, *pins-{name}.sqlite*.
7. Drag and drop desired pins SQLite file(s) onto Aero App files.

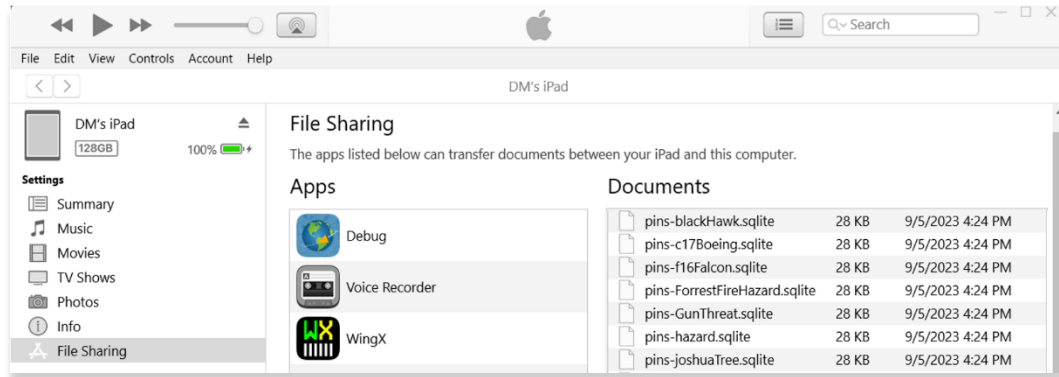

**NOTE:** If the imported file is not renamed, any pins stored in pins.sqlite will be overwritten.

Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Map** on the **Main Menu**.
3. Navigate to **Map Manager** located at the lower right corner of the Map screen. The Map Manager popup will appear.
4. Select **Overlays** from the navigation bar.
5. Select **User Overlays** from the side menu.
6. Locate your imported files. The files should display as *pins-{name}.sqlite*.

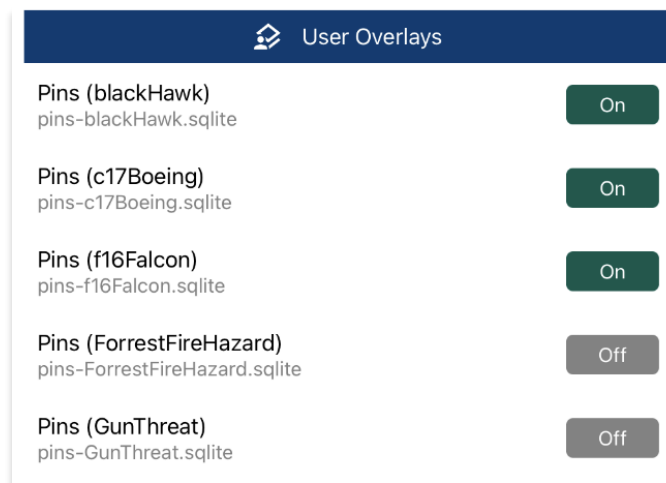







### 11.7.2 Sideload Hazards with Finder

1. Connect your Apple device to a USB or USB-C port of a Mac computer.
2. Click the **Finder** icon in the Dock.
3. On the Finder window, your device will display in the sidebar. Click your device.
4. The top of the screen will display menu options. Click **Files**.



5. Aero App will display under Files. Click the **drop-down arrow** on the left side of Aero App to display all available folders.
6. Locate the pins.sqlite files that you wish to sideload onto Aero App. Rename the SQLite file to the format, *pins-{name}.sqlite*.
7. Drag and drop desired pins SQLite file(s) onto Aero App files.

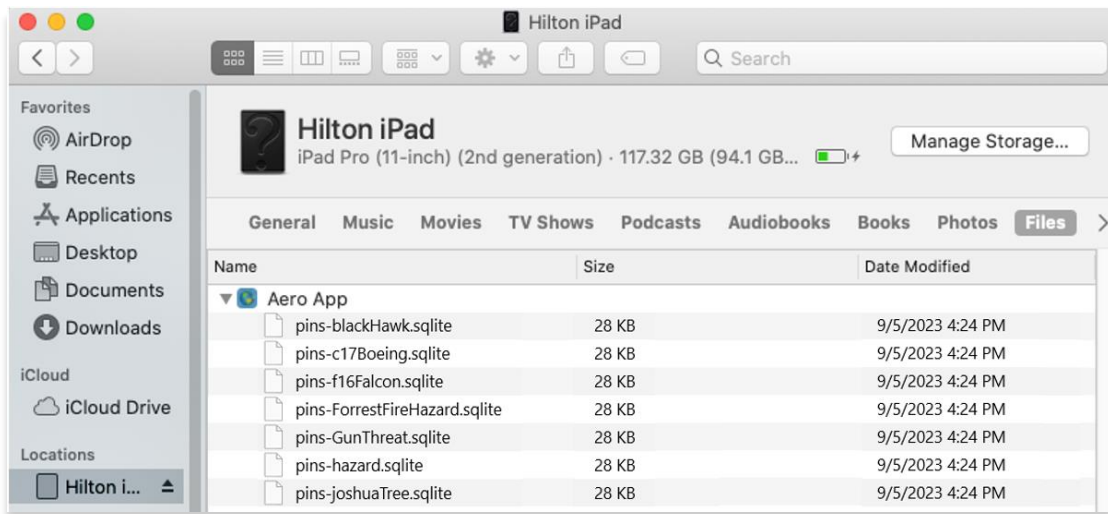


Verify that the sideload was successful. The steps in achieving this are as follows:


1. Open **Aero App**.
2. Tap **Map** on the **Main Menu**.
3. Navigate to **Map Manager** located at the lower right corner of the Map screen. The Map Manager popup will appear.
4. Select **Overlays** from the navigation bar.
5. Select **User Overlays** from the side menu.



6. Locate your imported files. The files should display as *pins-{name}.sqlite*.

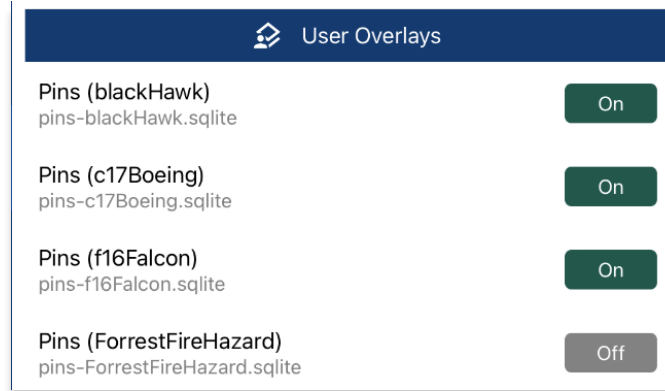

7. Tap your desired imported pins file and your hazard will overlay on the Map.

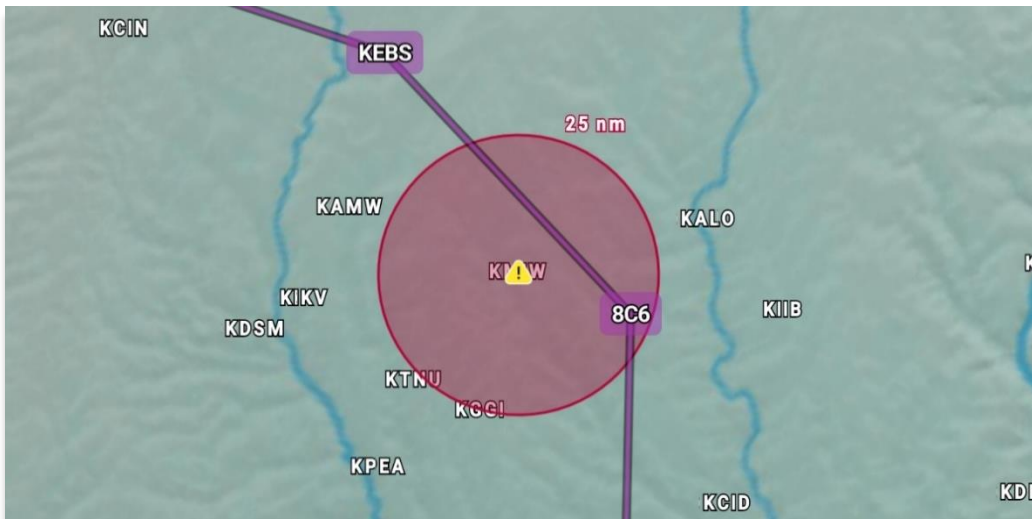

8. To delete an overlay, from the **User Overlays** popup, swipe left to reveal the delete button of the file that you choose to permanently remove. Tap **Delete**.

## 11.8 Sideload Documents

Users can sideload and view their document of choice documents on Aero App.

Ways to sync device:

- On Windows, open iTunes
- On macOS, open Finder and select device under Locations


### 11.8.1 Sideload Documents with iTunes

1. Connect your Apple device to a USB or USB-C port of a Windows computer.
2. Open **iTunes**.



**NOTE:** Alternatively, users can enable the **Automatically sync when this iPad is connected** option on iTunes. Go to *Summary* > scroll down to *Options* > enable *Automatically sync when iPad is connected*. iTunes will automatically open once you connect your device to your computer.


3. Allow your computer to recognize your device. Once recognized, an iPad icon will appear. Click the iPad icon and your device information will display.
4. In the left sidebar, click **File Sharing**.
5. Select **Aero App** from the File Sharing section.

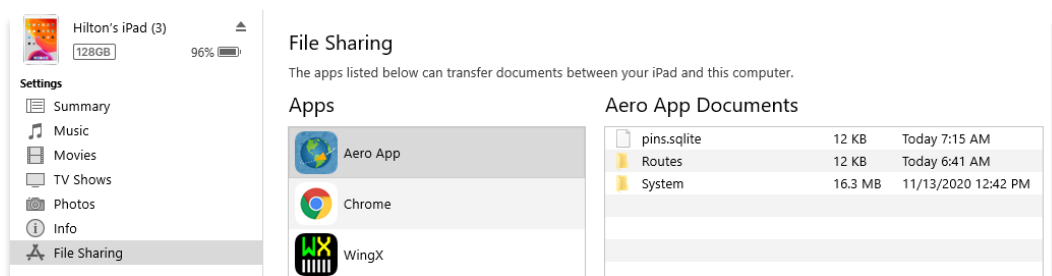

6. Navigate to the file containing documents.

|                                   |                    |                     |            |
|-----------------------------------|--------------------|---------------------|------------|
| AeroApp-Windows-1.2012-UserManual | 11/4/2020 4:49 PM  | Microsoft Edge P... | 9,952 KB   |
| aviation_instructors_handbook     | 11/19/2020 2:11 PM | Microsoft Edge P... | 141,705 KB |

7. Drag and drop desired document(s) onto Aero App files.

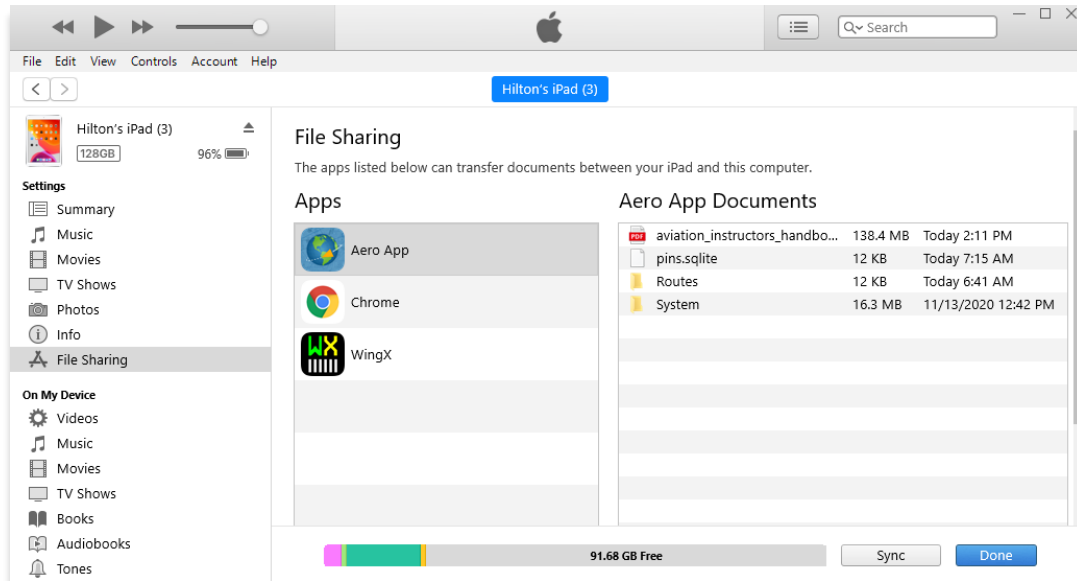


Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **General** on the **Main Menu**. The General options will appear.
3. Select **Docs**.
4. Tap on the **ribbon** to select a document.




5. A successful sideload will display the PDF file(s) under the Documents section.

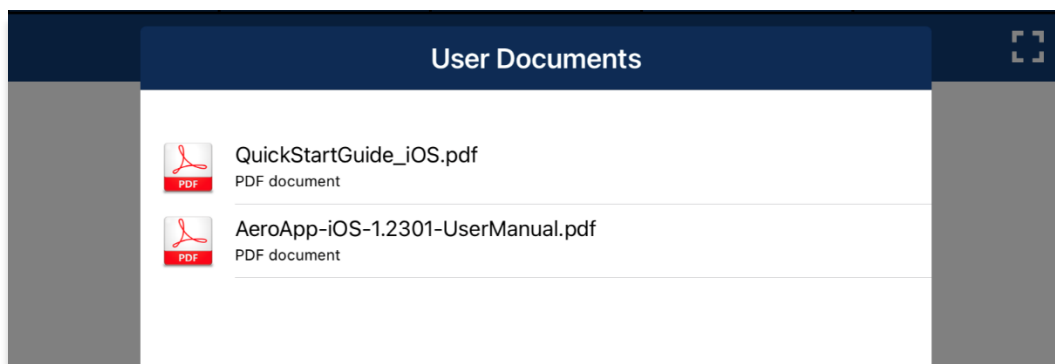


## 11.8.2 Sideload Documents with Finder

1. Connect your device to a USB or USB-C port of a Mac computer.
2. Click the **Finder** icon in the Dock.
3. On the Finder window, your device will display in the sidebar. Click your device.
4. The top of the screen will display menu options. Click **Files**.




5. Aero App will display under Files. Click the **drop-down arrow** on the left side of Aero App to display all available folders.

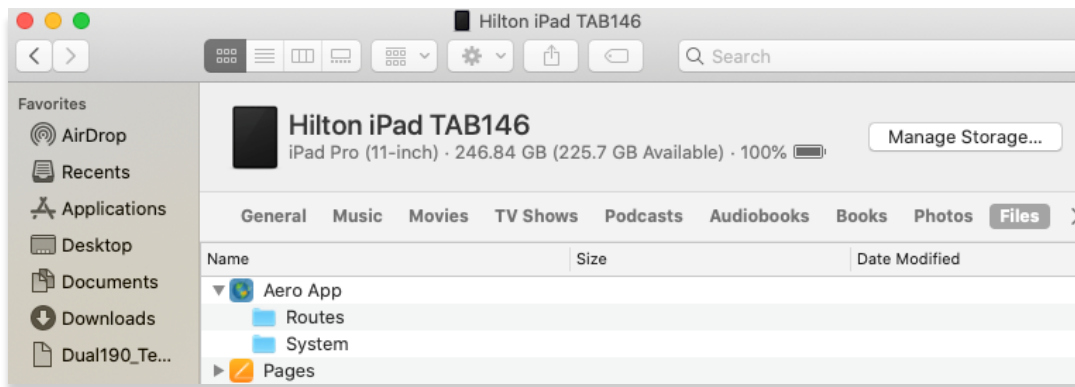

6. Navigate to the file containing documents.

|  |                                   |                    |                     |            |
|--|-----------------------------------|--------------------|---------------------|------------|
|  | AeroApp-Windows-1.2012-UserManual | 11/4/2020 4:49 PM  | Microsoft Edge P... | 9,952 KB   |
|  | aviation_instructors_handbook     | 11/19/2020 2:11 PM | Microsoft Edge P... | 141,705 KB |

7. Drag and drop desired document(s) onto Aero App files.

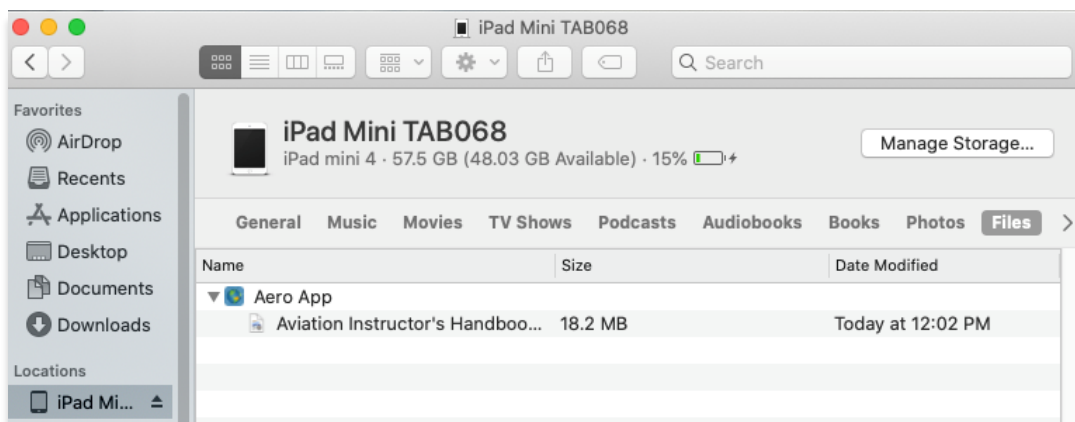


Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **General** on the **Main Menu**. The General options will appear.
3. Tap **Docs**.
4. Tap on the **ribbon** to select a document.



5. A successful sideload will display the PDF file(s) under the Documents section.

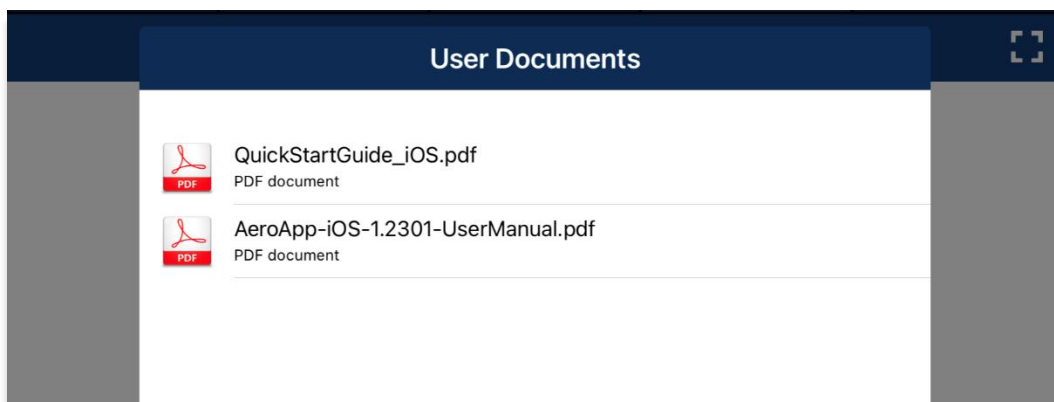

## 11.9 Sideload KML/KMZ

Aero App enables users to sideload KML/KMZ files. Imported KML/KMZ routes can be added to the flight route. Refer to [Section 14.1.3.1.1](#) for more information.

Ways to sync device:

- On Windows, open iTunes
- On macOS, open Finder and select device under Locations


### 11.9.1 Sideload KML/KMZ Files with iTunes

1. Connect your Apple device to a USB or USB-C port of a Windows computer.
2. Open **iTunes**.



**NOTE:** Alternatively, users can enable the **Automatically sync when this iPad is connected** option on iTunes. Go to *Summary* > scroll down to *Options* > enable *Automatically sync when iPad is connected*. iTunes will automatically open once you connect your device to your computer.


3. Allow your computer to recognize your device. Once recognized, an iPad icon will appear. Click the iPad icon and your device information will display.
4. In the left sidebar, click **File Sharing**.
5. Select **Aero App** from the File Sharing section.

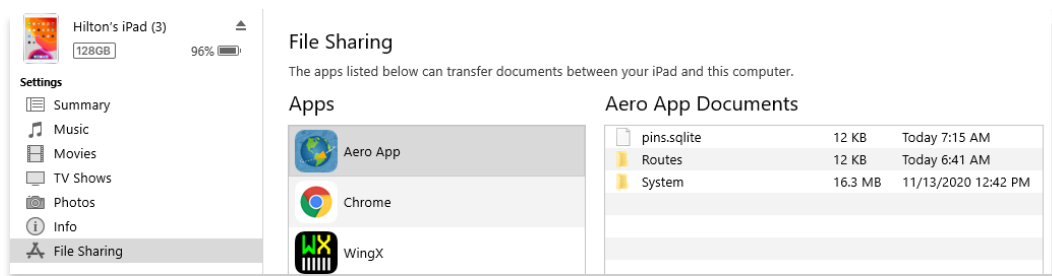

6. Navigate to the file containing KML/KMZ files.


|                                 |                   |          |        |
|---------------------------------|-------------------|----------|--------|
| KABQ_COLTR_THREE_ARRIVAL_(RNAV) | 1/18/2019 1:27 PM | KMZ File | 269 KB |
| KEGG_RNAV_(GPS)_Y_RWY_3_AMDT_2D | 1/18/2019 1:27 PM | KMZ File | 301 KB |
| KEGG_RNAV_(RNP)_Z_RWY_3_AMDT_1  | 1/18/2019 1:27 PM | KMZ File | 221 KB |

7. Drag and drop desired KML/KMZ file(s) onto Aero App files.

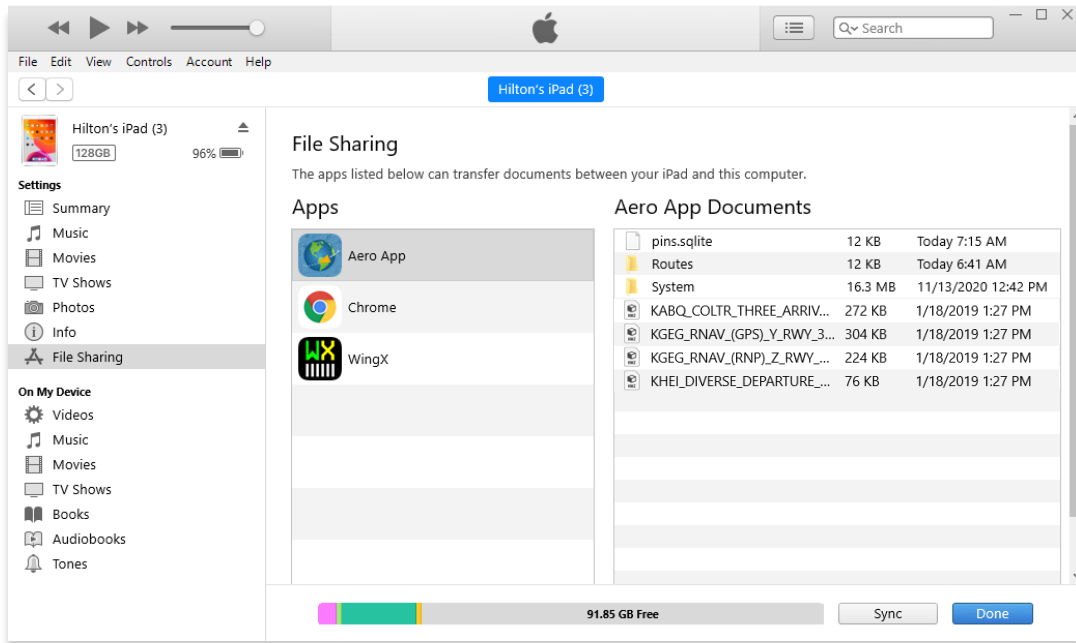

Verify that the sideload was successful. The steps in achieving this are as follows:


1. Open **Aero App**.
2. Tap **Map** on the **Main Menu**.
3. Navigate to **Map Manager** located at the lower right corner of the Map screen. The Map Manager popup will appear.
4. Select **Overlays** from navigation bar.
5. Select **User Overlays** from the side menu. Your sideloaded KML/KMZ files will be shown below.
6. Tap desired KML/KMZ file and it will overlay on the Map.

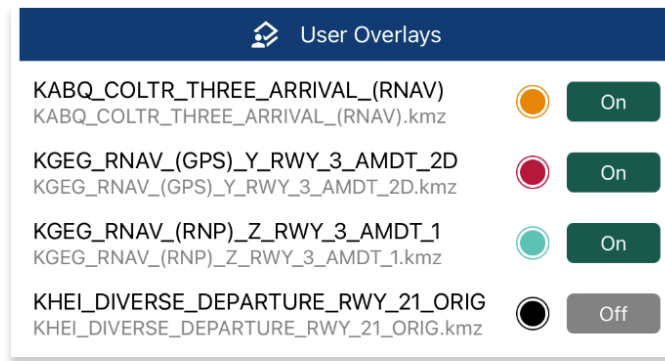


7. To delete an overlay, from the **User Overlays** popup, swipe left to reveal the delete button of the file that you choose to permanently remove. Tap **Delete**.

## 11.9.2 Sideload KML/KMZ Files with Finder

1. Connect your Apple device to a USB or USB-C port of a Mac computer.
2. Click the **Finder** icon in the Dock.
3. On the Finder window, your device will display in the sidebar. Click your device.
4. The top of the screen will display menu options. Click **Files**.



5. Aero App will display under Files. Click the **drop-down arrow** on the left side of Aero App to display all available folders.

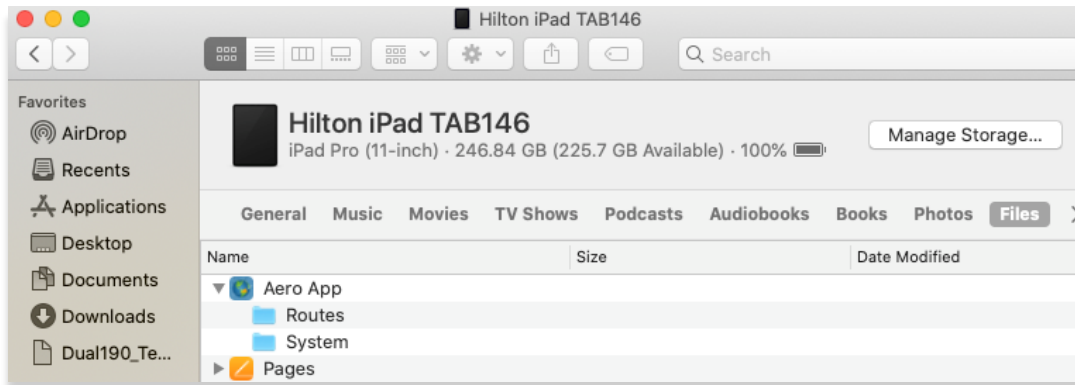

6. Navigate to the file containing KML/KMZ files.

|                                      |                         |        |          |
|--------------------------------------|-------------------------|--------|----------|
| KABQ_COLTR_THRE...RRIVAL_(RNAV).kmz  | Jan 18, 2019 at 1:27 PM | 275 KB | Document |
| KGEG_RNAV_(GPS)_...Y_3_AMDT_2D.kmz   | Jan 18, 2019 at 1:27 PM | 308 KB | Document |
| KGEG_RNAV_(RNP)_...RWY_3_AMDT_1.kmz  | Jan 18, 2019 at 1:27 PM | 226 KB | Document |
| KHEI_DIVERSE_DEP...E_RWY_21_ORIG.kmz | Jan 18, 2019 at 1:27 PM | 74 KB  | Document |


7. Drag and drop desired KML/KMZ file(s) onto Aero App files.





Verify that the sideload was successful. The steps in achieving this are as follows:

1. Open **Aero App**.
2. Tap **Map** on the **Main Menu**.
3. Navigate to **Map Manager** located at the lower right corner of the Map screen. The Map Manager popup will appear.
4. Select **Overlays** from navigation bar.
5. Select **User Overlays** from the side menu. Your sideloaded KML/KMZ files will be shown below.
6. Tap desired KML/KMZ file and it will overlay on the Map.

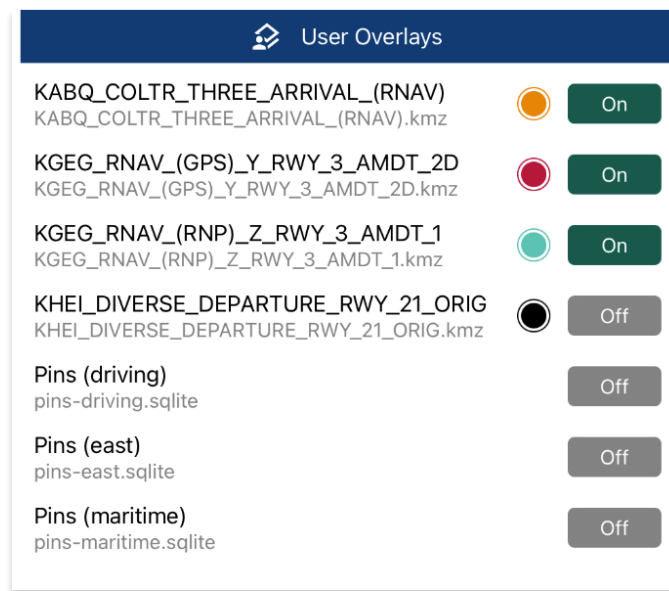

7. To delete an overlay, from the **User Overlays** popup, swipe left to reveal the delete button of the file that you choose to permanently remove. Tap **Delete**.

## 12 Updating Aero App Data


Aero App Data updates are released periodically. Users can load and manage up to two data cycles at a time. Aero App data cycle releases every 28-days, thereby, users will need to download the latest data cycle, respectively.

### 12.1 Data Notifications

Aero App provides data notifications to identify the status of the data cycle loaded on your device. The notifications inform users that there is no active cycle loaded, or if the active data cycle is not current.


#### No active cycle

Aero App displays airport information, FLIP charts and other data for the Active Cycle. If no Active Cycle is selected, Aero App will display the following notification. If there is data in the Standby Cycle, then tap **Swap Cycles** on the Data Status screen to move the data to the Active Cycle. If there is no data in either cycle, then data must be downloaded or sideloaded.

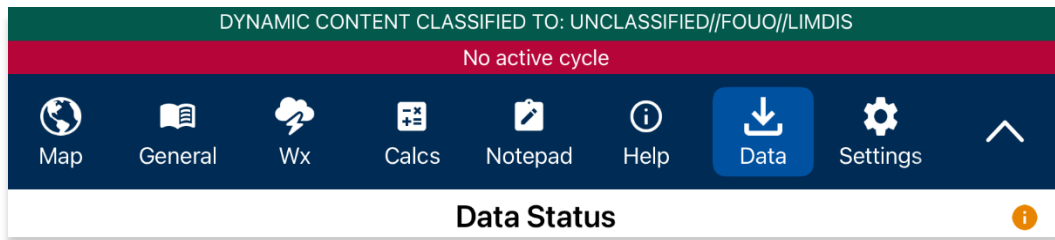

#### Active cycle is not current

Aero App will show a data notification if the Active Cycle is not current. In this configuration, a red banner will be displayed to alert users when the data in the Active Cycle is not up to date. It is recommended to always keep the Active Cycle current.

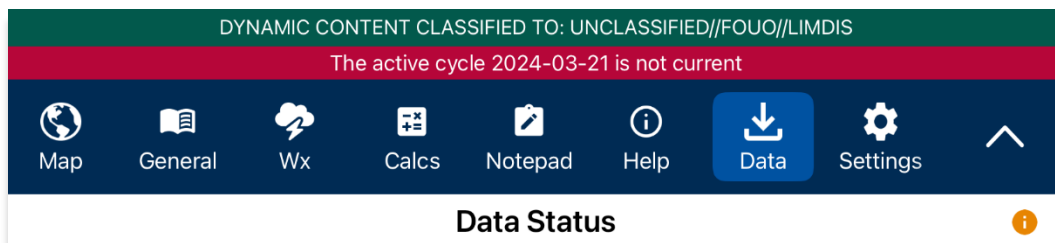

## 13 Manage Data

The Data Status page provides a user-friendly interface for managing and monitoring the status and file sizes of the loaded data. It allows users to easily add or remove any unwanted or dated data.

### 13.1 Data Status

The Data Status page enables users to access information about the loaded data cycle on Aero App. There are options to download, view, and delete data cycles, view effective dates, swap cycles, import data, and load downloaded data to make them active or to keep them on standby. This page also includes the option to share data with your team members.

1. Tap **Data** on the **Main Menu**. The *Data Status* screen will display.
2. The effective cycle dates of the Active Cycle are displayed on the left, and the Standby Cycle are displayed on the right. From this screen, you can also download new data when they become available.

The screenshot shows the 'Data Status' screen. At the top, a green bar reads 'DYNAMIC CONTENT CLASSIFIED TO: UNCLASSIFIED//FOUO//LIMDIS'. Below this is a navigation bar with icons for Map, General, Wx, Calcs, Notepad, Help, Data (highlighted), Settings, and a home icon. The main content area is titled 'Data Status' and features two sections: 'Active Cycle' and 'Standby Cycle'. The 'Active Cycle' section shows 'Effective 2024-02-22 through 2024-03-20 (2402)' with 'Delete' and 'View' buttons. The 'Standby Cycle' section shows 'Effective 2024-03-21 through 2024-04-17 (2403)' with 'Delete' and 'View' buttons. Below these, there's a 'Download Delta files (faster)' toggle set to 'On' and a 'Share' button. At the bottom, there are buttons for 'Download', 'Refresh', 'Import', 'Add Files to Cycle', 'Swap Cycles', and 'Delete 2024-02-22 from Documents'. A status bar at the very bottom reads 'Ready to add files to cycle 2024-02-22'.

Active Cycle Effective Dates

Standby Cycle Effective Dates




**NOTE:** Core data files are current for 28 days after the effective date.

## 13.2 Manage Data Downloads

Users can load and manage two data cycles, which are stored in Active Cycle and Standby Cycle. Any sideloaded or downloaded data will only become available once it's activated by moving the data onto Active Cycle.

1. Tap **Data** on the **Main Menu**. The Data Status screen will display.
2. Tap **Download** to select data that you wish to have in the device. Refer to [Section 10](#) for additional information. A successful download will display **Found** beside the respective region and chart types.

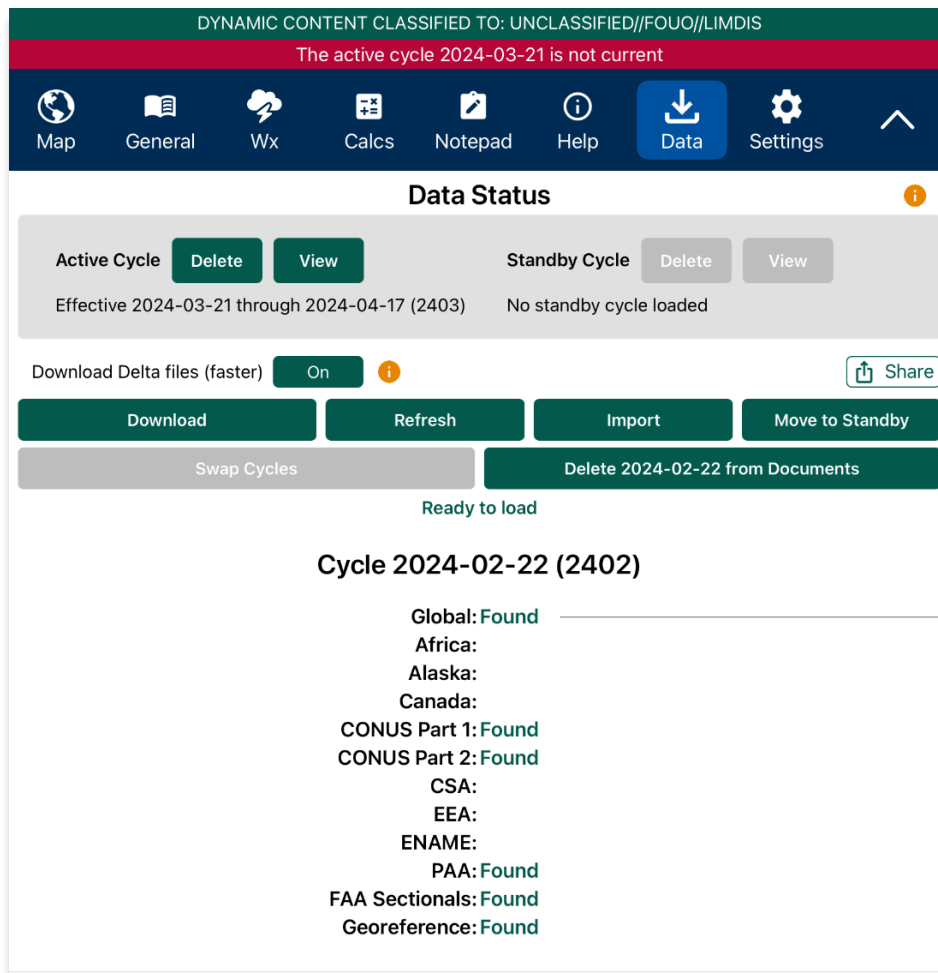

Available data  
files will display  
**Found**


3. Tap **Move to Standby** to transfer the data to Standby Cycle.
4. Tap **Swap Cycles** to switch the data loaded on Standby Cycle to Active Cycle. Your data should be activated.



**NOTE:** When a new cycle is loaded in Active Cycle, the What's New page will pop up and display relevant information about new features, app enhancements, and important updates, respective to the loaded active cycle.

5. If maps are downloaded separately, tap **Load Maps** to move data to Active Cycle.
6. Tap **Refresh** to reload the page.
7. Tap **View** to display the list of available files stored in Active Cycle or Standby Cycle.
8. Tap Delete to permanently delete the files stored in Active Cycle or Standby Cycle

View Active  
Cycle Data

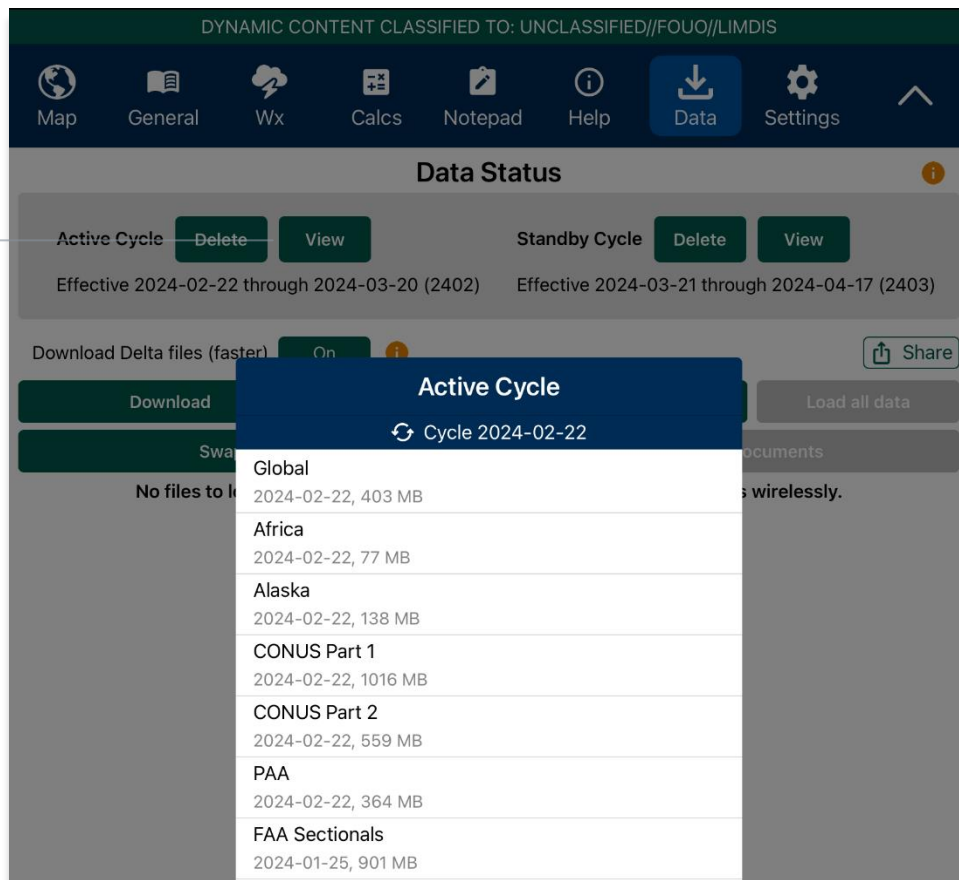


## 13.3 Delta Files

Aero App allows users to download delta files which are significantly smaller files that contain the core data changes between cycles. To upload files to ADS from Aero App, users must download a full data cycle and ensure that the Download Delta files (faster) option is disabled.

### 13.3.1 Download Delta Files (Faster)

Deltas are defined as the core data changes between cycles. Instead of downloading a full cycle, users have the option to download the changes and apply them to a previous cycle. This results in smaller file sizes reducing the download time. To download Delta files, the previous data cycle must be in Active or Standby cycle.

1. Tap **Data** on the **Main Menu**.
2. Tap the **Download Delta files (faster)** button to enable option.
3. Tap **Download**.

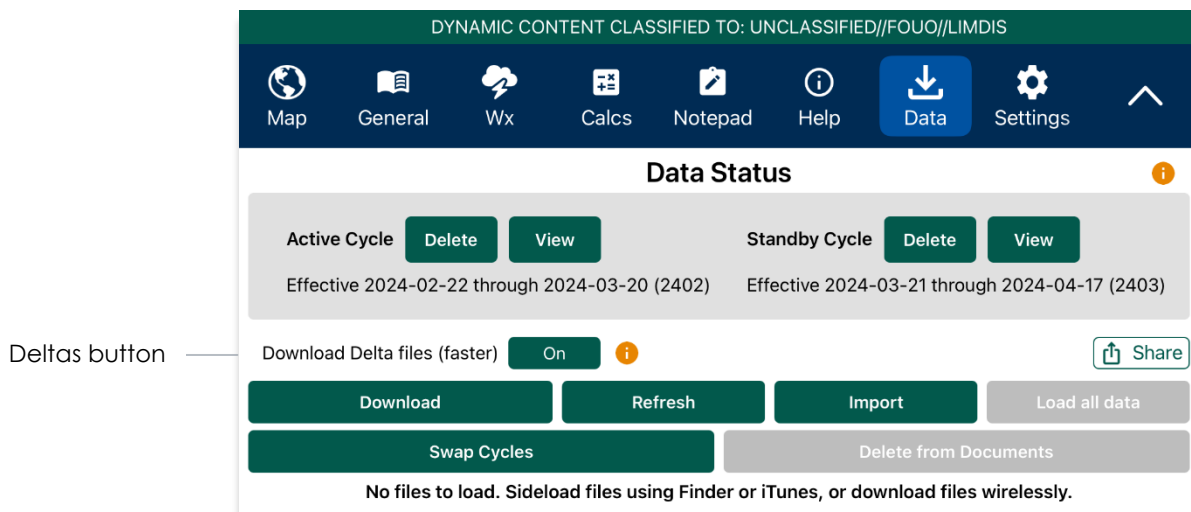

- Log in to AWS using Aero User Database (AUD) or GEOAxis credentials, set up your device with Mobile Device Management (MDM), or select Aero Data Server.

DYNAMIC CONTENT CLASSIFIED TO: UNCLASSIFIED//FOUO//LIMDIS

Done Data Sources

AWS Aero Data Server File Manager

**AWS - Fast Cloud Downloading**

Aero User Database GEOAxis MDM

Username:

Password:

Connect

- The Data Cycle Download screen will open. Users are provided with options to download Cycles or Map Library. Select **Cycles**.

DYNAMIC CONTENT CLASSIFIED TO: UNCLASSIFIED//FOUO//LIMDIS

Done Data Sources

AWS Aero Data Server File Manager

Back **AWS (United States)**

Cycles Map Library

↻ Cycles


2022-12-29 (2213) >

2022-12-01 (2212) >


2022-11-03 (2211) >

- Available data pertaining to that cycle will be displayed. Select individual data files or select regional Easy Buttons for faster data selection.
- Tap **Download** once desired data files have been selected.

8. Tap **Done** once download is complete.

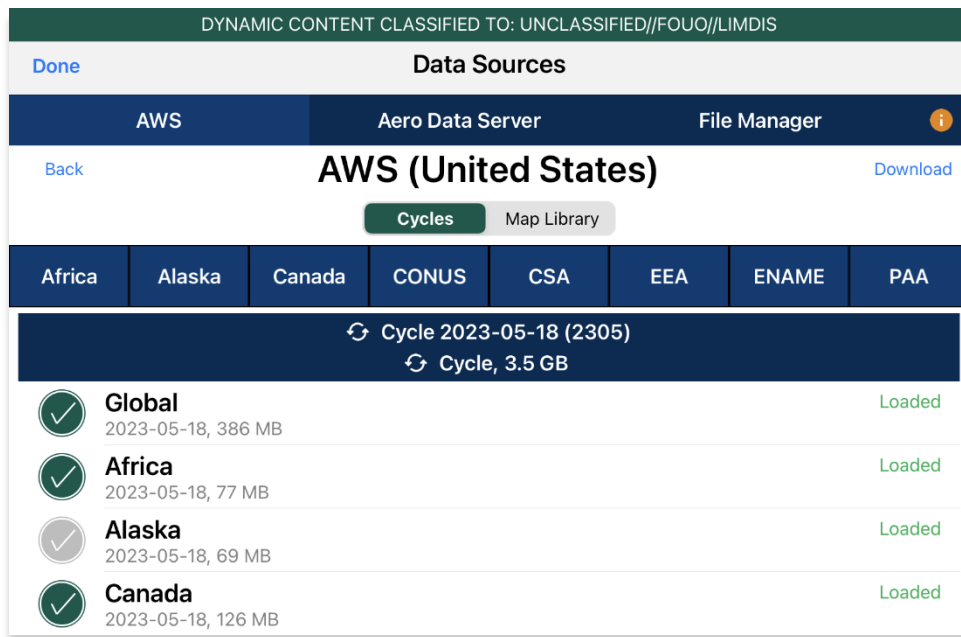

9. On the Data Status screen, tap **Move to Standby** and an Applying Deltas popup will display.
10. Tap **Swap Cycles** to load data onto Active Cycle, which activates the current data.
11. Tap **View** to verify the data in Active Cycle.

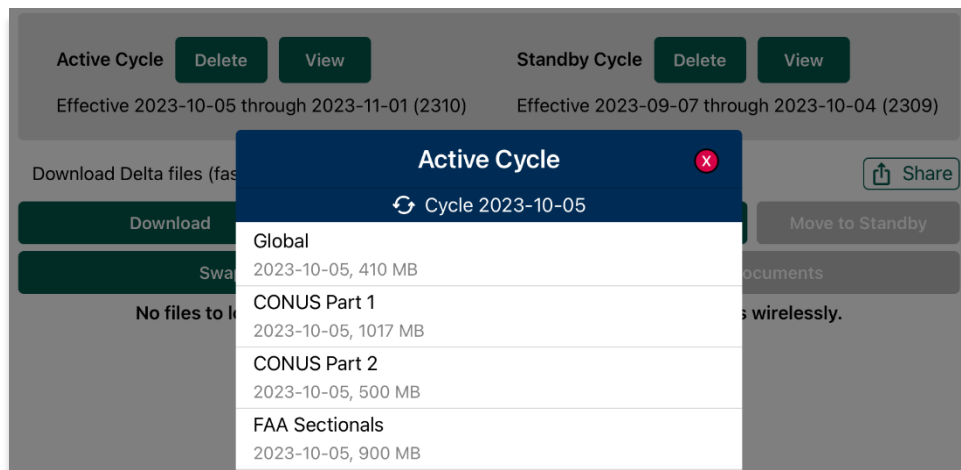


**NOTE:** A warning will display as users attempt to load Delta files onto Standby Cycle while **Download Delta files (faster)** is enabled. Selecting **Load Delta files** from the warning enables users to move Delta files to Standby Cycle.




### 13.3.2 Download Compatible Files

To AirDrop or upload files to ADS, a full data cycle, without Deltas, is required. If Download Delta files (faster) option was enabled at the time of download, Delta files will be inaccessible when sharing files via AirDrop and Upload to ADS as Delta files are not compatible.


1. Tap **Data** on the **Main Menu**.
2. Ensure that the Download Delta files (faster) option is disabled. Tap **Download**.

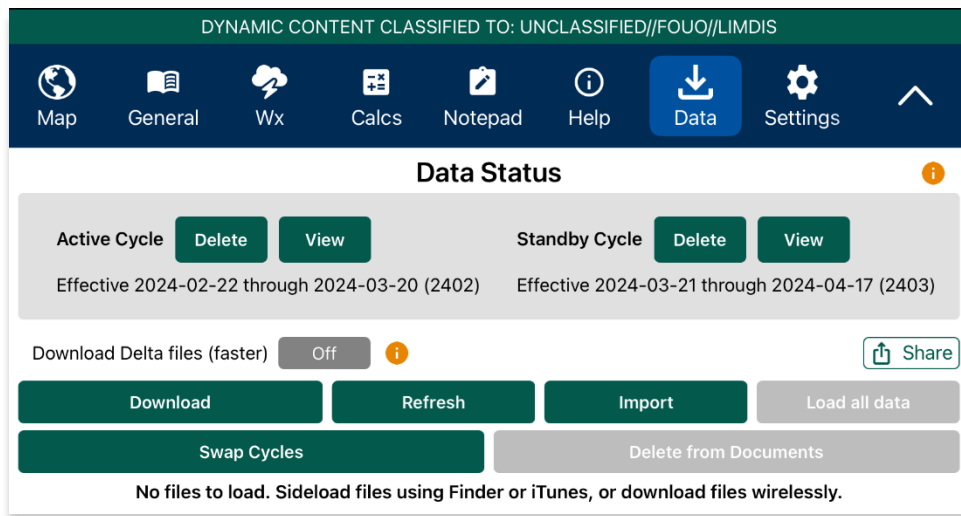


3. Log in to AWS using Aero User Database (AUD) or GEOAxis credentials, set up your device with Mobile Device Management (MDM), or select Aero Data Server.

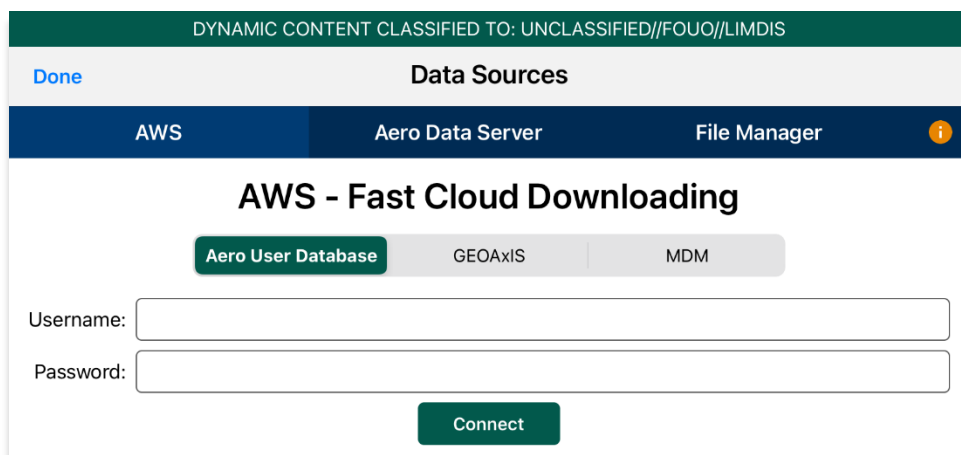


- The Data Cycle Download screen will open. Users are provided with options to download Cycles or Map Library. Select **Cycles**.

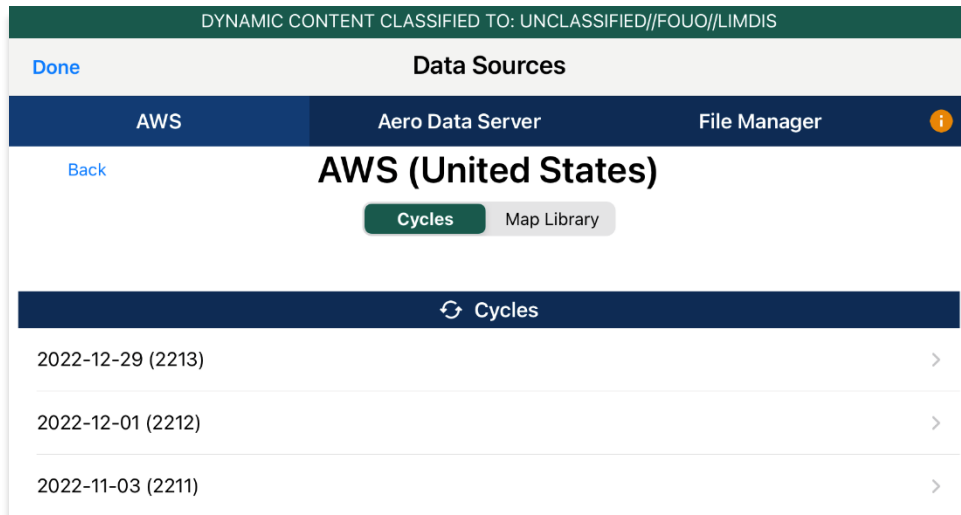

- Available data pertaining to that cycle will be displayed. Select individual data files or select region Easy Buttons for faster data selection.
- Tap **Download** once desired data files have been selected.
- Tap **Done** when download is complete.

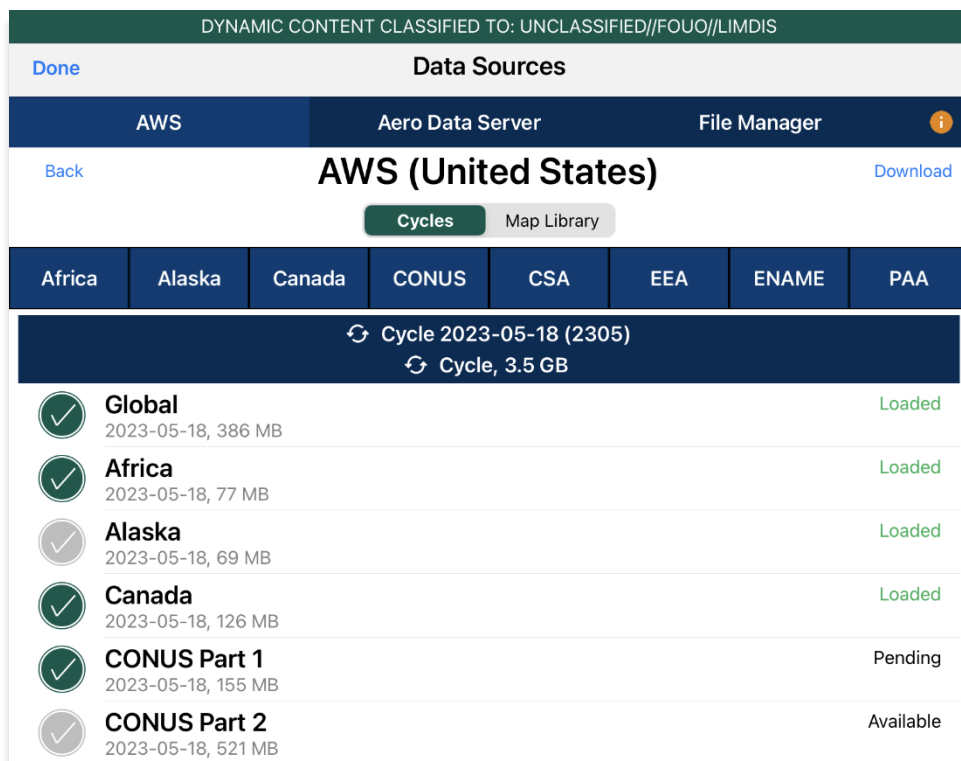

8. On the Data Status screen, tap **Move to Standby**.
9. Tap **Swap Cycles** to load data into Active Cycle, which activates the current data.
10. Tap **View** to verify the data in Active Cycle.

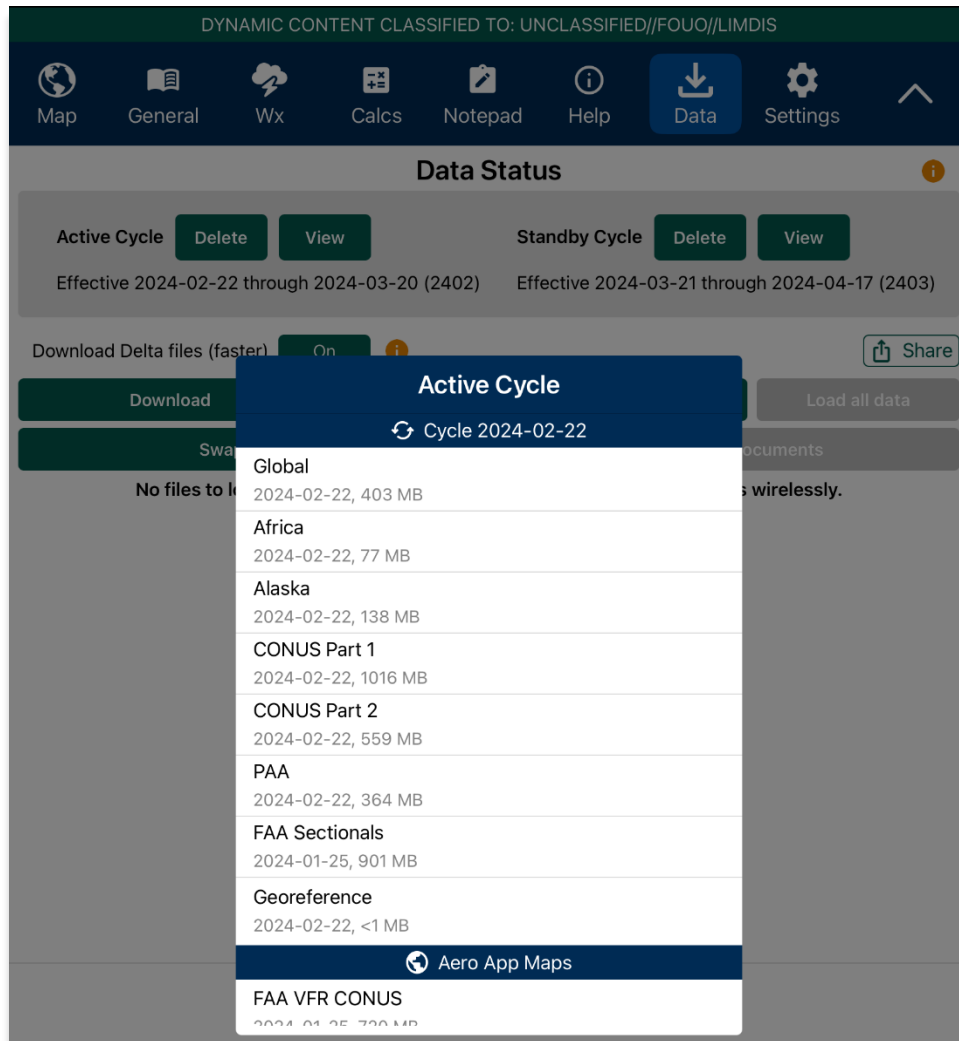


**NOTE:** A warning will display as users attempt to load Delta files onto Standby Cycle while **Download Delta files (faster)** is enabled. Selecting **Load Delta files** from the warning enables users to move Delta files to Standby Cycle.


## 13.4 Share Data via AirDrop

Aero App allows users to share Data Cycles, Maps, and additional files such as Earth Base Map, Giant Reports, and Terrain to another user via AirDrop. Users can select to share individual or multiple files at a time. The Download Delta files (faster) option must be disabled as sharing delta files is not supported.


1. Tap **Data** on the **Main Menu**.
2. Tap the **Share** button and the Data Sharing screen will display.

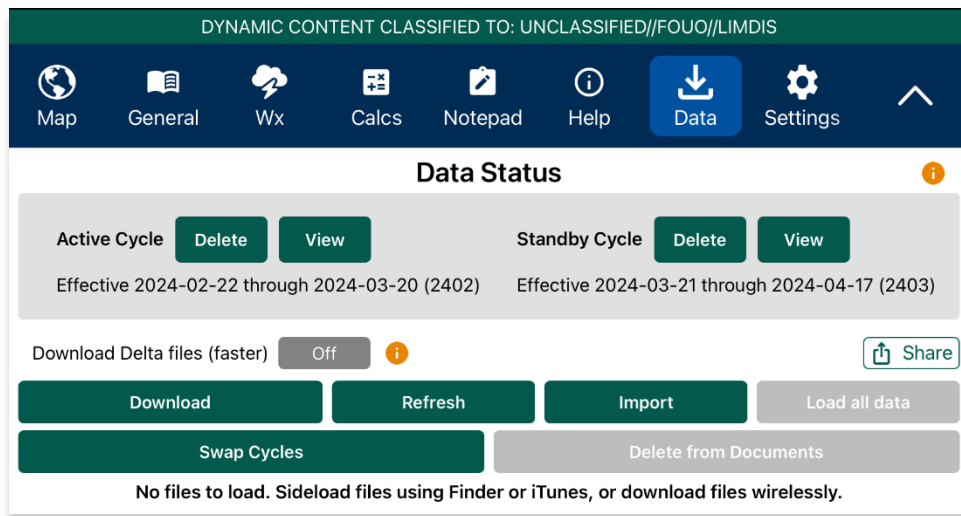


3. Select from **Active** or **Standby** cycle to share data.

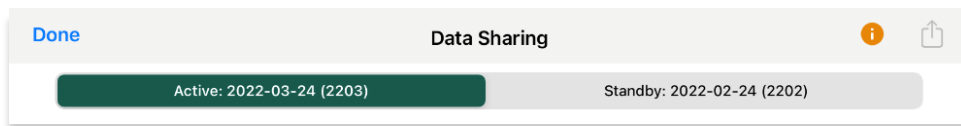


4. Select desired **Regions** to share.

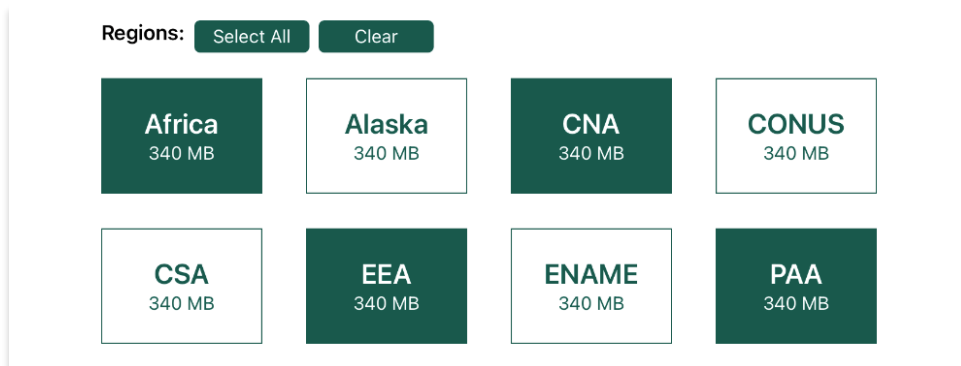


5. Select desired **data types** to share.

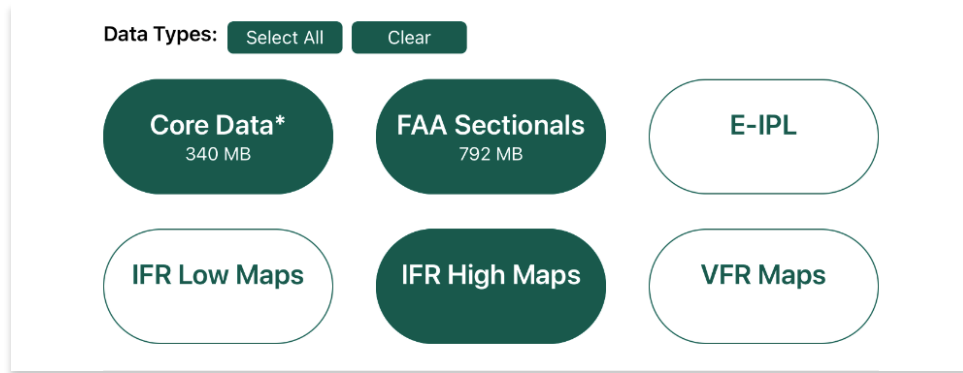

6. Select desired **additional files** to share.

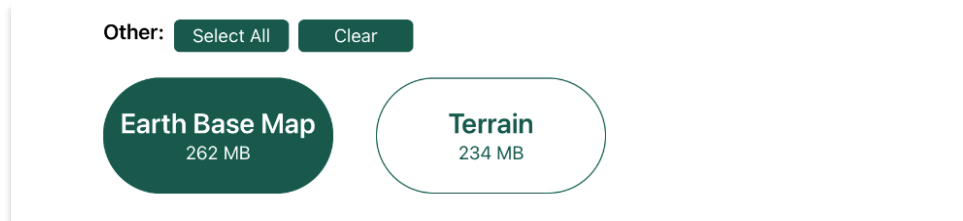

7. Once all required files are selected, the Share icon will be selectable. Tap **Share**.  
8. The *Sharing Options* popup will appear. Select from **AirDrop** or **ADS**.

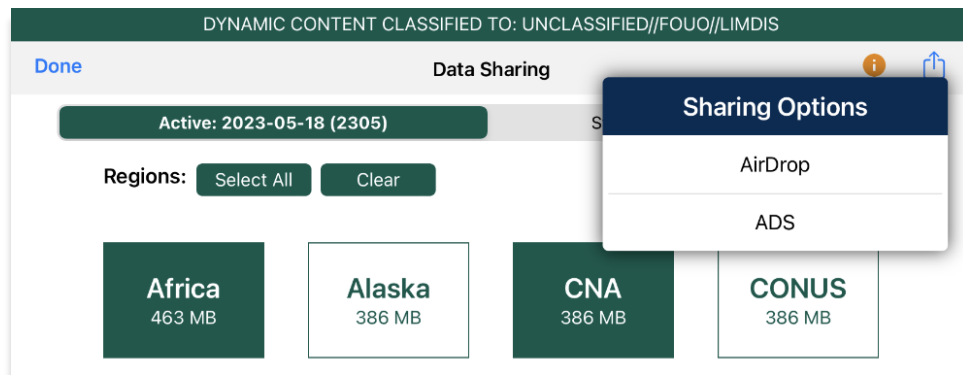

**NOTE:** Users can tap **Select All** to highlight all files or tap **Clear** to deselect all selected files.



**NOTE:** If AirDrop fails, close the Data Sharing screen, reopen, and try again. This is a known Apple AirDrop issue.




**NOTE:** The **Core Data\*** data type includes Global and Georeference files.

### 13.4.1 Receiving Map/Cycle Files Through AirDrop


Users can view the Airdropped Map/Cycle files on Aero App. The person receiving the files must have their AirDrop *enabled* prior to receiving any files. Different behaviors will occur depending on the device's operating system. Refer to [support.apple.com](https://support.apple.com) for additional information on AirDrop.

1. Once the AirDrop is complete, open the files using Aero App. iOS 17 users can open files through the Import button on the Data Status page.
2. A popup to select an application to import the Airdropped files will display. Select **Aero App**.
3. The *document picker* will display. Select desired files to import.
4. Tap **Open** once desired files have been selected.

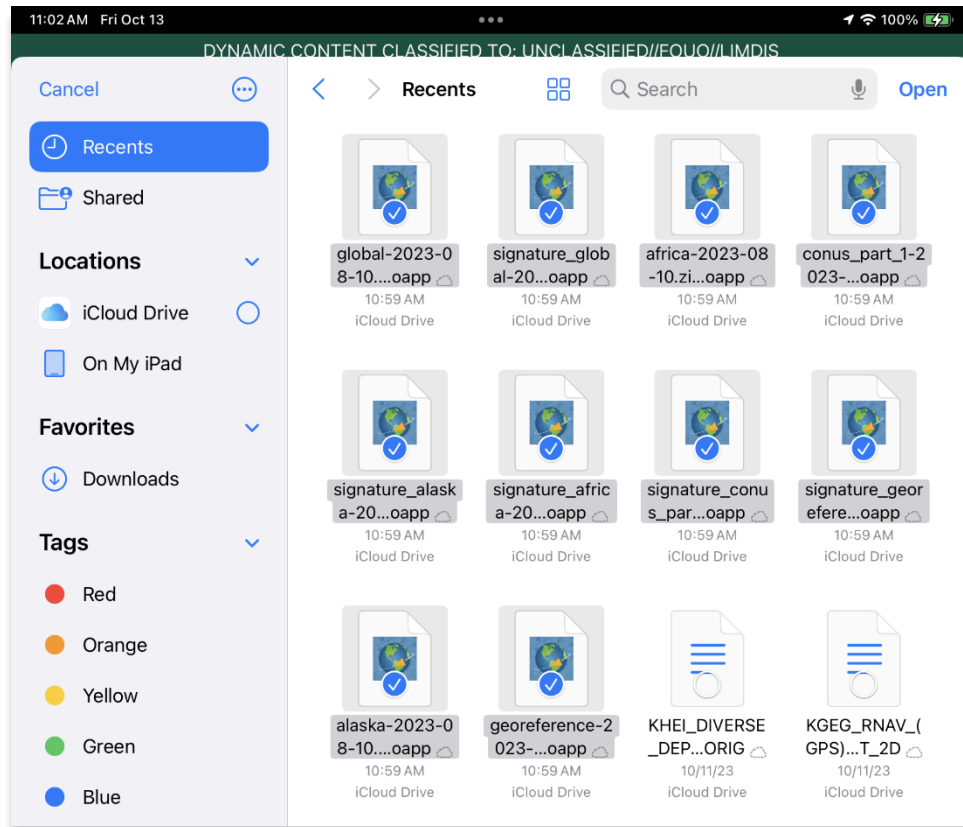

**NOTE:** The document picker only applies to device's running iOS 17 or later.

5. Navigate to the *Data Status* page.
6. The Airdropped files will be loaded on the Data Status page. Tap **Move to Standby** or **Add Files to Cycle** if a cycle is already loaded in Standby Cycle.

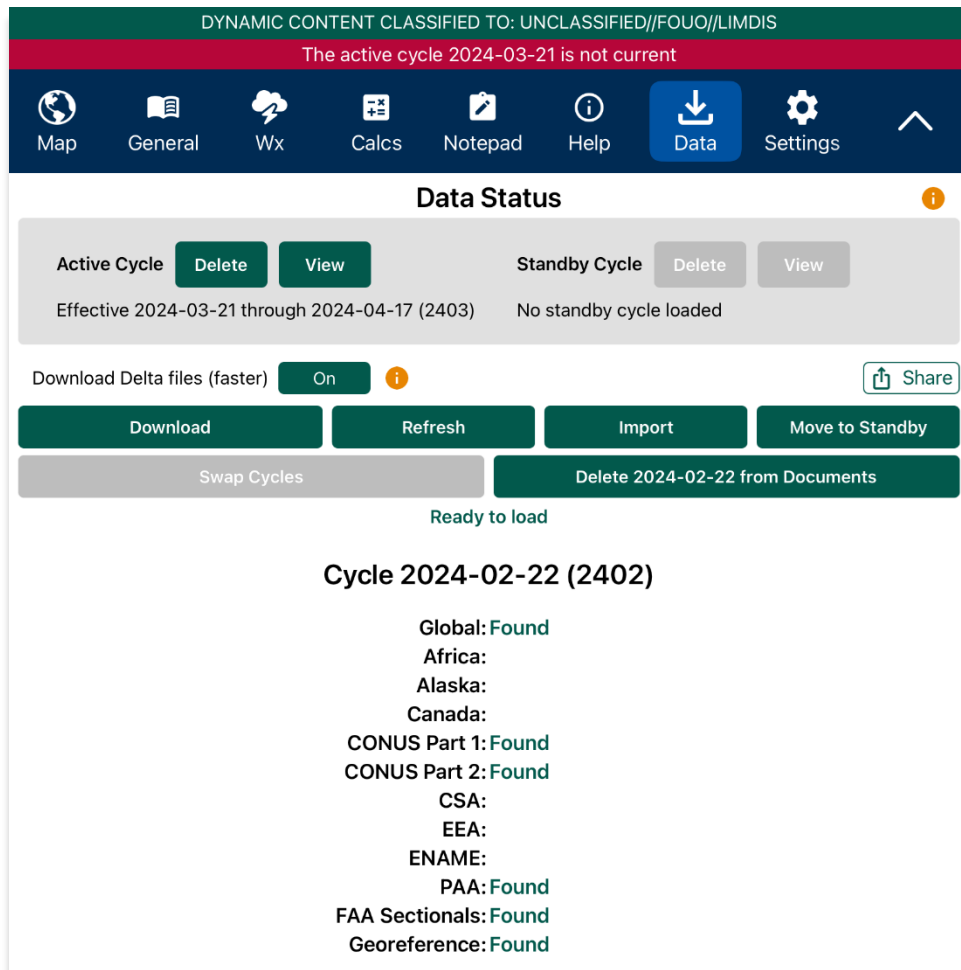


7. An *Import* button is available for users who missed a file to import. Tap **Import** to display the document picker.
8. Select desired file to import into Aero App.


## 13.5 Upload Data to ADS

Aero App enables users to share Data Cycles, Maps, and additional files to ADS. Once desired files are shared, the files will be available to other users.

1. Log in to ADS on a Mac or Windows computer.
2. On the **Settings Menu**, select a window of time from the options of 15 Minutes, 30 Minutes, or 1 Hour.
3. Once a window of time is selected, return to the **Data Sharing** screen on Aero App.
4. Select **ADS** from Sharing Options list. The Aero Data Server screen will display.

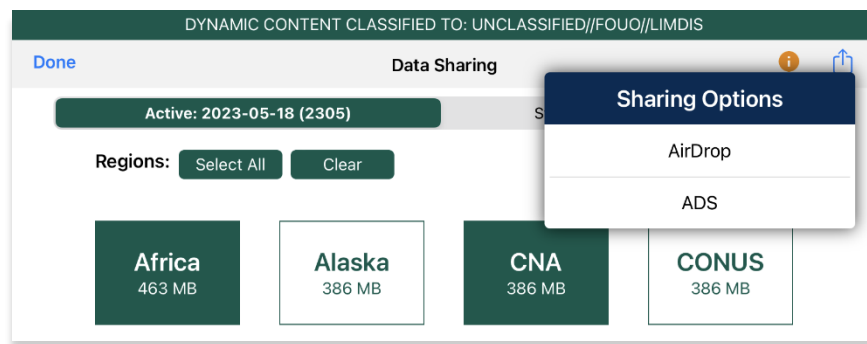

5. Select the appropriate server or enter the IP Address and Port of the server to connect.
6. Once connected, the files will upload to ADS.

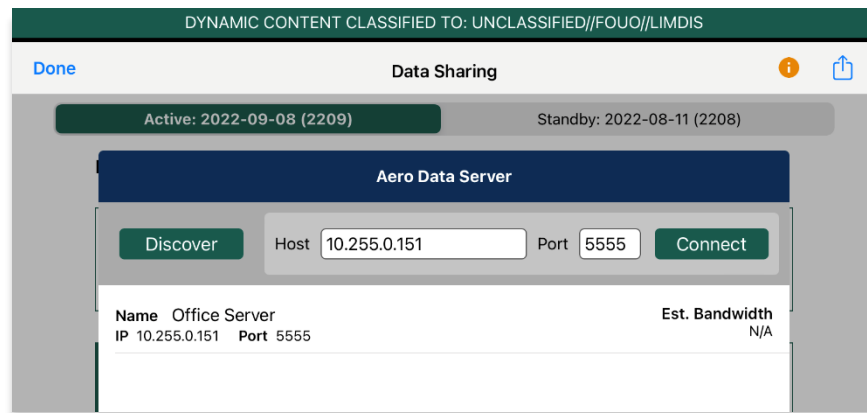


**NOTE:** Refer to [Section 13.4](#) for guidance on how to load desired Data Cycles, Maps, and Additional files to share.



### 13.5.1 Sharing Incompatible Files

Attempting to share incompatible files such as Delta files will result in a warning being displayed. When users select files containing Delta files, a red banner will appear at the bottom of the Data Sharing screen listing the Delta files which cannot be shared. If users proceed to share files, a warning message will appear where they can select Help, Share, or Cancel. Selecting Help displays Contextual Help. Selecting Share will only share the compatible files and exclude delta files.

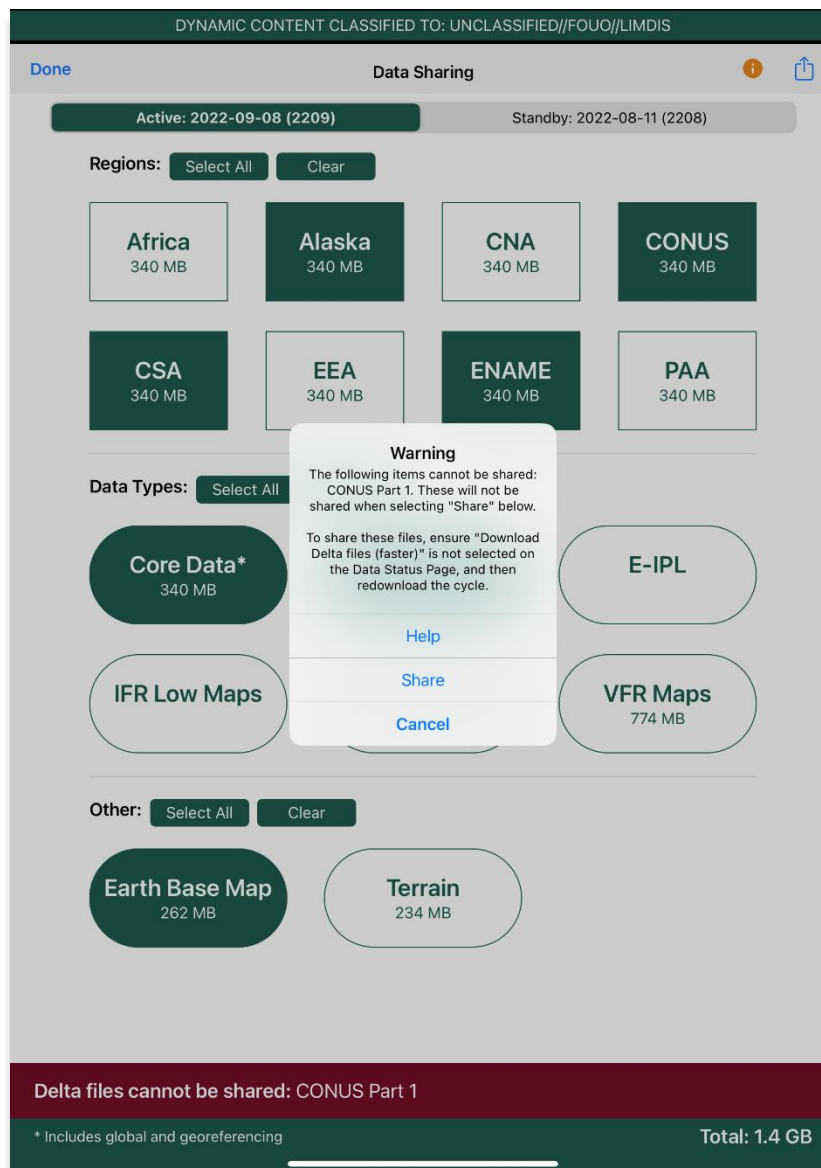


**NOTE:** Refer to [Section 13.4](#) redownload AirDrop-compatible files.

## 13.6 File Manager


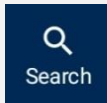


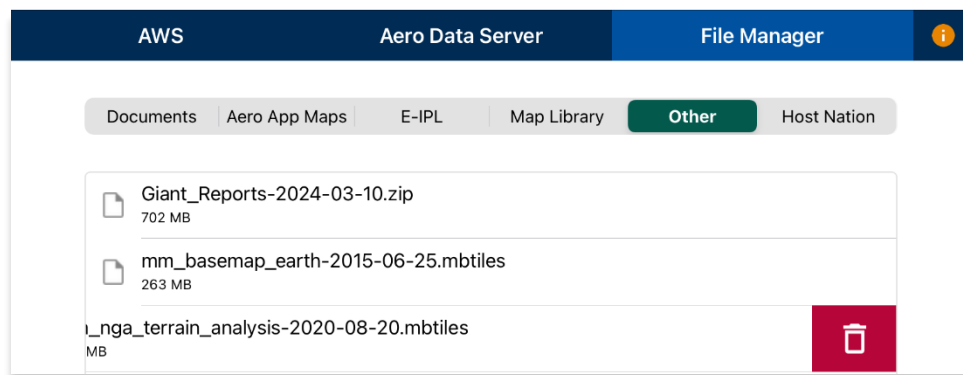


File Manager is responsible for storing, managing, and making modifications to files that have been downloaded and loaded into Aero App.

1. Tap **Data** on the **Main Menu**.
2. Tap **Download**.
3. Tap **File Manager**. A collection of subcategories will be displayed.
4. Data within File Manager is categorized by data types, each accessible by its own tab. To explore File Manager, simply tap on the desired data type. The following data types are the available:
  - **Documents** – stores a collection of user-generated files such as routes, user maps, pins, user waypoints, user documents, and GeoPackages.
  - **Aero App Maps** – contains a collection of downloaded regional charts such as CAN, FAA and NGA IFR high and low charts, as well as FAA VFR charts of the respective region.
  - **Electronic – Instrument Procedure Library (E-IPL)** – contains a library of E-IPL charts of the respective region.
  - **Map Library** – Includes a library of downloaded charts such as maps for emergencies, NavPlan charts, range charts, and others.
  - **Other** – contains Earth Base Map, Giant Reports, and Terrain Coloring data downloads.
  - **Host Nation** – contains Host Nation chart downloads, sorted by download date with the most recent chart displayed at the top.
5. Swipe left to reveal the delete button for the files that you wish to permanently remove from Aero App. Tap **Delete**. The selected file will be removed from the list.





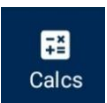

## 14 Aero App Menus

The Main Menu is utilized to display the main functions of Aero App and is located either on the top or bottom of the screen (user-configurable).

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p>Collapsible Route Panel – The Route Panel can expand or collapse, based on the user's view preference. Users have options to add to route, edit route, and access additional route enhancement features in the Route Manager. The Route Panel contains essential route information, such as the ETA and ETE, distance and bearing, tower frequencies, and the total distance of your route.</p>                                                                                                                                                                                     |
|    | <p>Search – Users can perform a search of different identifiers such as Airports, NavAids, Waypoints, Airways, User Waypoints, and Pins. A search can be refined by setting a minimum runway length, which can be done through the Settings page. Additionally, features such as adding identifier to favorites and viewing Giant Reports of the searched identifier are available.</p>                                                                                                                                                                                                |
|    | <p>Active Point – Once the search is completed, the identifier will become an active point. The active point will show its General Information such as Giant Reports and Chart Supplements, AQP images (if applicable), Communications, Runways, and Remarks. Additional information such as APD, procedure charts, Host Nation charts, weather, and others, can be viewed. To load a new active point, simply tap on the search icon and enter a desired point, then tap <b>Search</b> on your device's on-screen keyboard. The new identifier will load as the new active point.</p> |
|  | <p>Map – Aero App's Map makes use of Whirly Globe technology, which provides various settings and overlays to customize its display. Charts such as VFR sectionals, High and Low enroutes, and many more are available.</p>                                                                                                                                                                                                                                                                                                                                                            |
|  | <p>General – Contains a library of FAA data, FLIP Charts, Supplements, Area Planning, User Documents, and Terminal Procedure Legend.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|  | <p>Wx Images – Provides access to real-time weather images, including RADAR, Satellite, Icing, Weather Forecast, AIRMETs and SIGMETs, Prog Charts, Convective SIGMETs and Outlooks, Current Convective Watches, and Alaska.</p>                                                                                                                                                                                                                                                                                                                                                        |
|  | <p>Calcs – Contains E6B and Fuel Check features. The E6B calculator is used to perform a variety of navigation calculations for Altitude, Cold Wx, Conversions, Coordinates, Descent, Distance, IFR Climb, Rwy Winds, and Winds Aloft. Fuel Check measures the fuel burn usage of the ownship.</p>                                                                                                                                                                                                                                                                                     |


---

|                                                                                               |                                                                                                                                                                |
|-----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>Notepad  | Notepad – Users can create up to three pages of notes using their fingertips or a stylus.                                                                      |
| <br>Help     | Help – A hub for Aero App information containing options to view the What's New, Web Links, link to User Manual, and the About page.                           |
| <br>Data     | Data – Users can download, share, manage, and monitor the status and file sizes of the loaded data.                                                            |
| <br>Settings | Settings – Allows users to customize the appearance and behavior of Aero App. Various setting options include Miscellaneous, Reset, Route, and User Interface. |

## 14.1 Collapsible Route Panel

The collapsible Route Panel can be expanded to display the full view of the Route Panel or be hidden to display the full view of a specific Aero App page. Tapping the Route button from the Main Menu expands the Route Panel view providing users with the following options:


- **Add** – enables users to add identifiers (e.g., Airports, NavAids, Waypoints, Airways, User Waypoints, and Pins), search term, or an entire route.
- **Edit** – enables users to delete and/or reorder entries within the route.
- **Route Manager** – enables users to perform actions pertaining to the route or display additional features on the map.

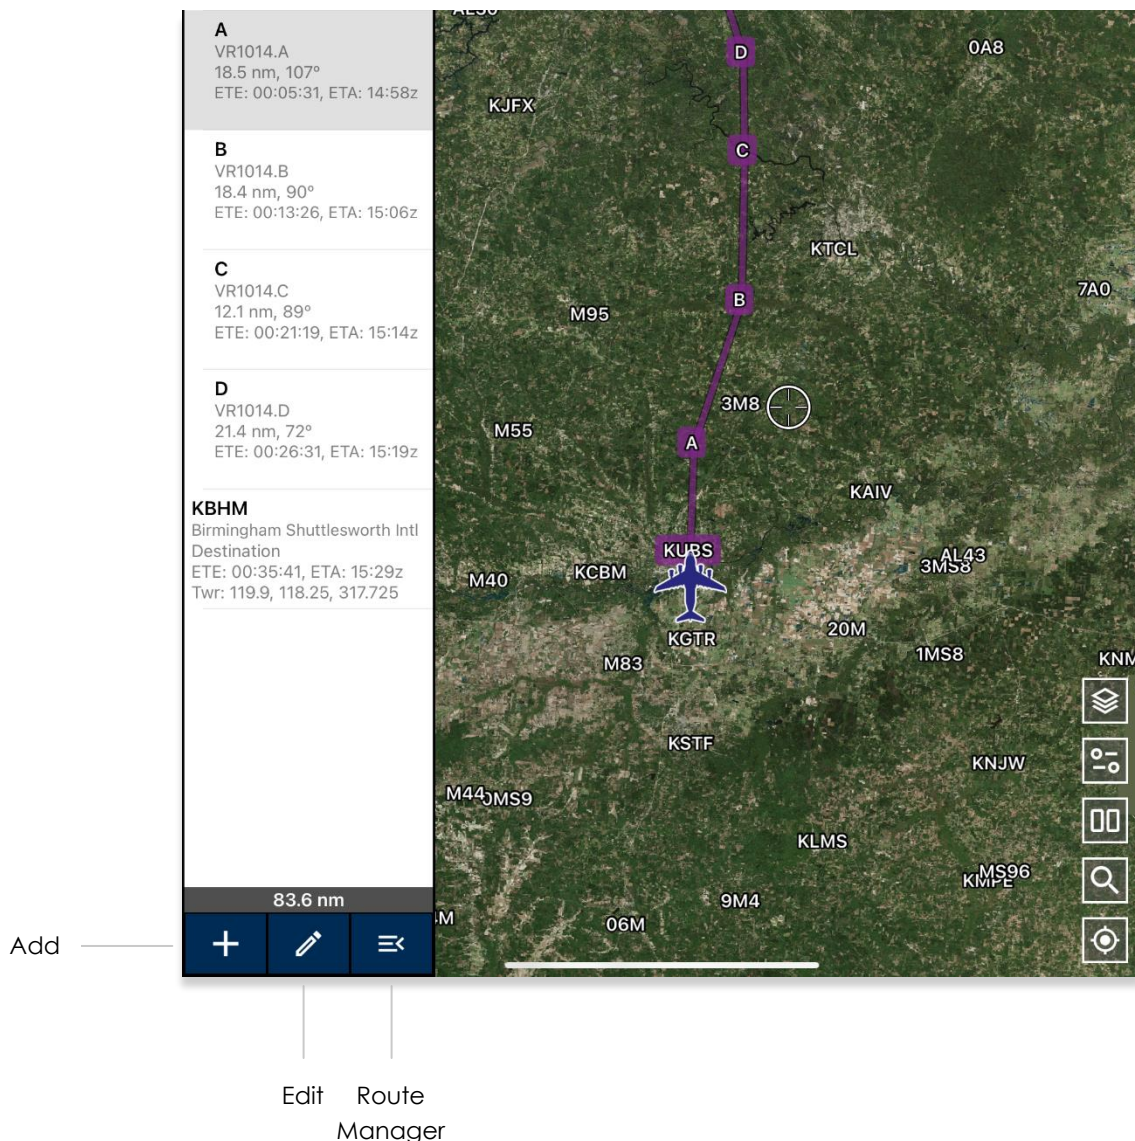


### 14.1.1 Add

The Add to Route feature allows users to create a route by adding an identifier (e.g., Airports, NavAids, Waypoints, Airways, User Waypoints, and Pins), search term, or route including entering coordinates in GARS, lat/lon, MGRS or Radial format. Users can filter airports by setting a minimum runway length in their Settings. Refer to [Section 14.11.1](#) for additional information.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap the **Add** button.
3. Search by entering an identifier, search term, or route in the search box.
4. Tap **Go** from the device's on-screen keyboard and the entries will be added to the route.

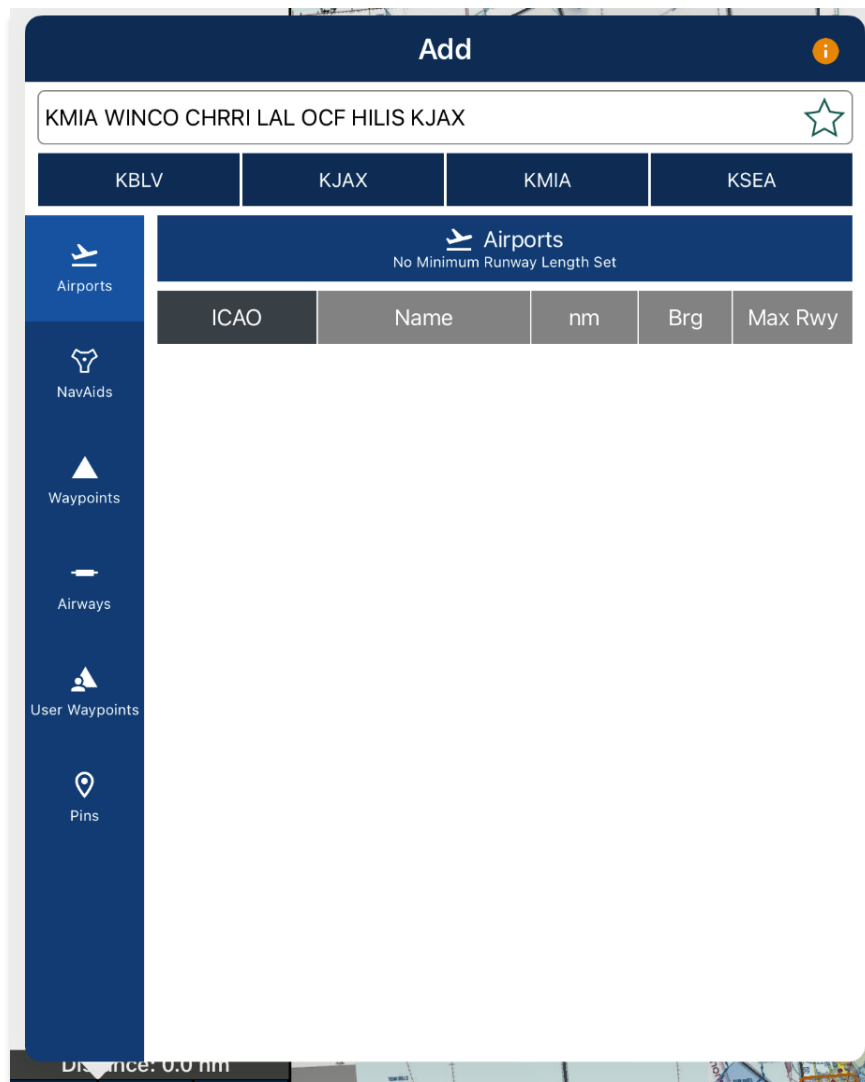

5. The search results are divided into identifier types. Select from Airports, NavAids, Waypoints, Airways, User Waypoints, or Pins.

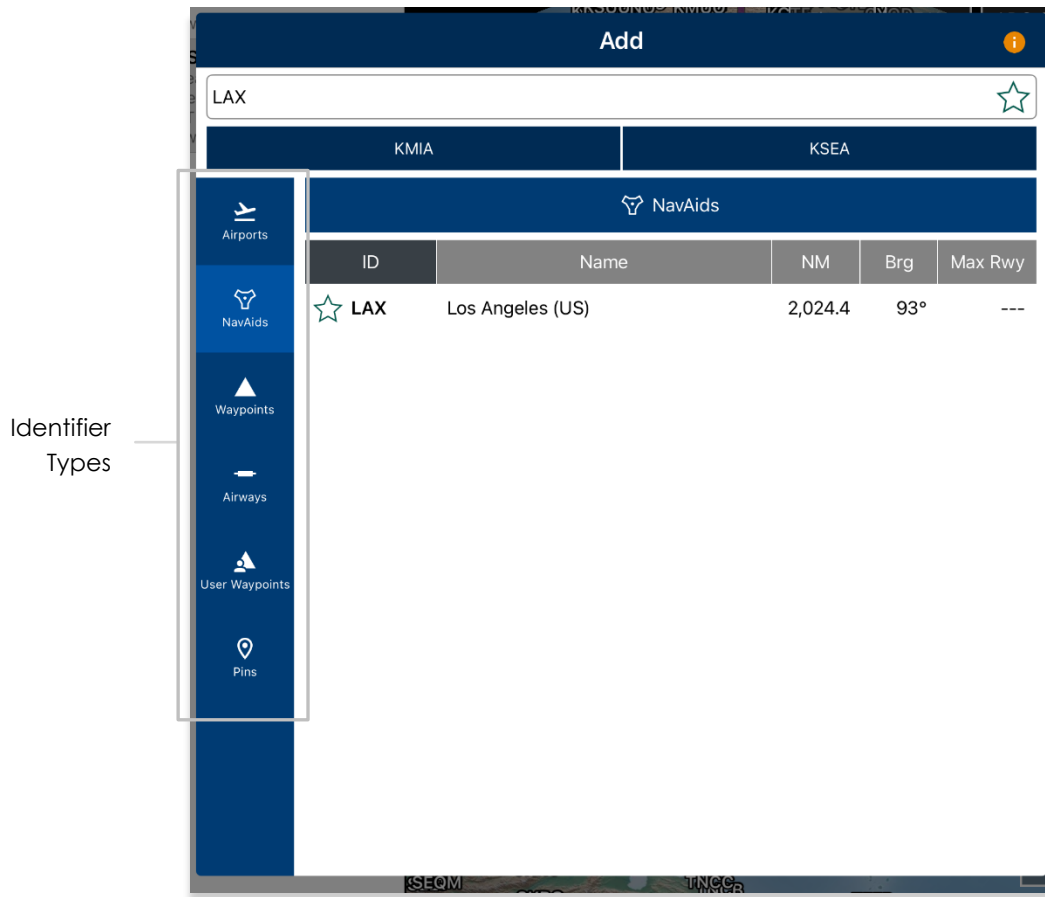

**NOTE:** Aero App displays the individual route legs of Departure Procedures (DPs), Standard Terminal Arrival Routes (STARs), Instrument Approach Procedures (IAPs), Airways, and Jetways. The point information includes ICAO, frequency information (when appropriate), as well as distance, bearing, Estimated Time Enroute (ETE) and Estimated Time of Arrival (ETA) to the next point in the route.



**NOTE:** To enter a route with multiple points, enter each identifier separated by a space. The entries will display in the given order.




**NOTE:** When adding a new point (e.g., ICAO, Waypoint, etc.) to an existing route, the new point is automatically added to the route in its geographically optimal position and not simply at the end of the route.

#### 14.1.1.1 Add Military Training Routes (MTRs) to Route


Users can add Military Training Routes (MTRs) to their current route. Ensure that the entry follows the format of <starting point>.<MTR>.<endpoint>.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap the **Add** button.
3. Use your device's on-screen keyboard to enter desired MTRs following the format: <starting point>.<MTR>.<endpoint> to add to route.

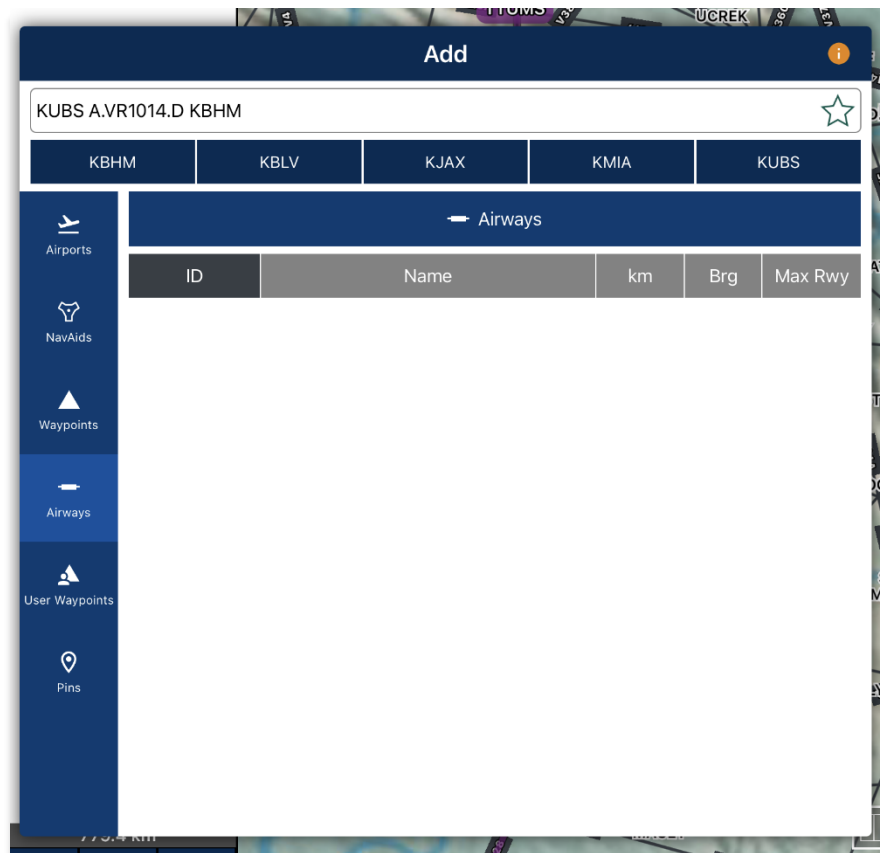




4. The MTR is added to the Route Panel and on the Map.

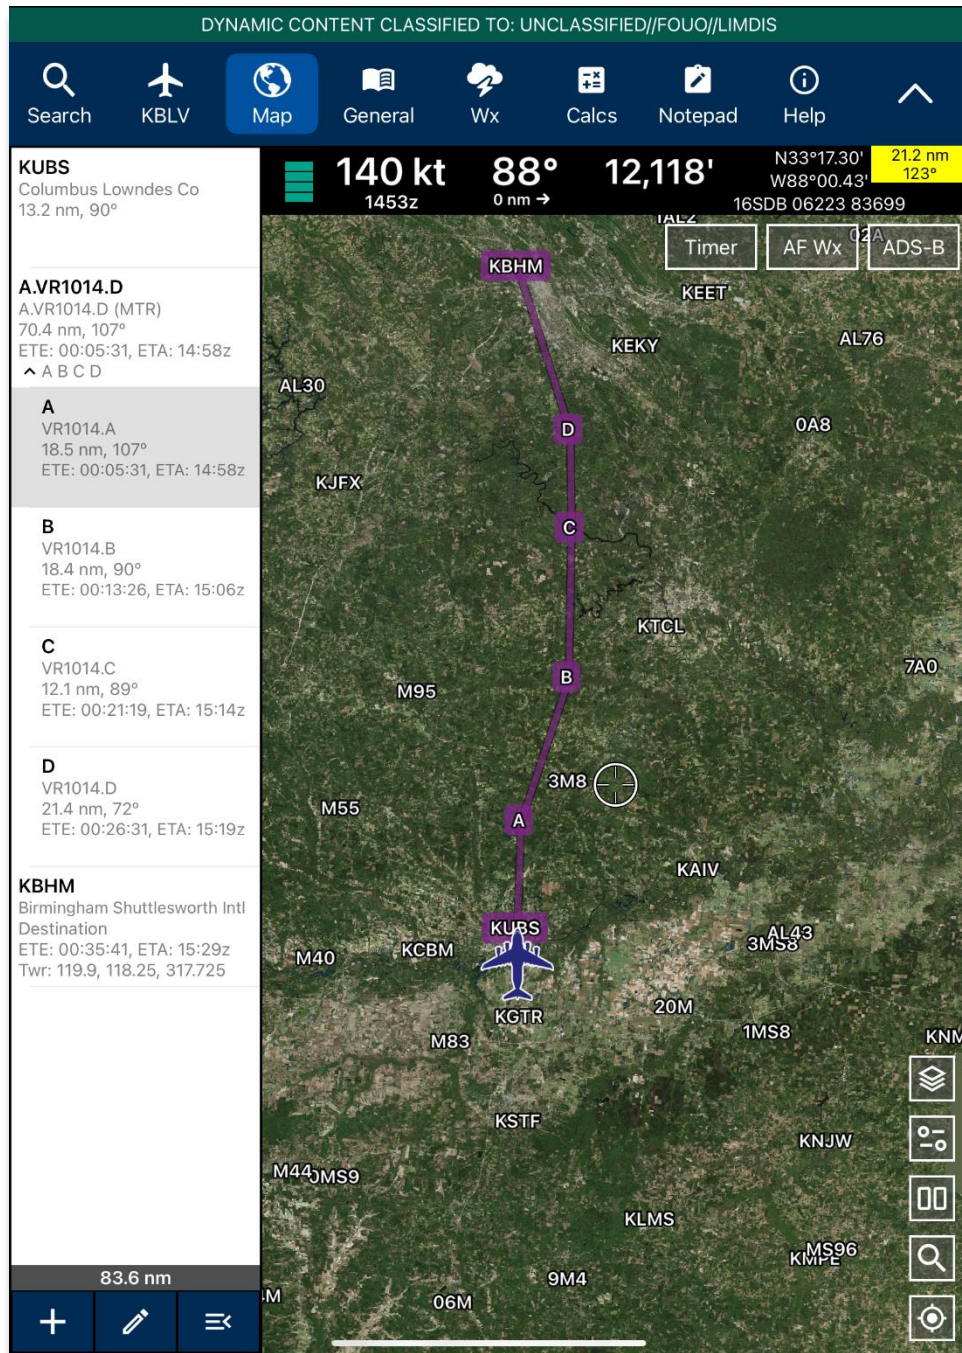


### 14.1.1.2 Add Airways to Route

Users can add Airways to the route. There are several types of airways, each prefixed with a letter followed by one to three digits. Enter desired airway in the search text box and the airway will be added to the route.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap the **Add** button.
3. Use your device's on-screen keyboard to search and select desired Airways to add to the route.

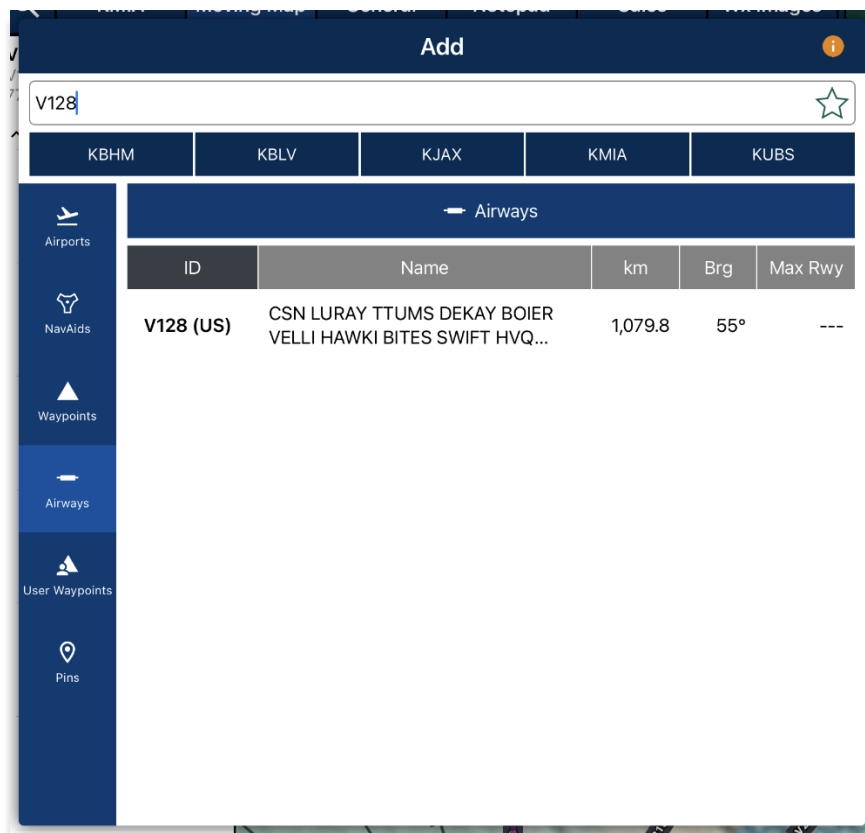


4. The Airway is added to the Route Panel and on the Map.

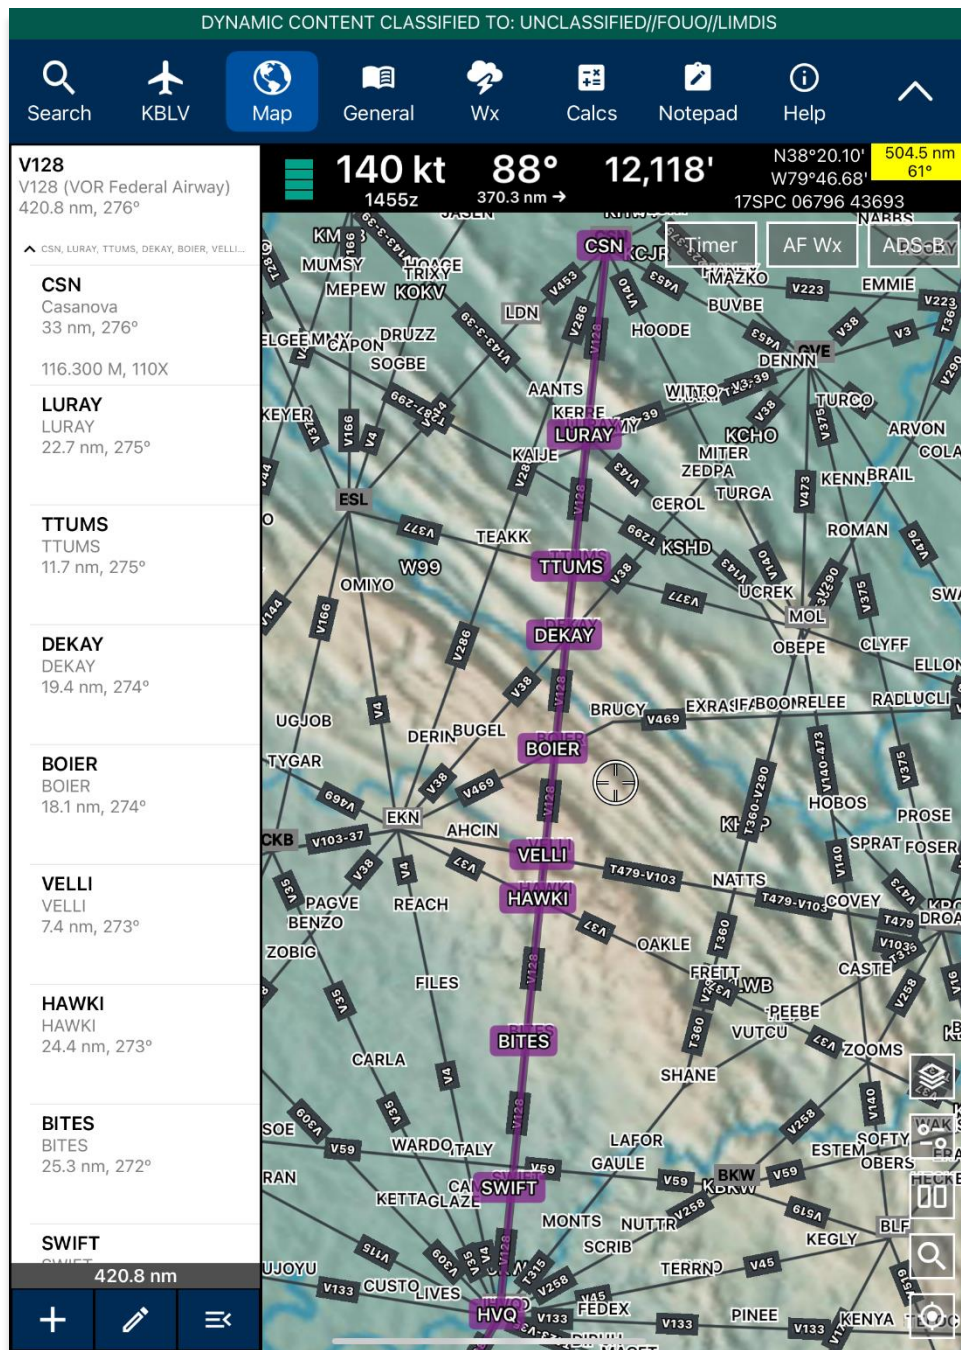

### 14.1.2 Edit

Aero App allows users to edit their flight route directly from the Route Panel. Users can reorder the points to their desired course or delete a point from the route.


1. Tap **Route** on the **Main Menu**.
2. Tap **Edit**.
3. Hold the **Hamburger** button next to the identifier that you wish to move.
4. Swipe up or down to place the identifier in the desired route position.
5. Tap on the **red circle** next to the entry that you wish to delete.
6. Tapping **Delete** will remove that entry from the route panel.

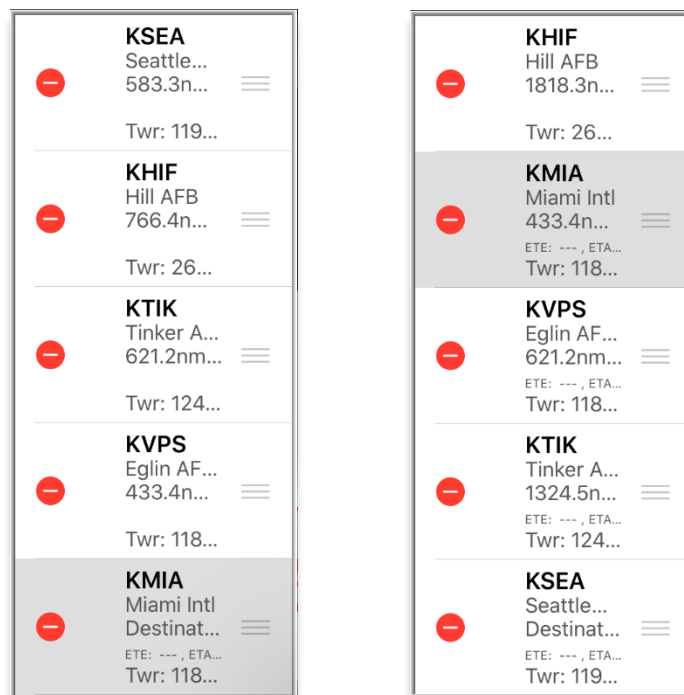



### 14.1.3 Route Manager

Route Manager provides route enhancement capabilities and is located at the bottom right of the Route Panel view. Route Manager is divided into categories of Actions, Add, Send, and Show.

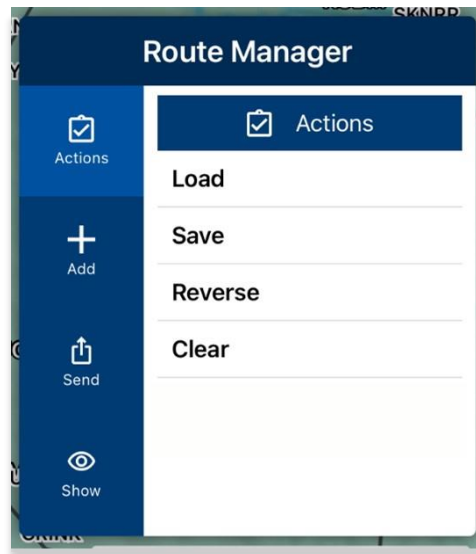

#### 14.1.3.1 Actions


The Actions menu offers the following options and will be further elaborated in the sections below:

- Load
- Save
- Reverse
- Clear

### 14.1.3.1.1 Load Route

The Load feature displays a collection of imported routes including CRD, JSON, and KML/KMZ files, and routes saved directly on Aero App. Selecting a route from the list replaces the initial route with the selected route.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Actions** on the side menu, if necessary.
4. Tap **Load**.
5. Select the route that you wish to load. The selected route will populate the Route Panel and display on the Map.

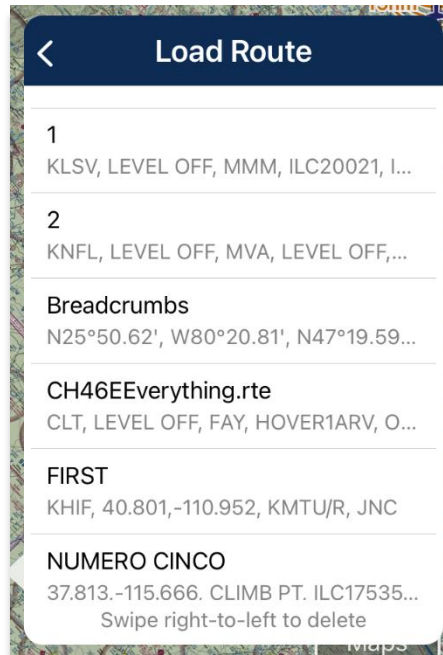

**NOTE:** Loading an invalid route in Aero App will trigger an error message.



**NOTE:** Loading an empty route will result in Aero App clearing your current flight route.




**NOTE:** Loading a route file that exceeds the 200 KB limit will trigger an error message.

#### 14.1.3.1.1.1 Load a CRD File

Aero App supports CRD files. CRD files must be sideloaded onto Aero App. Refer to [Section 11.5](#) for additional information.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Actions** on the side menu, if necessary.
4. Tap **Load**.
5. Locate and tap the CRD files that were loaded onto Aero App. The selected route will populate the Route Panel and display on the Map.

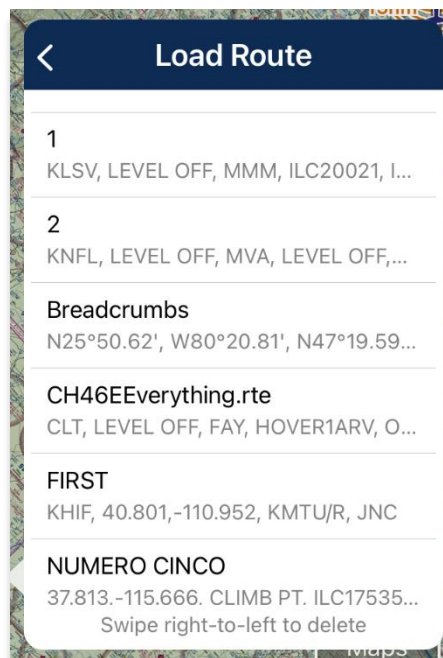


6. To delete a CRD file, swipe right-to-left to reveal the *Delete* button. Tap **Delete** and the route will be permanently removed.

### 14.1.3.1.2 Save Route

Aero App allows users to save routes loaded in the Route Panel for ease of access.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Ensure that the route includes one or more points.
3. Tap **Route Manager**.
4. Select **Actions** on the side menu, if necessary.
5. Tap **Save**.
6. The Route Name will display a preselected name, with the format of <Departure> to <Arrival>. If necessary, rename the route name to the desired name.
7. Tap **Save**. The route will be saved and be added to the *Load Route* table.

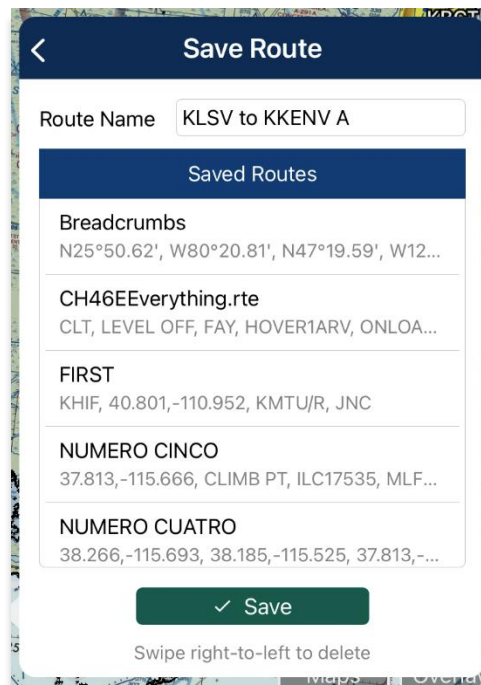


**NOTE:** When entering a new route name, the name can only contain alphanumeric (lower and upper case) characters, spaces, and hyphens.



#### 14.1.3.1.2.1 Save a CRD File

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Actions** on the side menu, if necessary.
4. Tap **Save**.
5. Tap in the *Route Name* text field and change the route's name to desired name.
6. Once the CRD file has been renamed, tap **Save**. The changes will be added to the Saved Routes list.

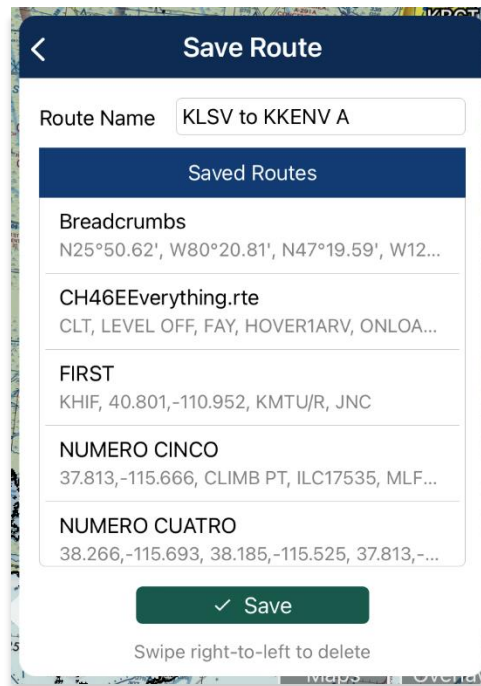

#### 14.1.3.1.3 Reverse Route

Selecting Reverse reverses the order of the route points loaded in the Route Panel.


1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Actions** on the side menu, if necessary.
4. Tap **Reverse**. The entire route is reversed.

|                                                                                       |                                                                                                       |
|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| <b>KMIA</b><br>Miami Intl<br>52.1nm, 289°<br><br>Twr: 118.3, 123.9, 256.9             | <b>KMKY</b><br>Marco Island Executive<br>23.7nm, 98°                                                  |
| <b>DEEDS</b><br>DEEDS<br>23.7nm, 279°<br>ETE: 00:10:16, ETA: 18:15:03Z                | <b>DEEDS</b><br>DEEDS<br>52.1nm, 108°                                                                 |
| <b>KMKY</b><br>Marco Island Executive<br>Destination<br>ETE: 00:15:01, ETA: 18:19:48Z | <b>KMIA</b><br>Miami Intl<br>Destination<br>ETE: 00:00:14, ETA: 18:05:07Z<br>Twr: 118.3, 123.9, 256.9 |

#### 14.1.3.1.4 Clear Route

Selecting Clear removes all the route points loaded in the Route Panel.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Actions** on the side menu, if necessary.
4. Tap **Clear**.
5. A confirmation popup will appear. Tap **Clear** to confirm action.

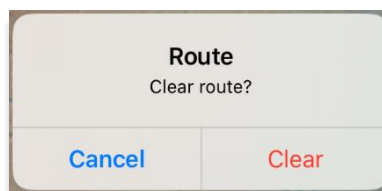


**NOTE:** Clearing a route clears the current route. It does not delete any saved routes.

#### 14.1.3.1.4.1 Delete Imported and Saved Routes

Users can delete routes listed in the Load and Save Route views.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Actions** on the side menu, if necessary.
4. Tap the options **Load** or **Save**.
5. Swipe right-to-left to reveal the *Delete* button. Tap **Delete** and the route will be permanently removed.

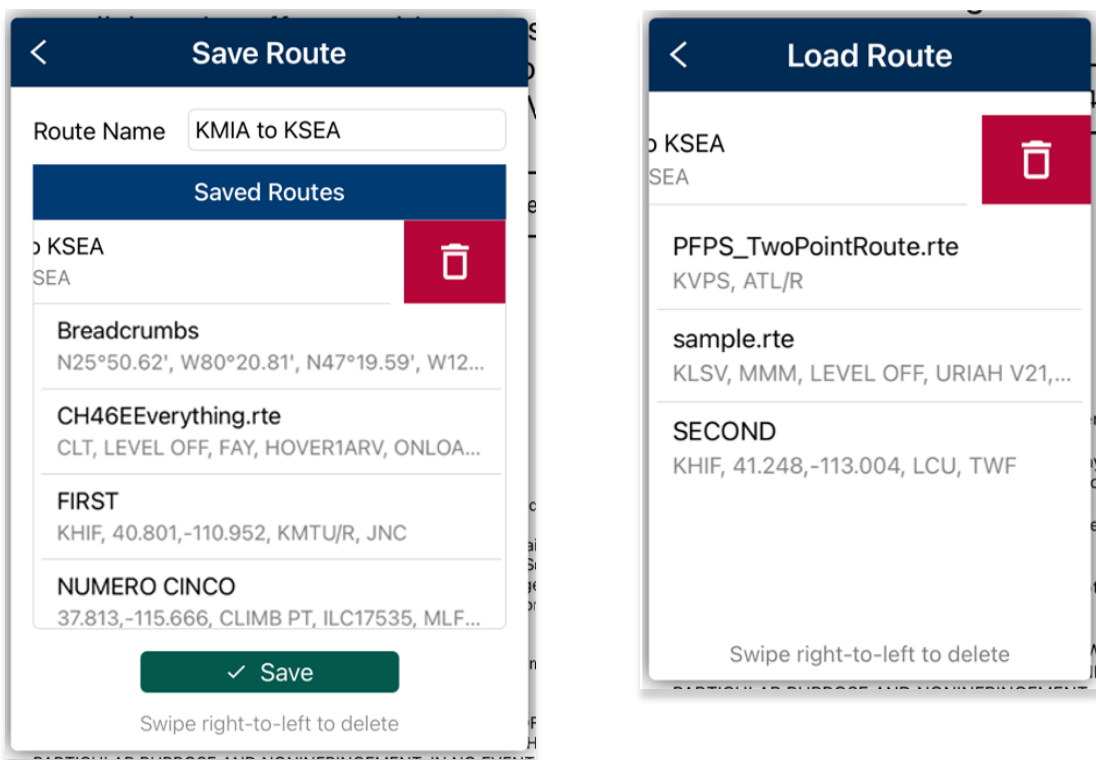

### 14.1.3.2 Add


Add allows users to optimize their planning and the ability to predefine their routes to ensure their mission runs smoothly. The Add menu offers the following features and will be further explained in the sections below:

- Air Refueling Route
- Flight Plan
- Preferred Route
- Search and Rescue (SAR)


#### 14.1.3.2.1 Add Air Refueling Route

Air Refueling Route can be added to your flight route. If an existing route is loaded in the Route Panel, Aero App will add the air refueling route to its optimal position on the route.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Add** from the side menu.
4. Tap **Air Refueling Route**.
5. An Air Refueling Route popup will display. In the text field, enter an air refueling route. After three characters are entered, possible matches will be listed.
6. Tap **Search** once desired route is entered. Alternatively, users can select a route from the routes that appear under the search box.

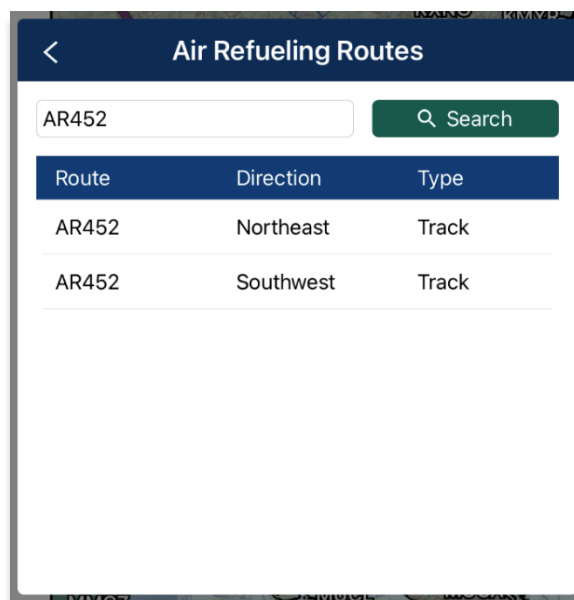

7. The points listed displays columns for Usage, Waypoint, NavAid/Radial and Lat/Lon.

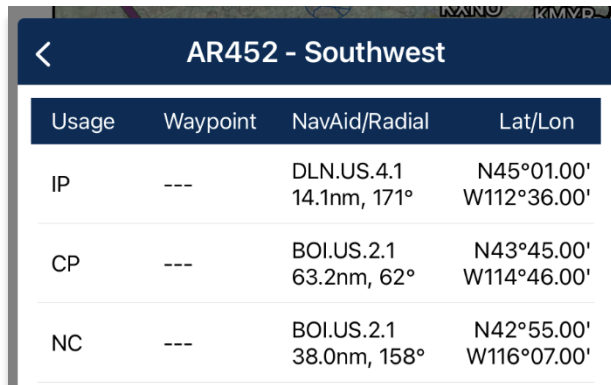


| Usage | Waypoint | NavAid/Radial              | Lat/Lon                   |
|-------|----------|----------------------------|---------------------------|
| IP    | ---      | DLN.US.4.1<br>14.1nm, 171° | N45°01.00'<br>W112°36.00' |
| CP    | ---      | BOI.US.2.1<br>63.2nm, 62°  | N43°45.00'<br>W114°46.00' |
| NC    | ---      | BOI.US.2.1<br>38.0nm, 158° | N42°55.00'<br>W116°07.00' |

8. Tap on a row to select an *entry point*. The row will be shaded gray to indicate a point is selected.
9. Tap on another row to select an *exit point*. The points between the selected entry point and exit point will be shaded gray. The shaded points are the points to your air refueling route.



**NOTE:** To reselect new entry and exit points, tap on another point, and repeat the steps.

10. Once selections are completed, the Add to Route button will be enabled. Tap **Add to Route**.

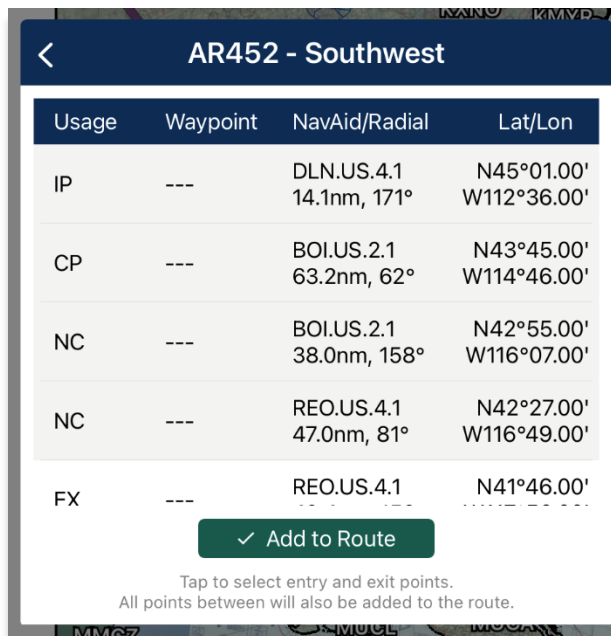


| Usage | Waypoint | NavAid/Radial              | Lat/Lon                   |
|-------|----------|----------------------------|---------------------------|
| IP    | ---      | DLN.US.4.1<br>14.1nm, 171° | N45°01.00'<br>W112°36.00' |
| CP    | ---      | BOI.US.2.1<br>63.2nm, 62°  | N43°45.00'<br>W114°46.00' |
| NC    | ---      | BOI.US.2.1<br>38.0nm, 158° | N42°55.00'<br>W116°07.00' |
| NC    | ---      | REO.US.4.1<br>47.0nm, 81°  | N42°27.00'<br>W116°49.00' |
| FX    | ---      | REO.US.4.1                 | N41°46.00'                |

✓ Add to Route

Tap to select entry and exit points.  
All points between will also be added to the route.

11. The Air Refueling Route will be added to your current flight route.

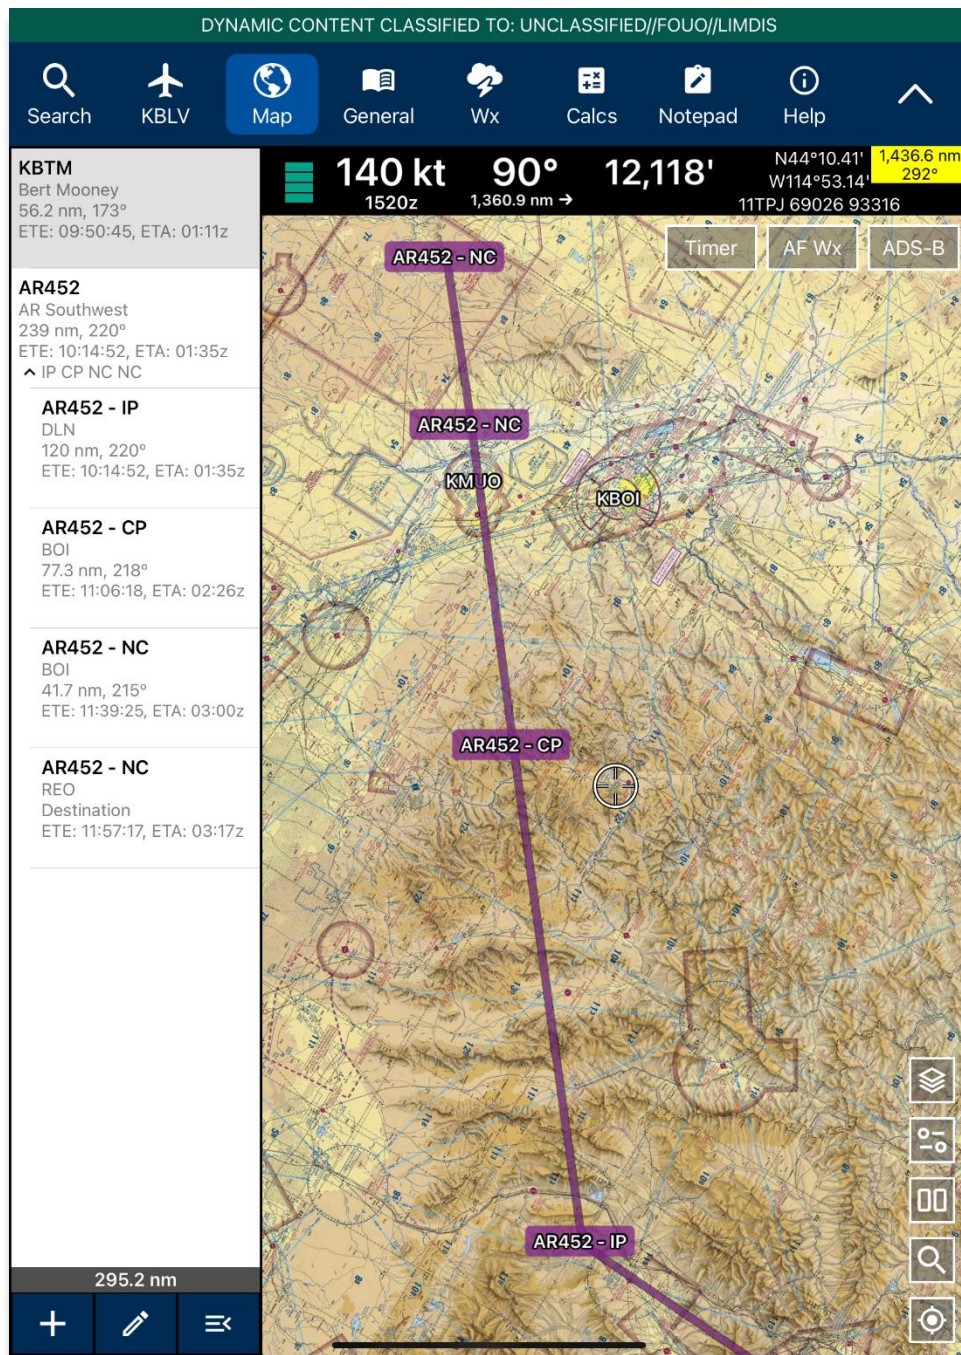

#### 14.1.3.2.1.1 View Air Refueling Route

Pilots can tap an Air Refueling Route on the Map to view information such as its Frequency, A/A Tacan, Alternatives, Scheduling Unit, ARTCC, and Remarks.

1. Navigate to the **Map** screen and tap on an air refueling route point.
2. The Identifier Menu will display. Select **Show** from the side menu.
3. Tap **Info and Wx**.
4. The Information view will display Air Refueling Route information.

<
AR452

AR452 (NE)

|                 |                                              |              |
|-----------------|----------------------------------------------|--------------|
| Frequency       | Pri. 361.700                                 | Sec. 384.600 |
| A/A TACAN       | 29/92                                        |              |
| Alternates      | FL240/FL260                                  |              |
| Scheduling Unit | 366 OSS/OSOS<br>Mt Home AFB, ID              |              |
| ARTCC           | Oakland Salt Lake City ARCP-269.0 EXIT-290.5 |              |
| Remarks         | REMARKS: None                                |              |

AR452 (SW)

|                 |                                              |              |
|-----------------|----------------------------------------------|--------------|
| Frequency       | Pri. 361.700                                 | Sec. 384.600 |
| A/A TACAN       | 29/92                                        |              |
| Alternates      | FL240/FL260                                  |              |
| Scheduling Unit | 366 OSS/OSOS<br>Mt Home AFB, ID              |              |
| ARTCC           | Oakland Salt Lake City ARCP-290.5 EXIT-269.0 |              |
| Remarks         | REMARKS: None                                |              |

AR452


|       |                                                                            |  |
|-------|----------------------------------------------------------------------------|--|
| Entry | None                                                                       |  |
| ARIP  | FMG 276 / 47 N39°49.00' W120°36.00'<br>DLN 171 / 14 N45°01.00' W112°36.00' |  |



### 14.1.3.2.2 Flight Plan

Flight Plan is a collection of filed flight plans. Pilots can choose to add the flight plan to their current route.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Add** from the side menu.
4. Tap **Flight Plan**.
5. The *Add Flight Plan to Route* popup will display. Tap desired flight plan and the filed route will populate to the current route.

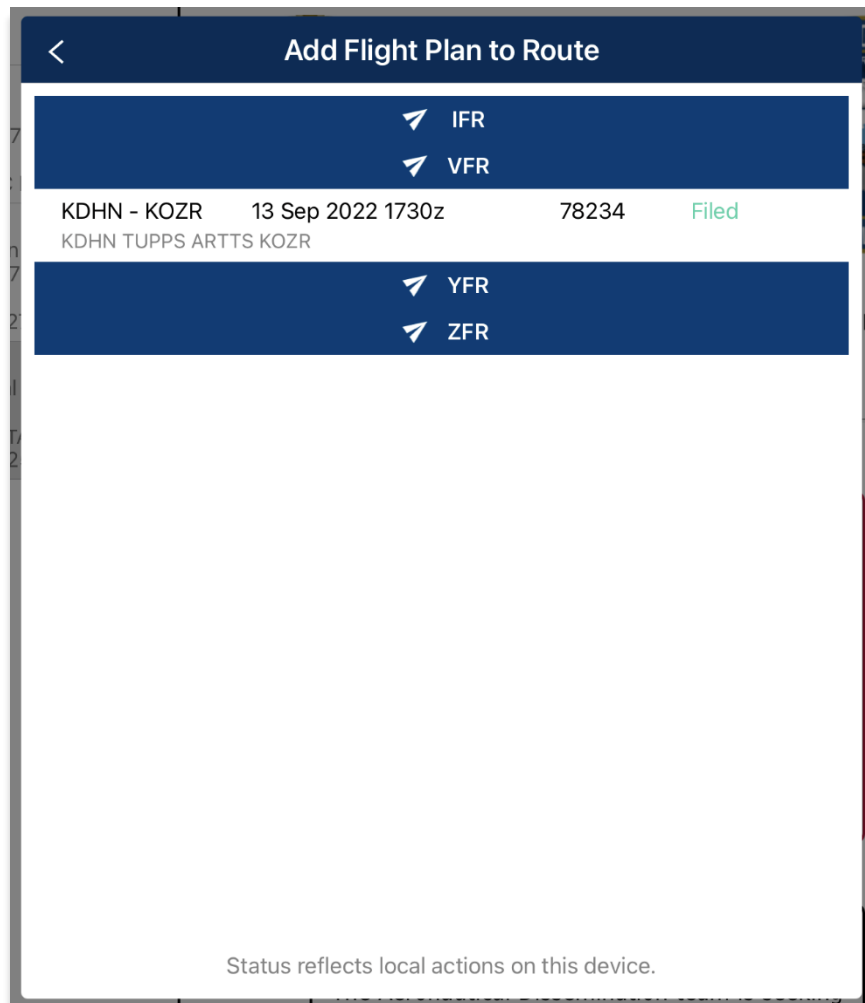




### 14.1.3.2.3 Preferred Route

Aero App provides preferred routes in place of the current flight route, once activated. Once an origin and destination are entered in the route panel, the Preferred Route feature will activate and display a list of preferred routes to select from. This feature is only available for select routes.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Ensure that a route is loaded in the Route Panel.
3. Tap **Route Manager**.
4. Select **Add** from the side menu.
5. Tap **Preferred Route**.
6. A list of preferred routes will be displayed. Tap **Select Route** once desired route is found, and the new route will display on the route panel.

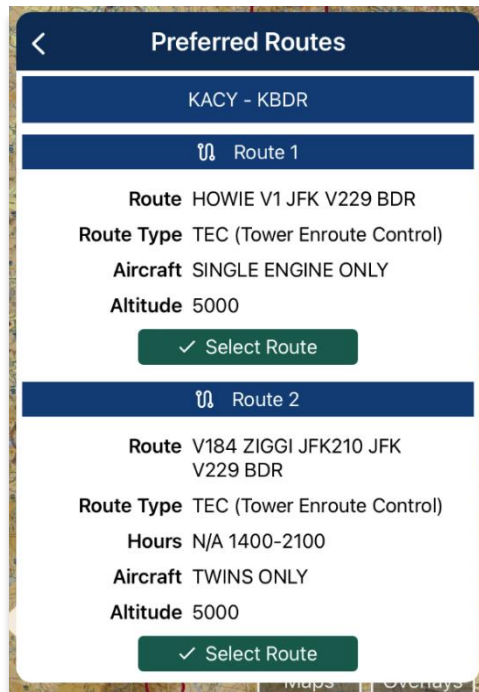

7. When selecting an alternative preferred route, a dialog box will appear. Tap **Use Preferred Route**. The alternative preferred route will replace the previously selected preferred route.
8. Tap **Cancel** to discard all changes.




**NOTE:** The Preferred Route option will be disabled if there are no available preferred routes.

#### 14.1.3.2.3.1 Preferred Route with DP and STAR

Aero App allows users to select a preferred route containing DPs or STARs, if applicable.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Ensure that a route is loaded in the Route Panel.
3. Tap **Route Manager**.
4. Select **Add** from the side menu.
5. Tap **Preferred Route**.
6. A list of preferred routes will be displayed. Select a desired route.

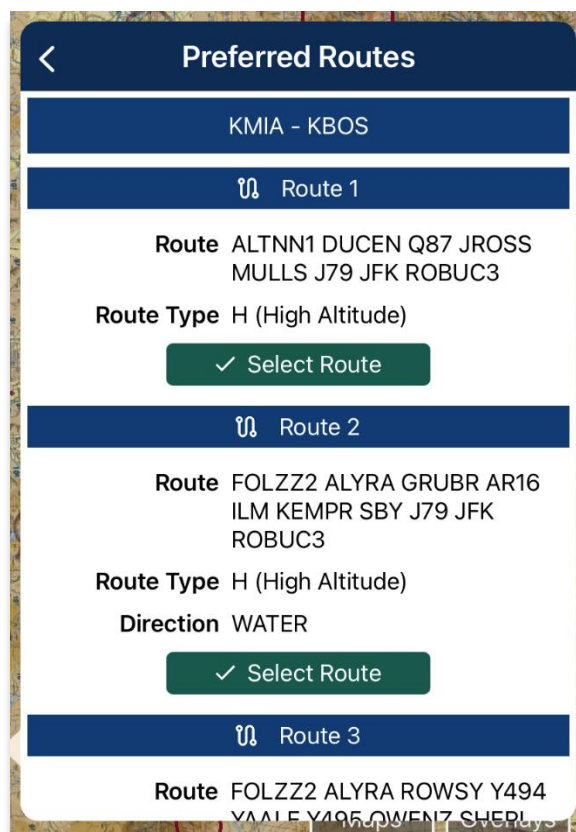

7. Select **DP** or **STAR**, if prompted.


8. Tap **Add to Route** when selections are completed.

Add KMIA DP

Procedure: FLMGO1 ✓

Transition: WAPOM ✓

First Waypoint: KROCS ✓

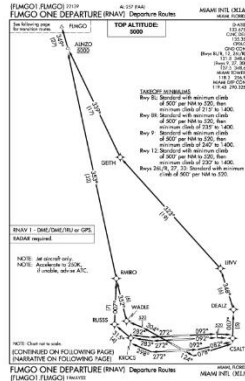


✓ Add to Route

Add KMIA STAR

Procedure: BNFSH1 ✓

Transition: MORME ✓

Last Waypoint: TUPAC ✓



✓ Add to Route

9. A Preferred Route dialog box will appear. Tap **Use Preferred Route** a new route will apply to your flight route.



**NOTE:** The Preferred Route option will be disabled if there are no available preferred routes.

#### 14.1.3.2.4 Add Search and Rescue (SAR) Pattern





Search and Rescue (SAR) provides pilots and rescue missions with customizable patterns within a searched area. These search patterns, such as creeping, parallel, sector, and square are displayed on the Map and can be added to the current route.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Add** from the side menu.
4. Tap **SAR**.
5. Tap to select or slide the segmented control to **Creeping**, **Parallel**, **Sector**, or **Square**. Respective to the selection, different fields will be available to specific *Pattern* options.

SAR Patterns

6. Tap to select or slide the segmented control to **Lat/Lon**, **MGRS**, or **Waypoint**.
7. Users can tap **Current Location** (GPS required) to set their current position as the coordinates or manually enter them in the Latitude and Longitude fields.
8. All fields must be filled.

9. Add to Route will become selectable once all required fields are filled. Tap **Add to Route**.
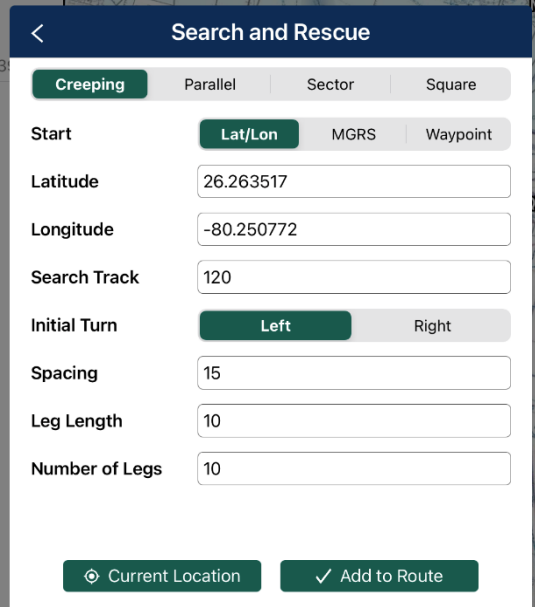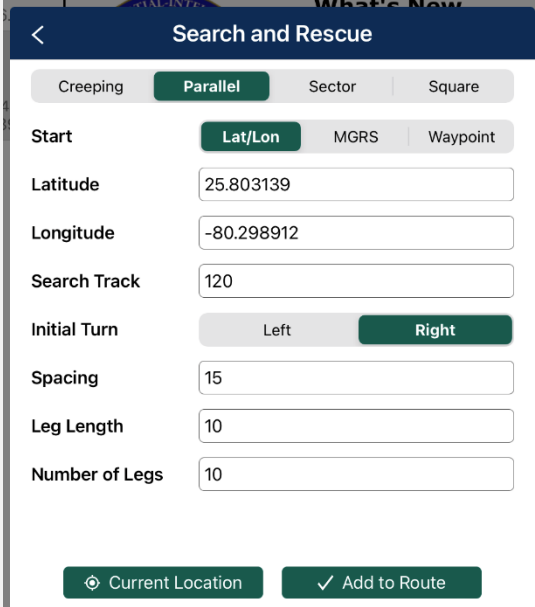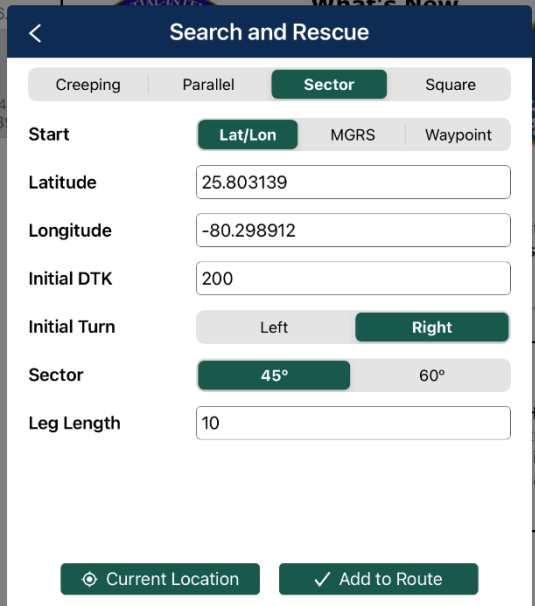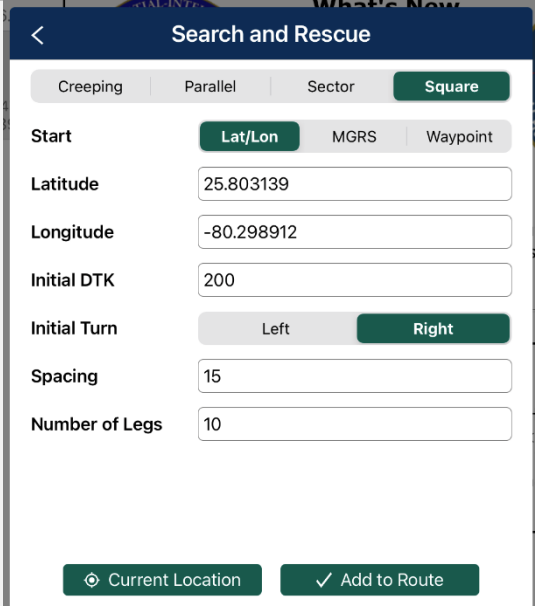
| Creeping                                                                            | Parallel                                                                             |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|   |   |
| Sector                                                                              | Square                                                                               |
|  |  |

### 14.1.3.3 Send

The Send option enables users to share preloaded routes with their fellow pilots for enhanced collaboration and mission planning. The following options are available to users and will be further elaborated in the sections below:

- AirDrop
- File Flight Plan

#### 14.1.3.3.1 AirDrop Route

Pilots can share routes with nearby teammates. The device receiving the files must have their AirDrop enabled. Different behaviors will occur depending on the device's operating system.

##### 14.1.3.3.1.1 Send Route Using AirDrop

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Send** from the side menu.
4. Tap **AirDrop**.
5. Select the iPad to receive the route.

##### 14.1.3.3.1.2 Receive Route Through AirDrop

1. The receiving iPad will receive a notification that a route is being sent via AirDrop.
2. Select **Set Route** to replace the current route by the route being received.
3. Select **Cancel** to dismiss the action.

#### 14.1.3.3.2 Flight Plans

Aero App allows users to access filed flight plans, file a new flight plan, and add or edit Aircraft information providing ease of access when filing a new flight plan. In addition, users can enter or update their Flight Service credentials. This feature is available to only FAA and DOD users.

##### 14.1.3.3.2.1 Credentials

Users must possess Flight Service credentials to file a flight plan. Users must log in to their Flight Service account prior to filing a flight plan. Refer to [Section 6.3](#) for additional information.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Send** from the side menu.
4. Tap **File Flight Plan**.
5. The Flight Plans view will appear. Select **Credentials** from the navigation bar.
6. Tap **Edit** on the bottom of the Credentials view and the text boxes will become selectable.

< Credentials

☰ Flight Plans ✈ Aircraft 👤 Credentials

Username\* email@email.com


ⓘ Pilot Information

Name John Doe


Address 123 Street

Phone 123-456-7890

7. To associate your filings with your flight service account, enter your Flight Service username in the username text field.

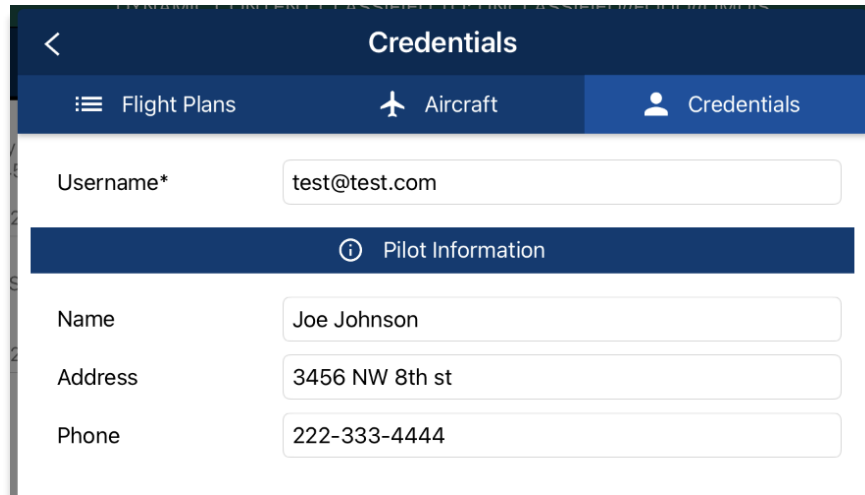

8. Tap **Save** once necessary fields are filled.



9. Tap **Edit** to modify the information entered.



**NOTE:** Pilot information is required to file a flight plan. The information entered in the Pilot Information section will pre-populate to a new flight plan form.



**NOTE:** Pilot information cannot be modified when filing a new flight plan. Therefore, any changes to the pilot information must be made on the Credentials page.



#### 14.1.3.3.2.2 New Aircraft

Users can save aircraft information for ease of access when filing a flight plan.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Send** from the side menu.
4. Tap **File Flight Plan**.
5. The Flight Plans popup will appear. Select **Aircraft** from the navigation bar.
6. From the Aircraft screen, tap **+ New**, located at the bottom of the view, and the **Aircraft** form will appear.
7. Fields will contain hint text in each text box, and others may include an ellipsis button that displays other available options to choose from.

**New Aircraft**

Flight Plans | Aircraft | Credentials

**Aircraft**

**Tail\*** Enter N-Number/Call Sign

**Type of Aircraft\*** ICAO Aircraft Type Designator

**Equipment\*** Equipment

**Surveillance Equipment\*** Surveillance Equipment

**Cruising Speed\*** True Airspeed | **Knots** | Mach

**Color** Aircraft Color; e.g. W:B (for White/Blue)

**Wake Turbulence\*** Light | Medium | Heavy | **Auto**

**Supplementary Information**

**Emergency Radio** Emergency Radio

**Survival Equipment** Survival Equipment

**Jackets** Jackets

**Other Info** e.g. TYP/ COM/ DAT/

**View**



**NOTE:** Asterisks denote required fields.

8. Once the fields are filled, tap **Save**.

**New Aircraft**

Flight Plans | **Aircraft** | Credentials

**Aircraft**

Tail\* 78234

Type of Aircraft\* F16

Equipment\* N

Surveillance Equipment\* A

Cruising Speed\* 200 **Knots** Mach

Color BE:S

Wake Turbulence\* **Light** Medium Heavy Auto

**Supplementary Information**

Emergency Radio U

Survival Equipment D

Jackets U

Other Info e.g. TYP/ COM/ DAT/ **View**

9. Your aircraft will be added to the Aircraft screen.

**Aircraft**


Flight Plans | **Aircraft** | Credentials

| Tail  | Type | Equipment | TAS    | Color            |   |
|-------|------|-----------|--------|------------------|---|
| 78234 | F16  | B         | 200 KT | Beige and Silver | ✓ |

#### 14.1.3.3.2.3 Aircraft

Users can view previously saved aircraft information such as its tail number, type, equipment, true airspeed, and color.


1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Send** from the side menu.
4. Tap **File Flight Plan**.
5. The Flight Plans view will appear. Select **Aircraft** from the navigation bar.
6. The Aircraft table will appear listing all the saved aircraft.

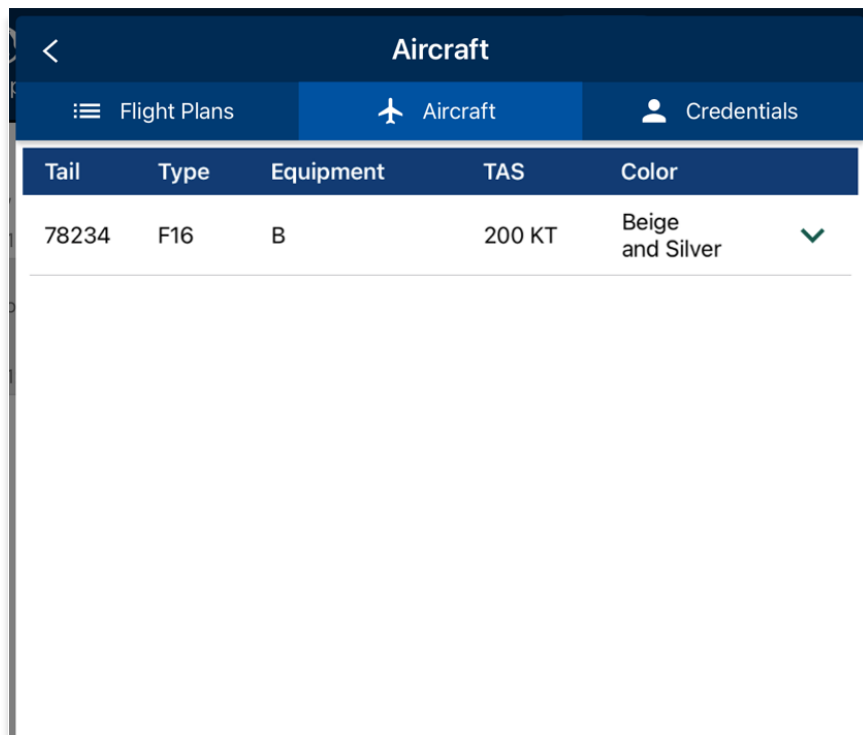

The screenshot shows a mobile application interface with a dark blue header bar. The header bar contains a back arrow on the left, the title 'Aircraft' in the center, and three tabs: 'Flight Plans' (with a hamburger menu icon), 'Aircraft' (with an airplane icon and highlighted in blue), and 'Credentials' (with a person icon). Below the header is a table with five columns: 'Tail', 'Type', 'Equipment', 'TAS', and 'Color'. The table contains one row of data: Tail '78234', Type 'F16', Equipment 'B', TAS '200 KT', and Color 'Beige and Silver'. A green checkmark is visible to the right of the color text. The table is set against a white background with a thin grey border.

| Tail  | Type | Equipment | TAS    | Color            |
|-------|------|-----------|--------|------------------|
| 78234 | F16  | B         | 200 KT | Beige and Silver |

7. Tap the drop-down arrow to expand your aircraft information.
8. Tap **Edit** to modify an aircraft.
9. Tap **Delete** to remove an aircraft.

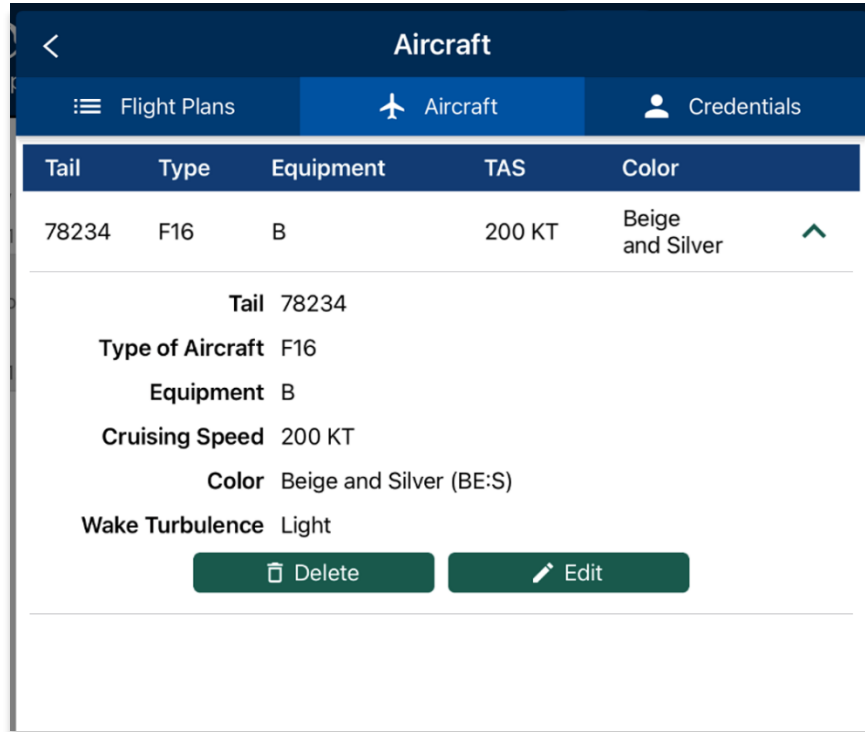

**NOTE:** Predefined aircraft, such as those obtained directly from the FAA, cannot be modified. Therefore, the **Delete** and **Edit** buttons will be disabled.

#### 14.1.3.3.2.4 New Flight Plan

Users can file flight plans directly from Aero App.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Send** from the side menu.
4. Tap **File Flight Plan**.
5. The Flight Plans view will appear. Tap **+ New** and the **New Flight Plan** form will appear.
6. The form is broken up into sections for *Aircraft*, *Route*, *Supplementary Information*, *Dinghies*, and *Additional Information*.
7. Certain fields will contain hint text in each text box, and others may include an ellipsis button that displays other available options to choose from.

The screenshot shows the 'New Flight Plan' form with the following fields and options:

- Tail\***: Text input with hint 'Enter N-Number/Call Sign' and an ellipsis icon.
- Flight Rules\***: Radio buttons for **IFR** (selected) and **VFR**.
- Type of Flight\***: Text input with hint 'e.g. G (for General)' and an ellipsis icon.
- Number of Aircraft**: Text input with hint 'Number of Aircraft'.
- Type of Aircraft\***: Text input with hint 'ICAO Aircraft Type Designator'.
- Wake Turbulence\***: Radio buttons for **Light**, **Medium**, **Heavy**, and **Auto** (selected).
- Equipment\***: Text input with hint 'Equipment' and an ellipsis icon.
- Surveillance Equipment\***: Text input with hint 'Surveillance Equipment' and an ellipsis icon.
- Departure\***: Text input with hint 'Identifier; e.g. KSJC'.
- Departure Time (Zulu)\***: Text input with value '5 Jul 2024 1902z'.
- Cruising Speed\***: Radio buttons for **True Airspeed**, **Knots** (selected), and **Mach**.



**NOTE:** Users can auto-fill aircraft information by tapping the ellipsis icon in the Aircraft field and selecting a saved aircraft.



**NOTE:** Asterisks denote required field.

8. Once the fields are filled, tap **Send**, located at the bottom of the view, to file your flight plan.

**New Flight Plan** ✓ Save Form

**Flight Plans** **Aircraft** **Credentials**

**Aircraft**

Tail\* 78234

Flight Rules\* IFR **VFR**

Type of Flight\* G

Number of Aircraft 1

Type of Aircraft\* F16

Wake Turbulence\* Light **Medium** Heavy Auto

Equipment\* B

Surveillance Equipment\* A

**Route**

Departure\* KDHN

Departure Time (Zulu)\* 5 Jul 2024 1902z

Cruising Speed\* 200 **Knots** Mach

Level/Altitude\* 3000 **Feet**

Route TUPPS ARTTS

Destination\* KOZR

Total EET\* 0230


Alternates Identifier; e.g. KSJC Identifier; e.g. KSJC

Other Info NAV/ View



**NOTE:** The Save Form button placed on the header of the Flight Plan form saves any entered data for ease of access upon returning to the screen. Aero App will automatically save entered data whenever the view has accidentally been closed.

9. A preview of your flight plan will appear on the Flight Plans screen such as the entire route, departure time in which the flight plan was filed, the aircraft's tail number, and the status of the plan.

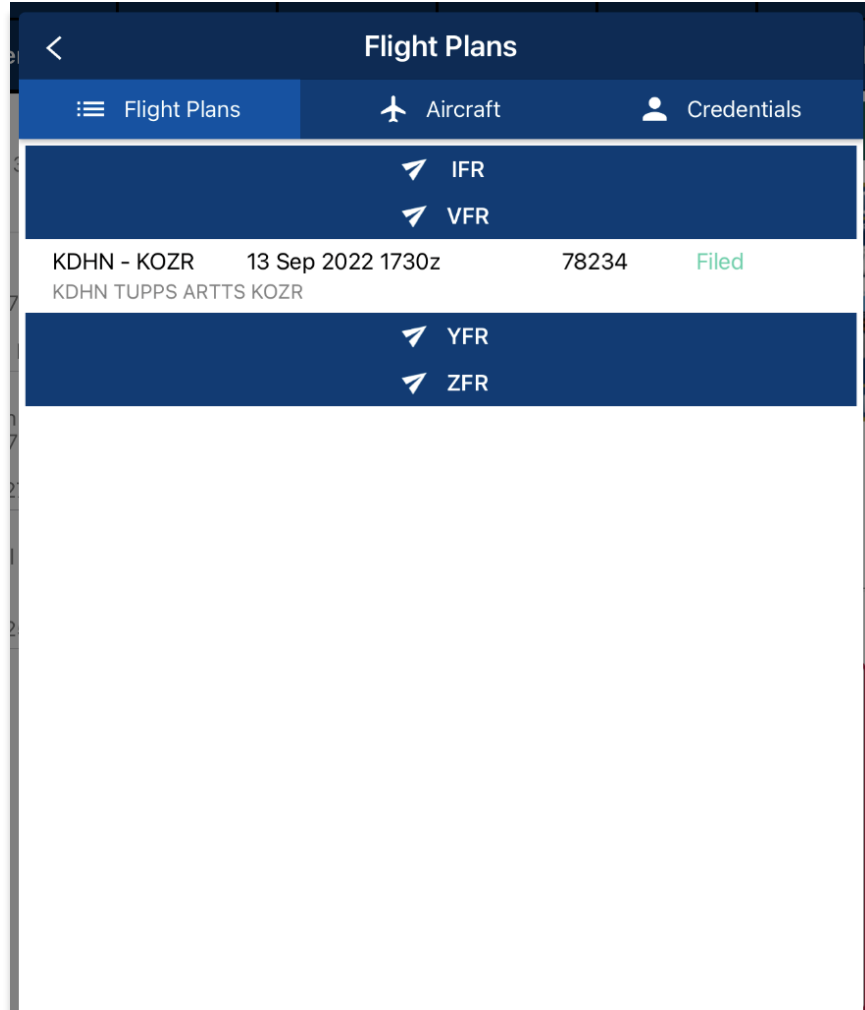

**NOTE:** Users must enter credentials prior to filing a flight plan.

### 14.1.3.3.2.5 Flight Plans

By default, the Flight Plans page will be the initial view to users. Filed flight plans are organized and displayed based on IFR and VFR categories. Aero App no longer supports YFR and ZFR flight rule options. If users had previously filed a YFR or ZFR flight plan and choose to file a new Flight Plan, a message will appear. The message notifies users that the YFR and ZFR flight rules are no longer available, and the IFR flight rule will be automatically selected. Each filed flight plan includes a preview of the route, the entered departure time when the flight plan was filed, the aircraft's tail number, and the plan's status.


1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Send** from the side menu.
4. Tap **File Flight Plan**.
5. The Flight Plans view will appear and display a table containing the list of all filed flight plans. Select your desired filed flight plan.

| Flight Plans                            |                   |          |             |
|-----------------------------------------|-------------------|----------|-------------|
| <                                       | Flight Plans      | Aircraft | Credentials |
| IFR                                     |                   |          |             |
| KJAX - KMIA                             | 13 Oct 2022 1834z | 78234    | Canceled    |
| KJAX HILIS OCF OMN LAL CHRRI WINCO KMIA |                   |          |             |
| VFR                                     |                   |          |             |
| KDHN - KOZR                             | 09 Oct 2022 1930z | FLC11    | Filed       |
| KDHN TUPPS ARTTS KOZR                   |                   |          |             |
| YFR                                     |                   |          |             |
| KHWO - PBI                              | 18 Oct 2022 1836z | FLC78    | Filed       |
| KHWO FEYFO FL47 PBI                     |                   |          |             |
| ZFR                                     |                   |          |             |
| KMIA - KJAX                             | 09 Oct 2022 1930z | 78234    | Filed       |
| KMIA WINCO CHRRI LAL OCF HILIS KJAX     |                   |          |             |



6. The Filed Flight Plan view will display with your flight plan information. Tap the hamburger button and the Actions menu will display with the following options:

- **Activate** – initiates the filed flight plan
- **Close** – closes previously activated flight plan
- **Cancel** – dismisses the flight plan
- **New** – redirects view to the New Flight Plan screen
- **Delete** – permanently removes the filed flight plan from the table

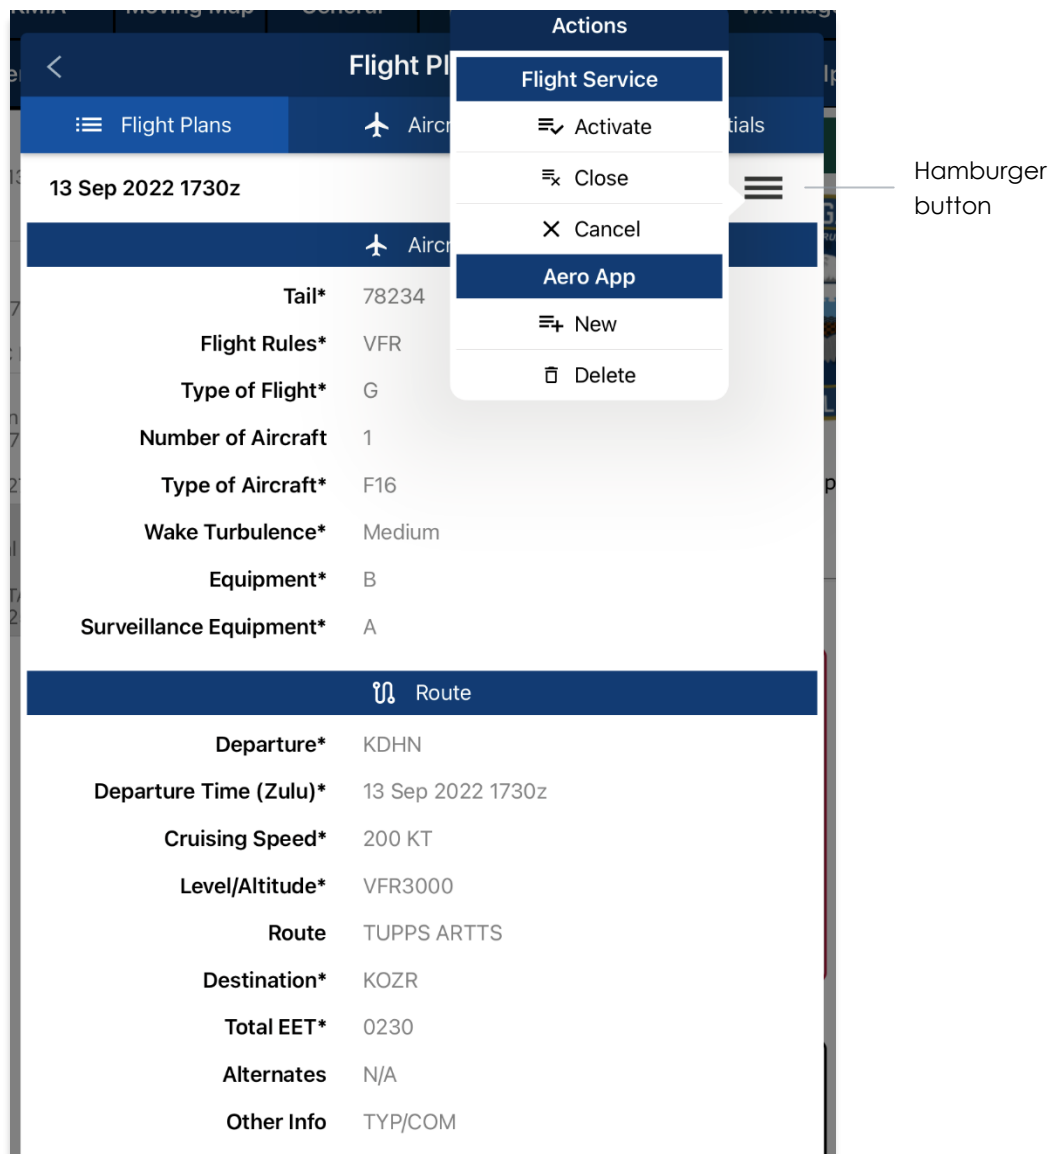


**NOTE:** Flight Plans such as IFR and YFR cannot be activated. However, IFR and YFR can be canceled.

#### 14.1.3.3.2.5.1 Actions for Filed Flight Plans

Actions for Filed Flight Plan provides operations such as the ability to Activate, Close, and Cancel the pilot's filed Flight Plan directly from Aero App. The request to Activate, Close, and Cancel will reflect the Flight Service provider, but actions made through the provider will NOT reflect on Aero App.

Additional options such as New and Delete are used to file a new Flight Plan or delete the selected plan. When selecting New, the selected plan's information will fill out the new Flight Plan form.

1. Tap the **hamburger** button to display the Actions Menu.
2. To initiate the flight plan, tap **Activate**.
3. The Activate Flight Plan popup will display. Select the **departure date** and **time** (Zulu) in which you would like to activate the flight plan.
4. Tap **Activate Flight Plan** once completed.

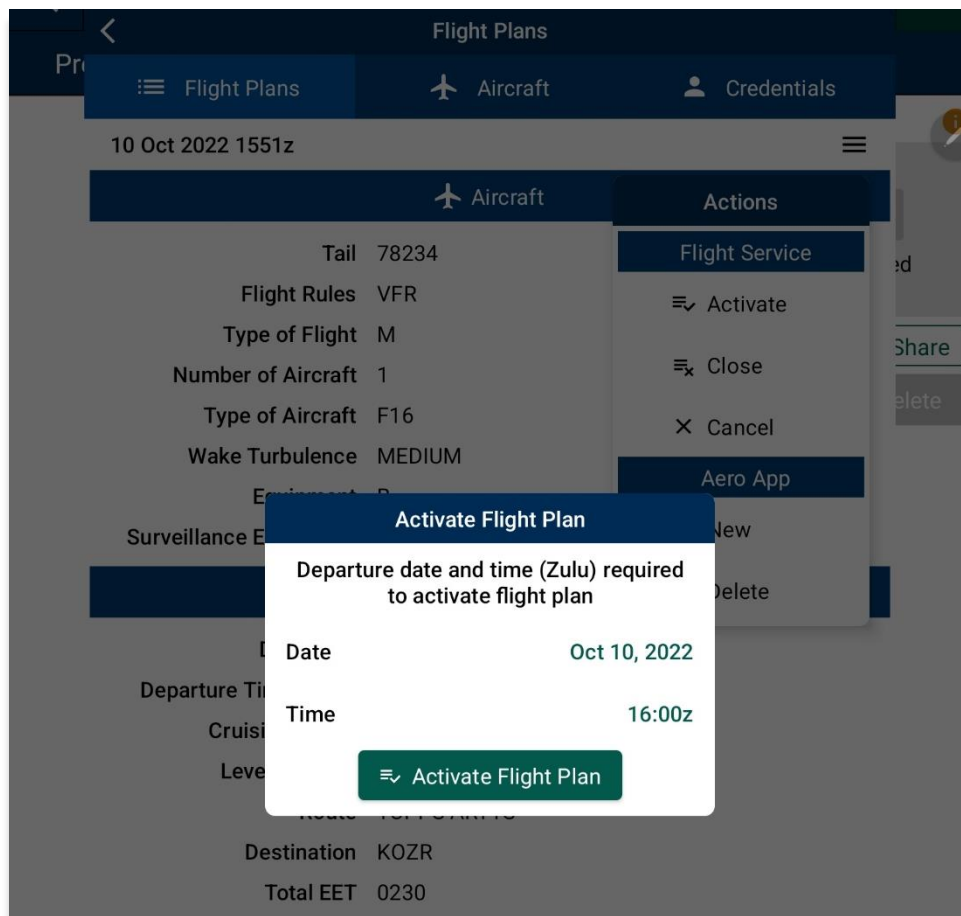

5. To close the flight plan, tap **Close**.



**NOTE:** The flight plan must be activated before it can be closed out.

6. The Close Flight Plan popup will display. Enter the **arrival airport** of your flight plan. The nearest airport will be suggested as the arrival airport. To remove the suggested airport, enter desired arrival airport in the text field.
7. Tap **Close Flight Plan** to confirm the action.


8. To dismiss the flight plan, tap **Cancel**.



**NOTE:** A flight plan can only be cancelled if it has not yet activated.

9. The Cancel Flight Plan popup confirmation will be displayed. Tap **Cancel Flight Plan** to confirm action.
10. Tap outside of the popup to cancel the action.


11. To create a new Flight Plan, tap **New**.
12. Users will be redirected to the New Flight Plan's form. The selected Flight Plan's information will fill out the form.

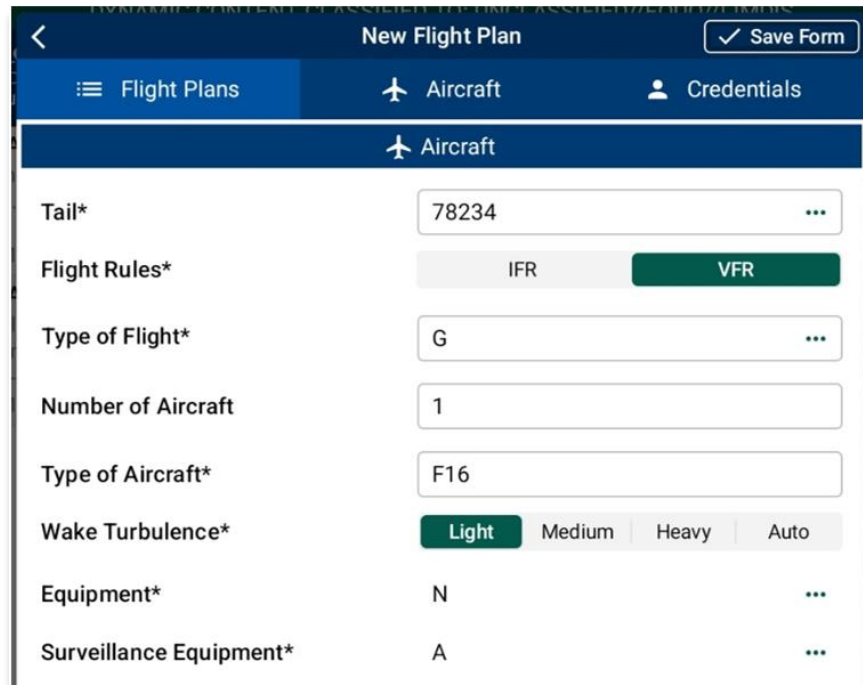

The screenshot shows the 'New Flight Plan' form in the Aero App. The form is titled 'New Flight Plan' and has a 'Save Form' button in the top right corner. The form is divided into two sections: 'Flight Plans' and 'Aircraft'. The 'Aircraft' section is currently active. The form contains the following fields and options:

- Tail\***: Text input field with the value '78234' and a dropdown arrow.
- Flight Rules\***: Radio button group with 'IFR' and 'VFR' options. 'VFR' is selected.
- Type of Flight\***: Text input field with the value 'G' and a dropdown arrow.
- Number of Aircraft**: Text input field with the value '1'.
- Type of Aircraft\***: Text input field with the value 'F16'.
- Wake Turbulence\***: Radio button group with 'Light', 'Medium', 'Heavy', and 'Auto' options. 'Light' is selected.
- Equipment\***: Text input field with the value 'N' and a dropdown arrow.
- Surveillance Equipment\***: Text input field with the value 'A' and a dropdown arrow.

13. To permanently remove the flight plan from Aero App, tap **Delete**.
14. The Delete Flight Plan popup confirmation will be displayed. Tap **Delete Flight Plan** to confirm action.
15. Tap outside of the popup to cancel the action.

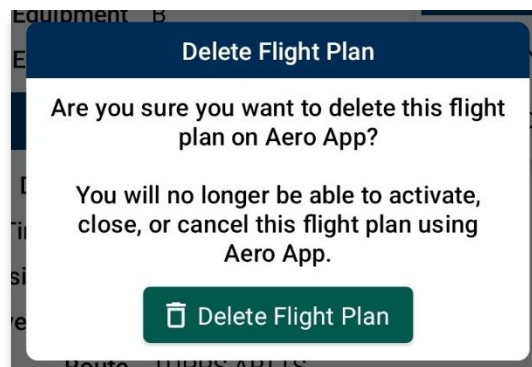

### 14.1.3.4 Show

The Show menu offers the following options and will be further elaborated in the sections below:

- Doghouses
- Dropped Pins
- Dropped Hazards
- Point Shapes
- Routes
- User Waypoints
- Route Line Transparency

#### 14.1.3.4.1 Doghouses

Doghouses display route information such as the next point, heading, distance, time (MM+SS), and time ahead/behind/on schedule in order from top to bottom. Doghouses can display when entering Airports, Coordinates, MGRS, GARS, and Radial Off NavAids.

Once the Doghouses feature is enabled, doghouses will appear on the Map for each segment between points. The doghouses disappear when the ownship reaches the most advanced point of each segment.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Tap **Show** from the side menu.
4. Tap **Doghouses**.
5. From the *Doghouses* popup, enable **Show Doghouses**.
6. Tap on the **Time on Target** time selection and scroll through the time format until desired time is met using the format of hh:mm:ss.

7. Tap on the **Groundspeed** text box and enter your groundspeed in knots.

**Doghouses**

Show Doghouses On — Enable Doghouses

Time on Target 16:30:30z

Groundspeed

Estimated Time of Departure 15:58:27z — ETD in Zulu time

| Waypoint | ETE      | ETA       |
|----------|----------|-----------|
| FEYFO    | 00:11:02 | 16:09:29z |
| FL47     | 00:12:53 | 16:22:22z |
| PBI      | 00:08:08 | 16:30:30z |



**NOTE:** Entering a decimal number in the Groundspeed field will prompt an error message stating that the number will be rounded.

8. The Estimated Time of Departure (ETD) will adjust based on the entered values in Time on Target and Groundspeed fields. Your ETD will be calculated in Zulu time.

9. Tap outside of the Doghouses popup and Doghouses will populate the Map.



**NOTE:** Users may need to zoom in at least 40 miles to view Doghouses.



**NOTE:** If users are behind, ahead, or on schedule, the field below your fixed time will display the calculated difference of the time that was entered for your set time following the format **+/- {Minutes}m{Seconds}s**. If the calculated differences are an hour behind or ahead, the format will be **> + {Hours}h** or **> - {Hours}h**. If the user is on schedule, it will display **"0"**.

#### 14.1.3.4.1.1 Edit Doghouses

Users can adjust their time on target and groundspeed. The fields such as your fixed time, ETA/ETE, and the calculated differences will automatically update with the new values.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Show** from the side menu.
4. Tap **Doghouses**.
5. From the Doghouses popup, tap the **Time on Target** time selection and scroll through the time format until the new desired time is met using the format of hh:mm:ss.
6. Tap on the **Groundspeed** text field and enter your new groundspeed in knots.

The screenshot shows the 'Doghouses' popup menu. At the top, there is a back arrow and the title 'Doghouses'. Below this, there are two settings: 'Show Doghouses' with a toggle switch set to 'On', and 'Time on Target' with a value of '16:30:30z'. Below these is a 'Groundspeed' field with a value of '50'. Underneath is the 'Estimated Time of Departure' field showing '15:39:11z'. At the bottom, there is a table with three columns: 'Waypoint', 'ETE', and 'ETA'. The table contains three rows of data: FEYFO, FL47, and PBI.

| Waypoint | ETE      | ETA       |
|----------|----------|-----------|
| FEYFO    | 00:17:40 | 15:56:51z |
| FL47     | 00:20:38 | 16:17:29z |
| PBI      | 00:13:01 | 16:30:30z |

— New Time on Target

— New Groundspeed in knots

7. The Estimated Time of Departure will adjust based on the entered values in the Time on Target and Groundspeed fields.
8. Tap outside of the Doghouses popup and the ETE and ETA will recalculate based on the adjusted time and groundspeed.



**NOTE:** Alternatively, users can tap on the Doghouses displayed on the Map to view the Doghouses popup.




#### 14.1.3.4.2 Dropped Pins

Dropped Pins is a collection of pins that were dropped by users. Each marked area contains information regarding the pin such as its ID, Name, Latitude, Longitude, Magnetic Variance, From Ownship, Source, Notes, and any associated attachments.

To drop new pins, refer to [Section 14.4.12.1.3](#) for additional information.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Show** from the side menu.
4. Tap **Dropped Pins**.
5. A collection of dropped pins will appear. Tap on desired pin.
6. Dropped Pins popup will display information pertaining to the selected pin.

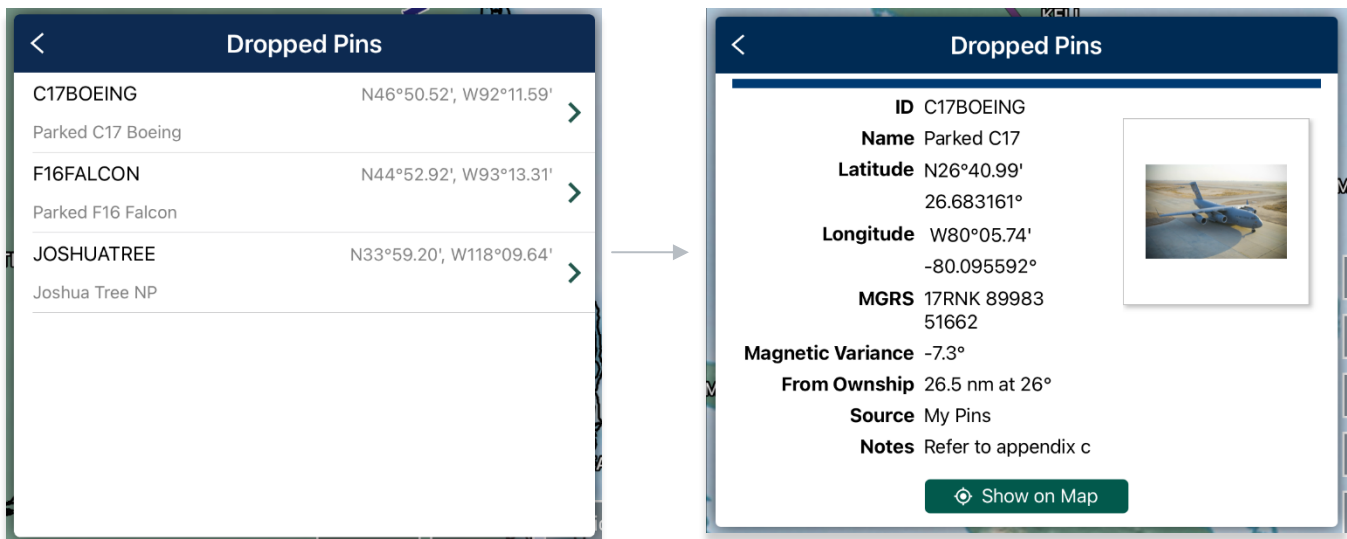

7. Tap **Show on Map** and the map view will pan to the location of the dropped pin.



**NOTE:** To view the dropped pins on the Map, users must enable Pins from the Overlays menu. Refer to [Section 14.4.5.2.1.19](#) for additional information. This is exclusive to Pin. Refer to [Section 14.4.5.2.1.26](#) for Photo Pins.




**NOTE:** Users can add pins to their route. Refer to [Section 14.4.12.1.3.2.1](#) for additional information.

### 14.1.3.4.3 Dropped Hazards

Dropped Hazards is a collection of hazards that were dropped by users. Tapping a hazard on the Dropped Hazards list will display information such as its ID (auto-generated by Aero App), Name, Latitude, Longitude, Radius, Alert on Intersection, Magnetic Variance, Source, and Notes.

Aero App enables users to drop a new hazard directly from the Dropped Hazards screen. Tap **+ New** and follow the prompts. Refer to [Section 14.4.12.1.4](#) for additional information.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Show** from the side menu.
4. Tap **Dropped Hazards**.
5. A collection of dropped hazards will appear. Tap on desired hazard.

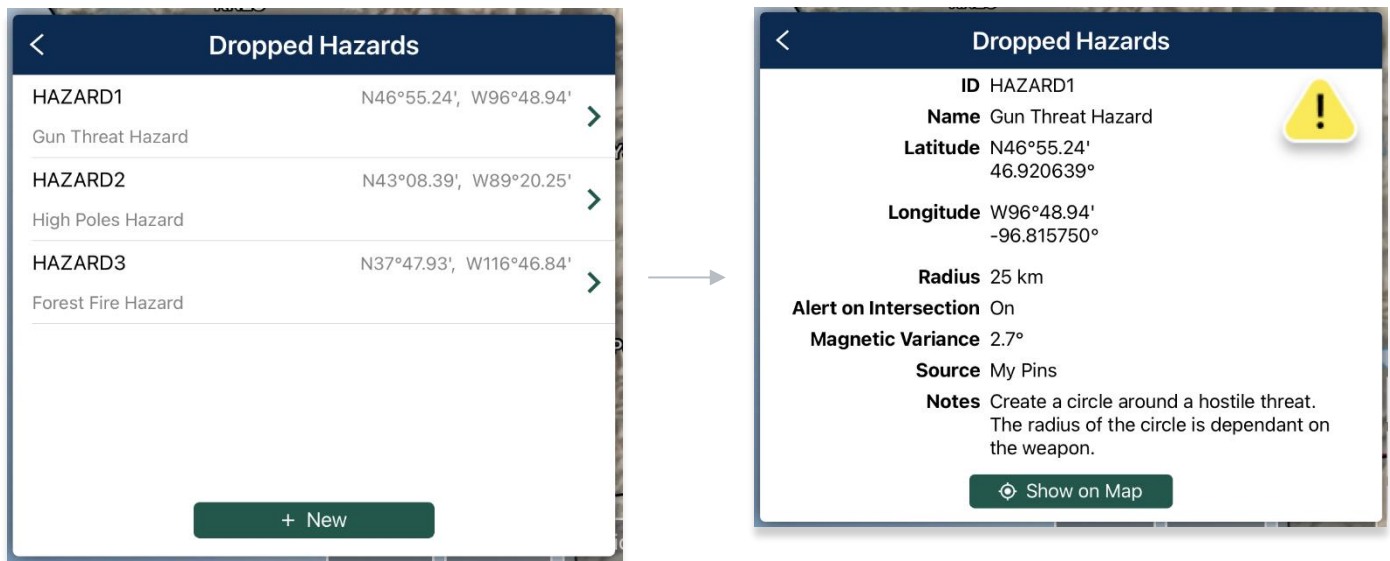

6. Tap **Show on Map** and the map view will pan to the location of the dropped hazard.



**NOTE:** To view dropped hazards on the Map, users must enable Hazards from the Overlays menu. Refer to [Section 14.4.5.2.1.13](#) for additional information.

#### 14.1.3.4.4 Point Shapes

Aero App offers Point Shapes which are used to track individual points of the pilot's flight path. Point shapes include triangles, squares, and circles, respective to the number of points that pilots have in their current route.

The following scenarios are displayed below:

- **6 or more points:** The first and last points display triangles, second and second to last points display squares, and points between the second and second to last points display circles.
- **3-4 points:** The first and last points display triangles, second and second to last points display squares, and no circles will display.
- **1-2 points:** The first and last points display triangles, and no squares or circles will display.


1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Show** from the side menu.
4. Tap **Point Shapes** to enable the option.
5. The respective point shapes will appear on the Map.



#### 14.1.3.4.5 Routes

The Routes feature displays a collection of imported routes including CRD, JSON, and KML/KMZ files, and routes saved directly on Aero App to display on the Map. Multiple routes can simultaneously be displayed on the Map.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Show** from the side menu.
4. Tap **Routes**.
5. A list of saved routes will be shown below. Tap to enable the desired route to display on the Map. The enabled route will move to the top of the Show Routes list.

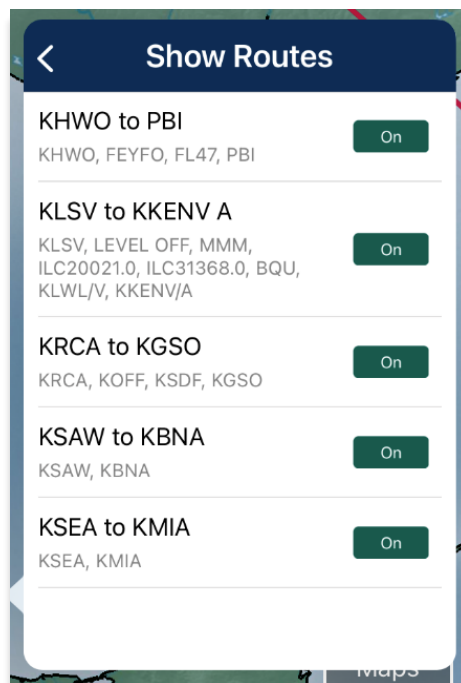

**NOTE:** Selecting a route file that exceeds the 200 KB limit will trigger an error message.

6. Multiple routes can be simultaneously shown on the Map, displayed in different colors. If you have a current route in the route panel, the route will show in a magenta line.






#### 14.1.3.4.6 User Waypoints

User Waypoints are a collection of waypoints that were created by users through Aero App. Each waypoint contains information such as its ID, Name, Latitude, and Longitude.

Aero App enables users to create User Waypoints directly from the User Waypoints screen. Tap **+ New** and follow the prompts. Refer to [Section 14.4.12.1.1](#) for additional information. Alternatively, users can sideload User Waypoints. Refer to [Section 11.4](#) for additional information.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Show** from the side menu.
4. Tap **User Waypoints**. A list of User Waypoints will be shown.

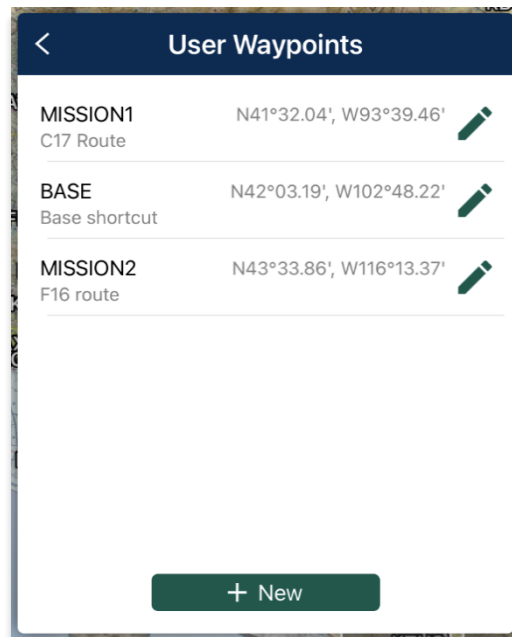

Aero App allows users to modify their user waypoints directly on the User Waypoints view.


5. Tap on the **pencil icon** of the user waypoint that you wish to modify.
6. Tap on the field that you wish to change and enter new values.
7. Tap **Save** and your changes will be saved.

#### 14.1.3.4.7 Route Line Transparency

Route Line Transparency allows users to adjust the translucency of their flight path displayed on the Map view.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Tap **Route Manager**.
3. Select **Show** from the side menu.
4. Navigate to the Route Line Transparency slider.
5. By default, the Route Line Transparency value is set to 50%. Drag the slider to adjust the route transparency to any value between 20% to 100%.

Transparency value of 20%

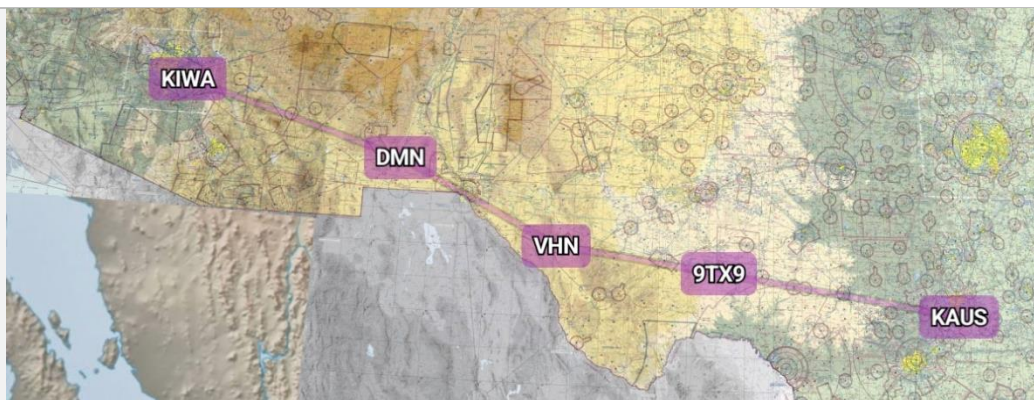


Transparency value of 100%



## 14.2 Search

Search (search icon) is located on the Main Menu. Users can search by identifier (i.e., Airport, Waypoint, User Waypoint, or Pins) or its search term. Users can filter airports by setting a minimum runway length in their Settings. Once an identifier or search term has been selected, it will become the Active Point. Options such as the identifier overview, diagrams, charts, weather, and other supporting sources are available to view.

1. Tap **Search** on the **Main Menu**.
2. The Search popup will appear. Tap the **text box** to open your device's keyboard.
3. Enter an identifier (i.e., Airport, Waypoint, User Waypoint, or Pins) or search term.
4. The search results are divided into identifier types. Select from Airports, NavAids, Waypoints, User Waypoints, or Pins.

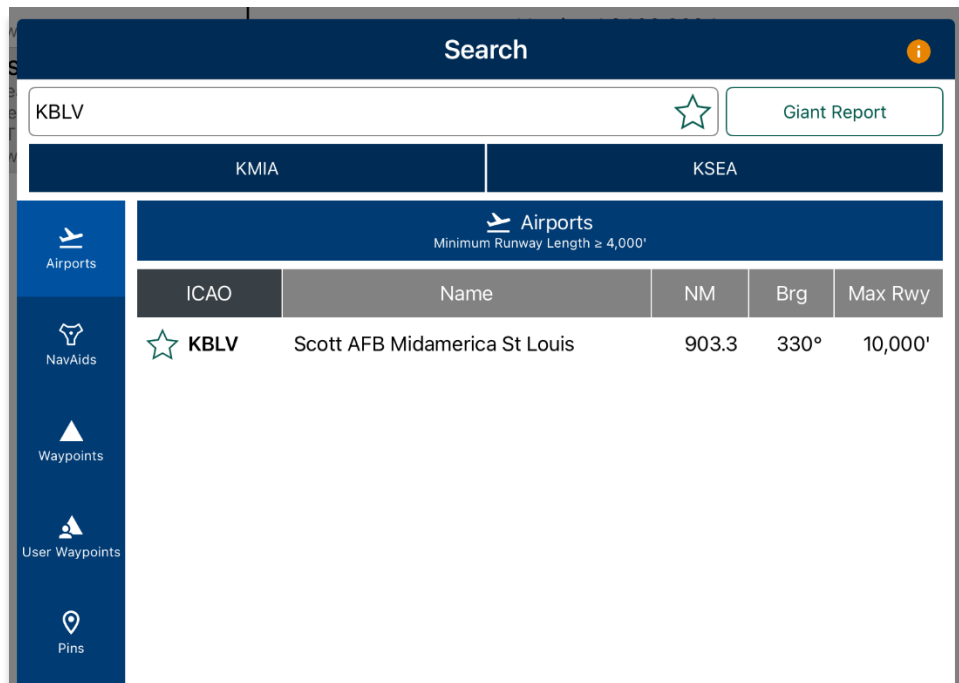


**NOTE:** The Search view will display the most recent five searches, excluding NavAids and Waypoints.



### 14.2.1 Giant Report

Aero App allows users to search an airport's Giant Report. Giant Report data must be downloaded and active to view the PDF.


1. Tap the **Giant Report** button to enable the option.
2. Enter desired identifier or search term in the search text field.
3. Select desired airport. The Giant Report document will open.

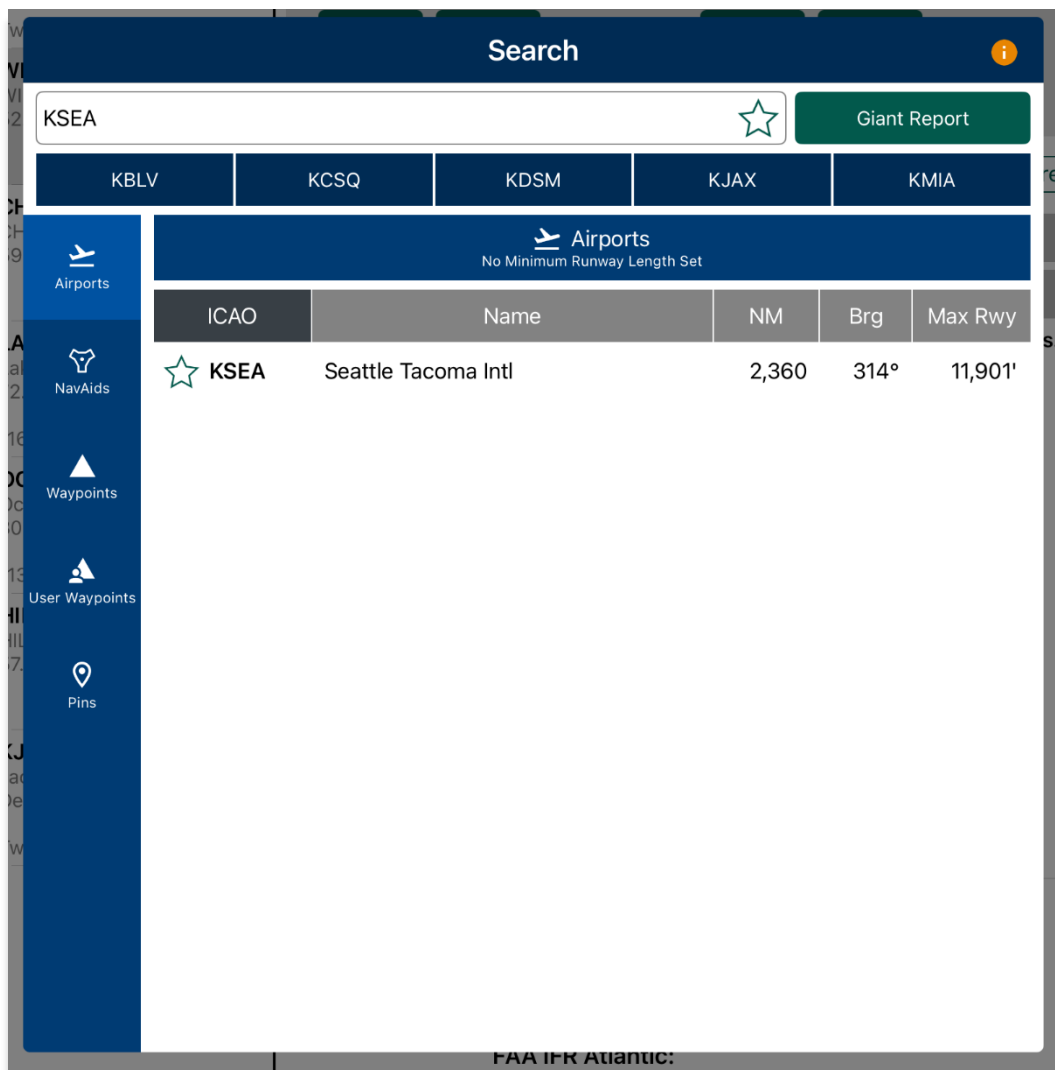

### 14.2.2 Add an Identifier to Favorites

Aero App enables users to add identifiers such as Airports, NavAids, and Waypoints to their *Favorites* list.


1. Enter a desired identifier in the search text field.
2. After three characters are entered, an auto search will begin. Locate desired identifier that you wish to add to *Favorites*.
3. Tap the **Star** located next to the identifier; the Star will convert to green.
4. To remove an identifier from *Favorites*, tap the **Star** for the second time and the identifier will be removed from *Favorites*.
5. To view all identifiers marked as favorite, remove all characters from the search box then tap the **Star**. The Favorites list will display respective to the identifier type that was selected (e.g., Airports, NavAids, and Waypoints).

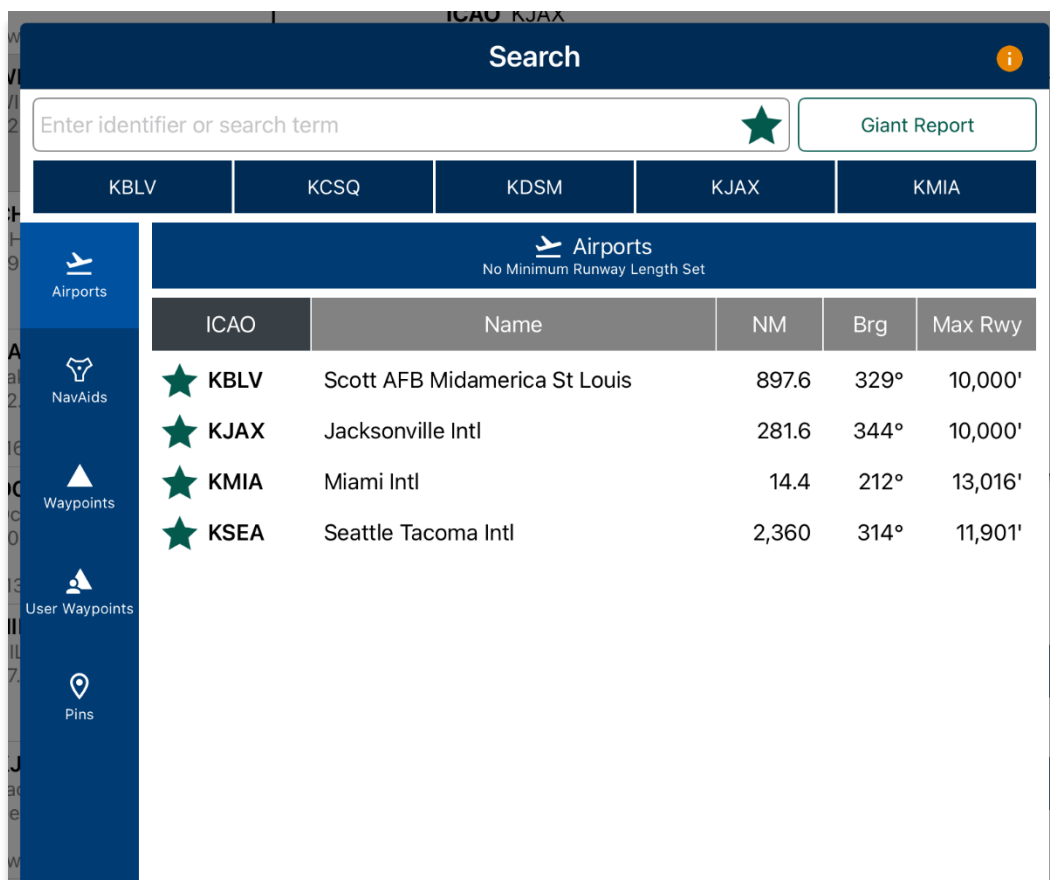

**NOTE:** Users can add their desired identifiers to *Favorites* directly from the Add to Route feature, Active Point search, or Move Map to Location features.

## 14.3 Active Point

The Active Point is located on the Main Menu and is activated once an identifier or search term is searched. When conducting an ICAO search, a drop-down menu will display, offering options to view airport Info, APD, IAP, Dep, Arr, Min, Wx, and other relevant charts and documents corresponding to the ICAO being searched.

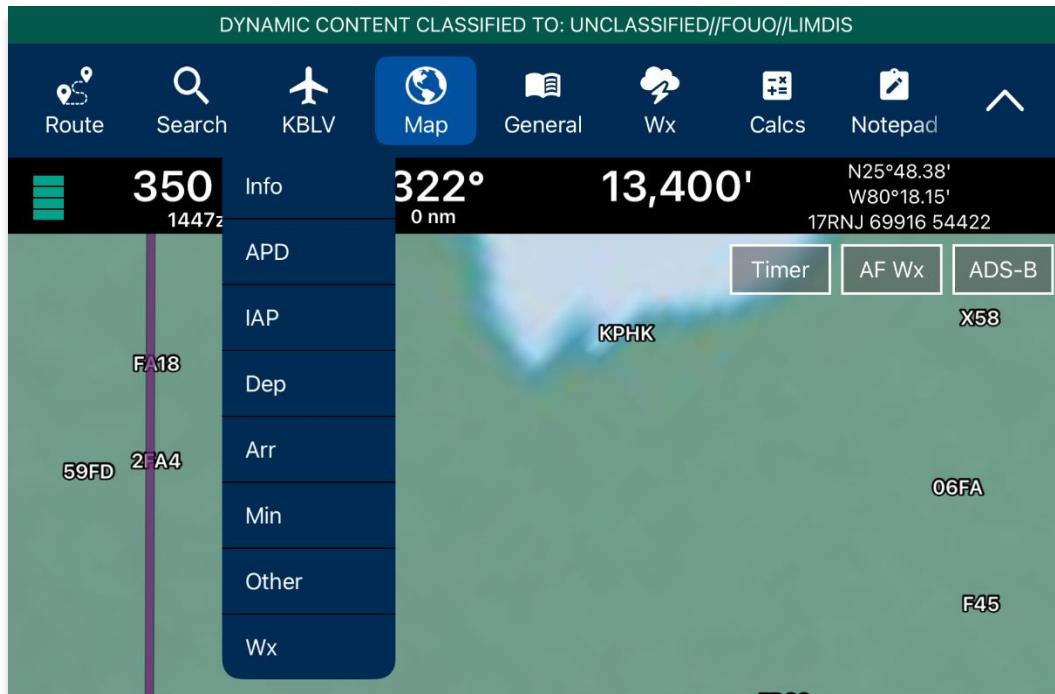

### 14.3.1 Identifier Information

The Info submenu displays detailed airport information of the searched airport. Airport information includes General Information, AQPs, Communications, Runways, and Remarks. The Airport Diagram, Chart Supplement, Giant Report, and Host Nation options are in the General Information section.

When searching for NavAids, users can access general information about NavAids. Similarly, other identifiers such as Waypoints, User Waypoints, and Pins contain relevant identifier information. Global is required to access identifier information.

The Info page can be viewed in various locations within Aero App. Users can tap the Active Point on the Main Menu or the Route Panel, or by simply pressing a point on the Map view.

**General Information** contains the identifier summary such as the ICAO, name, location, region, elevation, latitude, longitude, magnetic variance, and more. The General Information section may include accessibility to Airport Diagram, Chart Supplement, Giant Report, and Host Nation, respective to the entered identifier. To view charts and Giant Report data, users must download the respective region files, Global, and Giant Report data.


General Information

|                          |                                       |
|--------------------------|---------------------------------------|
| <b>ICAO</b>              | KBLV                                  |
| <b>Name</b>              | Scott AFB Midamerica St Louis         |
| <b>Location</b>          | Belleville, Illinois<br>United States |
| <b>Region</b>            | CONUS                                 |
| <b>Elevation</b>         | 459'                                  |
| <b>Latitude</b>          | N38°32.71'<br>38.545178°              |
| <b>Longitude</b>         | W89°50.11'<br>-89.835211°             |
| <b>Magnetic Variance</b> | -2.2°                                 |
| <b>Rot Beacon</b>        | Yes                                   |
| <b>Arresting Gear</b>    | No                                    |
| <b>Chart Supplement</b>  | Yes                                   |
| <b>In DAFIF</b>          | Yes                                   |
| <b>Giant Report</b>      | Yes (2024-03-10)                      |

Chart Supplement

Giant Report

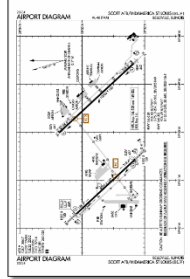

Host Nation



**Airport Qualification Program (AQP)** is available for select airports.

AQP

Mountainous terrain

**Communications** includes tower frequencies, remarks, and call signs for the selected airport.

Communications

|                   |                                   |
|-------------------|-----------------------------------|
| 126 ARW COMD POST | 138.55, 277.7                     |
| 375 AMW COMD POST | 139.9, 349.4                      |
| ATIS              | 128.7, 256.7<br>Opr 1200-0600Z++. |
| CLNC DEL          | 119.875, 263.025                  |
| GND               | 119.2, 275.8                      |

**Runways** contain airport runway information such as the runway dimensions, surface, condition, PNC, LCN, and more.

| Runways           |                                                           |                  |                                |
|-------------------|-----------------------------------------------------------|------------------|--------------------------------|
| Runway 14L/32R    |                                                           |                  |                                |
| <b>Dimensions</b> | 10,000' x 150'                                            |                  |                                |
| <b>Surface</b>    | Concrete                                                  |                  |                                |
| <b>Condition</b>  | Good                                                      |                  |                                |
| <b>PCN</b>        | 82                                                        |                  |                                |
| <b>LCN</b>        | 108                                                       |                  |                                |
| Runway 14L        |                                                           | Runway 32R       |                                |
| <b>Heading</b>    | 138.0° magnetic<br>136.6° true                            | <b>Heading</b>   | 318.0° magnetic<br>316.6° true |
| <b>TDZE</b>       | 442'                                                      | <b>TDZE</b>      | 442'                           |
| <b>Latitude</b>   | N38°33.37'<br>38.556197°                                  | <b>Latitude</b>  | N38°32.18'<br>38.536261°       |
| <b>Longitude</b>  | W89°50.01'<br>-89.833494°                                 | <b>Longitude</b> | W89°48.57'<br>-89.809456°      |
| Runway 14R/32L    |                                                           |                  |                                |
| <b>Dimensions</b> | 8,006' x 150'                                             |                  |                                |
| <b>Surface</b>    | Part concrete, part asphalt or part bitumen-bound macadam |                  |                                |
| <b>Condition</b>  | Good                                                      |                  |                                |


**Remarks** provides airport conditions, fuel type, and other cautionary advice.

| Remarks                                                                                                                                                                                                                                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>CAUTION</b><br>Dense civ air tfc all quad, all alt. Unexpected bumps occur on Twy G btn rwys when crossing bridges and tunnels. Use min speed when opr in area. Use caution when utilizing Twy G, 0.25 NM E of Rwy 14R-32L int, grad chg of 3° and a 70° turnpresent. On coming tfc may not be vis due to terrain. Bird and wildlife haz. |
| <b>CSTM/AG/IMG NAV</b><br>CSTMS avbl. Ctc base OPS 72 hrs prior to exp arr to coord. Civ acft must be cleared by US CSTMS if given a min 72 hr ntc prior to acft arr.                                                                                                                                                                        |
| <b>FLUID</b><br>SP(Mil) PRESAIR(Mil) LHOX(Mil) LOX(Mil)                                                                                                                                                                                                                                                                                      |
| <b>FUEL</b><br>A++(Mil) 100LL A+; Scott AFB fuel svc avbl 1100-0500Z++, OT rqr 1 hr PN.                                                                                                                                                                                                                                                      |
| <b>JASU</b><br>6(A/M32A-86) 3(AM32-95)                                                                                                                                                                                                                                                                                                       |
| <b>LGT</b><br>Train track lctd approx 1650' fr displ thld of Rwy 32L; Rwy 32L APP lgt interrupted by passing train.                                                                                                                                                                                                                          |


### 14.3.1.1 Download Host Nation Charts

Users are required to possess an ASPS account to utilize the Host Nation feature. Users must log in to their ASPS account to download charts. Refer to [Section 6.4](#) for additional information.


1. Search for an airport of choice.
2. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
3. Select **Info**.
4. Tap **Host Nation** in the *General Information* section.

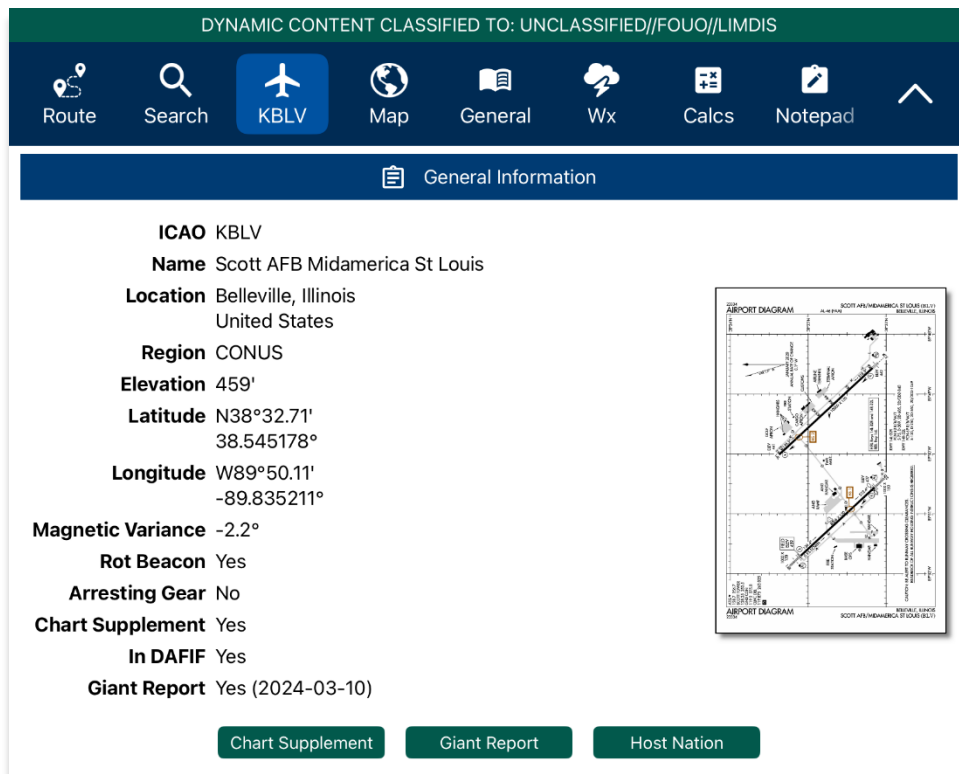

5. Log in with your ASPS credentials.
6. Once credentials are entered, the Host Nation chart for your airport of choice will begin to download.

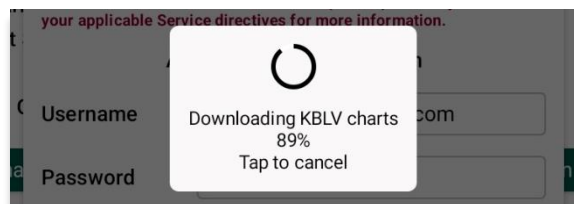

7. Once the download is complete, the screen will switch to the chart view. Tap on the blue ribbon located at the top of the screen.
8. The chart selection popup will appear. Select desired chart to display.

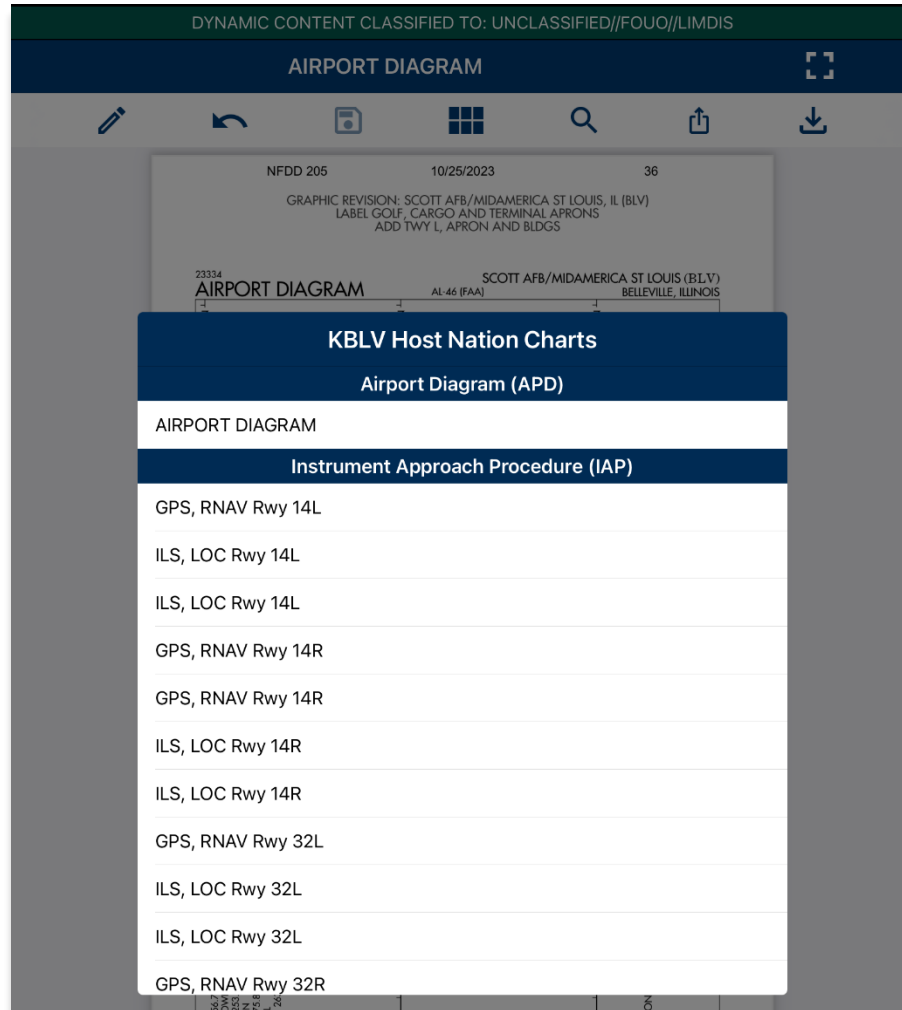

9. Users have the option to redownload the charts to view the latest version by tapping the download button.



**NOTE:** Host Nation downloaded charts can be managed through Aero App's File Manager.




**NOTE:** The downloaded Host Nation charts can be viewed on the Host Nation page.


### 14.3.2 Airport Chart Options

Users can view Airport charts including Airport Diagram (APD), Instrument Approach Procedure (IAP), Departure Procedure (Dep), Arrival Procedure (Arr), Alternate Minimums/ RADAR Minimums/ Takeoff Minimums (Min), Other – which includes special procedures and RNAVs among others, and Host Nation charts. Tap the Active Point Menu to display additional airport options.


1. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
2. Select desired chart type. The selected chart will display.
3. Tap on the **ribbon** to display the full list of available chart options.

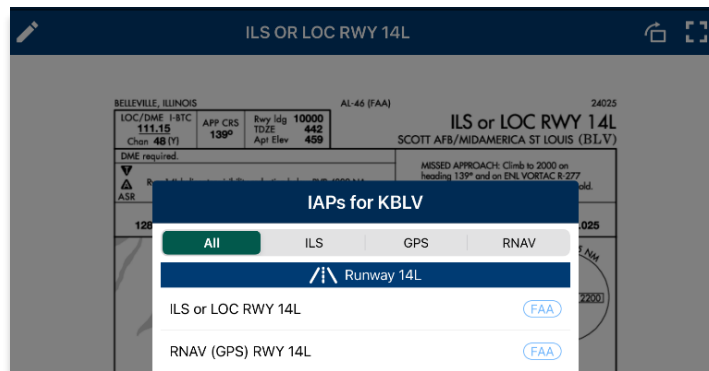

Airport Diagram (APD)

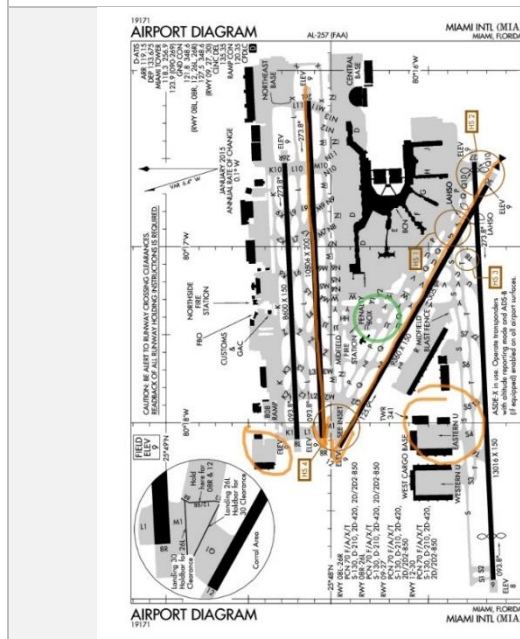

Instrument Approach Procedures (IAPs)

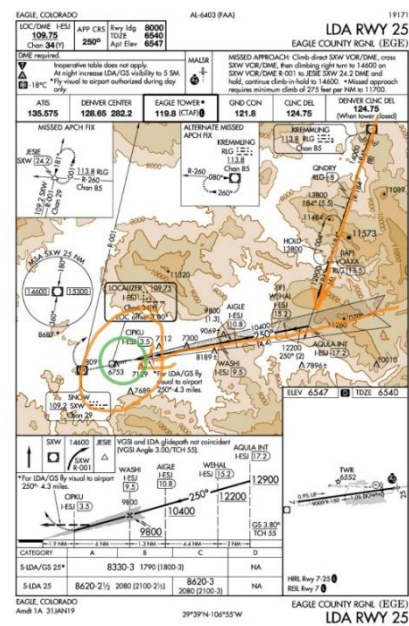



### 14.3.2.1 Draw on Airport Diagram (APD) and Instrument Approach Procedure (IAP) Charts

The Draw on APD and IAP feature allows you to freely make markings on your desired chart(s) to highlight a specific location or element.

1. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
2. Select **APD** or **IAP** and selected airport chart will display.
3. Tap the **pencil icon** on the top left of the view to activate the drawing tool. The pencil icon will be replaced with the following options to make edits to your annotations:
  - **CLEAR** – erases all markings on the selected chart
  - **UNDO** – reverses the previous markings on the selected chart
  - **EXIT** – exits out of the drawing tool
4. To rotate the chart clockwise, tap the **rotate** button on the top right of the view.
5. To view the chart in full screen, tap the **expand view** button to the right of the rotate button.



**NOTE:** Drawings on Charts persist across cycles for six months.



**NOTE:** The Draw on Chart feature is only available for Airport Diagrams and Instrument Approach Procedures.





### Alternate/ RADAR/ Takeoff Minimums

Other

# A ALTERNATE MINS

22307

M3

21224

## RNAV DEPARTURE AAUP

AL-257 (FAA)

MIAMI INTL (MIA)

MIAMI, FLORIDA

NAME ALTERNATE MINIMUMS

### SAN JUAN, PR

LUIS MUNOZ  
MARIN INTL (SUJ) (TJSJ).....ILS or LOC Rwy 6<sup>12</sup>  
ILS or LOC Rwy 13<sup>12</sup>  
NDB Rwy 6<sup>14</sup>  
RNAV (GPS) Rwy 6<sup>14</sup>  
RNAV (GPS) Rwy 10<sup>14</sup>  
RNAV (GPS) Rwy 26<sup>14</sup>  
RNAV (GPS) Rwy 28<sup>14</sup>  
VOR or TACAN Rwy 6<sup>14</sup>  
VOR or TACAN Rwy 10<sup>13</sup>  
VOR or TACAN Rwy 26<sup>13</sup>

<sup>1</sup>ILS, LOC, Category D, 1000-3.

<sup>2</sup>NA when local weather not available.

<sup>3</sup>ILS, LOC, Category D, E, 1000-3.

<sup>4</sup>Category D, E, 1000-3.

### SARASOTA/BRADENTON, FL

SARASOTA/BRADENTON  
INTL (SRQ).....ILS or LOC Rwy 14  
ILS or LOC Rwy 32  
NA when control tower closed.

### SEBRING, FL

SEBRING RGNL (SEF).....RNAV (GPS) Rwy 14<sup>1</sup>  
RNAV (GPS) Rwy 32  
Category D, 900-2½.  
<sup>2</sup>NA when local weather not available.

### STUART, FL

WITHAM FLD (SUA).....RNAV (GPS) Rwy 30  
NA when local weather not available.

### TALLAHASSEE, FL

TALLAHASSEE  
INTL (TLH).....ILS or LOC Rwy 12<sup>12</sup>  
ILS or LOC Rwy 36<sup>12</sup>  
RADAR-1<sup>1</sup>  
RNAV (GPS) Rwy 9<sup>14</sup>  
RNAV (GPS) Rwy 18<sup>14</sup>  
RNAV (GPS) Rwy 27<sup>14</sup>  
RNAV (GPS) Rwy 36<sup>14</sup>  
VOR/OME or TACAN Rwy 36<sup>14</sup>  
VOR Rwy 18<sup>14</sup>

<sup>1</sup>NA when control tower closed.

<sup>2</sup>ILS, Categories A, B, C, 800-2½; Category D,

800-2½; Category E, 1000-3; LOC, Category D,

800-2½; Category E, 1000-3.

<sup>3</sup>ILS, Category D, 700-2½; LOC, Category D,

800-2½.

<sup>4</sup>Category D, 800-2½.

<sup>5</sup>Category D, 800-2½; Category E, 1000-3.

<sup>6</sup>NA when local weather not available.

NAME ALTERNATE MINIMUMS

### TAMPA, FL

PETER O  
KNIGHT (TPF).....RNAV (GPS) Rwy 22  
RNAV (GPS) Rwy 36  
NA when local weather not available.

TAMPA EXEC (VDF).....ILS or LOC Rwy 23<sup>1</sup>  
RNAV (GPS) Rwy 5<sup>2</sup>  
RNAV (GPS) Rwy 18  
RNAV (GPS) Rwy 23<sup>2</sup>

<sup>1</sup>NA when local weather not available.

<sup>2</sup>LOC, Category C, 800-2½.

<sup>3</sup>Category C, 800-2½.

TAMPA INTL (TPA).....ILS or LOC Rwy 1L<sup>1</sup>  
ILS or LOC Rwy 19L<sup>2</sup>  
ILS or LOC Rwy 19R<sup>1</sup>  
LOC Rwy 1R<sup>1</sup>  
RNAV (GPS) Rwy 1L<sup>14</sup>  
RNAV (GPS) Rwy 1R<sup>14</sup>  
RNAV (GPS) Rwy 10<sup>14</sup>  
RNAV (GPS) Rwy 19R<sup>14</sup>  
RNAV (GPS) Rwy 28<sup>14</sup>  
RNAV (GPS) Z Rwy 19L<sup>14</sup>

<sup>1</sup>ILS, Category C, 700-2; Categories D, E,

1000-3; LOC Categories D, E, 1000-3.

<sup>2</sup>ILS, Category C, 700-2; Category D, 1000-3;

LOC Category D, 1000-3.

<sup>3</sup>Categories A, B, 1300-2; Categories C, D, 1300-3.

<sup>4</sup>Category D, E, 1000-3.

<sup>5</sup>Category D, 1000-3.

### TITUSVILLE, FL

SPACE FLORIDA LAUNCH AND LANDING  
FACILITY (TTS).....RNAV (GPS) Rwy 15<sup>1</sup>  
RNAV (GPS) Rwy 33<sup>12</sup>  
<sup>2</sup>NA when local weather not available.

<sup>3</sup>Categories D, E, 1000-3.

<sup>4</sup>Category C, 1000-2½; Category D, E, 1000-3.

### SPACE COAST

RGNL (TX).....ILS or LOC Rwy 36<sup>1</sup>  
RNAV (GPS) Rwy 9<sup>1</sup>  
RNAV (GPS) Y Rwy 18<sup>1</sup>  
RNAV (GPS) Z Rwy 18<sup>1</sup>  
RNAV (GPS) Rwy 36<sup>1</sup>

<sup>1</sup>NA when local weather not available.

<sup>2</sup>Categories D, E, 1000-3.

<sup>3</sup>Category C, 1000-2½; Category D, E, 1000-3.

### VENICE, FL

VENICE MUNI (VNC).....RNAV (GPS) Rwy 5  
RNAV (GPS) Rwy 13  
RNAV (GPS) Rwy 23  
RNAV (GPS) Rwy 31  
NA when local weather not available.

<sup>1</sup>NA when local weather not available.

<sup>2</sup>NA when control tower closed.

### VENICE, FL

VENICE MUNI (





**NOTE:** The Min tab includes Alternate, RADAR, and Takeoff Minimums to select from.

| Host Nation |
|-------------|
|-------------|

| EFFECTIVE UPON PUBLICATION UNLESS OTHERWISE NOTED BY AN EFFECTIVE DATE |                                  |             |               |
|------------------------------------------------------------------------|----------------------------------|-------------|---------------|
| NFDD #:                                                                | 210 - 12                         |             |               |
| NFDD Date:                                                             | 30 OCT 2018                      |             |               |
| City, State                                                            | BELLEVILLE, ILLINOIS             |             |               |
| Air/Field Info:                                                        | SCOTT AFB/MIDAMERICA - (04413.A) |             |               |
| Ident:                                                                 | BLV                              |             |               |
| Data                                                                   |                                  |             |               |
| LATITUDE -                                                             | 38-32-42.6 N                     | LONGITUDE - | 089-50-06.7 W |
| USER JEE ARPT                                                          | YES                              |             | ACCID         |

Page 1 out of 1

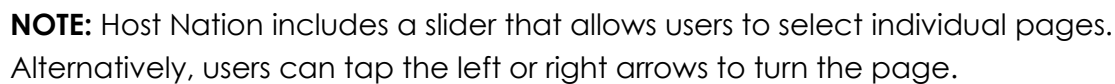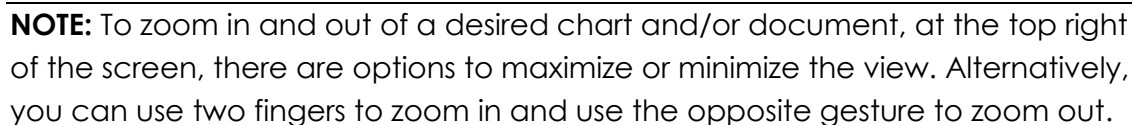

### 14.3.4 Weather and Potential Hazard Information

An internet connection is required to view weather and potential flight hazard information for the selected airport. The Wx menu offers the following options and will be further elaborated in the sections below.

- Internet
- METARs
- TAFs
- Winds
- Temps
- PIREPs
- NOTAMs


#### 14.3.4.1 Internet

The Internet section allows users to retrieve METARs and Terminal Aerodrome Forecasts (TAFs) information. A NOTAMs button is available, which redirects users to the NOTAMs website.

##### 14.3.4.1.1 METARs and Terminal Aerodrome Forecasts (TAFs)

Aero App displays METARs and Terminal Aerodrome Forecasts (TAFs) information from Aviation Digital Data Service.

1. Search for an airport of choice.
2. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
3. Select **Wx**.
4. Select **Internet** from the side menu, if necessary.
5. Select **METARs & TAFs** to view information for the selected airport.

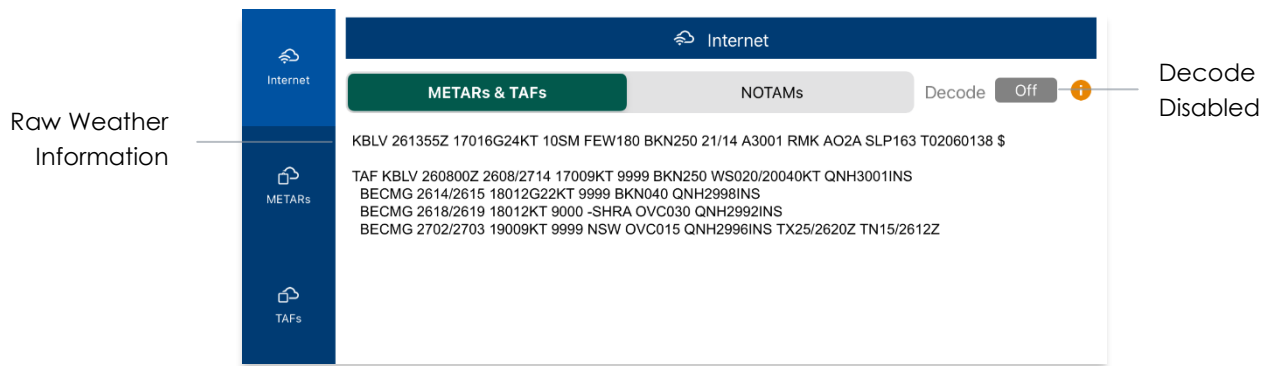

6. Tap the **Decode** button to enable the option. Users can view raw or decoded weather information for the selected airport.

Decoded Weather Information

The screenshot shows a mobile application interface for weather data. On the left is a dark blue sidebar with icons and labels for 'Internet', 'METARs', 'TAFs', 'Winds', 'Temps', 'PIREPs', and 'NOTAMs'. The main content area has a top bar with 'Internet' and a toggle for 'Decode' set to 'On'. Below this are two tabs: 'METARs & TAFs' (active) and 'NOTAMs'. The 'METARs & TAFs' section displays two types of weather reports for KBLV (Belleville/Scott AFB, IL, US) on October 26, 2023. The first is a METAR report observed at 1355 UTC, and the second is a TAF forecast issued at 0800 UTC. Both reports include details on temperature, dewpoint, altimeter, sea level pressure, winds, visibility, ceiling, and cloud conditions. An information icon (i) is located to the right of the 'Decode On' toggle.

Internet

METARs & TAFs NOTAMs Decode On

METAR for KBLV (Belleville/Scott AFB, IL, US) observed at 1355 UTC 26 Oct 2023  
Text: KBLV 261355Z 17016G24KT 10SM FEW180 BKN250 21/14 A3001 RMK AO2A SLP163 T02060138 \$  
Temperature: 20.6C (69.1 F)  
Dewpoint: 13.8C (56.8 F)  
Altimeter: 30.01 inches Hg (1016.3 mb)  
Sea level pressure: 1016.3 mb  
Winds: from 170 degrees at 16 knots gusting to 24 knots  
Visibility: 10+ sm  
Ceiling: 25000 feet AGL  
Clouds: few clouds at 18000 feet AGL, broken clouds at 25000 feet AGL


TAF for: KBLV (Belleville/Scott AFB, IL, US) issued at 0800 UTC 26 Oct 2023  
Text: TAF KBLV 260800Z 2608/2714 17009KT 9999 BKN250 WS020/20040KT QNH3001INS  
Forecast period: 0800 UTC 26 Oct 2023 to 1400 UTC 26 Oct 2023  
Forecast type: FM  
Winds: from 170 degrees at 9 knots  
Visibility: 6 or more sm (10+ km)  
Ceiling: 25000 feet AGL  
Clouds: broken clouds at 25000 feet AGL  
Text: BECMG 2614/2615 18012G22KT 9999 BKN040 QNH2998INS  
Forecast period: 1400 UTC 26 Oct 2023 to 1800 UTC 26 Oct 2023  
Forecast type: BECMG  
Winds: from 180 degrees at 12 knots gusting to 22 knots  
Visibility: 6 or more sm (10+ km)  
Ceiling: 4000 feet AGL  
Clouds: broken clouds at 4000 feet AGL  
Text: BECMG 2618/2619 18012KT 9000 -SHRA OVC030 QNH2992INS  
Forecast period: 1800 UTC 26 Oct 2023 to 0200 UTC 27 Oct 2023  
Forecast type: BECMG  
Winds: from 180 degrees at 12 knots  
Visibility: 6 sm (9 km)  
Ceiling: 3000 feet AGL  
Clouds: overcast cloud deck at 3000 feet AGL  
Weather: -SHRA (light rain showers)  
Text: BECMG 2702/2703 19009KT 9999 NSW OVC015 QNH2996INS TX25/2620Z TN15/2612Z  
Forecast period: 0200 UTC 27 Oct 2023 to 1400 UTC 27 Oct 2023  
Forecast type: BECMG  
Winds: from 190 degrees at 9 knots  
Visibility: 6 or more sm (10+ km)  
Ceiling: 1500 feet AGL  
Clouds: overcast cloud deck at 1500 feet AGL  
Weather: NSW (no significant weather)

Decode Enabled

#### 14.3.4.1.2 Notice of Airmen (NOTAMs) Website

Notice of Airmen (NOTAMs) are notices to alert pilots of potential hazards along a flight route or at a location that can affect the safety of the flight.

1. Search for an airport of choice.
2. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
3. Select **Wx**.
4. Select **Internet** from the side menu, if necessary.
5. Tap **NOTAMs** and users will be redirected to the DOD Aeronautical Information System browser.

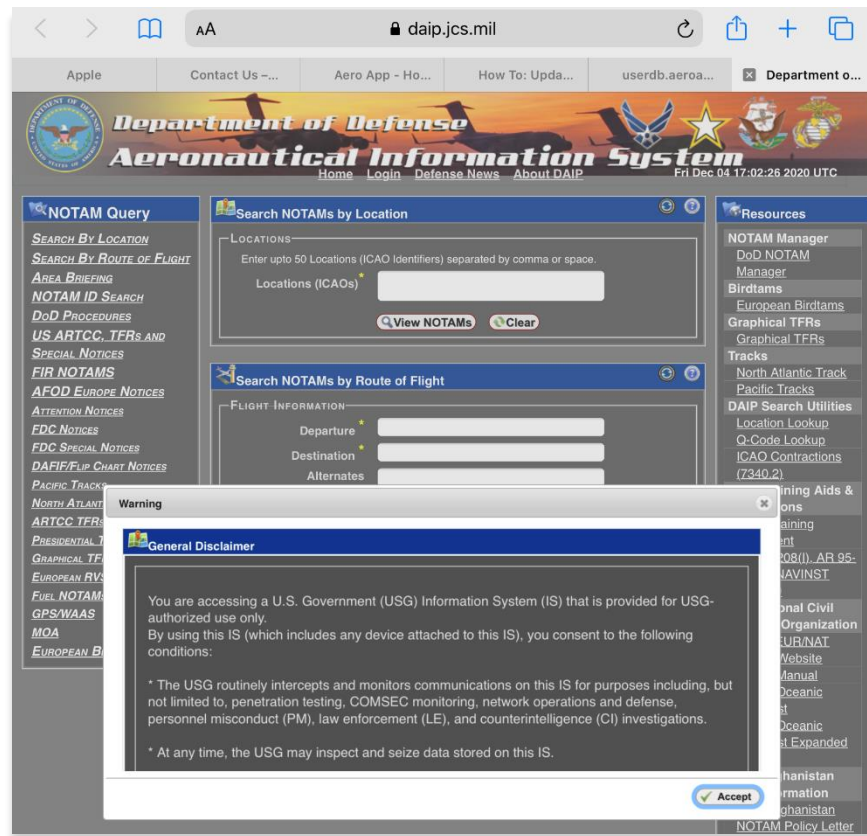



### 14.3.4.2 METARs

The METARs tab displays raw weather information for ADS-B and Air Force Weather (AF Wx) data that may include temperature, precipitation, visibility, barometric pressure, and other information of interest to pilots.

1. Search for an airport of choice.
2. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
3. Select **Wx**.
4. Select **METARs** from the side menu. Aero App will display ADS-B data information.

### 14.3.4.3 Terminal Aerodrome Forecasts (TAFs)

Terminal Aerodrome Forecasts (TAFs) highlight the expected meteorological conditions at an airport during a specific period, typically 24 hours.

1. Search for an airport of choice.
2. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
3. Select **Wx**.
4. Select **TAFs** from the side menu. Aero App will display the TAFs data.

| METARs | TAFs |
|--------|------|
|        |      |



**NOTE:** Refer to [Section 14.4.3](#) for additional information for Air Force Weather (AF Wx).

### 14.3.4.4 Winds and Temps

Winds and Temps are forecasts of specific atmospheric conditions in terms of wind and temperature at certain altitudes; typically measured in feet above mean sea level. Wind direction is always in reference to true north. The wind speed is measured in knots and the temperature is measured in Celsius.

1. Search for an airport of choice.
2. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
3. Select **Wx**.
4. Select **Winds** from the side menu. Aero App will display winds data.
5. Select **Temps** from the side menu. Aero App will display temperature data.

Internet

METARS

TAFs

Winds

Temps

PREFs

NOTAMS

Winds

Valid: 051800Z

| ID   | 3K     | 6K     | 9K     | 12K    | 18K    | 24K    | 30K    |
|------|--------|--------|--------|--------|--------|--------|--------|
| KEYW | 200@14 | 210@21 | 210@31 | 210@38 | 250@34 | 230@38 | 230@58 |
| KMLB | 140@24 | 170@23 | 220@22 | 250@28 | 250@38 | 230@57 | 220@91 |

Valid: 061200Z

| ID   | 3K     | 6K     | 9K     | 12K    | 18K    | 24K    | 30K    |
|------|--------|--------|--------|--------|--------|--------|--------|
| KPIE | 310@47 | 280@51 | 270@49 | 260@39 | 220@55 | 230@60 | 220@77 |

Internet

METARS

TAFs

Winds

Temps

PREFs

NOTAMS

Temps

Valid: 051800Z

| ID   | FZL   | 6K | 9K | 12K | 18K | 24K | 30K | 34 |
|------|-------|----|----|-----|-----|-----|-----|----|
| KEYW | 13800 | 14 | 9  | 3   | -7  | -17 | -33 |    |
| KMLB | 13000 | 12 | 7  | 2   | -10 | -19 | -35 |    |

Valid: 061200Z

| ID   | FZL   | 6K | 9K | 12K | 18K | 24K | 30K | 3 |
|------|-------|----|----|-----|-----|-----|-----|---|
| KPIE | 12800 | 7  | 6  | 2   | -12 | -23 | -32 |   |

#### 14.3.4.5 Pilot Reports (PIREPs)

Pilot Reports (PIREPs) are reports of actual weather conditions encountered by an ownship in flight.

1. Search for an airport of choice.
2. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
3. Select **Wx**.
4. Select **PIREPs** from the side menu. Aero App will display PIREPs data.

#### 14.3.4.6 Notice to Airmen (NOTAMs)

Notice to Airmen (NOTAMs) alerts pilots of potential hazards along a flight route that could affect safety.

1. Search for an airport of choice.
2. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
3. Select **Wx**.
4. Select **NOTAMs** from the side menu. Aero App will display NOTAMs data.

| PIREPs                                                                                                                |                                                                                                                                                         | NOTAMs                                                                                                                |                                                                                                                                                                                                                   |
|-----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>Internet</div> <div>META</div> <div>TAFs</div> <div>Wx</div> <div>Temp</div> <div>PIREPs</div> <div>NOTAMs</div> | <div>PIREPs</div> <div>DHP - DOLPHIN<br/>3nm WNW</div> <div>DHP 051407Z MIA UA /OV DHP270050/TM 1407/FL180/TP E170/TB MOD<br/>CONS/RM ZMAFD</div>       | <div>Internet</div> <div>META</div> <div>TAFs</div> <div>Wx</div> <div>Temp</div> <div>PIREPs</div> <div>NOTAMs</div> | <div>NOTAMs</div> <div>KFLL - FORT LAUDERDALE HOLLYWOOD INTL</div> <div>KFLL 10/086 281121Z IFL 10/086 FLL RWY 10L PAPI U/S<br/>2110281121-2204010400EST</div>                                                    |
|                                                                                                                       | <div>FLL - FORT LAUDERDALE<br/>18nm NNE</div> <div>FLL 051242Z MIA UA /OV 8 NE FLL/TM 1242/FL060/TP E190/TB CONTINUOUS<br/>MODERATE</div>               |                                                                                                                       | <div>KFLL 11/026 050300Z IFL 11/026 FLL OBST CRANE (ASN 2021-ASO-8343-0E)<br/>260404N0800953W (.9NM WSW FLL) 168FT (165FT AGL) FLAGGED AND LGTD<br/>DLY 0300-0945 2111050300-2111070945EST</div>                  |
|                                                                                                                       | <div>PBI - PALM BEACH<br/>54nm NNE</div> <div>PBI 051330Z PBI UA /OV 3 W PBI/TM 1330/FL015/TP F900/SK BKN018</div>                                      |                                                                                                                       | <div>KFLL 11/029 050300Z IFL 11/029 FLL OBST CRANE (ASN 2019-ASO-14384-0E)<br/>260407N0800958W (.9NM WSW FLL) 222FT (211FT AGL) FLAGGED AND LGTD<br/>DLY 0300-0945 2111050300-2111070945EST</div>                 |
|                                                                                                                       | <div>KPBI - Palm Beach Intl<br/>54nm NNE</div> <div>KPBI 051304Z PBI UA /OV KPBI/TM 1304/FL005/TP C208/SK BKN 005/WX LGT<br/>MOD RA/RM DURD RY10L</div> |                                                                                                                       | <div>KFLL 11/033 042341Z IFL 11/033 FLL TWY A HLDG PSN SIGN FOR ILS FOR<br/>EMBRAER RAMP LGT U/S 2111042341-2111251200EST</div>                                                                                   |
|                                                                                                                       | <div>LBV - LA BELLE<br/>86nm NW</div> <div>LBV 051436Z RSW UA /OV LBV/TM 1436/FL085/TP A321/TB SMOOTH</div>                                             |                                                                                                                       | <div>KFLL 11/034 051112Z IFL 11/034 FLL RWY 10L FICDN 5/5/5 100 PCT WET OBS<br/>AT 2111051112 2111051112-2111061112EST</div>                                                                                      |
|                                                                                                                       | <div>RSW - LEE CO<br/>91nm NW</div> <div>RSW 051201Z RSW UA /OV RSW090017/TM 1201/FL200/TP C25A/TA M20/IC<br/>MOD RIME/RM ZMAFD</div>                   |                                                                                                                       | <div>2IS - AIRGLADES</div> <div>K2IS 10/344 011000Z IMA 10/344 2IS AIRSPACE PJE WI AN AREA<br/>DEFINED AS 4NM RADIUS OF LBV106019.1 SFC-15000FT DLY 1000-2200<br/>2111011000-2210312200</div>                     |
|                                                                                                                       | <div>ZFP - FREEPORT<br/>97nm ENE</div> <div>ZFP 051341Z MYGF UA /OV ZFP181043/TM 1341/FL280/TP B737/TB MOD/RM<br/>ZMAFD</div>                           |                                                                                                                       | <div>F45 - NORTH PALM BEACH CO GEN AVN</div> <div>KF45 11/040 031026Z IMA 11/040 F45 COM REMOTE TRANS/REC 120.825 U/S<br/>2111031026-2111192000EST</div>                                                          |
|                                                                                                                       |                                                                                                                                                         |                                                                                                                       | <div>KAPF - NAPLES MUNI</div> <div>KAPF 10/095 302150Z IAPF 10/095 APF TWY A5 BTN RWY 05/23 AND TWY A<br/>CLSD 2110302150-2111302100</div>                                                                        |
|                                                                                                                       |                                                                                                                                                         |                                                                                                                       | <div>KAPF 11/006 051006Z IAPF 11/006 APF RWY 14 FICDN 5/5/5 100 PCT WET OBS<br/>AT 2111051006 2111051006-2111060200</div>                                                                                         |
|                                                                                                                       |                                                                                                                                                         |                                                                                                                       | <div>KBCT - BOCA RATON</div> <div>KBCT 10/117 181100Z IMA 10/117 BCT OBST CRANE (ASN UNKNOWN)<br/>262309N0800708W (1NM W APCH END RWY 23) 183FT (170FT AGL) FLAGGED<br/>DLY 1100-2200 2110181100-2111122200</div> |

## 14.4 Map


The Map menu is an essential and powerful tool that provides a highly customizable and comprehensive worldwide map.

The following menus, features, and tools are located on the Map view and can be activated to perform specific functions:

- Flight Information Panel
- Timer
- Air Force Weather (AF Wx)
- Automatic Dependent Surveillance – Broadcast (ADS-B)
- Map Manager
- Map Options
- Split Screen
- Move Map to Location
- Crosshair Icon (Snap to Location)

### 14.4.1 Flight Information Panel

The Flight Information Panel, located directly above the Map view, displays details of the user's current flight. The Flight Information Panel contains details such as the ownship's GPS reception connection status, Speed, Zulu Time, Track, Altitude, Center Target Coordinates, and the Distance and Bearing.

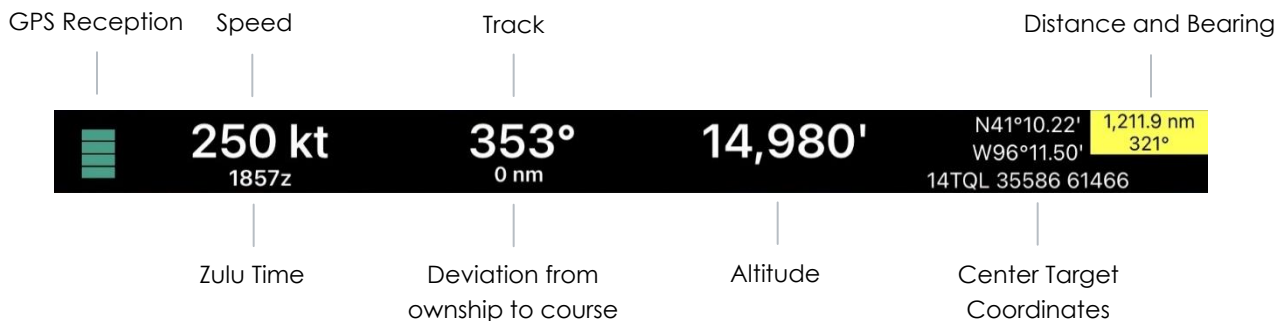

---

#### 14.4.1.1 GPS Reception Connection Status

Aero App enables users to view their current GPS reception connection status. The GPS reception connection status is located at the upper left of the Flight Information Panel. There are different ranges that indicate GPS reception. The ranges are as follows:

- **4 bars** = WASS
- **3 bars (green)** = +/- 10 meters
- **2 bars (orange)** = +/- 20 meters
- **1 bar (red)** = +/- 50 meters



---

**NOTE:** If there is no GPS connection, **No GPS Data** will display on the Flight Information Panel.

---

#### 14.4.1.2 Speed

The Flight Information Panel displays the ownship's speed located to the left of the panel view. The indicated airspeed is measured in knots (kt) and will adjust accordingly to the speed of the ownship.

#### 14.4.1.3 Zulu Time

Aero App uses Zulu time, which is based on the 24-hour clock and is represented by a four-digit number, with the first two digits indicating the hour and the last two digits indicating the minutes. Zulu time is located directly below the ownship's speed of the panel view.

#### 14.4.1.4 Track

Aero App measures the Track, which is the *actual* direction of the ownship's course above the ground. The Track value is based on the GPS. The value below the track is called Crosstrack which is the deviation from your ownship to the course. This is measured in nm or km, respective to which distance unit format users have set in their Settings. The orientation of the arrow is direction to get back to course.



---

**NOTE:** The arrow points toward the route and not in the direction of the deviation.

---

#### 14.4.1.5 Altitude

The pilot's ownship GPS altitude does not synchronize with the altitude it displays on your altimeter. To correct this, users can manually adjust the altitude to allow uniformity of the two.

1. Tap **Altitude** on the Flight Information Panel.
2. Tap the **+/-** buttons to adjust your calibrated altitude by increments or decrements of 100' or 500', respectively.
3. Tap **Set** to complete the calibration.
4. The ownship altitude is displayed below the *GPS* section. Tap **Use GPS** to use your current GPS altitude.

#### 14.4.1.6 Center Target Coordinates

The Flight Information Panel displays the latitude, longitude, and MGRS of the Center Target. The Center Target is activated once the Map is moved. As the globe on the Map view is moved, the Latitude, Longitude, and MGRS values update respective to the placement of the center target. Refer to [Section 14.4.10](#) for additional information.

#### 14.4.1.7 Distance and Bearing


Distance is the range between your ownship's location and where the center target is placed. Bearing is the angle between your ownship and the center target. As the globe on the Map view is moved, the distance and bearing updates respective to the placement of the Center Target, provided the GPS is on.

When the center target is activated, a yellow tag is shown on the Information Panel and displays the *distance* in nm or km, respective to which distance unit format users have set in their Settings and *bearing* (in degrees) relative to current location. Refer to [Section 14.4.10.1](#) for additional information.

### 14.4.1.8 Breadcrumbs


Breadcrumbs enables users to record coordinates throughout their course. A GPS connection is required. To view the recorded Breadcrumbs on the Map view, users must enable the option as described in [Section 14.4.6.1.1](#).

1. Tap the **coordinates** located at the upper right of the Flight Information Panel.
2. A dialog window will appear displaying the recorded breadcrumbs.

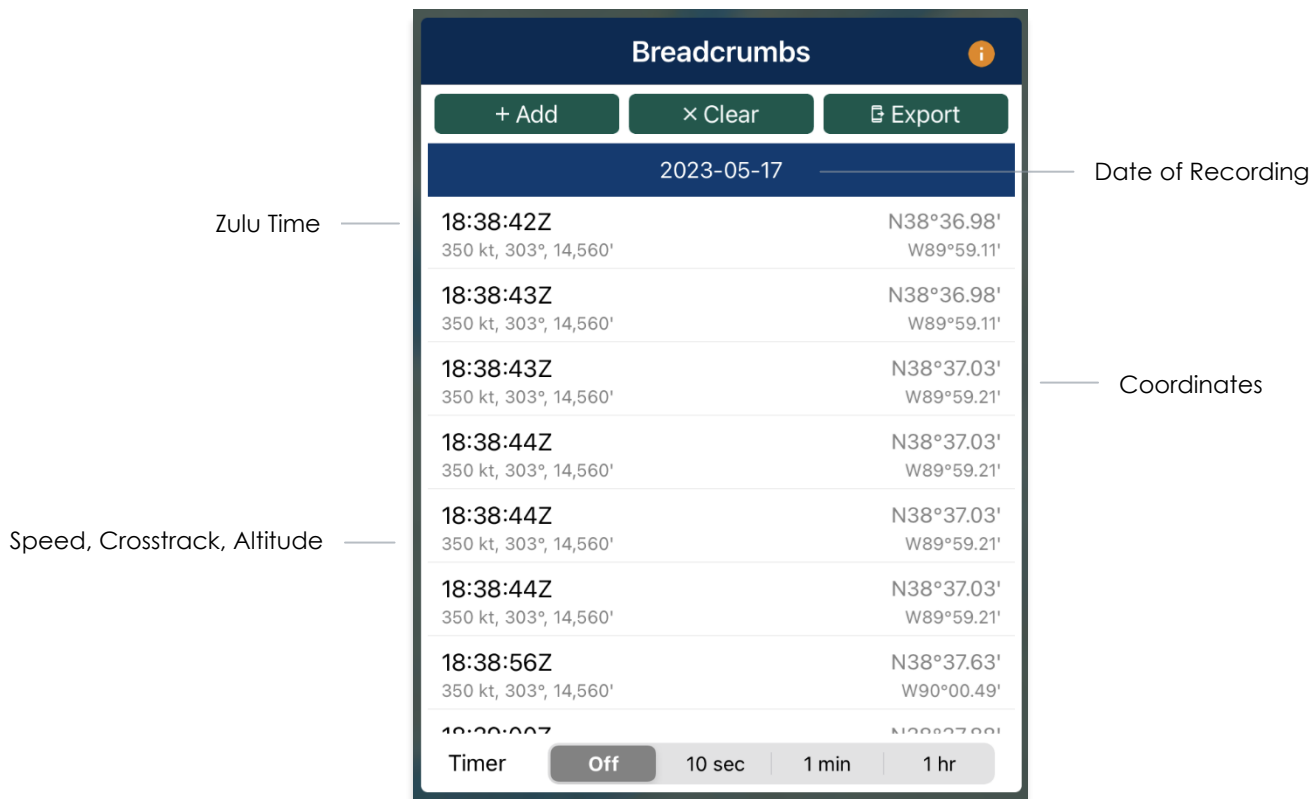


3. Tap **Add** to manually store coordinates. Users have the option to set a timer to automatically add coordinates for every 10 seconds, 1 minute, or every hour.

- To delete individual breadcrumbs, swipe left on the selected breadcrumb to reveal the delete button then tap **Delete**.

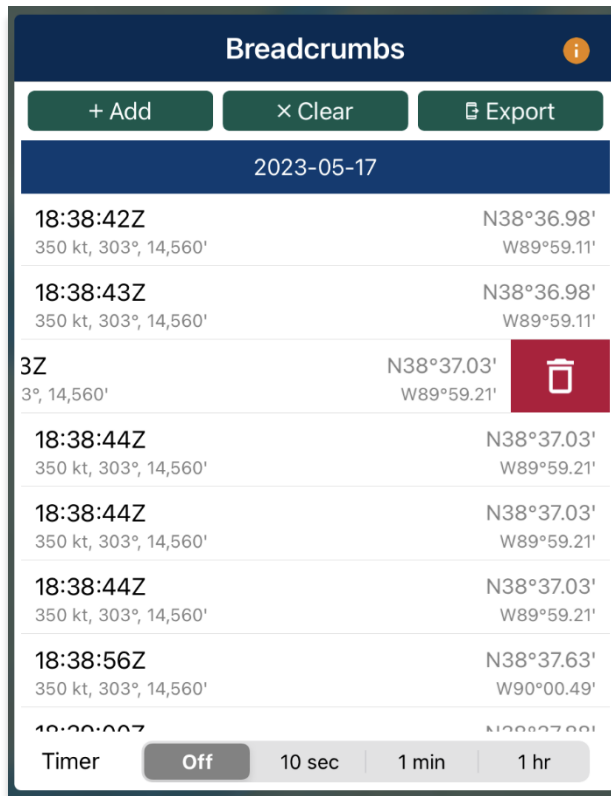

- Tap **Clear** to delete all breadcrumbs.
- To export and save breadcrumbs, tap **Export**. Users can export breadcrumbs in KML, Route List, or SQLite file.

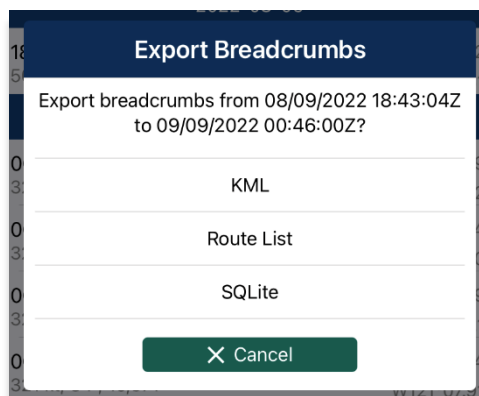

**NOTE:** Breadcrumbs are logged by individual days.




#### 14.4.1.8.1 View Breadcrumbs in KML

1. Export Breadcrumbs to KML.
2. Connect your iPad to a USB or USB-C port of a Mac or Windows computer. Ways to sync device:
  - On Windows, open iTunes
  - On macOS, open Finder and select device under Locations
3. Locate Aero App to display contents.
4. Your exported breadcrumbs will be listed. Create a folder on your desktop to temporarily store KML files.


|                                                                                                                                     |                   |          |
|-------------------------------------------------------------------------------------------------------------------------------------|-------------------|----------|
|  AeroBreadcrumbs-20180924165930-20180924172340.kml | 9/24/2018 1:28 PM | KML File |
|  AeroBreadcrumbs-20180924174500-20180924174650.kml | 9/24/2018 1:47 PM | KML File |
|  AeroBreadcrumbs-20180924175204-20180924175450.kml | 9/24/2018 2:01 PM | KML File |

5. Copy the KML files onto the desktop folder.
6. Open Google Earth on your computer.
7. Open the KML files on Google Earth. Your breadcrumbs will display on the map in a magenta line.

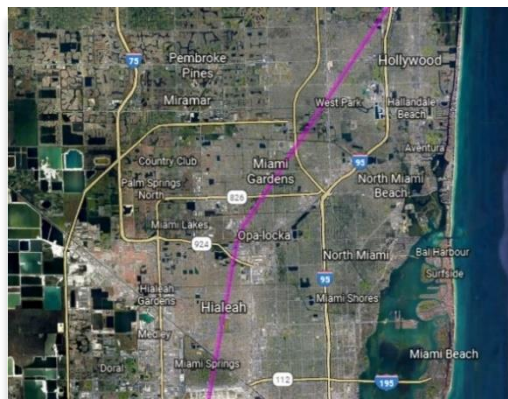

#### 14.4.1.8.2 View Breadcrumbs in Route List

1. Export Breadcrumbs to Route List.
2. The **Export to Route List** popup will display.
3. Users will be prompted to name their route name. Enter the desired name then tap **Save**.
4. To view your saved route, tap **Route** on the **Main Menu**. The Route Panel will expand.
5. Tap **Route Manager**.
6. Select **Actions** from the side menu.
7. Select **Load**. Locate the route name of your breadcrumbs. The route will populate the Route Panel and on the Map.

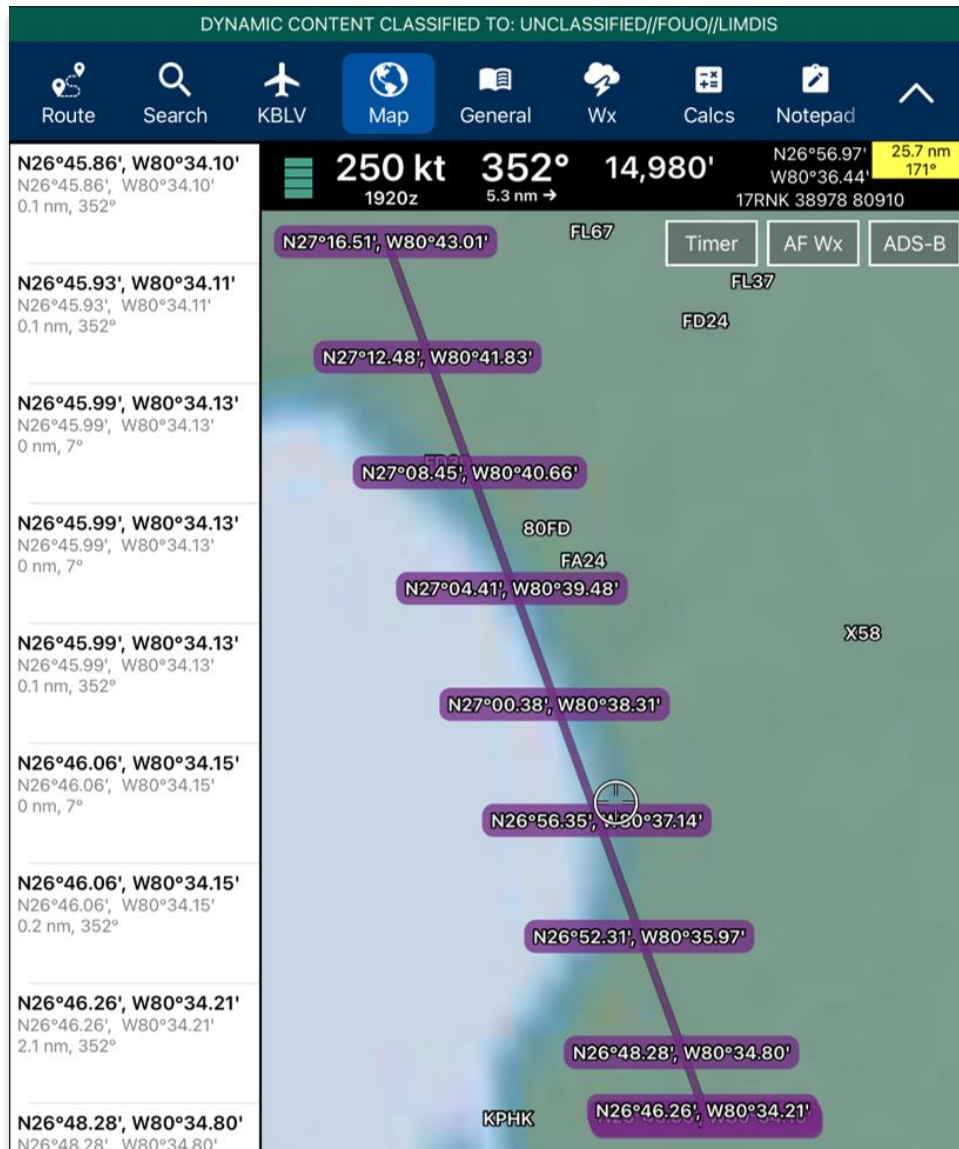





---

#### 14.4.1.8.3 View Breadcrumbs in SQLite File

Aero App enables users to view Breadcrumbs in SQLite File. A database viewer is required to view Breadcrumbs in SQLite file.

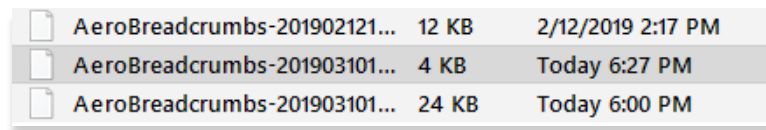1. Export Breadcrumbs to SQLite Database.
2. Connect your iPad to a USB or USB-C port of a Mac or Windows computer. Ways to sync device:
  - On Windows, open iTunes
  - On macOS, open Finder and select device under Locations
3. Locate Aero App to display contents.
4. Your exported breadcrumbs will be listed. Drag your desired breadcrumbs to your database viewer and your route will display.




|                                                                                   |                              |       |                   |
|-----------------------------------------------------------------------------------|------------------------------|-------|-------------------|
|  | AeroBreadcrumbs-201902121... | 12 KB | 2/12/2019 2:17 PM |
|  | AeroBreadcrumbs-201903101... | 4 KB  | Today 6:27 PM     |
|  | AeroBreadcrumbs-201903101... | 24 KB | Today 6:00 PM     |


### 14.4.2 Timer

The Timer feature is a general use chronometer that can be used to time flights or any other activity.


1. Tap **Map** on the **Main Menu**.
2. Tap **Timer** located at the upper right of the screen. The timer menu will display.
3. The Timer has two modes:
  - **Count Up** – starts the timer at zero then begins counting.
  - **Count Down** – timer counts down based on the selected hours, minutes, and seconds the timer was set to.
4. By default, *Count Down* is selected. Tap to select or slide the segmented control to the left to select **Count Up** mode.
5. Tap **Start** to begin the timer.

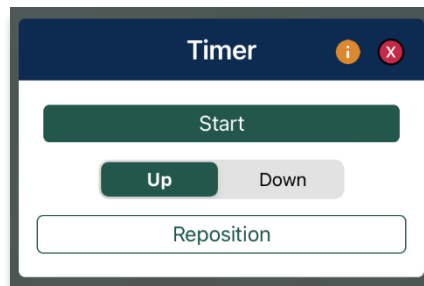

6. To count down, tap to select or slide the segmented control to **Count Down** mode.
7. Adjust the timer's **Hours**, **Minutes**, and **Seconds** to desired duration.
8. Tap **Start** to begin timer.

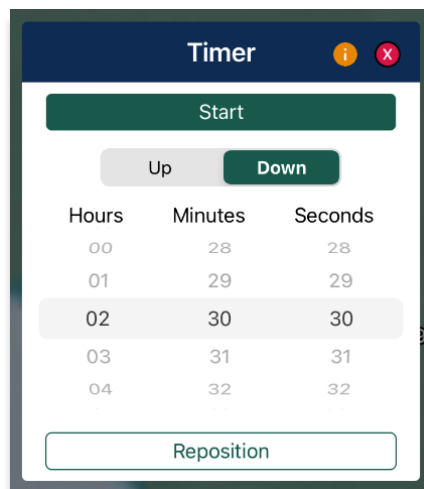

9. The Timer box switches between the following colors to indicate the time remaining on the timer:
- **Green** – if input is greater than 1 minute
  - **Yellow** – timer box will start flashing yellow with 1 minute remaining on the timer.
  - **Orange** – timer box will start flashing orange with 30 seconds remaining on the timer.
  - **Red** – timer box will start flashing red with 10 seconds remaining on the timer.
10. An alert will appear on the screen once the timer is completed. If the device is locked, a notification will display in the device notification bar.

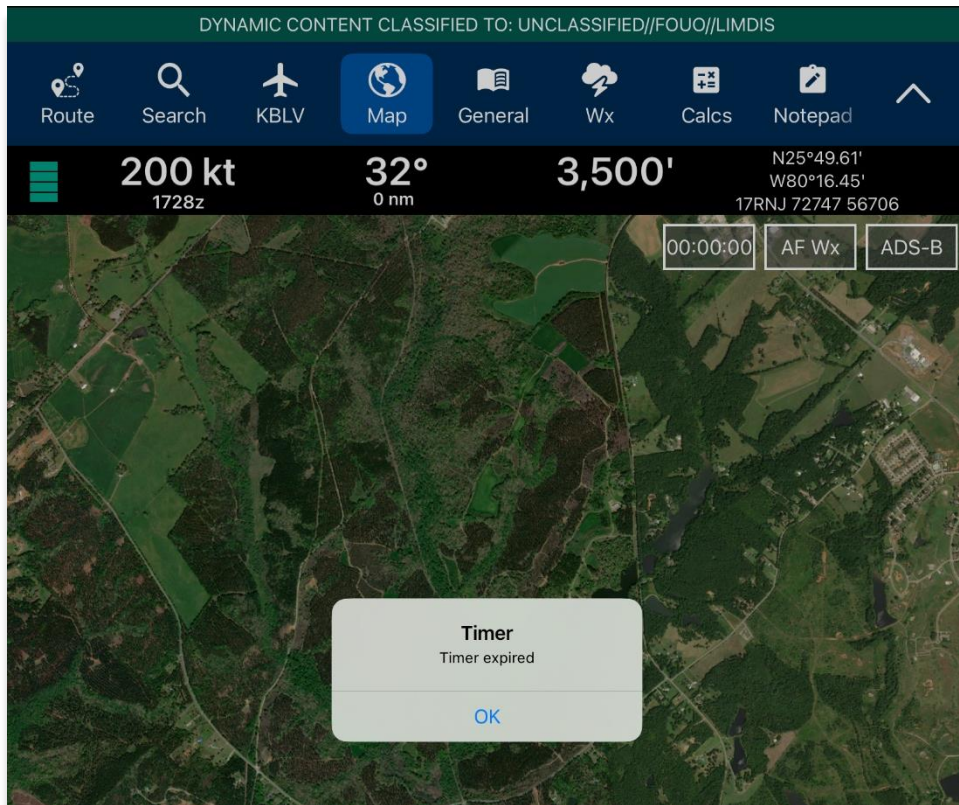

11. To force the timer to end, tap **Stop**.
12. Tap **Reset** to restart timer.




**NOTE:** Tap **Reposition** to move the Timer button from the current position to below the ADS-B button.


### 14.4.3 Air Force Weather (AF Wx)

Air Force Weather (AF Wx) displays METARs and TAFs in Aero App. This information can be viewed from an ICAO on the Map view, Route Panel, and Wx tab. Air Force Weather data is only available to DOD crews and select partners.

1. Tap **Map** on the **Main Menu**.
2. Tap **AF Wx** located at the upper right of the Map view.
3. The AF Wx and TFRs popup will display. Tap **Credentials**.
4. Select desired method of authentication using any of the following options:
  - Aero User Database
  - GEOAxis
  - MDM

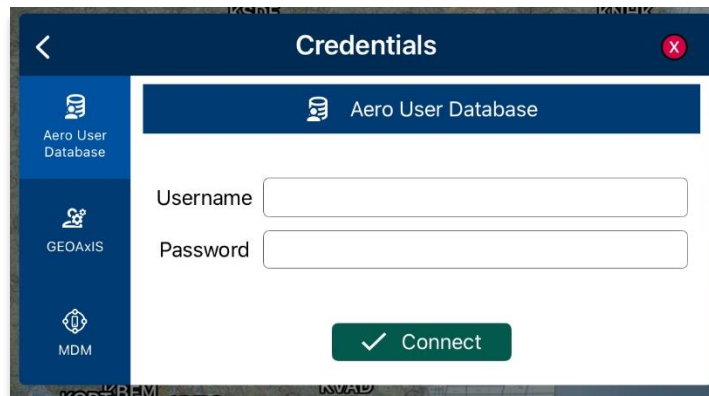

5. Tap **Connect**.
6. The AF Wx and TFRs popup will display the currency of the weather.
7. Tap **Download** to retrieve the latest Air Force Weather data.

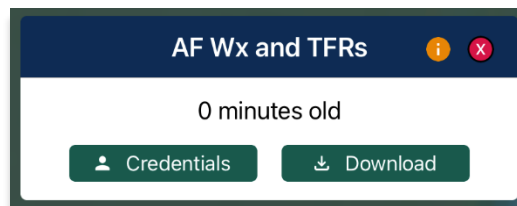

**NOTE:** The password field is cleared when Aero App is closed and then reopened.



**NOTE:** Air Force Weather (AF Wx) is only available via internet. However, if ADS-B weather information becomes available, whichever source has the latest data will show the current weather.



### 14.4.3.1 Air Force Weather (AF Wx) on Map View

Air Force Weather can be viewed on the Map view. Once the METARs option is enabled, different color dots that indicate airport flight rules will populate the Map. Additional Air Force weather information can be viewed from the Wx menu. Refer to [Section 14.4.3.3](#) for additional information.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Weather** from the side menu.
5. Tap **METARs** to enable the option. Different colored dots will populate the Map. The different color dots below the airport labels depict the airport's flight rule.
6. Flight rules displayed below airport labels are color-coded to depict the latest reported weather conditions:
  - **Green:** VFR
  - **Blue:** MVFR
  - **Red:** IFR
  - **Magenta:** LIFR



**NOTE:** METAR information on the Map expires 75 minutes after becoming available.

### 14.4.3.2 Air Force Weather (AF Wx) on Route Panel

Air Force weather can be viewed on the Route Panel. Additional Air Force weather information can be viewed from the Wx menu. Refer to [Section 14.4.3.3](#) for additional information.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear
3. Select **Overlays** from the navigation bar.
4. Select **Weather** from the side menu.
5. Tap **METARs** to enable the option. Different colored dots will populate the Map. The different color dots below the airport labels depict the airport's flight rule.
6. Tap the **Route Tab** to expand the Route Panel.
7. Colored dots are displayed for each ICAO of your route.
8. Flight rules are color-coded to depict the latest reported weather conditions:
  - **Green:** VFR
  - **Blue:** MVFR
  - **Red:** IFR
  - **Magenta:** LIFR

| VFR |                                                                                                            | MVFR |                                                                                                                  |
|-----|------------------------------------------------------------------------------------------------------------|------|------------------------------------------------------------------------------------------------------------------|
|     | <b>KCLS</b><br>Chehalis Centralia<br>34.6 nm, 22°<br>ETE: 13:24:07, ETA: 07:49:14Z<br>Twr:                 |      | <b>KSEA</b><br>Seattle Tacoma Intl<br>Destination<br>ETE: 13:40:27, ETA: 08:05:34Z<br>Twr: 119.9 MHz, 120.95 ... |
| IFR |                                                                                                            | LIFR |                                                                                                                  |
|     | <b>KSUU</b><br>Travis Afb<br>506.9 nm, 342°<br>ETE: 10:52:02, ETA: 05:17:09Z<br>Twr: 120.75 MHz, 254.4 ... |      | <b>KTCM</b><br>Mcchord Fld<br>19.9 nm, 4°<br>ETE: 13:34:29, ETA: 07:59:36Z<br>Twr: 124.8 MHz, 259.3 M...         |



**NOTE:** The colored dots below airport labels on the Map expire 75 minutes after becoming available.



### 14.4.3.3 Air Force Weather (AF Wx) Information on Wx Menu

Air Force weather information can be viewed by accessing the Wx menu for the Active Point, or by selecting Info and Wx for an ICAO on the Map view or the Route Panel.

1. Tap **Active Point** on the **Main Menu**. The Active Point options will display.
2. Select **Wx**.
3. The following options to view AF Wx information will be available to users:
  - METARs
  - TAFs

| METARs                                                                                                                      |                                                                                                                                                                                   | TAFs                                                                                                                                                                                                                                                                                                            |  |
|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <div>Internet</div> <div>METARs</div> <div>TAFs</div> <div>Winds</div> <div>Temps</div> <div>PIREPs</div> <div>NOTAMs</div> | <div><div>METARs</div><div><div>VFR EDDN</div><div>EDDN - Nuernberg</div><div>AF Wx</div></div><div>EDDN 081620Z AUTO 26011KT CAVOK 21/10 Q1012 BECMG 24005KT=</div></div>        | <div><div>TAFs</div><div><div>EDDN - Nuernberg</div><div>AF Wx</div></div><div>EDDN 081100Z 0812/0912 24010KT 9999 SCT030 PROB30 TEMPO 0813/0816 25015G25KT SHRA BKN025TCU BECMG 0816/0818 24005KT BECMG 0820/0822 14004KT BECMG 0908/0910 24009KT PROB30 TEMPO 0911/0912 24015G25KT SHRA BKN040CB=</div></div> |  |
|                                                                                                                             | <div><div>VFR ETEB</div><div>ETEB - Ansbach Ahp<br/>21nm SW</div><div>AF Wx</div></div> <div>ETEB 081555Z AUTO 28007KT 9999 BKN046 19/12 A2989 RMK AO2 SLP124 T01940122 \$=</div> | <div><div>ETEB - Ansbach Ahp<br/>21nm SW</div><div>AF Wx</div></div> <div>ETEB 081500Z 0815/0921 25010G15KT 9999 SCT040 BKN050 QNH2989INS BECMG 0818/0819 21009KT 9999 SCT050 QNH2992INS BECMG 0903/0904 21009KT 9999 SCT030 BKN070 QNH2991INS TEMPO 0910/0914 23012G18KT 8000 -SHRA BKN030 TX20/0815Z</div>    |  |
|                                                                                                                             | <div><div>VFR ETIK</div><div>ETIK - Illesheim Ahp<br/>27nm W</div><div>AF Wx</div></div> <div>ETIK 081555Z 26011KT 9999 SCT050 21/10 A2988 RMK AO2A SLP110 T02080100 \$=</div>    |                                                                                                                                                                                                                                                                                                                 |  |
|                                                                                                                             | <div><div>VFR ETIH</div><div>ETIH - Hohenfels Aaf<br/>34nm ESE</div><div>AF Wx</div></div>                                                                                        |                                                                                                                                                                                                                                                                                                                 |  |
|                                                                                                                             |                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                 |  |



**NOTE:** Air Force Weather is only available via the internet. However, if ADS-B weather information becomes available, whichever source has the latest data will show the current weather.



**NOTE:** METAR information on the Wx tab expires 3 hours after becoming available. TAF information on the Wx tab expires 12 hours after becoming available.

#### 14.4.4 Automatic Dependent Surveillance – Broadcast (ADS-B)

The user's ownship has an Automatic Dependent Surveillance—Broadcast receiver. The ADS-B tool receives NEXRAD, METARs, TAFs, and other textual data as well as ownship location. For non-proprietary ADS-B and GPS receiver compatibility with Aero App, refer to this link: [ADS-B/GPS Compatibility List](#)

##### 14.4.4.1 Connecting to ADS-B Receiver via Wi-Fi

To establish a connection with an ADS-B receiver via Wi-Fi, you must ensure that your ADS-B receiver is connected to an iPad with internet access.

1. Open the iPad's *settings app* and select **Wi-Fi**.
2. Enable the **Wi-Fi** option to display all available networks.
3. Search and tap the ADS-B receiver in the *OTHER NETWORKS* section.
4. Ensure the ADS-B receiver's connection is established. For additional information, refer to [Section 14.4.4.2.1](#).

##### 14.4.4.2 Connecting to ADS-B Receiver via Bluetooth


To establish a connection with an ADS-B receiver via Bluetooth, you must ensure to connect your Bluetooth to the receiver.

1. Open the iPad's *settings app* and select **Bluetooth**.
2. Enable the **Bluetooth** option to display all available devices.
3. Search and tap the ADS-B receiver in the *OTHER DEVICES* section.
4. Ensure the ADS-B receiver's connection is established.
5. Pair device.

#### 14.4.4.2.1 ADS-B Information

Aero App provides an ADS-B tool that outputs ADS-B details such as its battery percentage, connection statuses, and additional ADS-B information.

1. Tap **Map** on the **Main Menu**.
2. Tap the **ADS-B** button located at the upper right of your screen.
3. The green status indicates that the ADS-B connection is established to receive the data for Heart Beat, GPS Location, GPS Altitude, and FIS-B Data. If the status displays red, then there is no connection.
  - **Battery** – displays ADS-B battery percentage.
  - **Heart Beat** – indicates the connection status of the ADS-B device.
  - **GPS Location** – indicates the connection status of the ownship's GPS location.
  - **GPS Altitude** – indicates the connection status of the ownship's GPS altitude.
  - **FIS-B** – indicates the connection status in receiving weather from FIS-B towers.
  - **Uplink/sec** – indicates the occurrence of the ADS-B data messages Aero App receives from ADS-B towers during the previous second.
  - **Time** – displays the Zulu time.

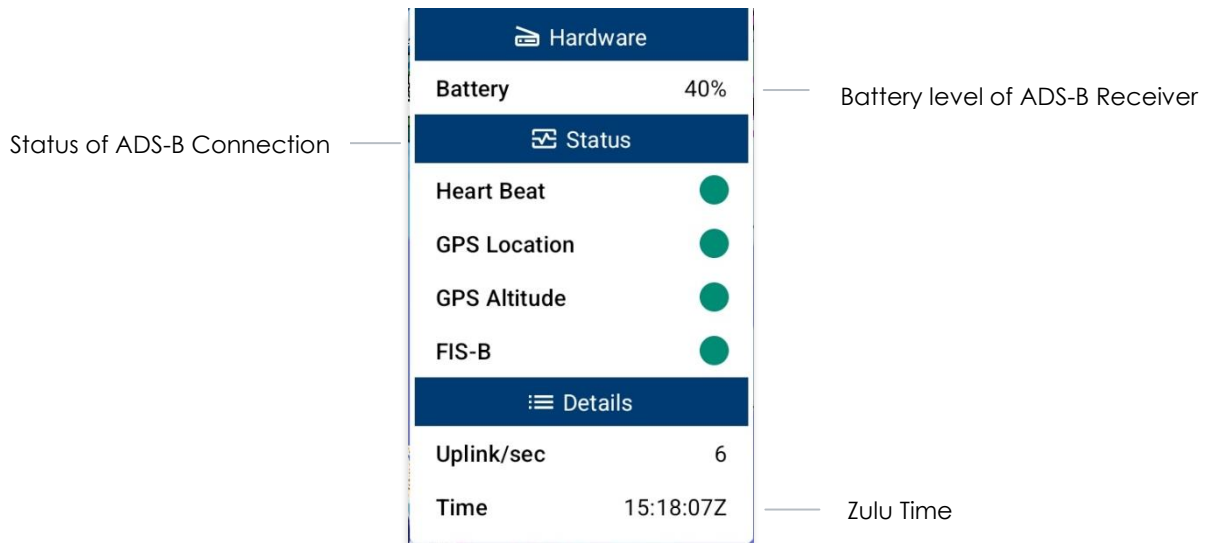


4. The ADS-B button on the Map will display a green line above the text when an ADS-B receiver is connected successfully.



**NOTE:** If the user's ADS-B is disconnected, the ADS-B button on the Map will not display a green status connection.

### 14.4.5 Map Manager

The Map Manager includes map configuration options and is located at the lower right of the Map view.

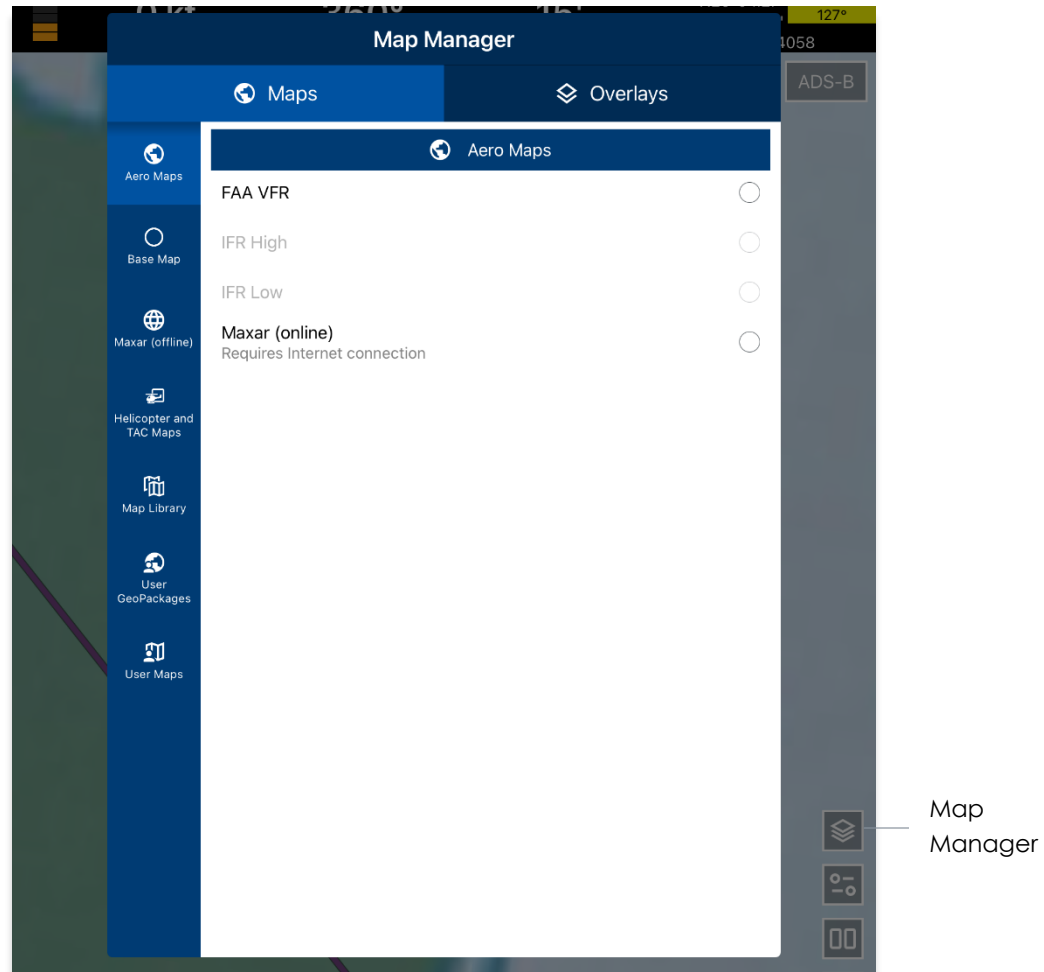

#### 14.4.5.1 Maps

Maps allow users to enable different types of charts that can be displayed on the Map. Map types are separated into categories of Aero Maps, Base Map, Maxar (offline), Helicopter and TAC Maps, Map Library, User GeoPackages, and User Maps menus.

#### 14.4.5.1.1 Aero Maps

The Aero Maps section provides access to current FAA VFR, worldwide IFR High and Low Enroutes, and Maxar (online).

##### 14.4.5.1.1.1 FAA Visual Flight Rule (VFR)

The FAA VFR for the desired region must be downloaded. Until the data has been successfully downloaded, the FAA VFR option will remain disabled.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **Aero Maps** from the side menu, if necessary.
5. Tap **FAA VFR** to enable the option. The VFR sectional is displayed on the Map.



#### 14.4.5.1.1.2 Instrument Flight Rule (IFR) High


The IFR High charts for the desired region must be downloaded. Until the data has been successfully downloaded, the IFR High option will remain disabled.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **Aero Maps** from the side menu, if necessary.
5. Tap **IFR High** to enable the option. The high-altitude IFR Enroute chart is displayed on the Map.

#### 14.4.5.1.1.3 Instrument Flight Rule (IFR) Low

The IFR Low charts for the desired region must be downloaded. Until the data has been successfully downloaded, the IFR Low option will remain disabled.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **Aero Maps** from the side menu, if necessary.
5. Tap **IFR Low** to enable the option. The low-altitude IFR Enroute chart is displayed on the Map.

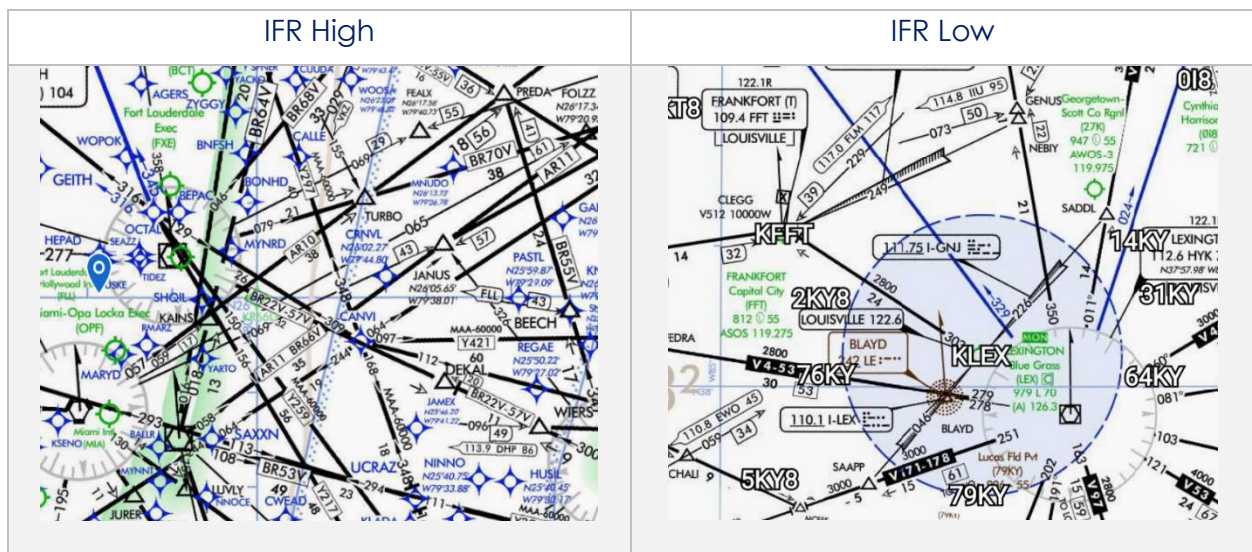



#### 14.4.5.1.1.4 Maxar (online)


Maxar (online) requires an internet connection to view real-time satellite imagery. Users must be logged in through GEOAxis and AUD (select partners) to access Maxar (online).

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **Aero Maps** from the side menu, if necessary.
5. Tap **Maxar (online)** to enable the option. A satellite imagery is displayed on the Map.



**NOTE:** Credentials will be cleared when users close Aero App. Thereby, users must log in again to view the Maxar (online).

Maxar (online)

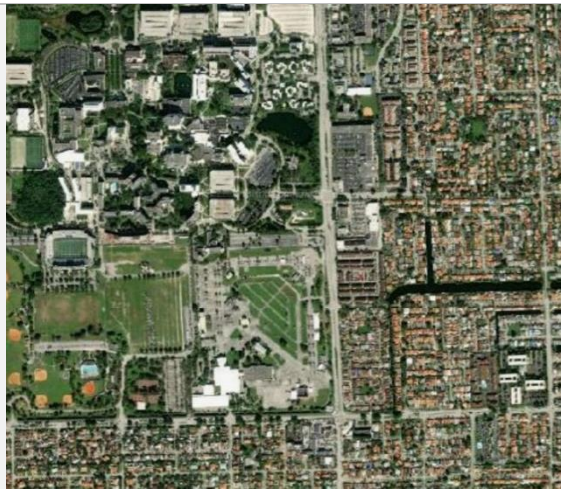

### 14.4.5.1.2 Base Map

The Base Map menu offers worldwide Earth and Gray base maps and will be further elaborated in the sections to follow.

#### 14.4.5.1.2.1 Earth Base Map

Earth Base Map data must be downloaded. Until the data has been successfully downloaded, the Earth option will remain disabled.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **Base Map** from the side menu.
5. Tap **Earth** to enable the option. The earth base map is displayed.




**NOTE:** When Earth Base Map is disabled, the Gray Base Map will serve as the default base map.

#### 14.4.5.1.2.2 Gray Base Map

The Gray Base Map is the default map when no map has been chosen or downloaded.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **Base Map** from the side menu.
5. Tap **Gray** to enable the option. The gray base map is displayed.

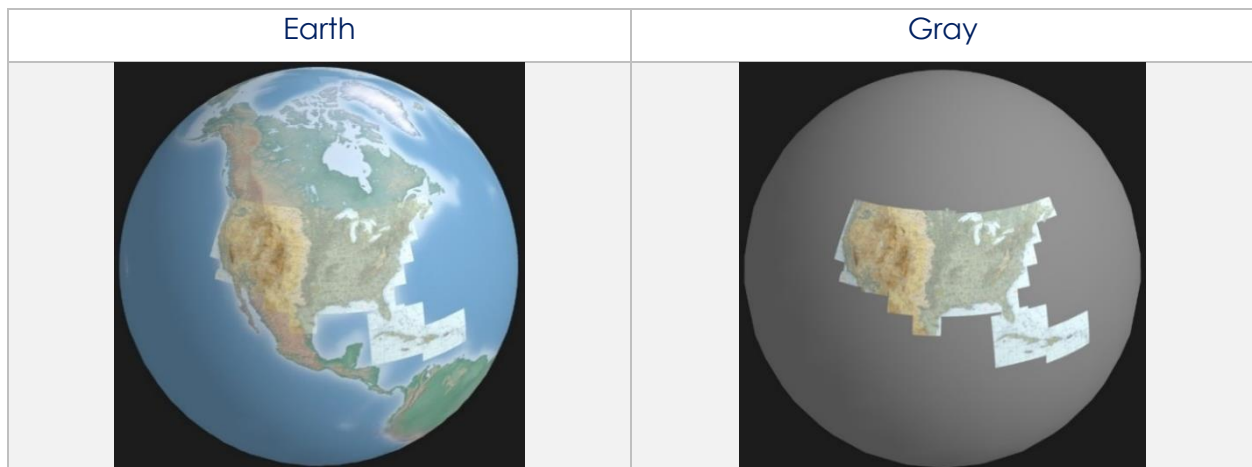



#### 14.4.5.1.3 Maxar (Offline)

Maxar (offline) allows users to download cache images to be displayed on the Map. The initial download of Maxar (offline) cache images requires internet connection. Once the images are downloaded, internet connection is no longer required and can be displayed on the Map at any time.

##### 14.4.5.1.3.1 Maxar (Offline)


The Maxar (offline) feature is available to users logged in using their GEOAxis credentials or AUD with select government foreign partners, or users whose devices are set with Mobile Device Management (MDM).

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **Maxar (offline)** from the side menu.
5. Tap **Download**.
6. The credentials popup will display. Log in using Aero User Database or GEOAxis credentials or set up your device with Mobile Device Management (MDM).


The screenshot shows a 'Credentials' dialog box. On the left is a dark blue sidebar with three icons and labels: 'Aero User Database' (selected), 'GEOAxis', and 'MDM'. The main content area is white and titled 'Aero User Database'. It contains two input fields: 'Username' and 'Password'. Below these fields is a green button with a white download icon and the text 'Connect'.

7. The Maxar Download popup will display the following fields:


- **Location** – tap the ellipsis button to display the Search popup. Enter Airport, NavAid, Waypoint, User Waypoint, or Pin inside the text box. Radial Off NavAid and all other identifiers will be converted to coordinates.

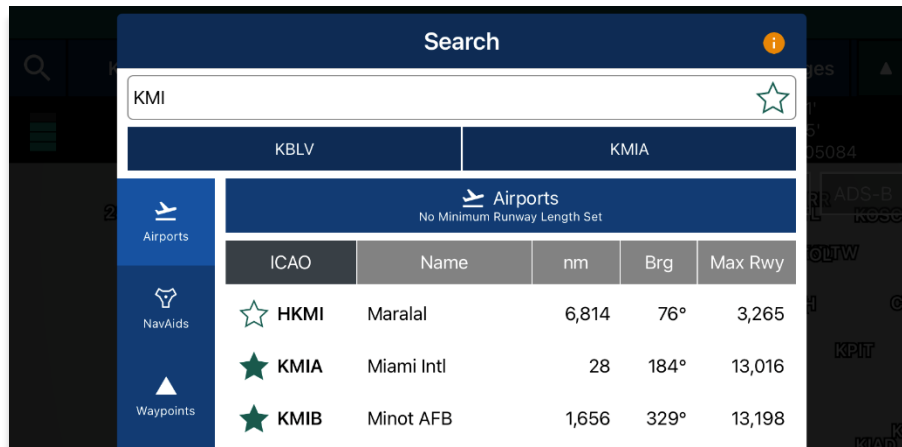


- **Radius** – select from options of 5, 10, 15, 25.
- **Resolution** – select from options of Low, Medium, or High.

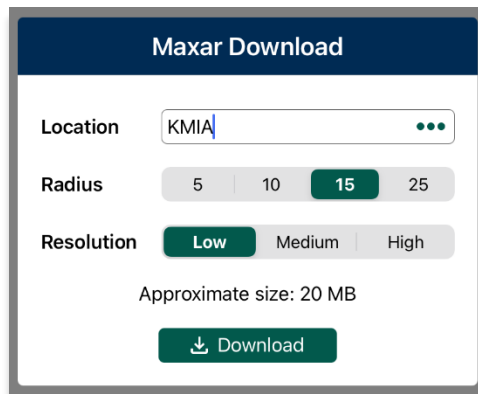

8. Once all fields have been filled, tap **Download** and the cached image will begin to download.

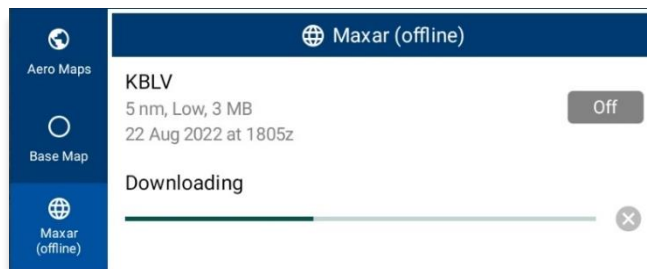

9. Downloaded files will be listed below the Maxar (offline) section.

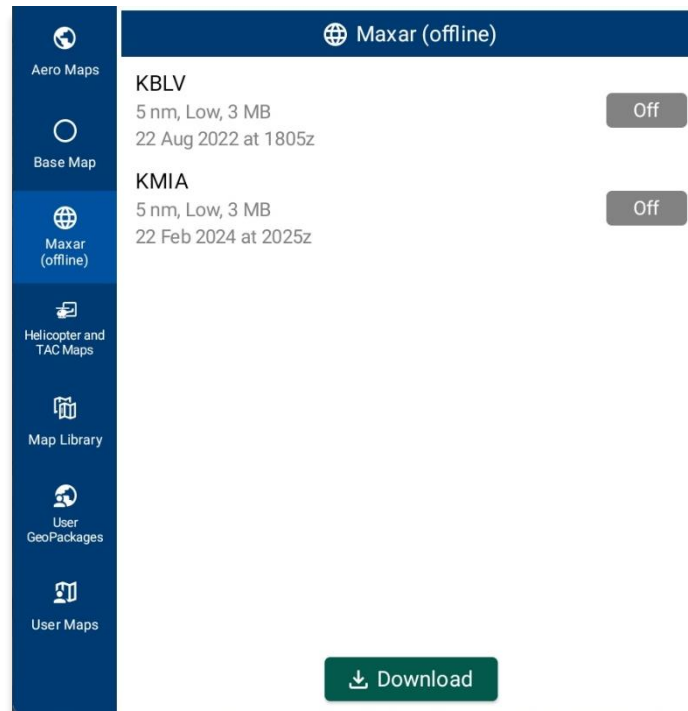

10. Select desired file to display on the Map.
11. To delete a cache image, swipe left to reveal the delete button of the file that you choose to permanently remove. Tap **Delete**.



Helicopter and Terminal Area Chart (TAC) Maps provide access to Helicopter (Gulf Coast), Helicopter (Routes), and Terminal Area Charts (TACs) to overlay on the Map.

The FAA Helicopter CONUS Gulf Coast data must be downloaded. Until the data has been successfully downloaded, the Helicopter (Gulf Coast) option will remain disabled.

- #### 14.4.5.1.4.2 Helicopter (Routes)

The FAA Helicopter CONUS Routes data must be downloaded. Until the data has been successfully downloaded, the Helicopter (Routes) option will remain disabled.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** on the navigation bar, if necessary.
4. Select **Helicopter and TAC Maps** from the side menu.
5. Tap **Helicopter (Routes)** to enable the option. The helicopter chart is overlaid on the Map.

205 | Page

#### 14.4.5.1.4.3 Terminal Area Charts (TACs)

The FAA TAC data for the desired region (e.g., Alaska and/or CONUS) must be downloaded. Until the data has been successfully downloaded, the TACs option will remain disabled.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **Helicopter and TAC Maps** from the side menu.
5. Tap **TACs** to enable the option. The terminal area chart is overlaid on the Map.

TACs



#### 14.4.5.1.5 Map Library

Map Library includes maps for emergencies, NavPlan charts, range charts, and others. The Aero App team are the distributors of these charts.


##### 14.4.5.1.5.1 Map Library

Users must download Map Library charts to view them on the Map. Refer to [Section 10.2.1.1](#) for additional information.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **Map Library** from the side menu.
5. The files are grouped by categories of map types. Tap on the desired folder to reveal the subfolder. Then tap on the subfolder to reveal the downloaded Map Library chart file.
6. Enable desired Map Library chart. The chart will be displayed on the map. Depending on the size of the chart, Aero App will zoom in to optimize the chart display. If the chart is small, the users may need to zoom in to view the chart.



**NOTE:** Map Library charts can be deleted from File Manager or directly from the Map Manager view by swiping left then tapping **Delete**.

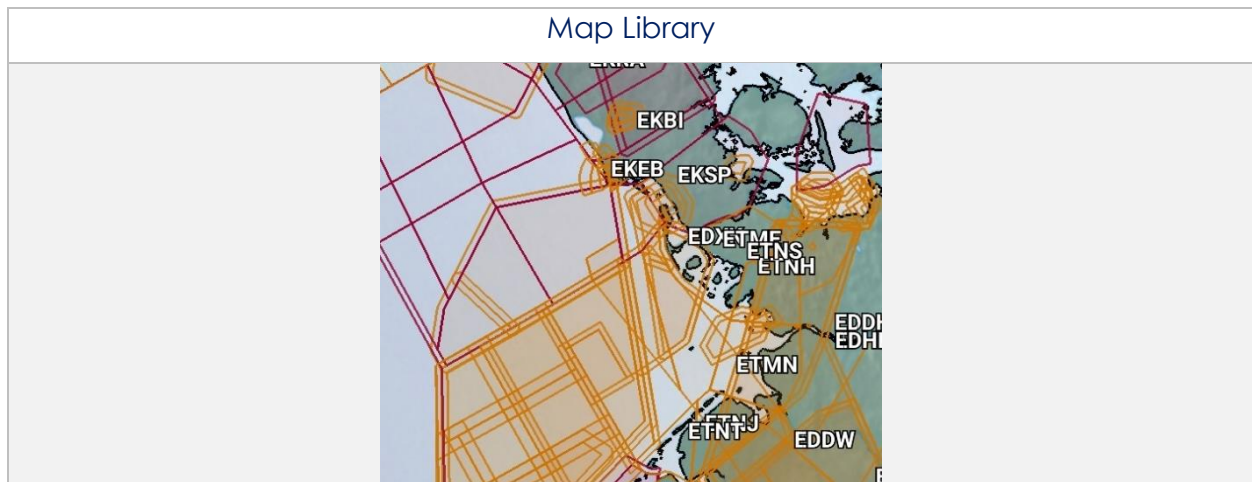




#### 14.4.5.1.6 User GeoPackages

Aero App supports GeoPackages to be viewed and accessed on the Map view. GeoPackages must be sideloaded onto Aero App. Refer to [Section 11.3](#) for additional information.

##### 14.4.5.1.6.1 User GeoPackages

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **User GeoPackages** from the side menu.
5. The files are grouped by categories, tap on the folder header to show, or hide its respective files.
6. Select desired file(s) and the overlay will display on the Map.
7. To delete a user GeoPackage, swipe left to reveal the delete button of the file that you choose to permanently remove. Tap **Delete**.

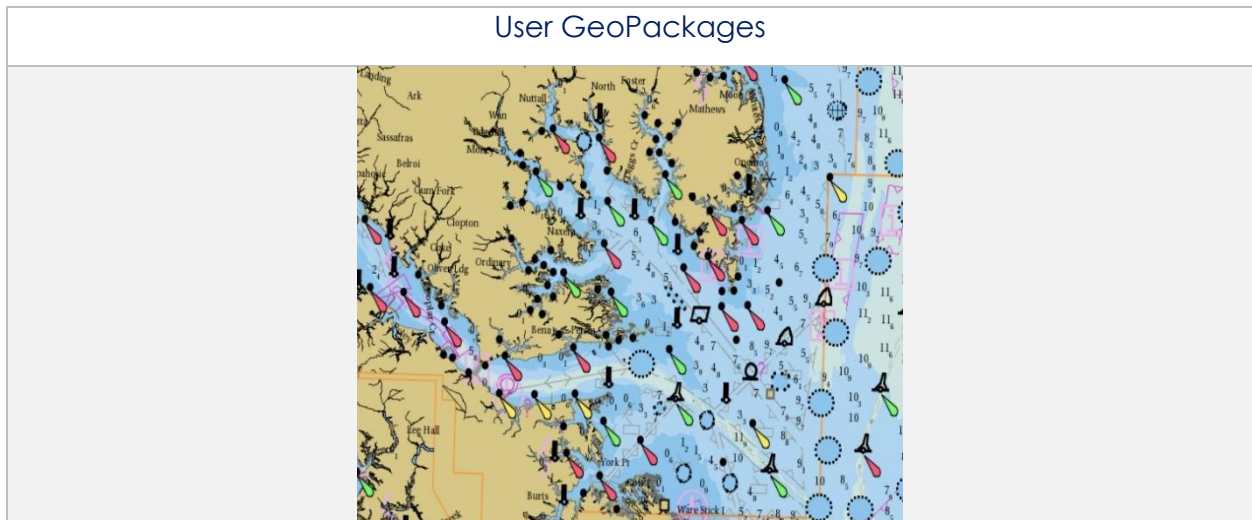


#### 14.4.5.1.7 User Maps

Aero App supports User Maps to be viewed and accessed on the Map view. User Maps must be sideloaded onto Aero App. Refer to [Section 11.2](#) for additional information.

##### 14.4.5.1.7.1 User Maps

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map screen. The Map Manager popup will appear.
3. Select **Maps** from the navigation bar, if necessary.
4. Select **User Maps** from the side menu.
5. The loaded files will display under User Maps.
6. Select desired file(s) and the overlay will display on the Map.
7. To delete a user map, swipe left to reveal the delete button of the file that you choose to permanently remove. Tap **Delete**.

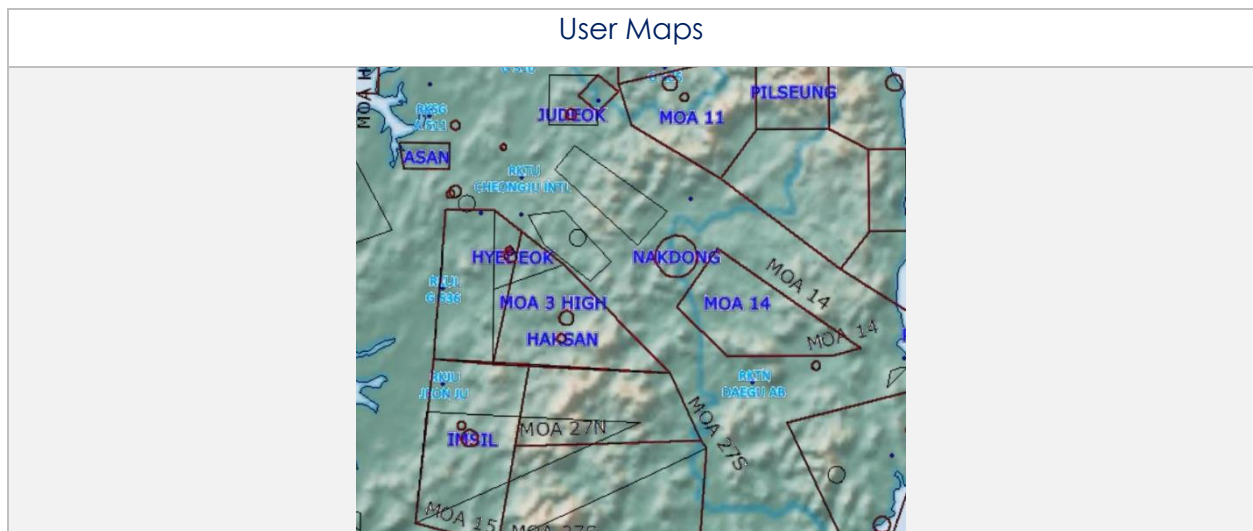



## 14.4.5.2 Overlays


The Overlays section contains map overlay options to display on the Map. The sections ahead will expand on the different Map overlay options to choose from.

### 14.4.5.2.1 Aero Overlays

Aero Overlays contains various map overlay options.

#### 14.4.5.2.1.1 Air Defense Identification Zone (ADIZ)

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **ADIZ** to enable the option. ADIZ sectors will populate the Map.
6. Tap an ADIZ sector of choice on the Map. A popup containing an overview of the specified area will be displayed.

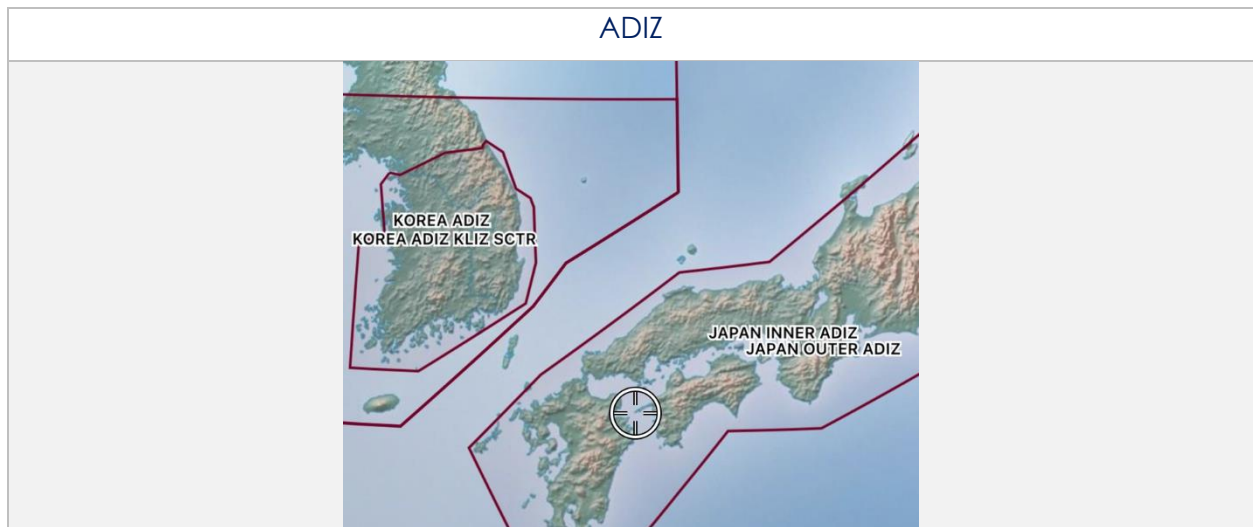


#### 14.4.5.2.1.2 Airports

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Airports** to enable the option. Airport identifiers will populate the Map, respective to the minimum runway length users have set in their Settings.

#### 14.4.5.2.1.3 Air Refueling Routes

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Air Refueling Routes** to enable the option. Air refueling routes will populate the Map.
6. Tap an AR label on the Map. A popup with air refueling route information will be displayed.

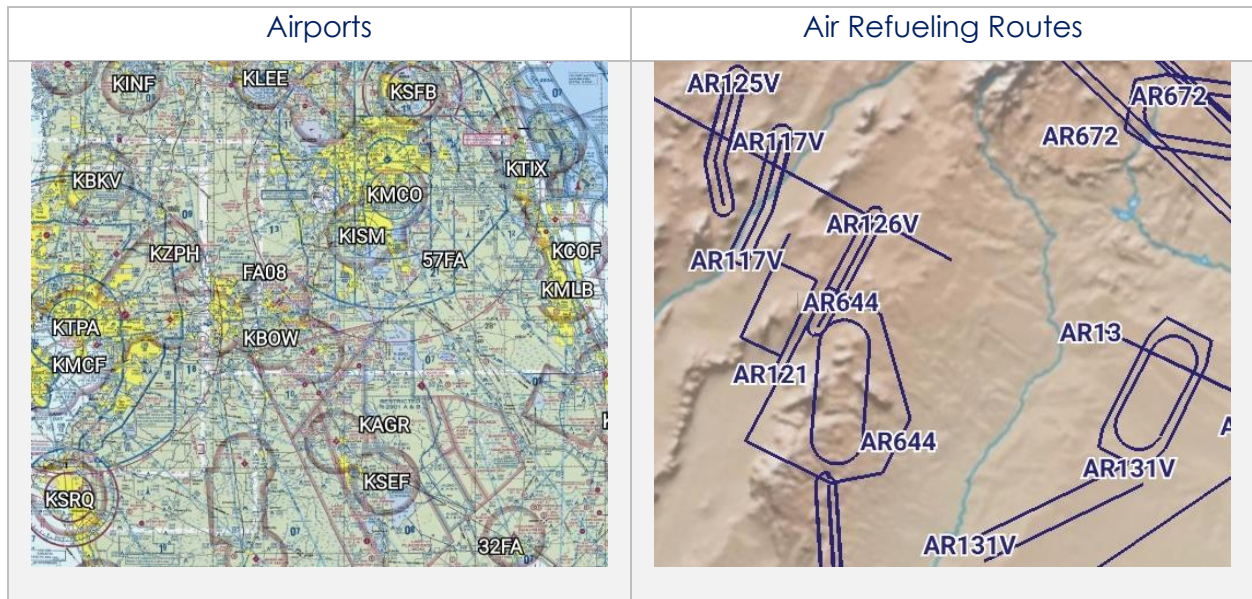

#### 14.4.5.2.1.4 Airspaces (B, C, D)

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Airspaces (B, C, D)** to enable the option. Airspaces will populate the Map.
6. Tap an Airspace of choice on the Map view. A popup with airspace class information will be displayed.


#### 14.4.5.2.1.5 Airways – Low

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap to select **Low** from the Airways segmented control. The low-altitude airways that are below 18,000 ft will populate the Map.

Airspaces (B, C, D)



Airways – Low

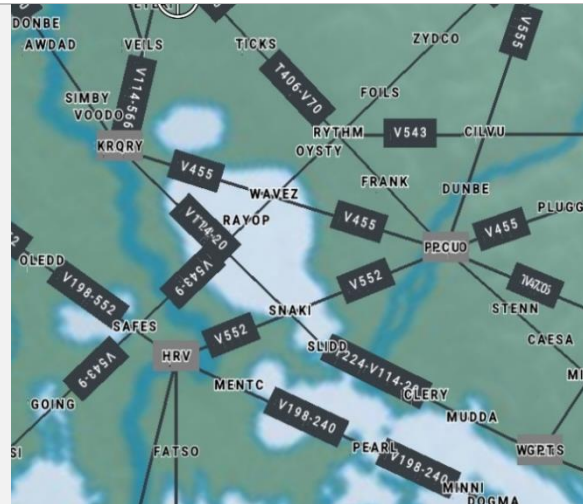

#### 14.4.5.2.1.6 Airways – High


1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap to select **High** from the Airways segmented control. The high-altitude airways that are between 18,000 ft and 45,000 ft will populate the Map.



**NOTE:** Users can add Airways to their route. Refer to [Section 14.1.1.2](#) for additional information.

#### 14.4.5.2.1.7 Arresting Gear

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Arresting Gear** to enable the option. Arresting gear icons for select areas will populate the Map.
6. Tap an arresting gear of choice on the Map. A popup with arresting gear information such as its identifier name, absorbing system, engagement type, and command will be displayed.

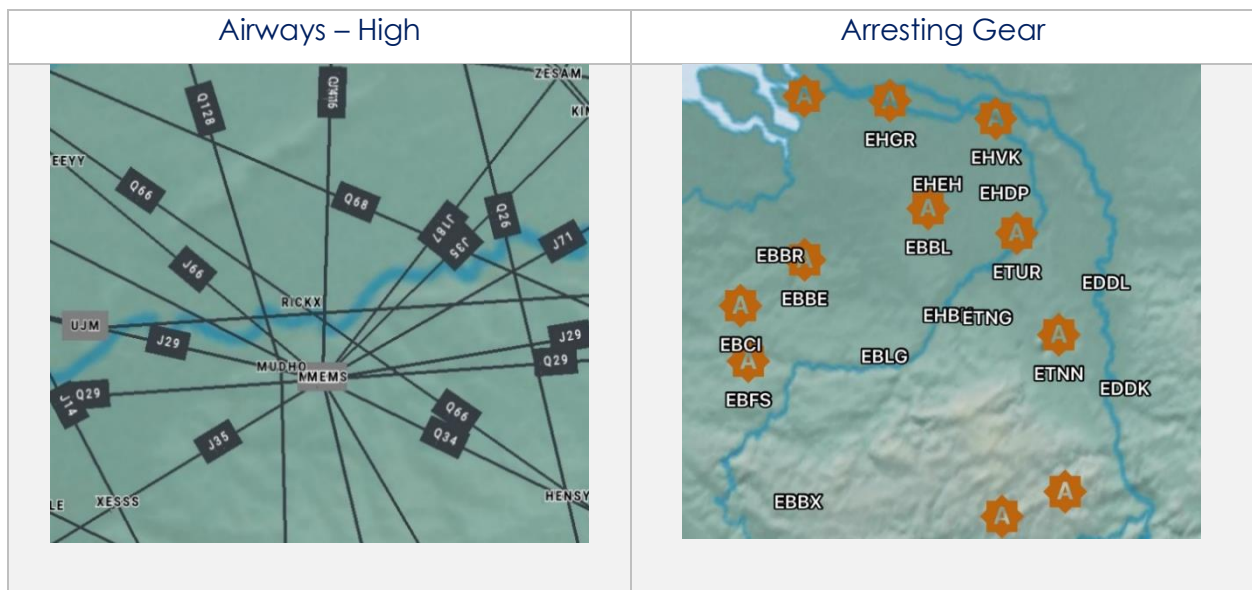




#### 14.4.5.2.1.8 Air Route Traffic Control Centers (ARTCCs) – Low

Air Route Traffic Control Centers (ARTCCs) low and high, is primarily to provide air traffic service for pilots that are operating on an IFR flight plan.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap to select **Low** from the ARTCCs segmented control. The Map will overlay regions of low ARTCCs.

#### 14.4.5.2.1.9 Air Route Traffic Control Centers (ARTCCs) – High

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap to select **High** from the ARTCCs segmented control. The Map will overlay regions of high ARTCCs.

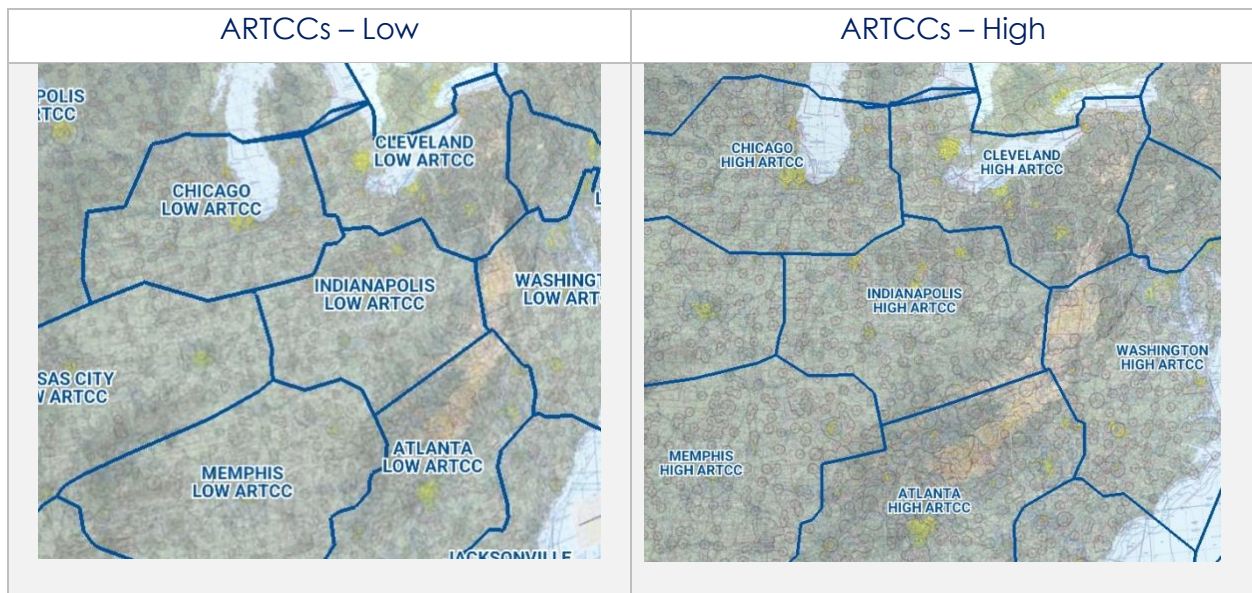


#### 14.4.5.2.1.10 Flight Information Regions (FIR)

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap to select **FIR** from the *FIRs* segmented control. The Map will be divided into specified regions of airspace.
6. Tap a region of choice on the Map. A popup containing an overview of the flight information region will be displayed.

#### 14.4.5.2.1.11 Upper Flight Information Region (UIR)

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap to select **UIR** from the *FIRs* segmented control. The Map will be divided into specified regions of airspace.
6. Tap a region of choice on the Map. A popup containing an overview of the upper flight information region will be displayed.

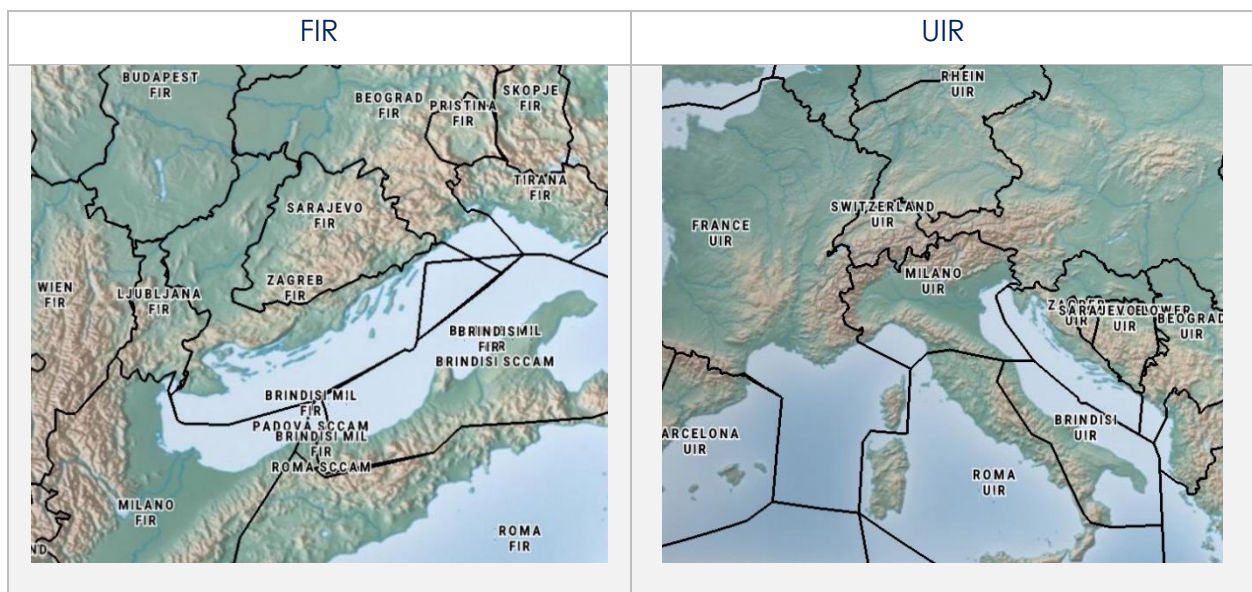

#### 14.4.5.2.1.12 Fuel Locations


Contract fuel locations are available to users to populate the Map. The contract fuel icons are selectable and contain FBO information for the respective location.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Fuel Locations** to enable the option. Contract fuel locations will populate the Map.
6. Tap a fuel pump of choice on the Map. A popup containing information on the respective fuel location will be displayed.

#### 14.4.5.2.1.13 Hazards

Hazards are marked locations on the Map that were created by users. This option must be enabled to view dropped hazards. If no hazards were dropped, refer to [Section 14.4.12.1.4](#) for additional information.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Hazards** to enable the option. Dropped Hazards will populate the Map.
6. Tap a hazard of choice on the Map. The Map Identifier Menu will appear.
7. To view hazard information, tap **Show** from the side menu.
8. Tap **Info and Wx** and hazard information will be displayed.

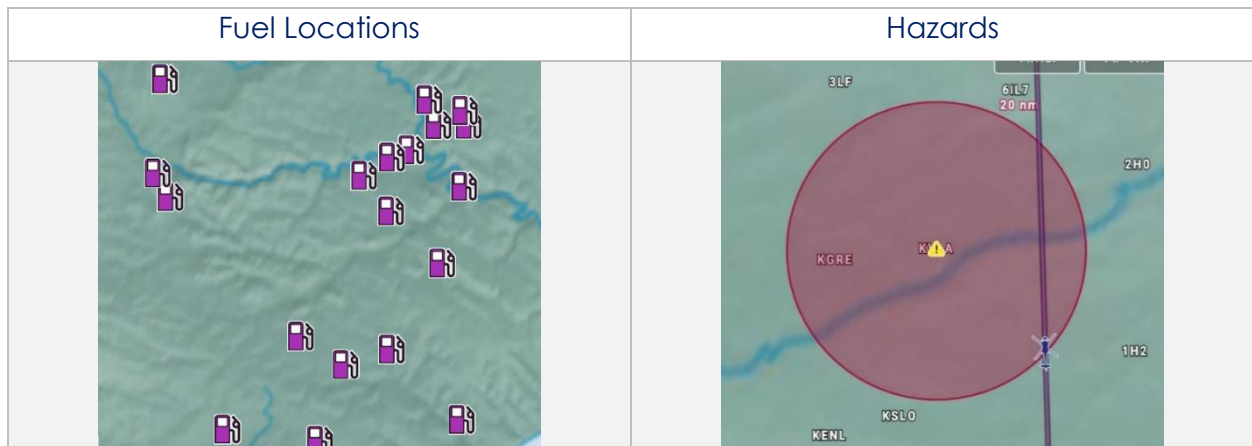




#### 14.4.5.2.1.14 International Boundaries

International Boundaries delineate the space between sovereign states.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **International Boundaries** to enable the option. Divisions of the sovereign states will overlay on the Map.

#### 14.4.5.2.1.15 Mountainous Areas

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Mountainous Areas** to enable the option. Mountainous terrain will overlay on the Map.

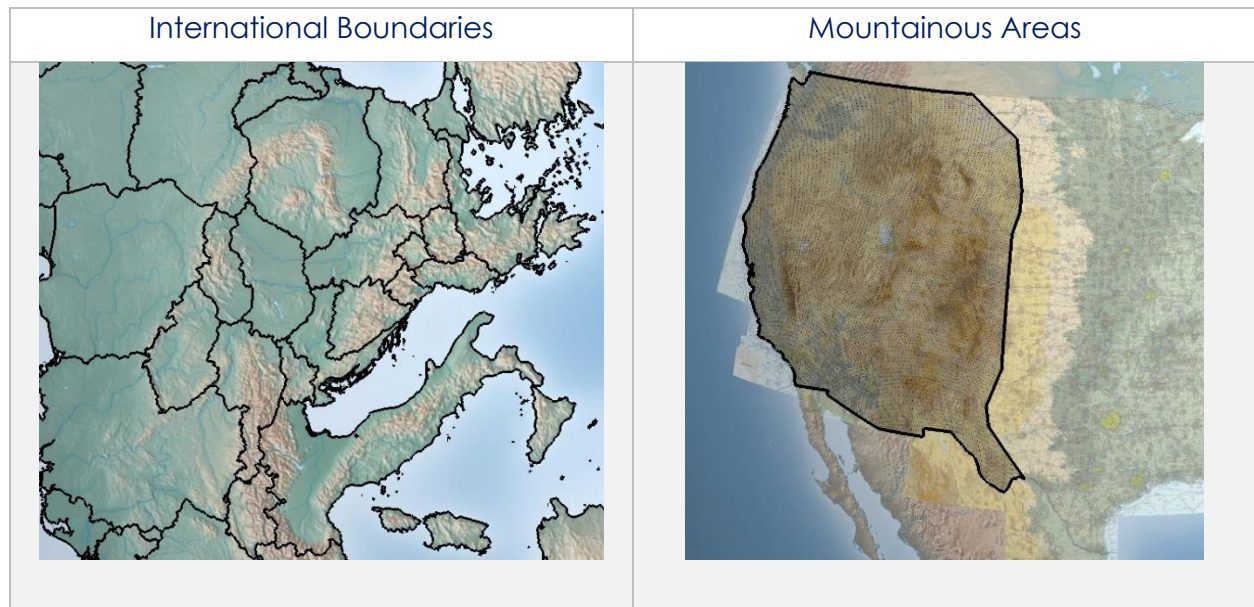





#### 14.4.5.2.1.18 Military Training Routes (MTRs) Slow Speed Route (SR)

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap to select **SR** from the MTRs segmented control. Slow speed military training routes will populate the Map.
6. Tap an MTR of choice on the Map. A popup containing information on the MTR will be displayed.




**NOTE:** Users can add MTRs to route. Refer to [Section 14.1.1.1](#) for additional information.

#### 14.4.5.2.1.19 Pins

Pins are marked locations on the Map that were dropped by users. This option must be enabled to view dropped pins. If no pins were dropped, refer to [Section 14.4.12.1.3](#) for additional information.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Pins** to enable the option. Dropped pins will populate the Map.
6. Tap a pin of choice on the Map. The Identifier Menu will display.
7. To view pin information, tap **Show** from the side menu.
8. Tap **Info and Wx** and pin information will be displayed.

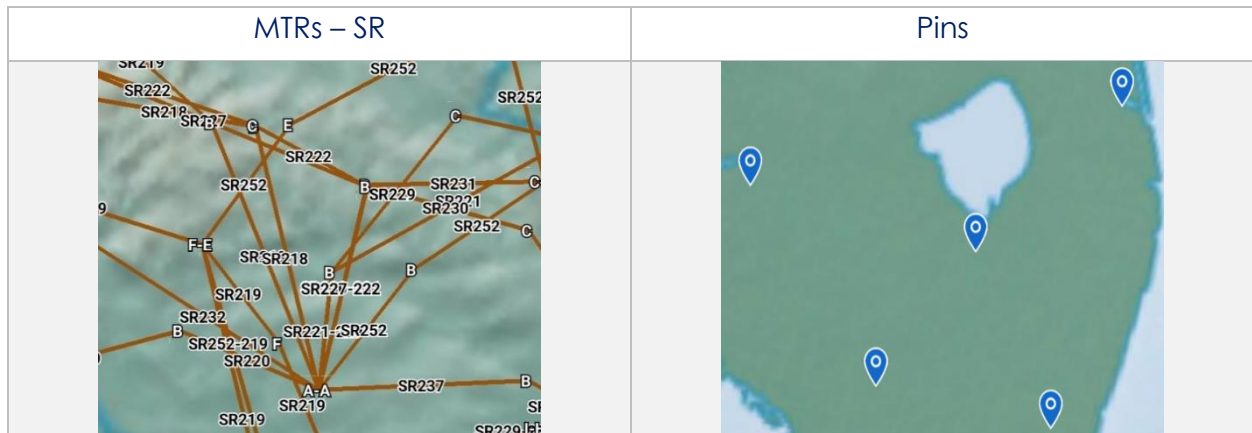

#### 14.4.5.2.1.20 Runways


1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Runways** to enable the option. Airport runways will populate the Map.

#### 14.4.5.2.1.21 Search and Rescue (SAR) Grids

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **SAR Grids** to enable the option. Worldwide SAR grids will overlay on the Map.



**NOTE:** If SAR grids have been enabled but are not displaying, try zooming in on the Map screen to view the grids.

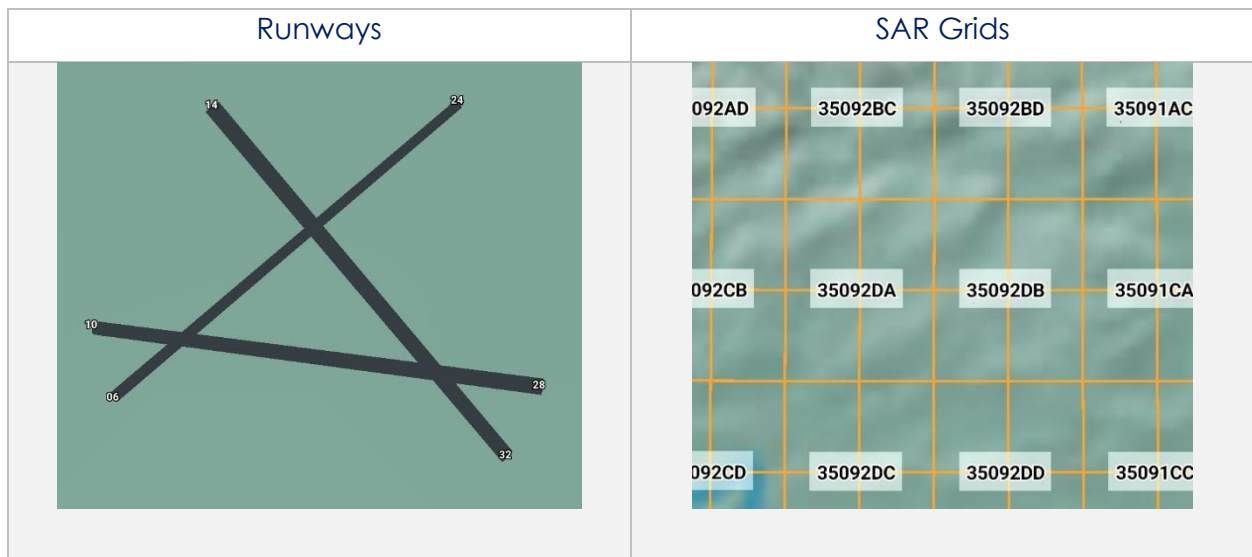

#### 14.4.5.2.1.22 Special Use Airspaces (SUAs)

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap to select **On** from the SUAs segmented control. Special airspaces will be displayed on the Map.
6. Tap to select **+Labels** from the segmented control to display labels on special use airspaces.
7. Tap an SUA of choice on the Map. A popup containing SUA information will be displayed.



#### 14.4.5.2.1.23 Terrain


1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Terrain** to enable the option. Terrain coloring will overlay on the Map.
6. The overlay will display red and yellow coloring which depicts the proximity of the pilot's ownship relative to terrain. The different colors indicate the following:
  - **Red** – ownship is less than or equal to 100 feet above terrain
  - **Yellow** – ownship is 100 to 1,000 feet above terrain
7. By default, the transparency is set to 100%. Drag the slider to adjust the route line transparency to any value between 20% to 100%.



**NOTE:** Terrain Coloring data must be loaded to view the Terrain overlay. Refer to [Section 9.13](#) for additional information.




**NOTE:** The elevation of the water is the water's true elevation, therefore, the terrain coloring for water will range from red to yellow depending on the ownship's altitude.

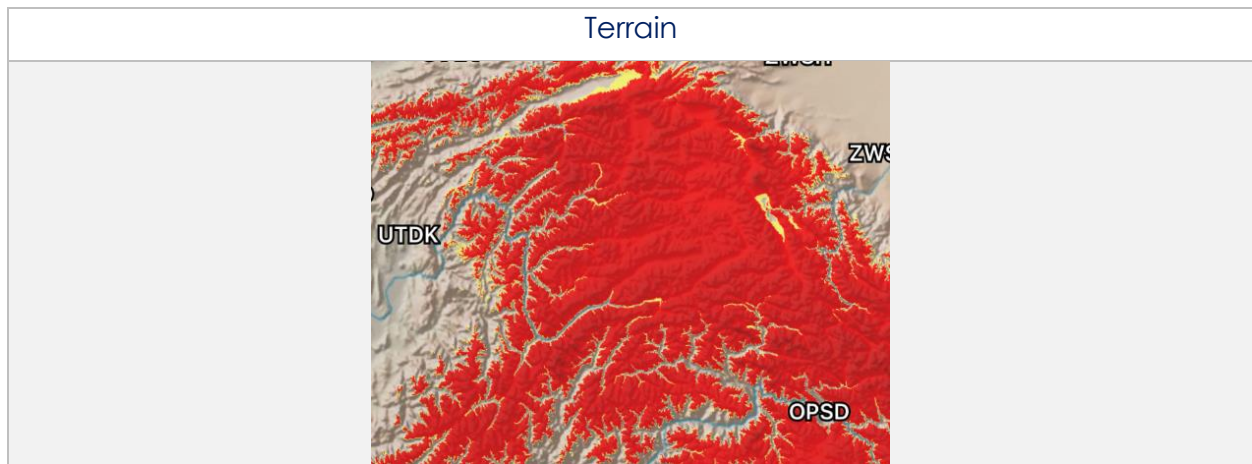


#### 14.4.5.2.1.24 Temporary Flight Restrictions (TFRs)

Temporary Flight Restrictions (TFRs) can be displayed on the Map view. By tapping on a TFR overlay, the TFR textual data will display for that specific TFR selection.


1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **TFRs** to enable the option.
6. Exit from the Overlays popup and navigate to the AF Wx button on the Map.
7. The AF Wx and TFRs popup will display. Select **Credentials**.

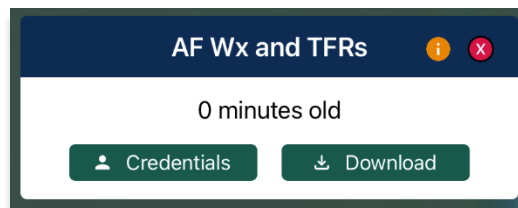

8. Select desired method of authentication using any of the following options:
  - Aero User Database
  - GEOAxis
  - MDM

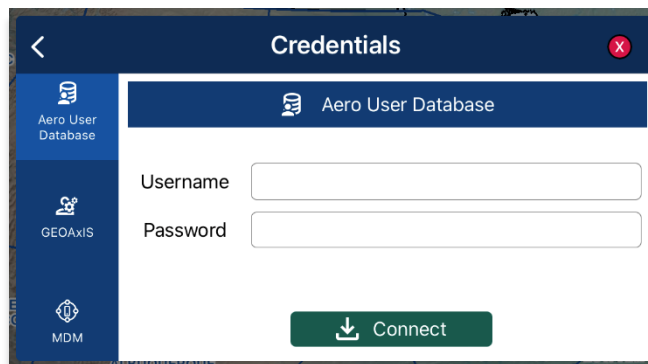

9. Tap **Connect** when done.
10. The TFRs will populate the Map.
11. Tap on a TFR to display TFR information.

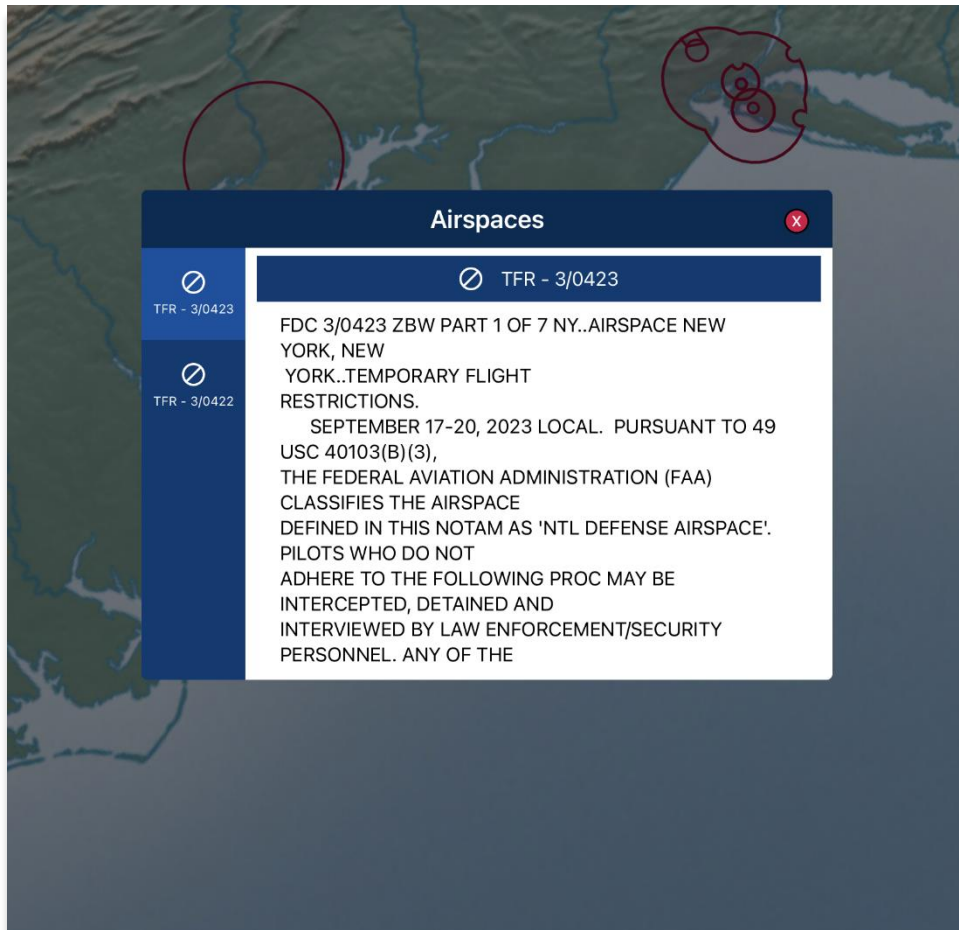


**NOTE:** In the case where a TFR overlaps another TFR, a Which One popup will appear to confirm selection.



#### 14.4.5.2.1.24.1 View Textual Temporary Flight Restrictions (TFRs)

Textual Temporary Flight Restrictions (TFRs) can be viewed from the Overlays menu. TFRs, including presidential TFRs, will be listed on the popup.

1. Prior to viewing textual TFRs, users must ensure that they are logged in using their Aero User Database or GEOAxis credentials.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Scroll to the bottom of the Overlays menu to view additional overlays. Locate *TFRs* and tap the **document** icon beside the option.
6. The Temporary Flight Restrictions popup will display with all TFR data including presidential TFRs. Scroll down to view additional TFRs.

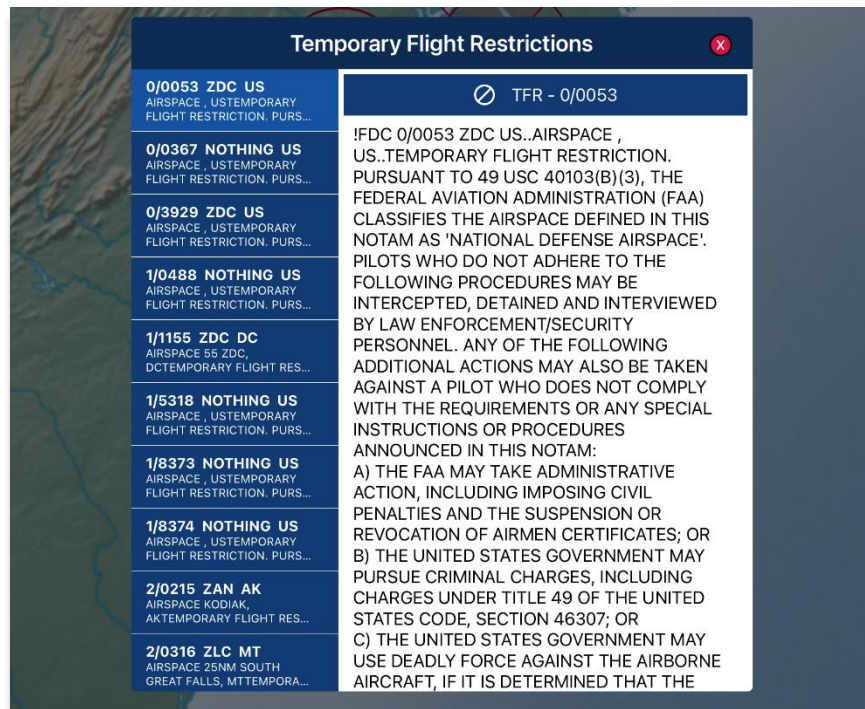



#### 14.4.5.2.1.25 Time Zones


Time Zones are shown on the Map view with lines separating the longitudinal divisions. Labels display the time offset for each time zone.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **Time Zones** to enable the option. The Map will display lines separating longitudinal divisions.

#### 14.4.5.2.1.26 User Images

User Images are Photo Pins that were dropped by users. The User Images overlay is exclusive to Photo Pins. This option must be enabled to view dropped photo pins. If no pins were dropped, refer to [Section 14.4.12.1.3.1](#) for additional information.


1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **User Images** to enable the option. Dropped photo pins will populate the Map.

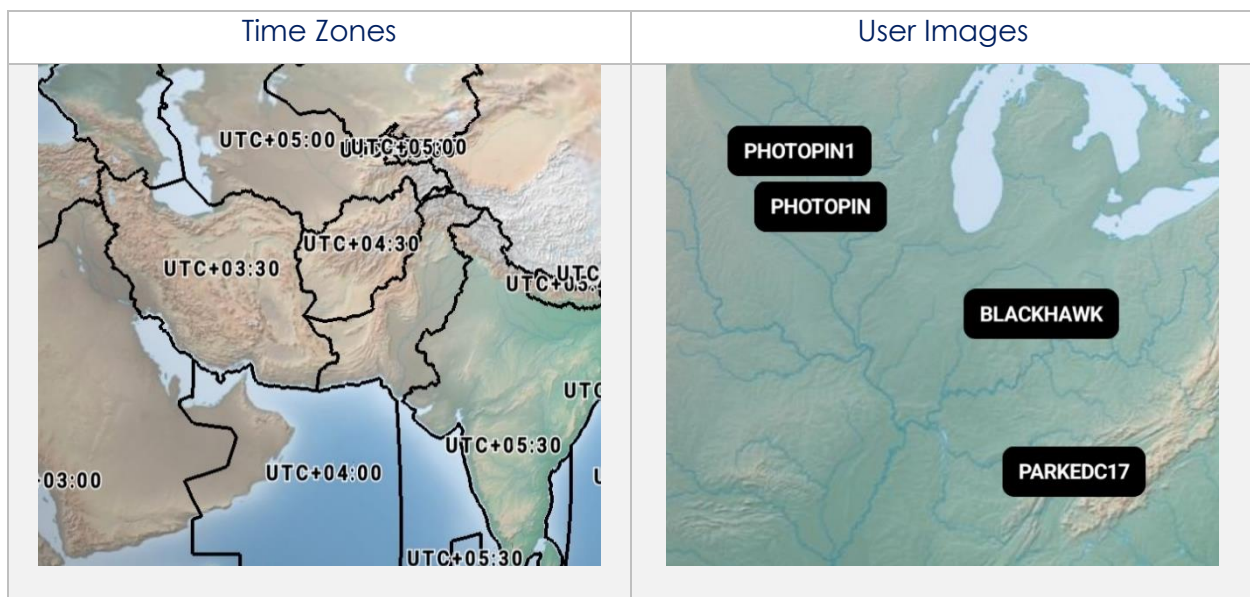

#### 14.4.5.2.1.27 Vertical Obstructions (VOs)

Vertical Obstructions (VOs) will mark locations of towers, buildings, and bridges that are over 150'. In addition, users can tap to view additional information such as coordinates, AGL, and MSL about a specific VO.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap **VOs** to enable the option. Vertical obstructions will populate the Map.
6. Tap a vertical obstruction of choice on the Map. A popup containing VO information will be displayed.

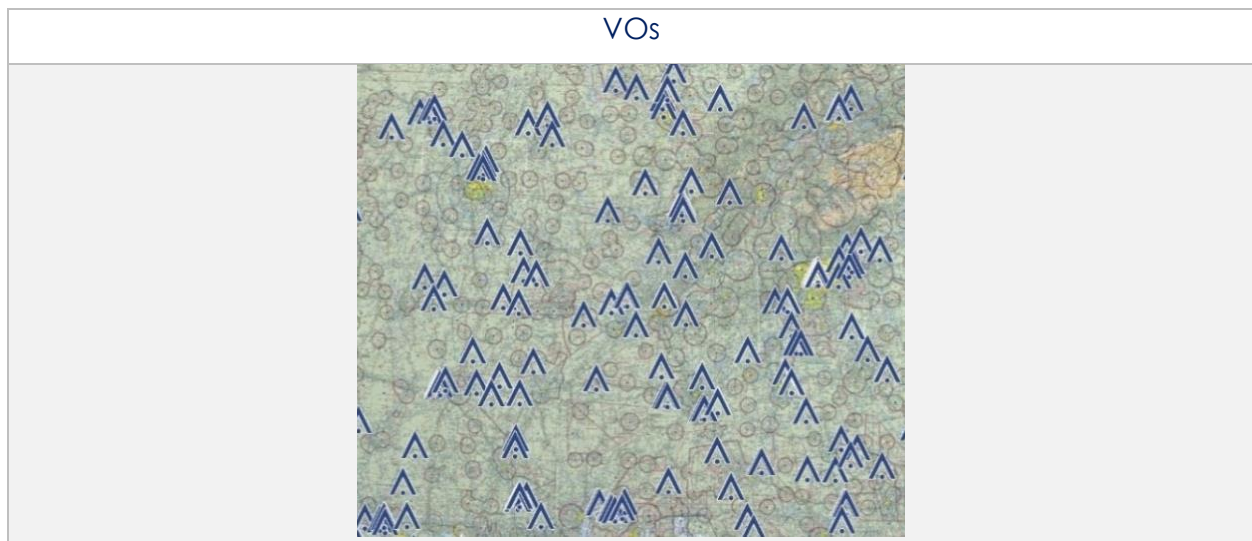


#### 14.4.5.2.2 Traffic

Air traffic can be displayed on Aero App based on the given information provided from your ADS-B receiver. A successful connection to an ADS-B receiver is required to view traffic on the Map. Refer to [Section 14.4.4](#) for additional information.

##### 14.4.5.2.2.1 Traffic

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Traffic** from the side menu.
5. Tap **Traffic** to enable the option. ADS-B traffic will populate the Map.

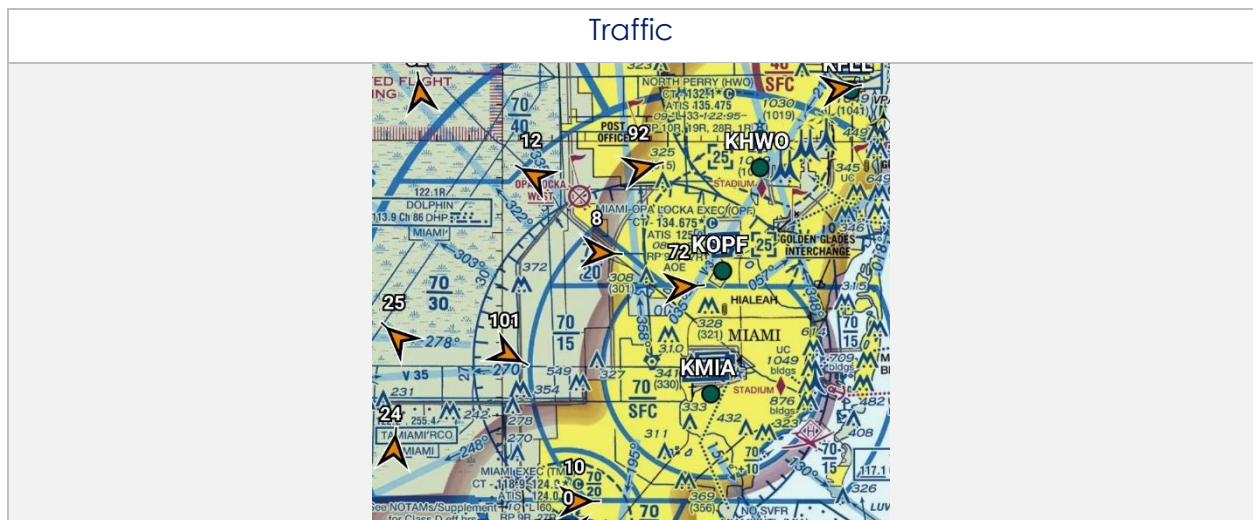


### 14.4.5.2.3 User Overlays


Aero App enables users to sideload User Overlays such as Shapefiles, GeoJSON, and KML/KMZ files to their Aero App directory. Refer to [Section 11](#) for additional information.

#### 14.4.5.2.3.1 User Overlays


1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **User Overlays** from the side menu.
5. Tap one or multiple **User Overlays** from the sideloaded Shapefiles, GeoJSON, and KML/KMZ files to load onto the Map.
6. Users will have the option to configure their User Overlays by tapping the radio button located to the right of the selected user overlay.
7. An *Options* popup will display, select desired *Line Width*, *Color*, and adjust *Transparency* to desired preference.
8. Tap **Save** once desired settings have been selected.

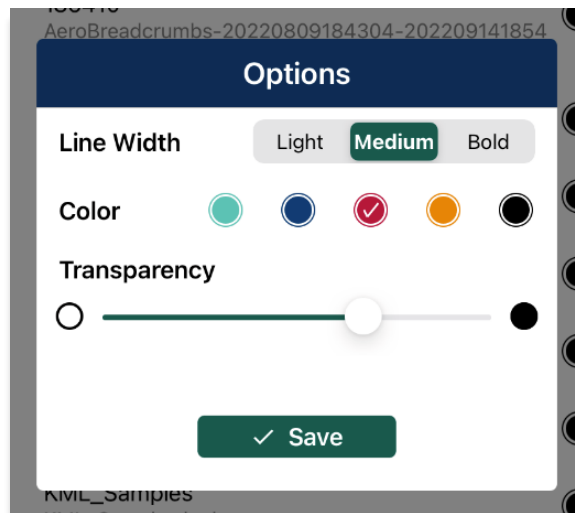

9. Locate and tap user overlay from the Map. Users are presented with the following options:
- **Modify Overlay** – returns to the overlay configuration popup to make changes to the user overlay.
  - **Hide Overlay** – hides the user overlay.

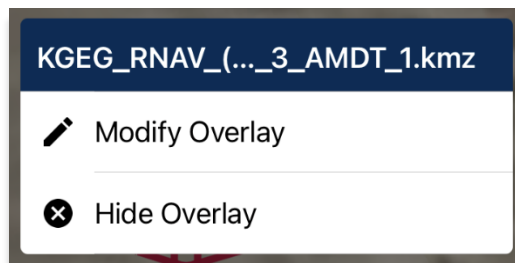


10. To delete an overlay, from the *User Overlays* popup, swipe left to reveal the delete button of the file that you want to permanently remove. Tap **Delete**.

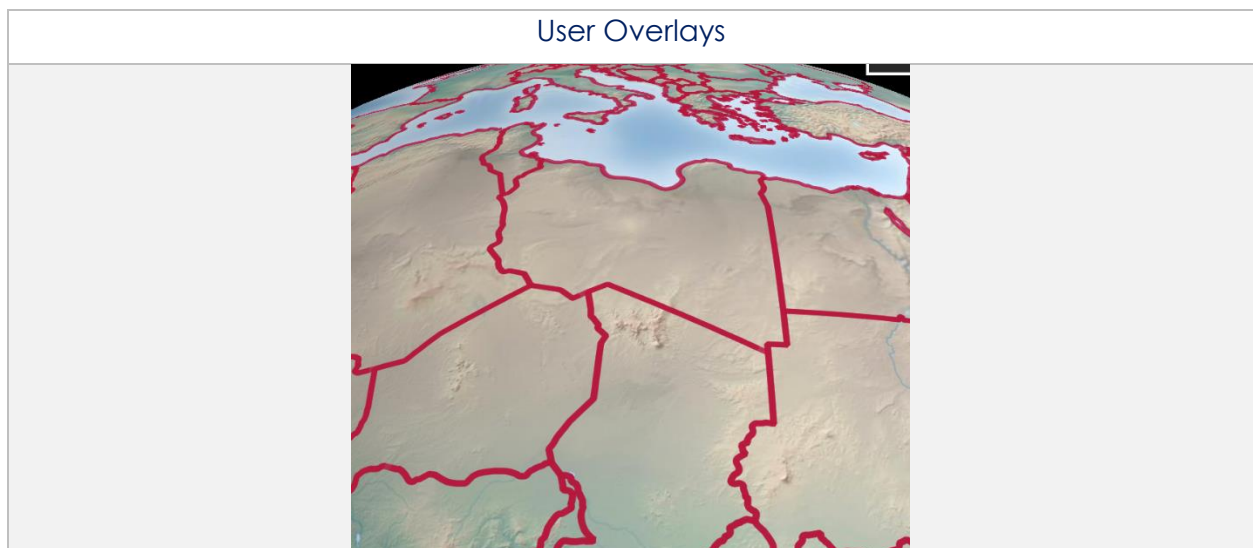

#### 14.4.5.2.3.2 Share KML/KMZ

KML/KMZ files can be shared between Aero App users via AirDrop or Email.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **User Overlays** from the side menu.
5. Tap **Share** and the Share KML/KMZ popup will display.
6. Select desired **file(s)** to share.
7. Select desired **method of sharing**.
8. By selecting **AirDrop**, the AirDrop popup will appear with the KML/KMZ files attached. Refer to [Section 14.4.5.2.3.2.1](#) for additional information.
9. By selecting **Email**, the email provider in which you have set your device to share files to, will appear with the KML/KMZ files loaded as an attachment. Refer to [Section 14.4.5.2.3.2.3](#) for additional information.

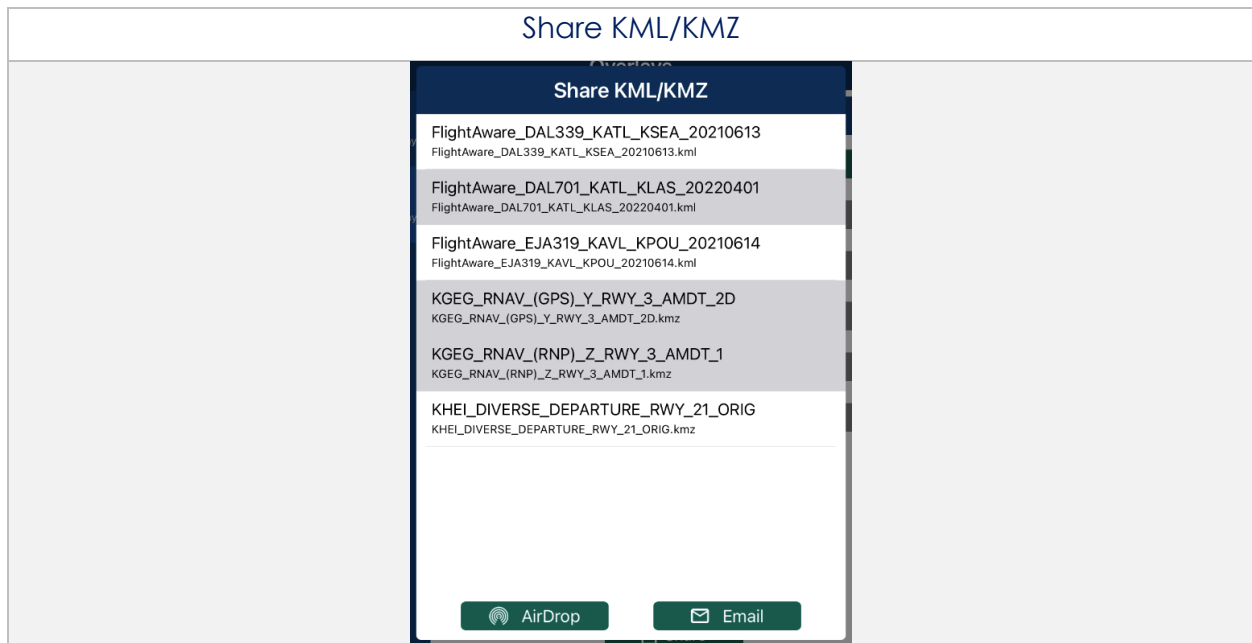


**NOTE:** The share options will be disabled if no files have been selected.


#### 14.4.5.2.3.2.1 Sharing KML/KMZ Files Through AirDrop

KML/KMZ files can be shared with another Apple device through AirDrop. The person receiving the files must have their AirDrop *enabled* on the devices prior to receiving any files. Refer to [support.apple.com](https://support.apple.com) for additional information on AirDrop.

1. On the sharing device, the AirDrop popup will display. Ensure the receiving device has their AirDrop enabled to allow the sharing device to select the device in which the KML/KMZ files will be sent to.

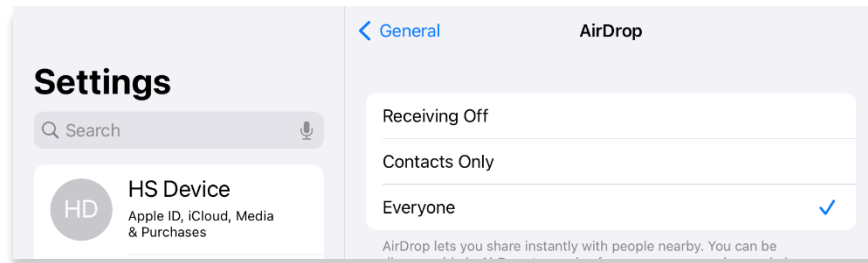

2. Your device will begin to scan for nearby devices. Select a device listed below the *Devices* section.

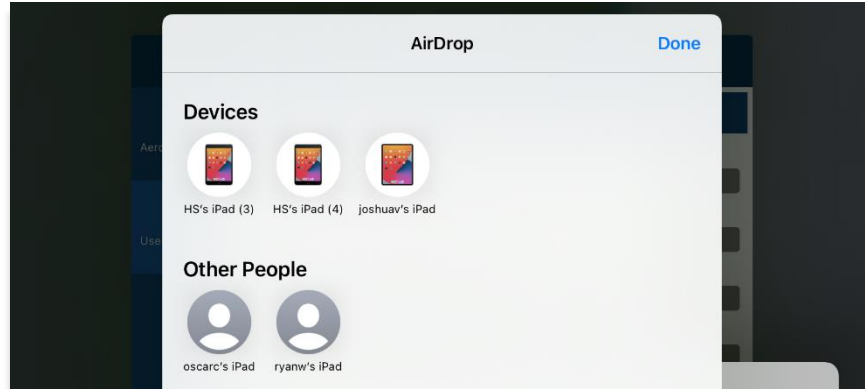

3. The sharing process will begin, and the receiving device will follow prompts to accept the files that are being shared.




#### 14.4.5.2.3.2 Receiving KML/KMZ Files Through AirDrop

Users receiving the files via AirDrop must follow the prompts to accept the files being sent. Users must have their AirDrop *enabled* to avoid receiving interruption. Different behaviors will occur depending on the device's operating system. Refer to [support.apple.com](https://support.apple.com) for additional information on AirDrop.


1. Ensure your device's AirDrop is enabled.
2. An AirDrop notification will appear with options to *Decline* or *Accept*. Tap **Accept**.

The KML/KMZ file is stored in your device's Files app. To view the files on Aero App, users must transfer the files to Aero App and open them through the document picker.

3. From the document picker view, locate and select the received KML/KMZ files.

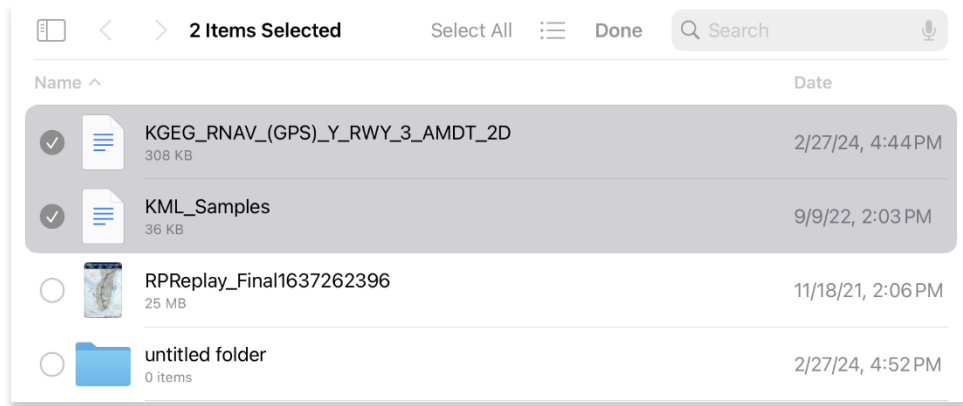


4. Selecting files will trigger the additional actions at the bottom of the page to become selectable. Select **Share**.



5. Select **Aero App**. Aero App's document picker will display.




6. Select desired KML/KMZ files to load onto Aero App then tap **Open**.

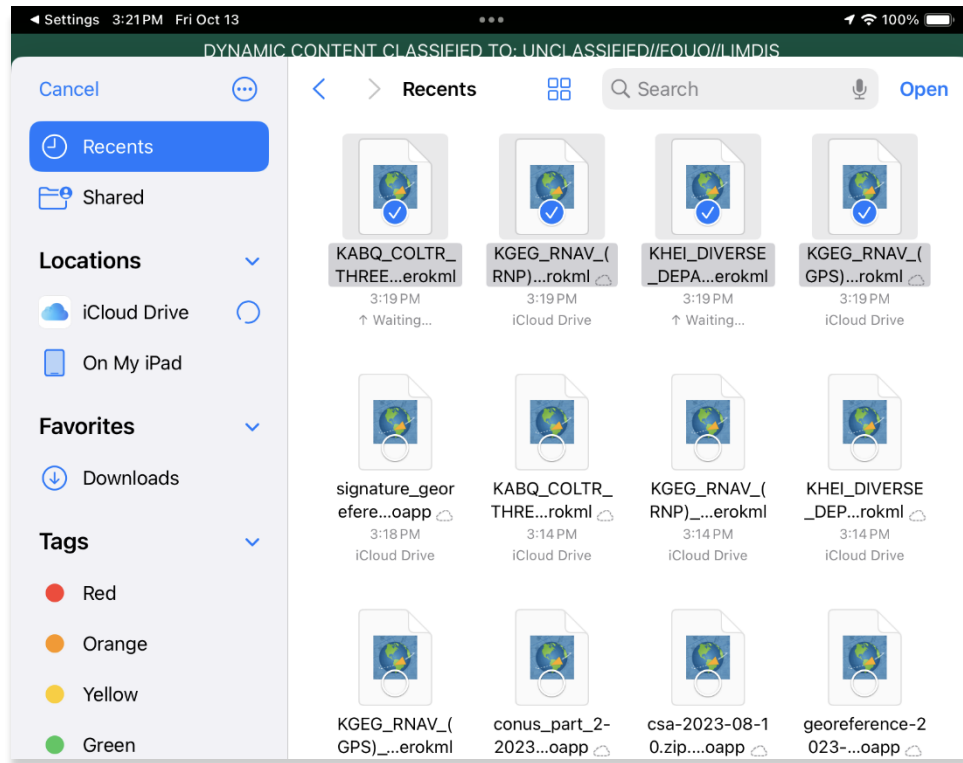

**NOTE:** The document picker only applies to device's running iOS 17 or later.

7. The Airdropped files will be loaded in the Overlays popup of the Map. Select desired files to overlay on the Map view.

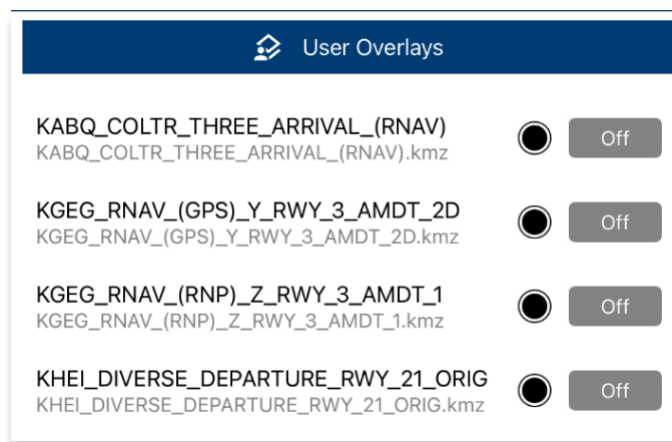


8. Aero App provides users the option to import missed files into Aero App. Navigate to the Date Status page and select **Import** to load the files that you wish to view on Aero App.


#### 14.4.5.2.3.2.3 Sharing KML/KMZ Files Through Email

KML/KMZ files can be shared through email. Users must set their *device setting* to their desired email provider for *both* devices prior to sharing or receiving any files.

1. On the sharing device, the email provider in which you have set your device to share files to, will display with the KML/KMZ files attached.

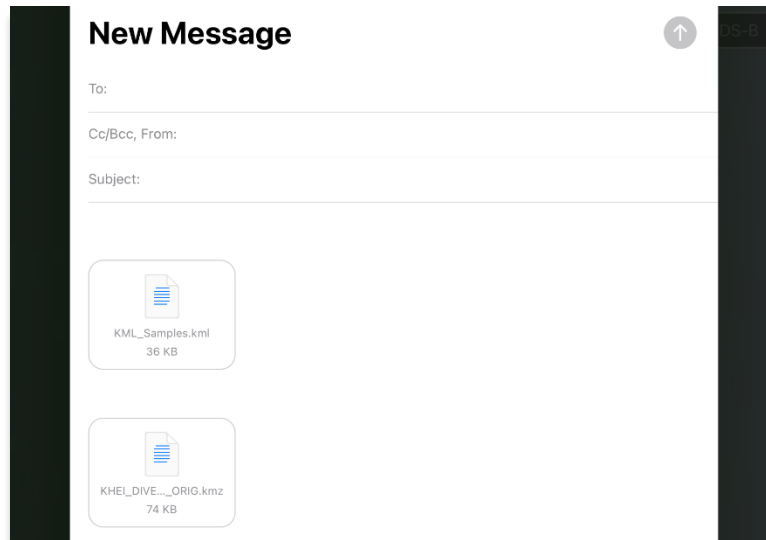


2. Enter the recipient's email address to which you would like to share the KML/KMZ files.
3. Once a valid email address has been entered, the *send button* will become selectable. Tap the **Send** button and the receiving device will follow prompts in downloading the files onto their device.

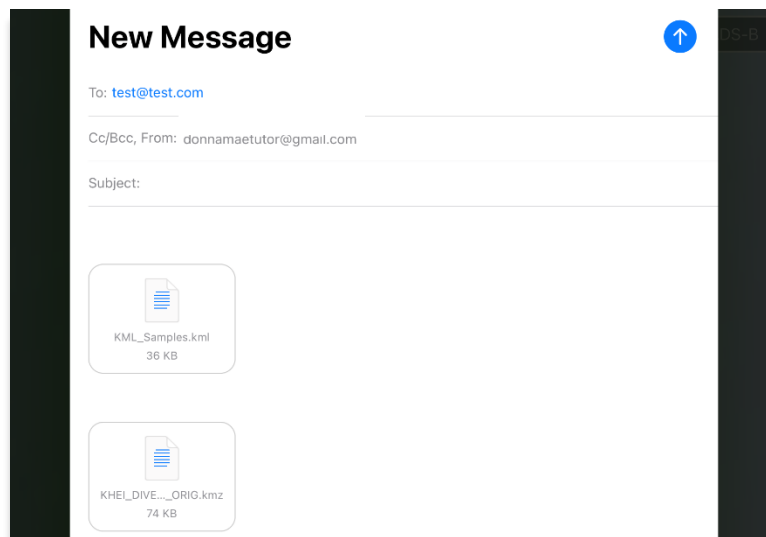


#### 14.4.5.2.3.2.4 Receiving KML/KMZ Files Through Email

1. On the receiving device, navigate to the email provider in which the KML/KMZ files were sent to.

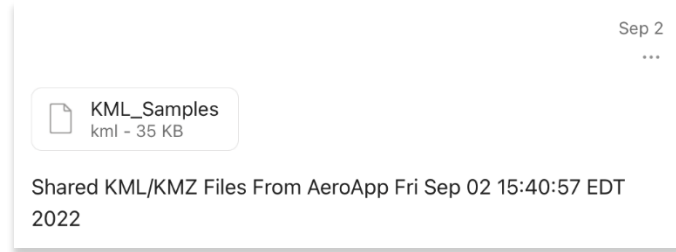


2. From the email provider, tap the **Download** button.
3. Users will be presented with options to **Save to Account** and **Share File via....**  
Select **Share File via....**

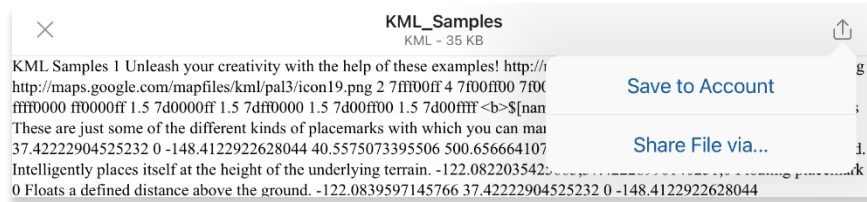


4. Tap **Save to Files** from the list of actions.

5. Select **On My iPad** for the location to store the files, then tap **Save**.

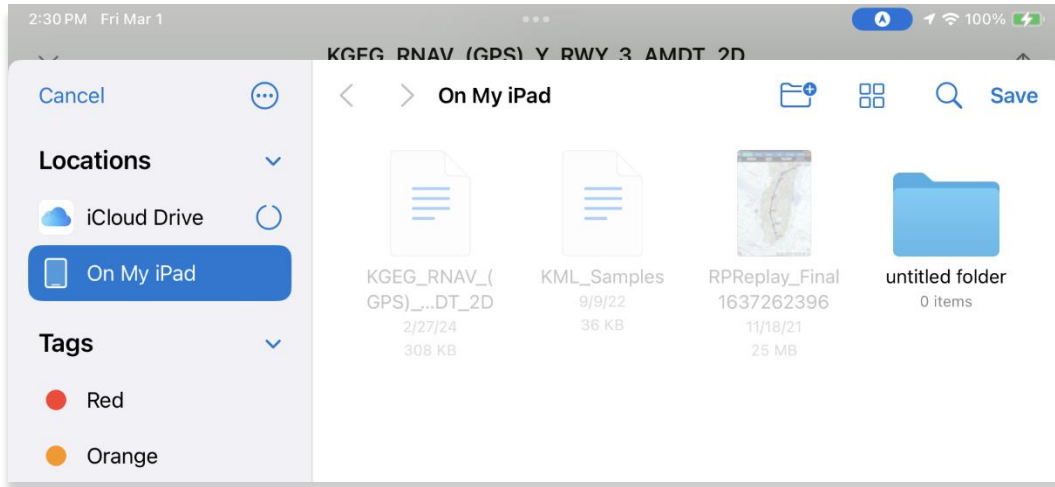


The KML/KMZ file is stored in your device's Files app. To view the files on Aero App, users must import the files into Aero App through the *Import* feature on the Data Status page. Alternatively, users can import files into Aero App directly from the device's Files app.

6. Open **Aero App**.
7. Tap **Data** on the **Main Menu**.
8. Tap **Import** and the system file picker will appear.
9. Locate and tap the KML/KMZ file.
10. Tap **Open**. The KML/KMZ file will begin to load onto Aero App.

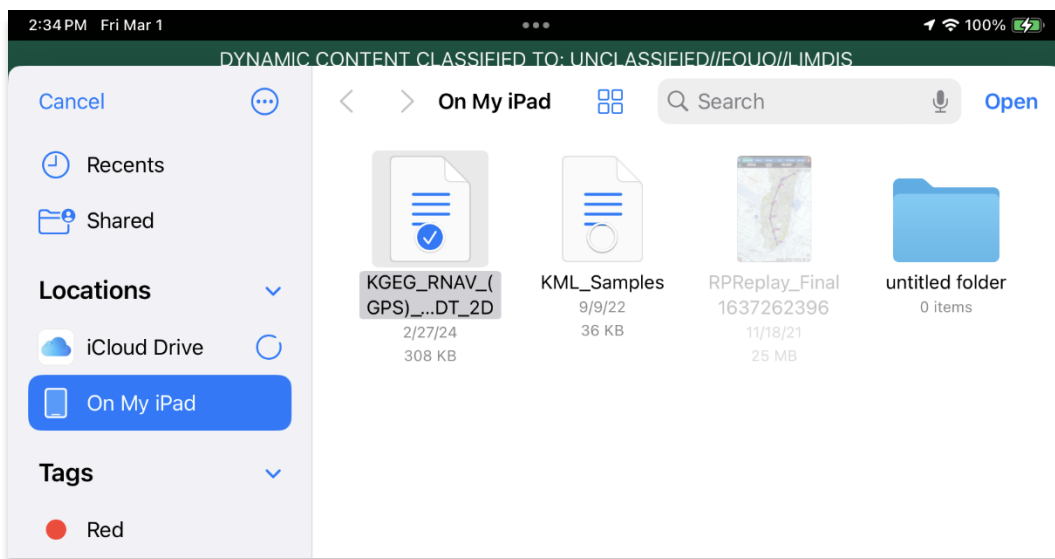

11. The KML/KMZ file can now be viewed on Aero App. Tap **Map** on the **Main Menu**.
12. Navigate to **Map Manager**.

13. Select **Overlays** from the navigation bar.
14. Select **User Overlays** from the side menu.
15. Locate and tap to enable the KML/KMZ file from the *User Overlays* collection.  
The KML/KMZ file will overlay on the Map.

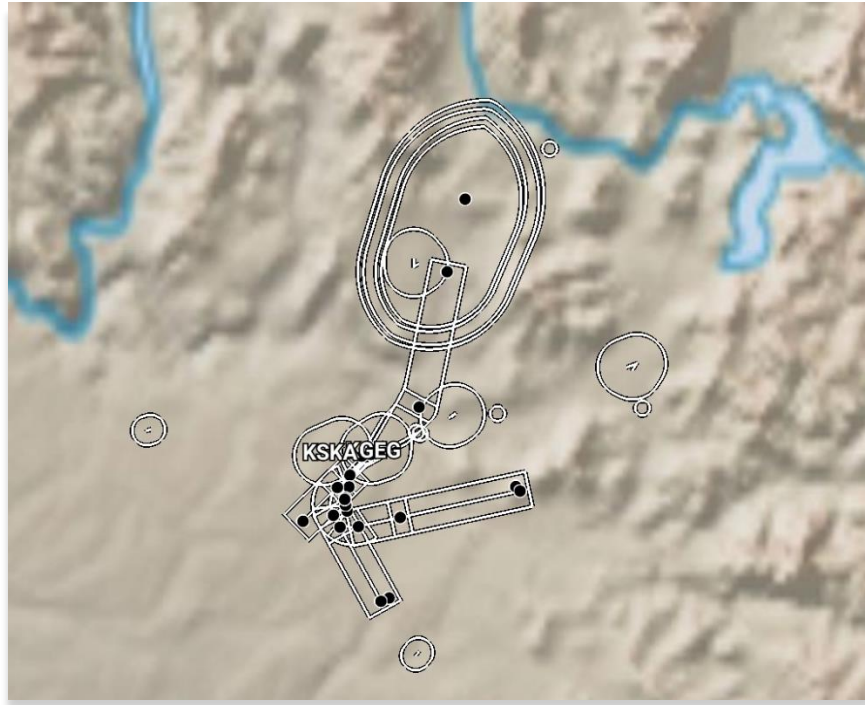

16. To delete the overlay, from the **User Overlays** popup, swipe left to reveal the delete button of the file that you choose to permanently remove. Tap **Delete**.


#### 14.4.5.2.4 Weather

Aero App Weather has various options that enable pilots to display METARs and ADS-B weather on the Map. Users can modify their ADS-B flight altitude and ADS-B overlay transparency.

##### 14.4.5.2.4.1 METARs

The METARs option must be enabled to view the latest ADS-B and/or Air Force Weather (AF Wx) on the Map. To view AF Wx (Wi-Fi or cellular required), user must be logged in through AUD, GEOAxIS, or with MDM.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar.
4. Select **Weather** from the side menu.
5. Tap **METARs** to enable the option. The flight rules will overlay on the Map.


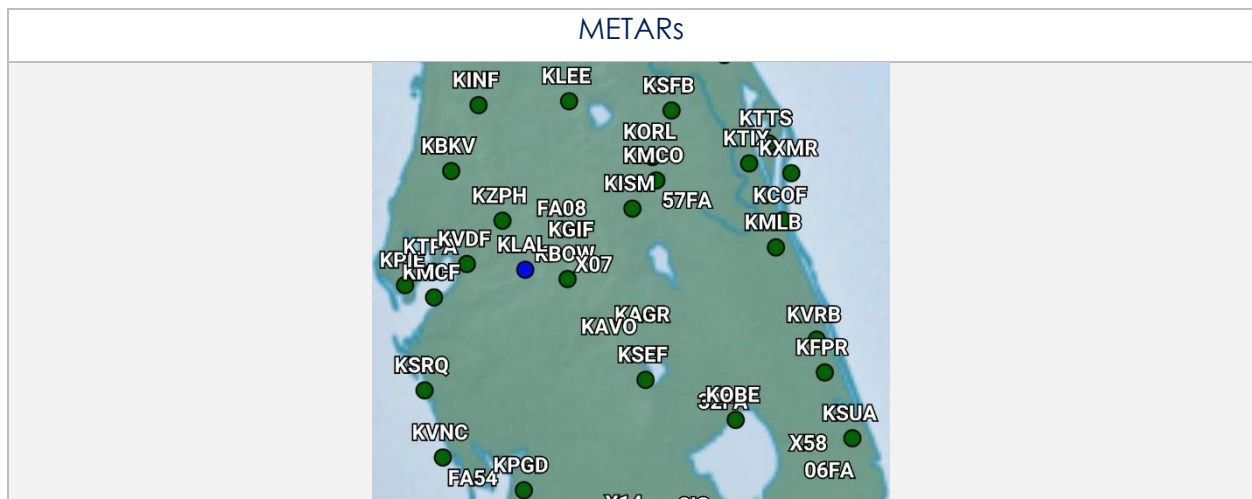


**NOTE:** Air Force Weather (AF Wx) is only available via internet. However, if ADS-B weather information becomes available; whichever source has the latest data will show as the current weather.

#### 14.4.5.2.4.2 ADS-B Weather


Aero App provides animated ADS-B weather such as Lightning, Cloud Tops, Icing Probability, Icing Severity, Icing SLD Potential, NEXRAD, and Turbulence. User must establish an ADS-B connection. For additional information, refer to [Section 14.4.4](#).

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Tap **Overlays** from the navigation bar.
4. Tap **Weather** from the side menu.
5. Tap **ADS-B** to enable the option. Additional ADS-B weather overlay options will be displayed.
6. Tap **Lightning** to enable the option.
7. Tap the radio buttons of the desired ADS-B weather overlay.
8. A Flight Altitude slider displays below all the ADS-B weather overlay options. The Flight Altitude slider is enabled when a required weather overlay option is selected. These weather overlays have an asterisk as listed below:
  - Icing Probability\*
  - Icing Severity\*
  - Icing SLD Potential\*
  - Turbulence\*
9. By default, the flight altitude value is set to 10,000'. Adjust the flight altitude slider to any value between 2,000' to 24,000'.
10. By default, the ADS-B overlay transparency value is set to 50%. Adjust the ADS-B overlay transparency slider to any value between 0% to 100%.

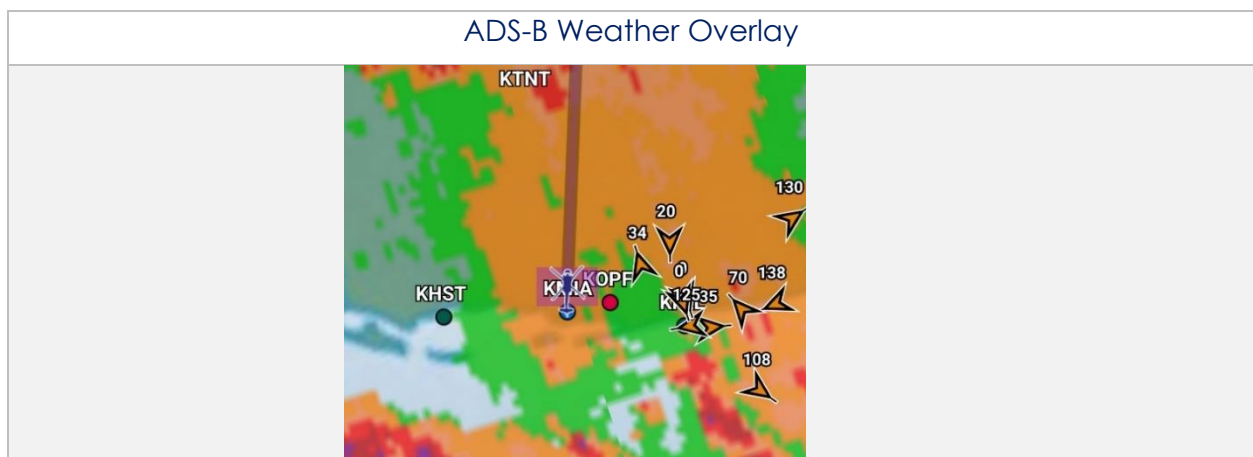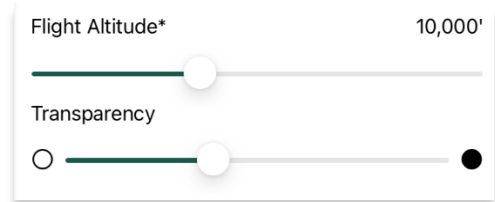

## 14.4.6 Map Options

The Map Options menu offers Location and Ownship settings and is located at the lower right of the Map view, directly below Map Manager.

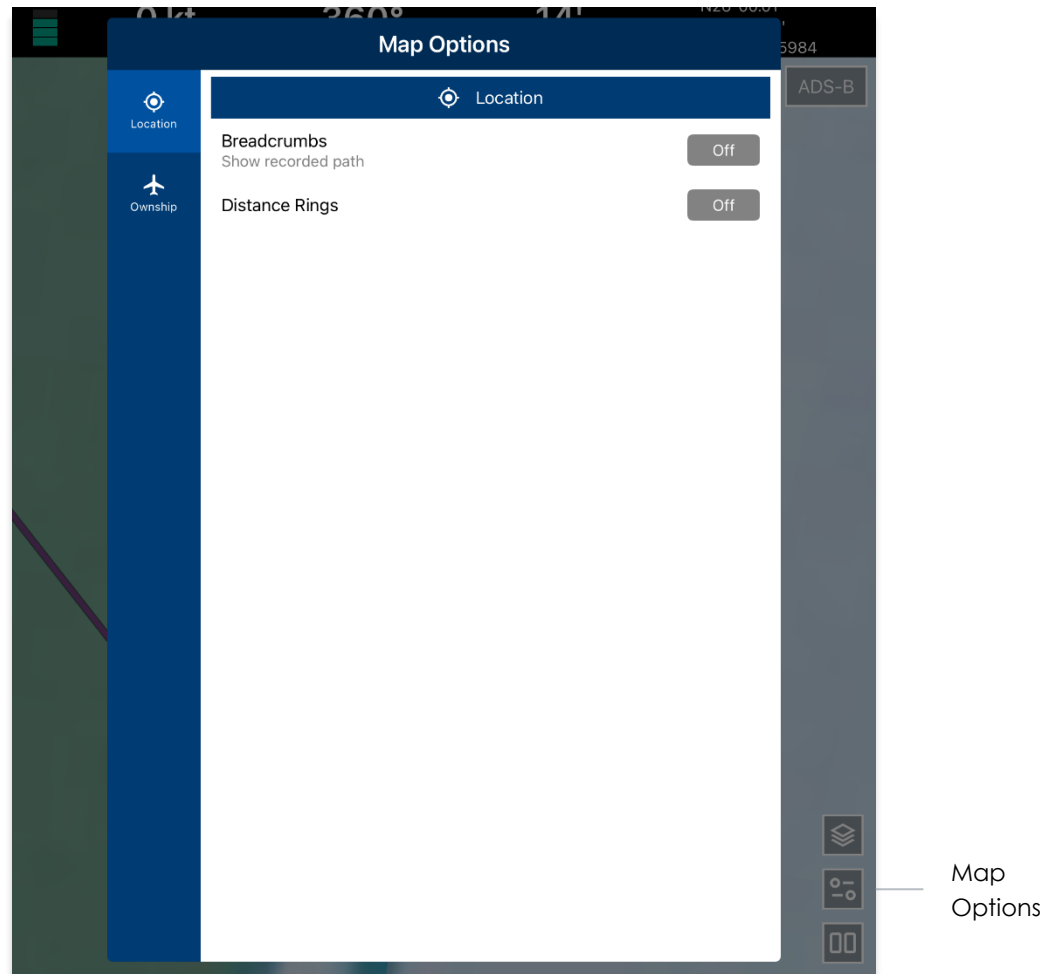

### 14.4.6.1 Location

The Location menu offers options to show recorded paths and the ability to add distance rings around your ownship.




#### 14.4.6.1.1 Breadcrumbs

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Options** located directly below Map Manager.
3. Select **Location** from the side menu.
4. Tap **Breadcrumbs** to enable the option. The breadcrumb trail tracks will be displayed in orange on the Map.




**NOTE:** Refer to [Section 14.4.1.8](#) for additional information regarding Breadcrumbs.

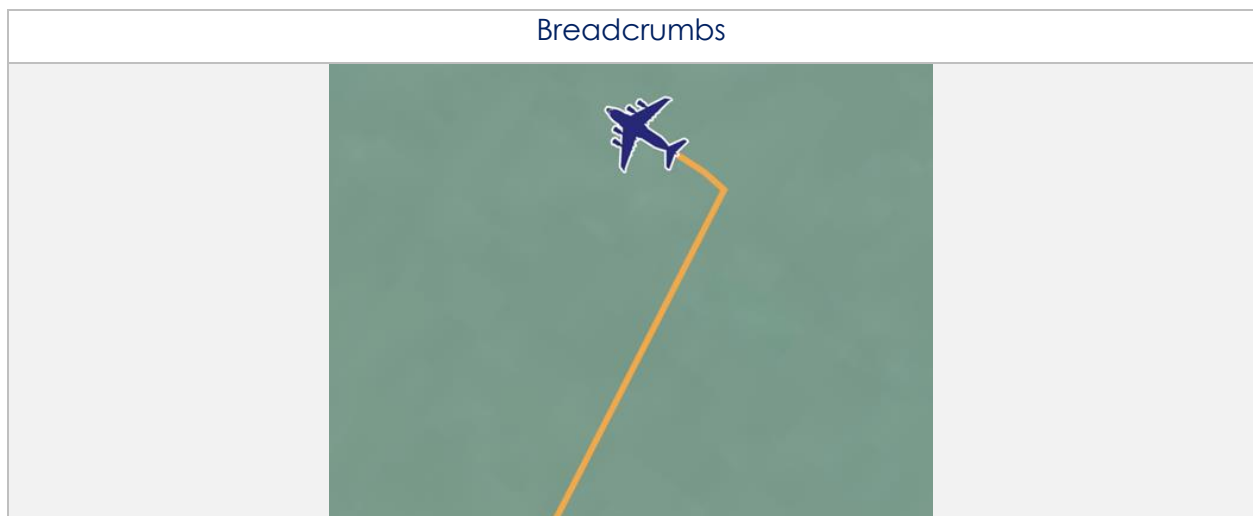

### 14.4.6.1.2 Distance Rings


Distance Rings are a series of rings surrounding the ownship. It is a tool that determines how far away something is from the location of your ownship. The distance rings' default settings can be modified to your Settings. The Outer Ring Distance setting represents the farthest distance from the ownship, and Distance setting is the length between each ring.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Options** located directed below Map Manager.
3. Select **Location** from the side menu.
4. Tap **Distance Rings** to reveal additional options for distance rings.
5. Tap on the **Outer Ring Distance** text field and enter desired outer ring distance in km or nm, respective to which distance unit format users have set in their Settings.

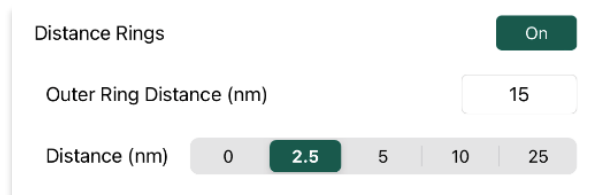


**NOTE:** The maximum outer ring distance is 999. Any values entered that are greater than 999 or invalid characters (e.g., emojis, special characters, or letters) will display an error.

6. Use the segmented control to select desired distance between rings from the options of 0, 2.5, 5, 10, and 25 km or nm, respective to the selected distance unit format in Settings.

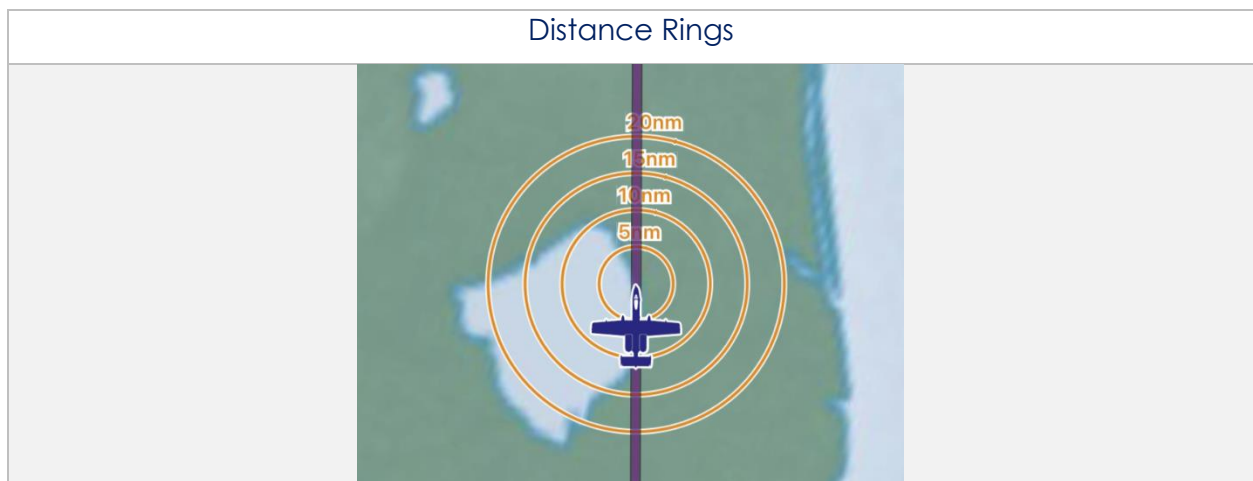

### 14.4.6.2 Ownship


The Ownship menu allows users to customize their ownship. Users can show or hide their Ownship from the Map view, Snap to Location in 15 second intervals, and choose North Up as the orientation on the Map.

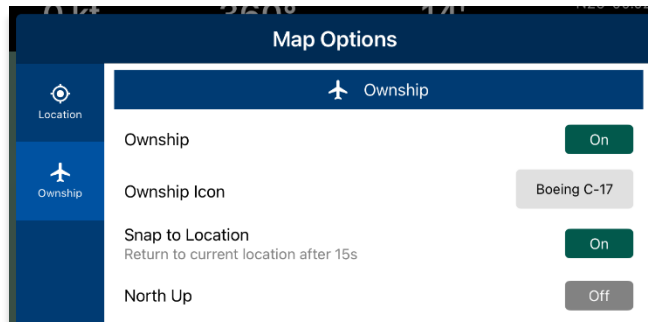

#### 14.4.6.2.1 Show Ownship and Ownship Icon

The location of your device is relative to the position of the ownship being displayed on the Map view. If your device is connected to an ADS-B or GPS receiver, Aero App will display the GPS location of your receiver. Refer to [Section 14.4.4](#) for additional information.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Options** located directly below Map Manager.
3. Select **Ownship** from the side menu.
4. Tap **Ownship** to enable the option. An ownship will display on the Map respective to the location of your device, ADS-B, or GPS receiver.
5. Tap the **Ownship Icon** options to display the selection of ownship icons.
6. Select the desired ownship to display the user's current location on the Map.

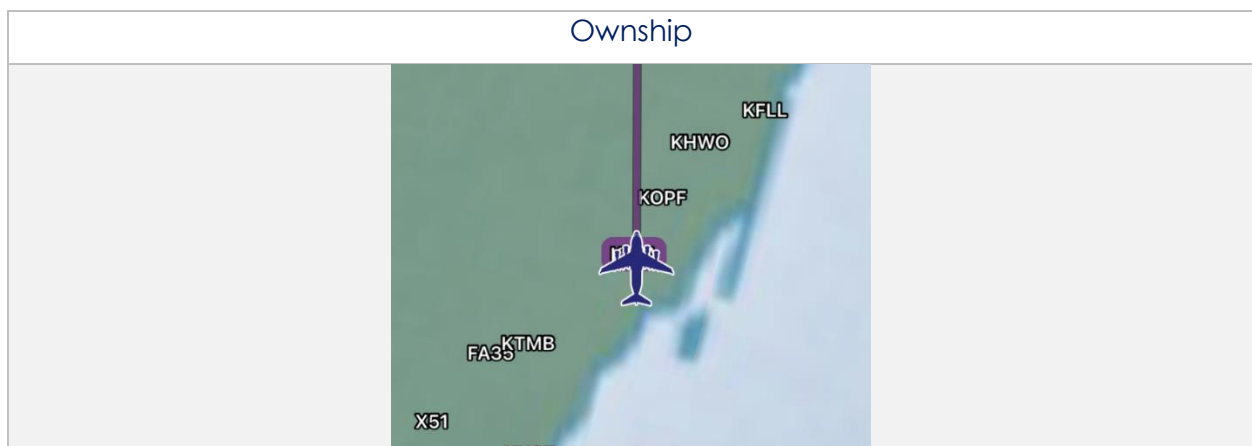

#### 14.4.6.2.2 Snap to Location

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Options** located directly below Map Manager.
3. Select **Ownship** from the side menu.
4. Tap **Snap to Location** to enable the option. The Map will automatically pan to your current location after 15 seconds.



**NOTE:** Alternatively, users can access their Snap to Location feature by tapping the *crosshair* icon on their Map view as explained in [Section 14.4.9](#).

#### 14.4.6.2.3 North Up

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Options** located directly below Map Manager.
3. Select **Ownship** from the side menu.
4. Tap **North Up** to enable the option. The Map will be repositioned to a north-up orientation which keeps a fixed point of reference.



## 14.4.7 Split Screen

Split Screen allows users to view IAP and APD charts, and user PDF documents simultaneously with the Map on the same screen.


### 14.4.7.1 APD and IAP for Destination Airport

The APD or IAP charts for the route's destination airport can be displayed simultaneously with the Map on a split screen.

1. Tap **Map** on the **Main Menu**.
2. Tap on the **split screen** icon located at the bottom right of the Map view. By default, the destination IAP chart is shown.
3. Tap on the **ribbon**.
4. Select a chart from the popup menu.


Split Screen button

Draw on  
Charts

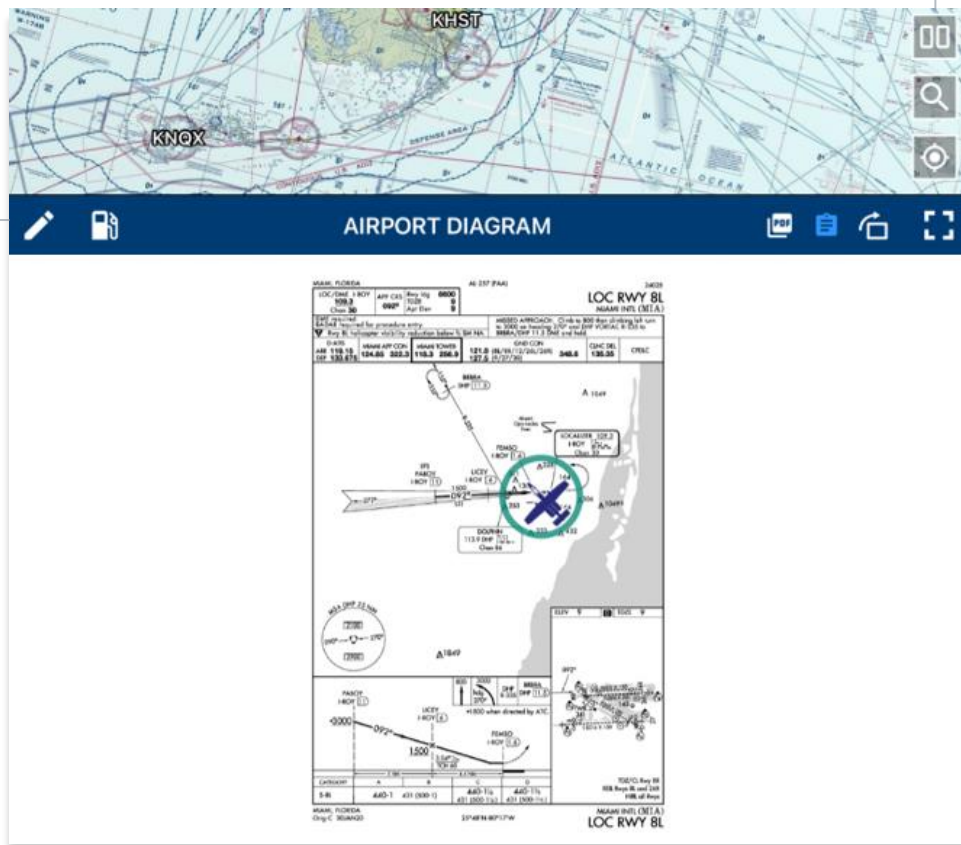

**NOTE:** If no route is loaded, no chart will display.

5. To switch to your destination APD, tap the document button located directly above the PDF button and the IAP will switch to APD.

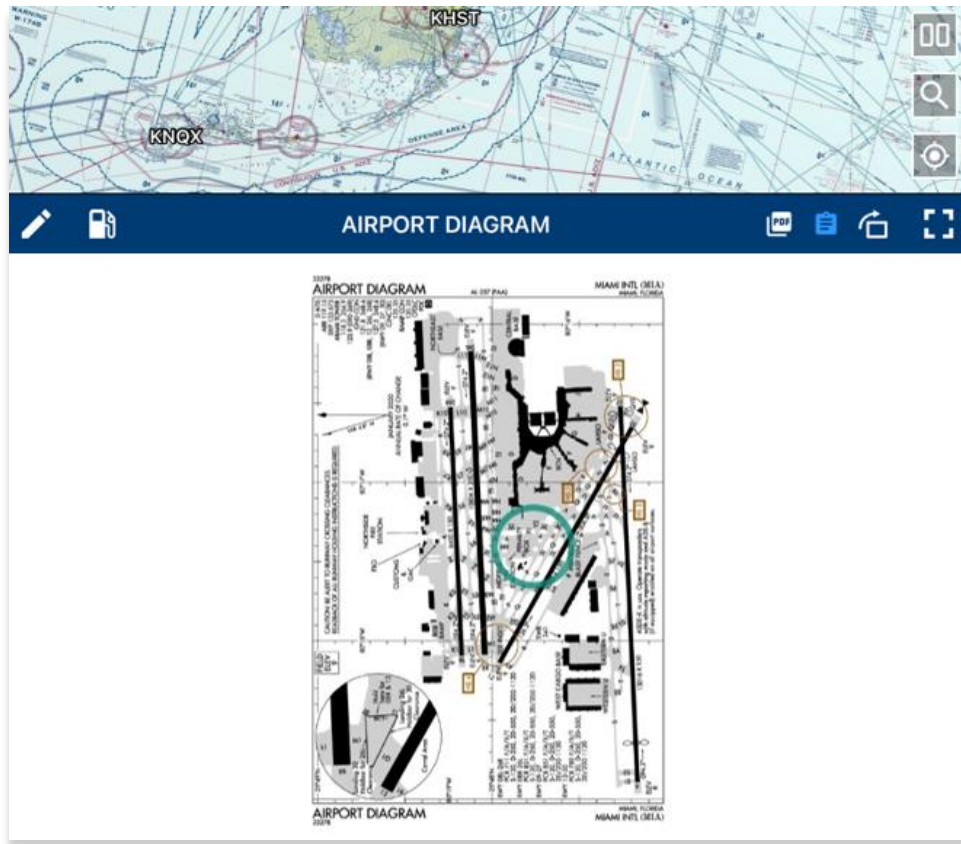

**NOTE:** Users can overlay Contract Fuel Locations on an Airport Diagram. Refer to [Section 14.3.2.2](#) for additional information.



**NOTE:** Refer to [Section 14.3.2.1](#) on how to draw on APD and IAP charts.




**NOTE:** The switch screen button will turn blue if the user is viewing the IAP, when switching to view the APD charts, the button will revert to white.

### 14.4.7.2 PDF Support

The Map's split screen view supports the display of PDF documents. To view your preferred user documents, ensure they are saved to your device through sideloading. Refer to [Section 11.8](#) for additional information.

1. Tap the **PDF** icon on the ribbon of the split screen.
2. Tap on the **ribbon** and the *User Documents* popup will appear.

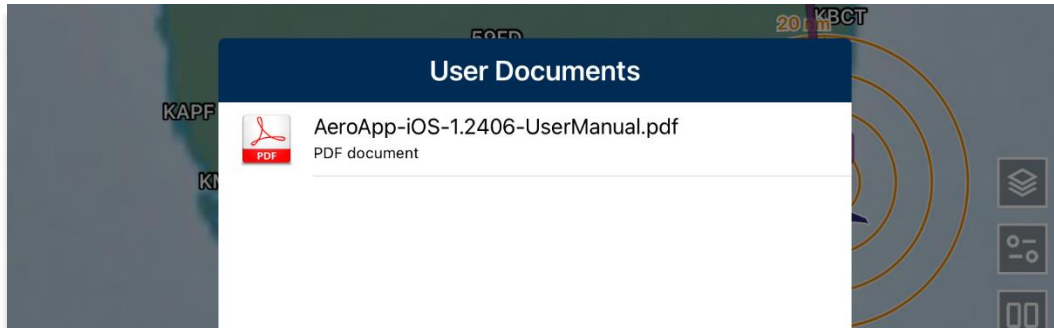


3. Select desired **document**. Your document will display on the split screen view.
4. To return to the IAP chart view, tap the **clipboard** icon.



### 14.4.8 Move Map to Location

The Move Map to Location feature allows users to search for an identifier (i.e., Airport, NavAid, Waypoint, Airways, User Waypoint, or Pins) or its search term and the screen will move to the location of the identifier. Users can filter airports by setting a minimum runway length in their Settings.


1. Tap the **search icon** located at the lower right of the Map view.
2. Enter an identifier, search term, MGRS, or latitude and longitude.
3. Tap **Go** on the device's on-screen keyboard and the screen will pan to its location.
4. The search results are divided into identifier types. Select from Airports, NavAids, Waypoints, Airways, User Waypoints, or Pins

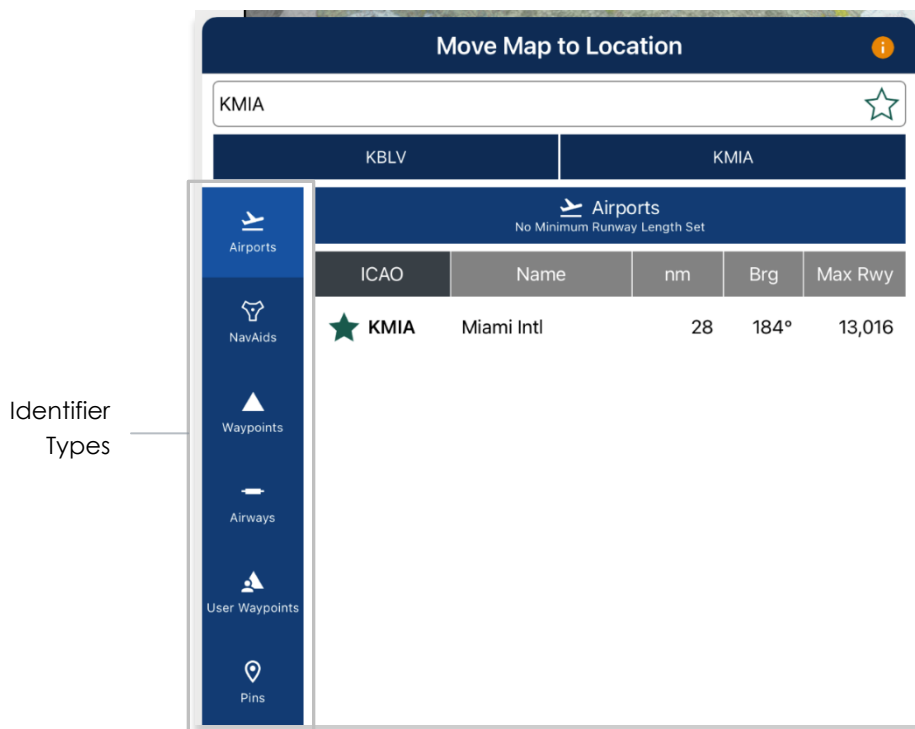



### 14.4.9 Snap to Location

The Crosshair icon located at the bottom right of the Map view, is a shorthand way to manually snap to your current GPS location.

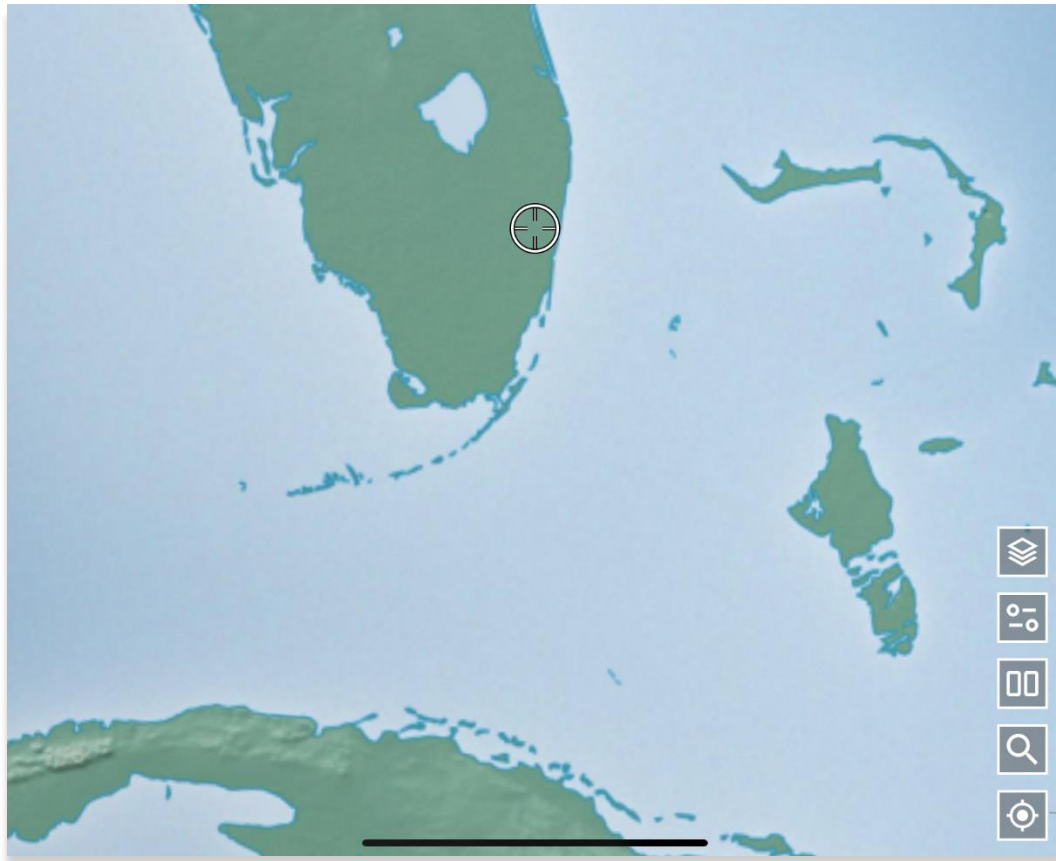


Crosshair icon  
(Snap to  
Location)



**NOTE:** Users can enable a Snap to Location feature, which returns to the user's current location after 15 seconds as explained in [Section 14.4.6.2.2](#).

### 14.4.10 Center Target


The Center Target retrieves the latitude, longitude, and MGRS values of the area in which the target is placed. As the Map moves, a yellow tag would briefly display information on the Distance and Bearing, respective to the placement of the target.

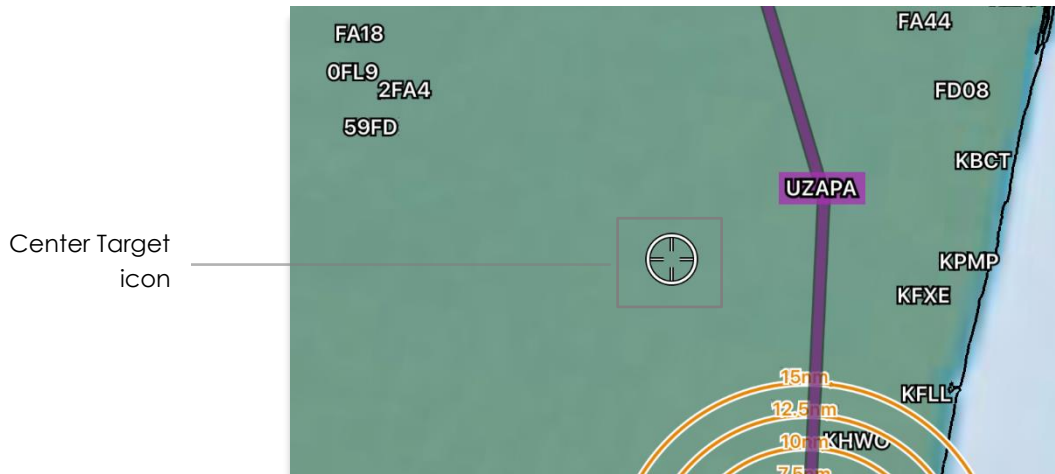

#### 14.4.10.1 Measure Distance and Bearing Between Points

Aero App provides a tool that calculates the distance and bearing between two points on the Map.


1. Move the Map to activate the center target.
2. Choose a *starting point* and tap the **Center Target icon** to set the starting point.
3. Move the Map to a desired end point. The measurement is displayed above the end point. The values displayed are the distance and bearing of the starting point and end point.

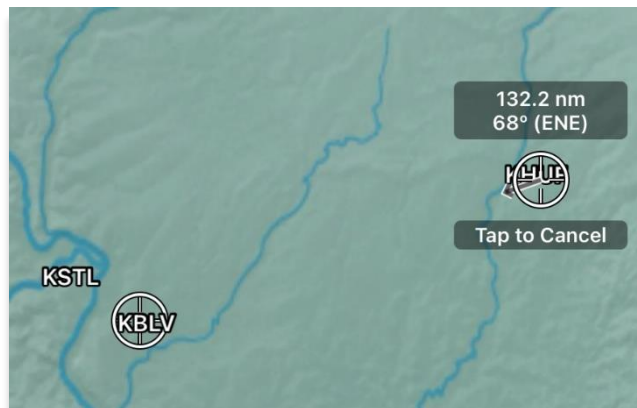

### 14.4.11 Drag and Drop

The Drag and Drop feature is a tool for users who would like to make quick modifications to their current route. Users can drag any point or segment of the current route and drop it to their desired location.

1. Load desired route in your Route Panel.
2. On the Map, hold a point or segment in your route to activate the Drag and Drop feature (or once route line turns orange) and drag it to a desired point.

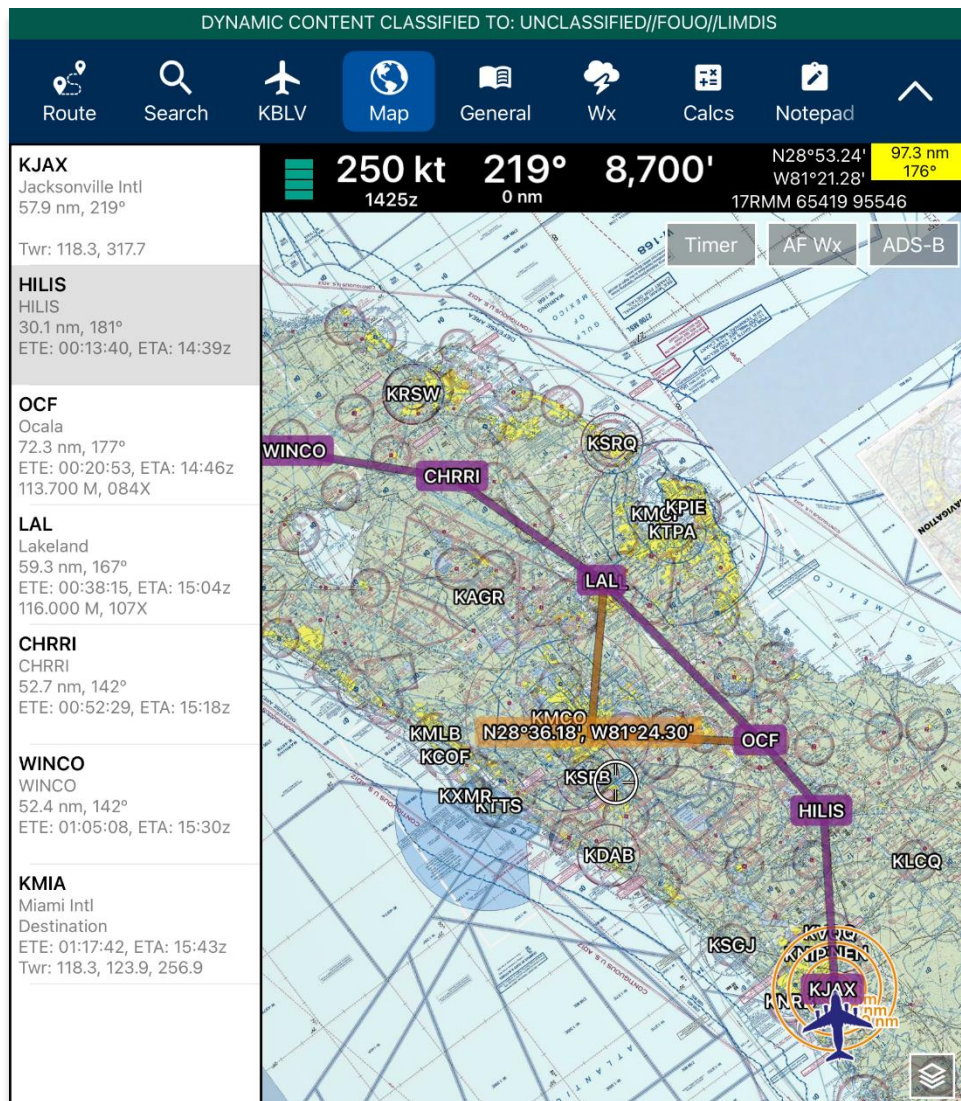



3. The Nearest popup will appear displaying the latitude and longitude of the selected point with 10 nearest Airports, NavAids, Waypoints, and User Waypoints.
4. Select desired point.
5. A new point will be added to the current route.



**NOTE:** Warning popups will appear when users try to drag and drop points that belong to a route with a DP, STAR, SAR pattern, Airway, or MTR.


### 14.4.12 Identifier Menu

The Identifier Menu includes identifier information such as the identifier name, and its latitude and longitude. In the case where NavAid is selected, additional information will be available to users such as its identifier name, bearing, distance, and frequency. Users can display the Identifier Menu in three simple ways:

- Long pressing any point on the Map
- Tapping an existing point on the Map
- Tapping any point on the Route Panel

1. Tap **Map** on the **Main Menu**.
2. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map or the Route Panel to directly display the Identifier Menu.
3. The Nearest popup will display. Select desired identifier. The Identifier Menu will display with each option grouped by Actions, Add, and Show.

The Identifier Menu will include identifier information such as the identifier name, and its latitude and longitude. In the case where NavAid is selected, additional information will be available to users such as its identifier name, bearing, distance, and frequency.

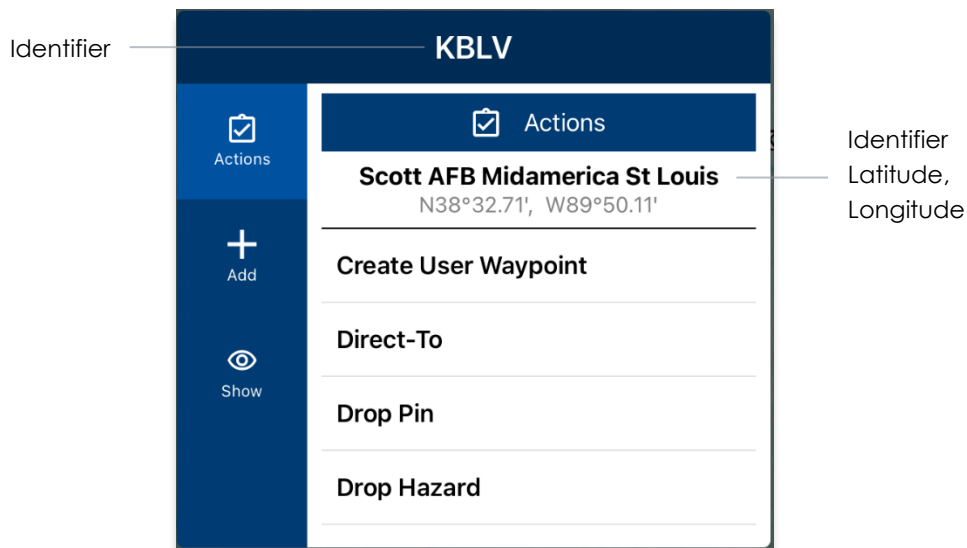

### 14.4.12.1 Actions


The Actions menu offers the following options and will be further elaborated in the sections below:

- Create User Waypoint
- Direct-To
- Drop Pin
- Drop Hazard
- Add to Route or Remove from Route

#### 14.4.12.1.1 Create User Waypoint

Users can create user waypoints directly from Aero App. Alternatively, users can sideload their user-generated waypoints onto Aero App. Refer to [Section 11.4](#) for additional information. To view the full list of User Waypoints, refer to [Section 14.1.3.4.6](#) for additional information.

1. Tap **Map** on the **Main Menu**.
2. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map or the Route Panel to directly display the Identifier Menu.
3. The Nearest popup will appear. Select your desired point.
4. The Identifier Menu will appear. Select **Actions** from the side menu, if necessary.
5. Tap **Create User Waypoint**.
6. The Create User Waypoint popup will appear with fields to enter an Identifier, Name, Latitude, and Longitude. The latitude and longitude fields are auto filled with the point's current coordinates. Fill in the necessary information.

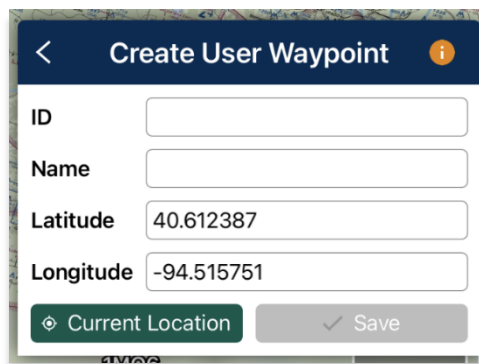

< Create User Waypoint ⓘ

ID

Name

Latitude

Longitude

📍 Current Location

7. Tap **Current Location** (GPS required) to use your present location's coordinates.



The Name field is optional. When creating a name for User Waypoints, the name should only contain alphanumeric characters (upper and lower cases) and spaces.


8. Once fields are filled, the Save button will be selectable. Tap **Save** and the waypoint is added to the User Waypoint list.

The screenshot shows a mobile application interface for creating a user waypoint. The title bar is dark blue with a back arrow on the left, the text 'Create User Waypoint' in the center, and an information icon on the right. Below the title bar, there are four text input fields: 'ID' with the value 'SUNDAYFLY', 'Name' with the value 'SRoute', 'Latitude' with the value '40.612387', and 'Longitude' with the value '-94.515751'. At the bottom of the form, there are two buttons: a green button with a location pin icon and the text 'Current Location', and a dark green button with a checkmark icon and the text 'Save'.

#### 14.4.12.1.2 Direct-To on Empty Route

The Direct-To feature creates a new route from your ownship's current location direct to your desired destination.

1. Ensure that the route is empty.
2. Tap **Map** on the **Main Menu**.
3. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map to directly display the Identifier Menu.
4. The Nearest popup will appear, select your desired point.
5. The Actions popup will display. Select **Actions** from the side menu, if necessary.
6. Tap **Direct-To**.
7. A new route will contain two points, your present location, and the destination. The present location will be added to the flight route as the first point and the selected Direct-To point will be added as the destination.

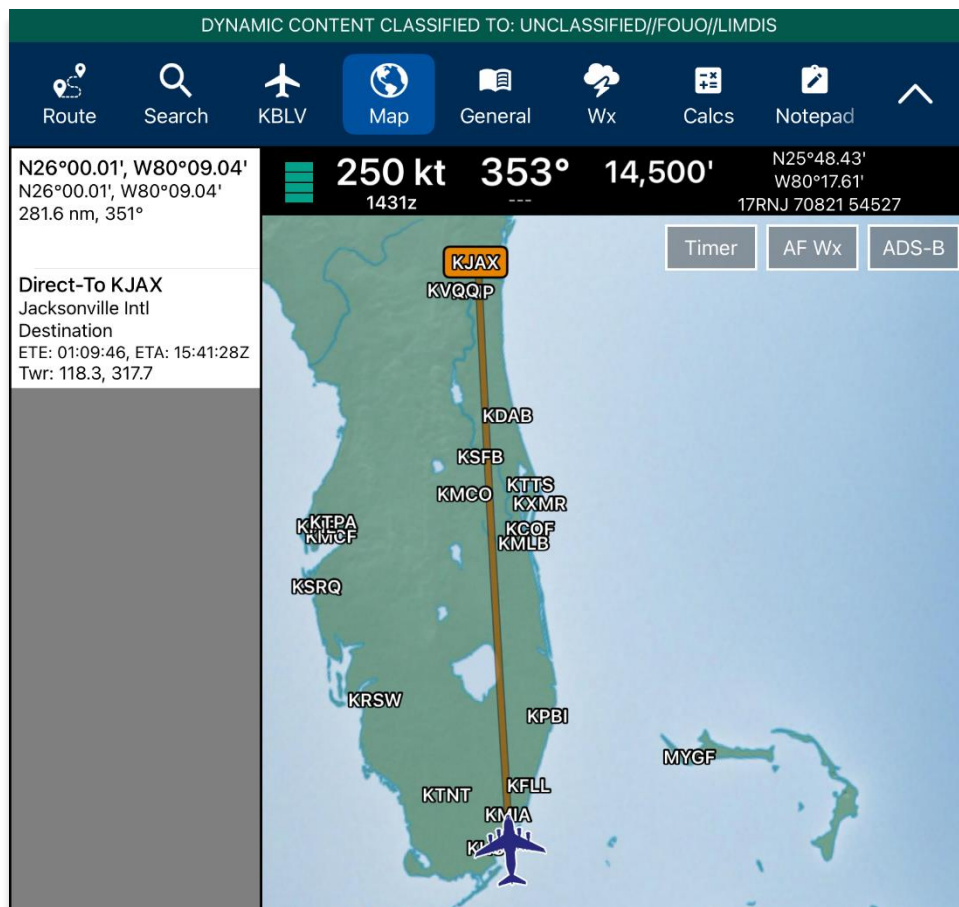

8. To cancel the Direct-To, tap the Direct-To point on the Map or the Route Panel. The Actions popup will appear, select **Cancel Direct-To**.



#### 14.4.12.1.2.1 Direct-To on Existing Route


Users can create a Direct-To route on an existing route.

1. Ensure that the route includes one or more points.
2. Tap **Map** on the **Main Menu**.




**NOTE:** During the Direct-To course, users will be able to continue adding additional points to the route. The Direct-To enroute will not be interrupted.

3. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map to directly display the Identifier Menu.
4. The Nearest popup will appear, select your desired point.
5. The Identifier Menu will appear. Select **Actions** from the side menu, if necessary.
6. Select **Direct-To**. The Direct-To options popup will display the following options:

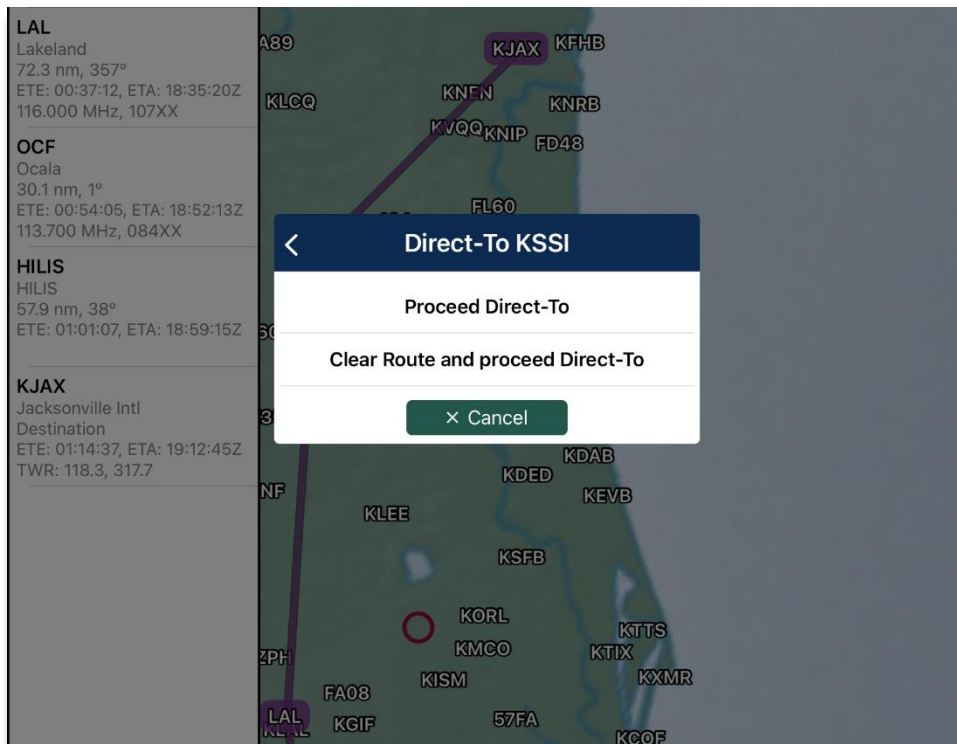


- Proceed Direct-To** – A new route is created starting from your present location to the Direct-To point. The existing route will be grayed out and remain untouched. The values for ETA/ETE, distance and bearing, and tower frequencies are the calculated values for the Direct-To route. The total distance value is calculated for your existing route and not the Direct-To route.

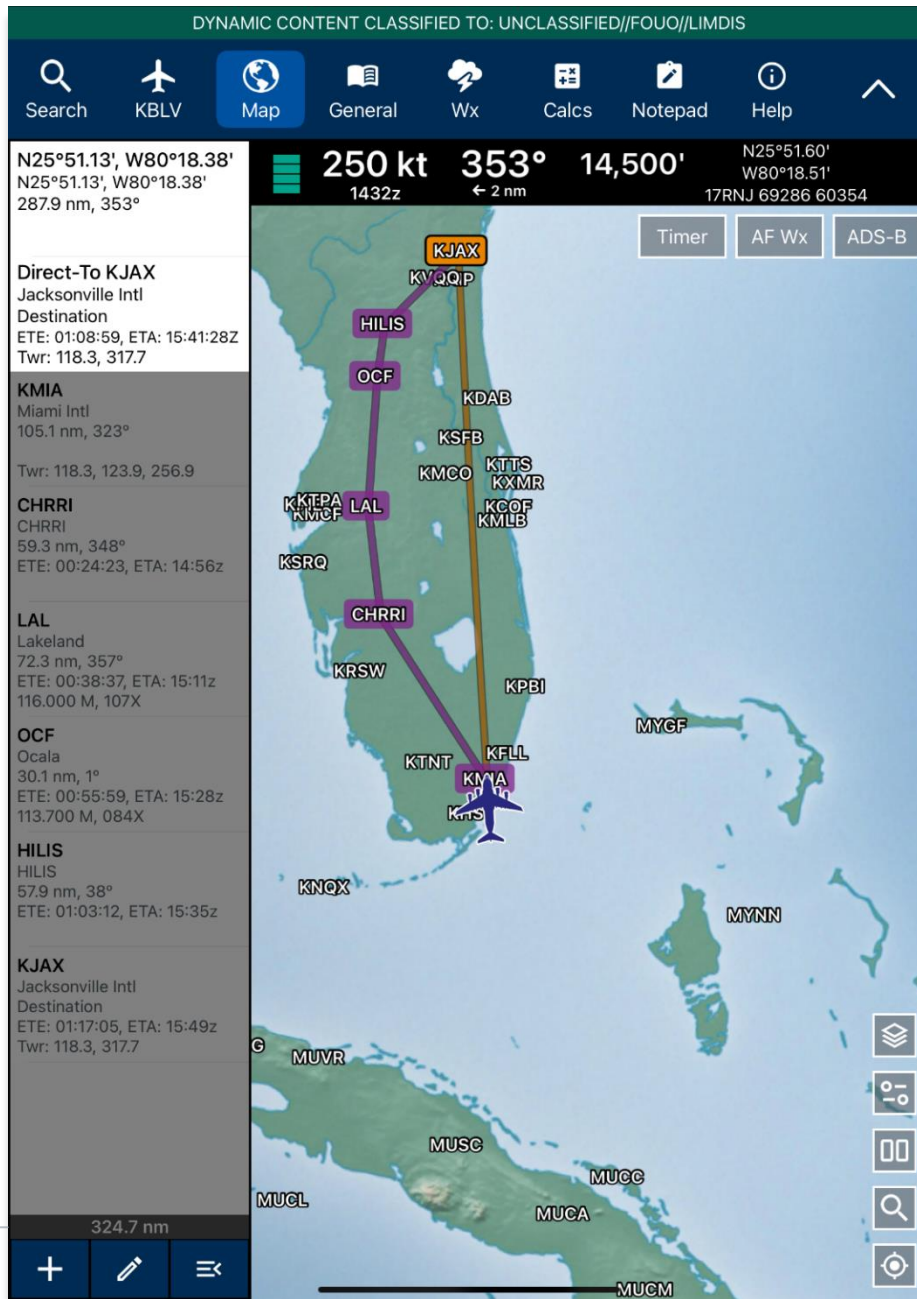

Distance of  
existing route

- **Clear Route and proceed Direct-To** – Aero App clears the existing route and creates a new route starting from your present location to the Direct-To point. The values for ETA/ETE, distance and bearing, and tower frequencies are the calculated values for the Direct-To route. The total distance for the Direct-To route is not calculated, therefore, the values are set to 0 nm/km.

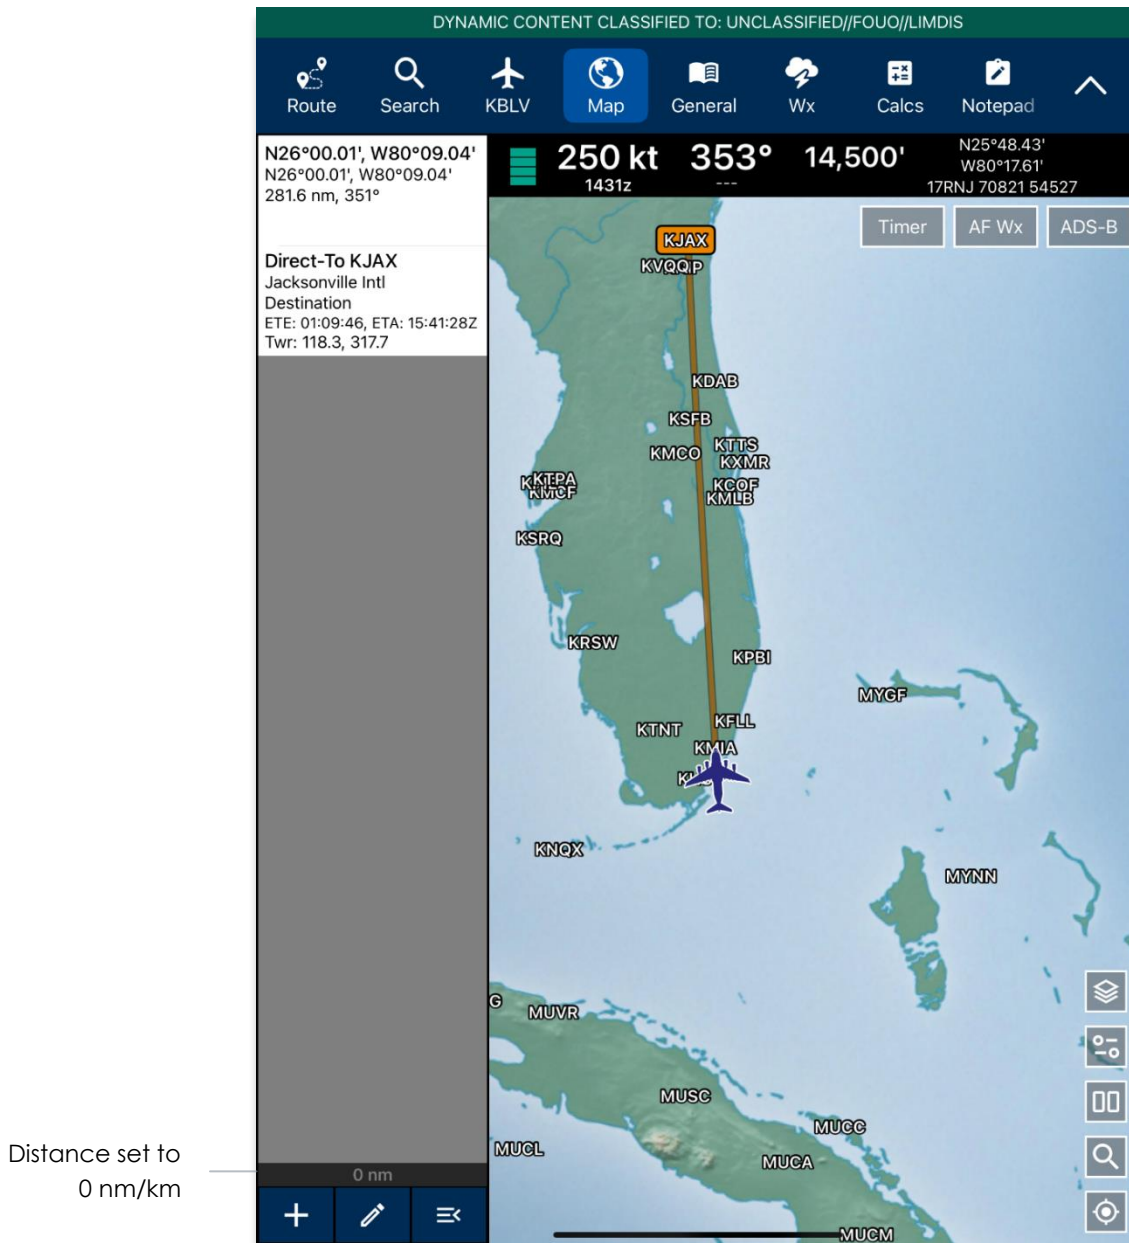

- **Cancel** – dismisses the action.

7. To cancel the Direct-To, tap the Direct-To point on the Map or the Route Panel. The Actions popup will appear, select **Cancel Direct-To**. Your route will revert to the original route.



---

**NOTE:** Once the existing route has been cleared, users cannot revert to the original route when canceling Direct-To.

---

#### 14.4.12.1.3 Drop Pin


The Drop Pin feature enables pilots to drop geographic pins in any specified area on the Map, view relevant information about pins, and add dropped pins to their route. Aero App offers pin types including Photo Pin and Pin. In addition, Aero App enables users to sideload user-generated pins onto Aero App. Refer to [Section 11.6](#) for additional information.

##### 14.4.12.1.3.1 Photo Pin

A Photo Pin is a designated location on the Map that incorporates user-generated images. Fields marked with an asterisk must be filled.

1. Tap **Map** on the **Main Menu**.
2. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map or the Route Panel to directly display the Identifier Menu.
3. The Nearest popup will appear, select your desired point.
4. The Identifier Menu will appear. Select **Actions** from the side menu, if necessary.
5. Tap **Drop Pin**.
6. Tap **Photo Pin**.

7. The Photo Pin popup will appear with fields for ID\*, Name, Image upload, and Notes. Fill in the required fields.

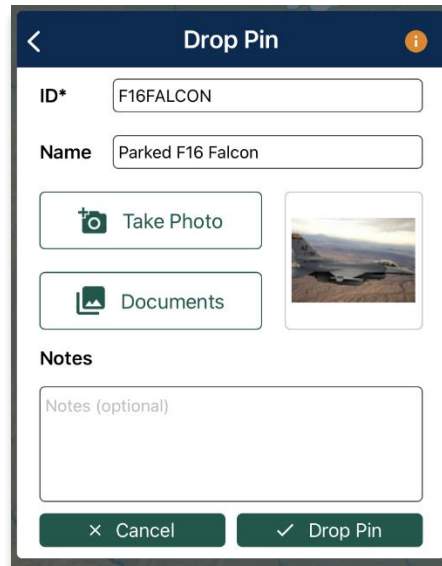


**NOTE:** Selecting an image is required for Photo Pins.

8. Once the required fields have been filled, the Drop Pin button will be selectable. Tap **Drop Pin** and your pin will display on the Map.
9. Tap **Cancel** to dismiss the action.

#### 14.4.12.1.3.2 Pin

A Pin is used to mark a location on the Map. Fields containing an asterisk are required.

1. Tap **Map** on the **Main Menu**.
2. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map or the Route Panel to directly display the Identifier Menu.
3. The Nearest popup will appear, select your desired point.
4. The Identifier Menu will appear. Select **Actions** from the side menu, if necessary.
5. Tap **Drop Pin**.
6. Tap **Pin** from the following drop pin options.
7. The Pin popup will appear with fields such as ID\*, Name, Image upload, and Notes. Fill in the necessary information.

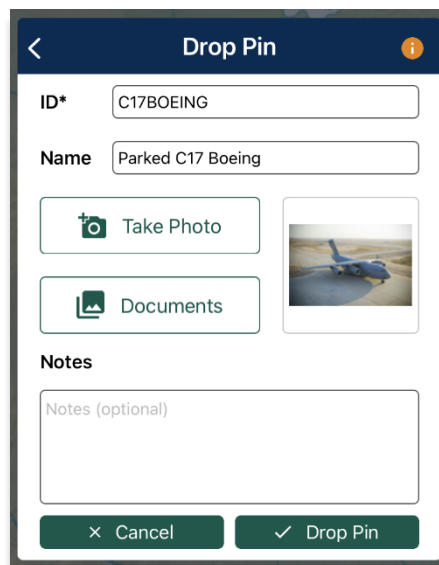

8. Once the required fields have been filled, the Drop Pin button will be selectable. Tap **Drop Pin** and your pin will display on the Map.
9. Tap **Cancel** to discard the action.




**NOTE:** Creating a Pin requires choosing a unique identifier. Using an existing ID will trigger an error message.


#### 14.4.12.1.3.2.1 Add Pin to Route

The Add to Route option allows users to add dropped pins to their flight route.

1. Ensure that the Pins overlay is enabled.
2. Navigate to the Map and tap on your desired **Pin**.
3. The Identifier Menu will appear. Select **Actions** from the side menu, if necessary.
4. Tap **Add to Route**.

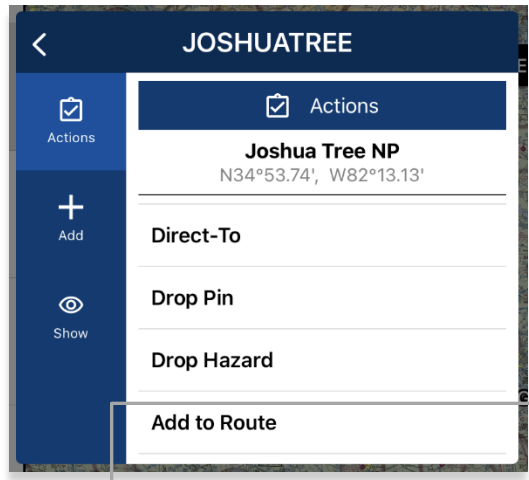

5. The selected dropped pin will be added to your flight route.
6. To delete from your current route, tap **Edit** then tap the minus icon or swipe left then tap the delete button.
7. To delete from the Map view, tap the dropped pin and select **Remove from Route**.

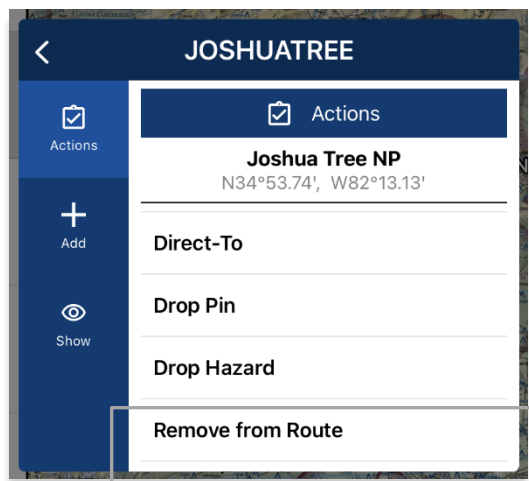

#### 14.4.12.1.3.2.2 View Pin Information

Aero App provides users a display to view Pin information. The pin information is relevant to the pins that were dropped or pins that were sideloaded by users.

Pin Information is available under Information and Wx. Each pin contains relevant information such as its ID, Name, Latitude, Longitude, Magnetic Variance, From Ownship, Source, Notes, and any associated attachments.

1. Navigate to the Map and tap on your desired **Pin**.
2. The Identifier Menu will appear. Select **Show** from the side menu.
3. Tap **Info and Wx** to view any information associated with the pin.







#### 14.4.12.1.4 Drop Hazard

The Drop Hazards feature enables pilots to drop hazards at a specified location on the Map to identify potential hazards to avoid during flight. Fields containing an asterisk are required. Alternatively, users can sideload user-generated Hazards into Aero App. Refer to [Section 11.7](#) for additional information.

Enabling the Alert on Intersection feature will cause a red banner to appear at the top of the view when your ownship intersects with the hazard's ring.

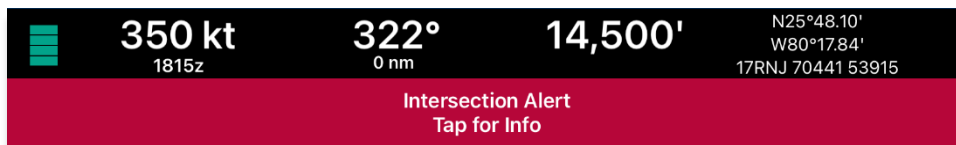


The banner will remain visible while the ownship stays inside the hazard's ring. The banner can be tapped to display Hazard information.

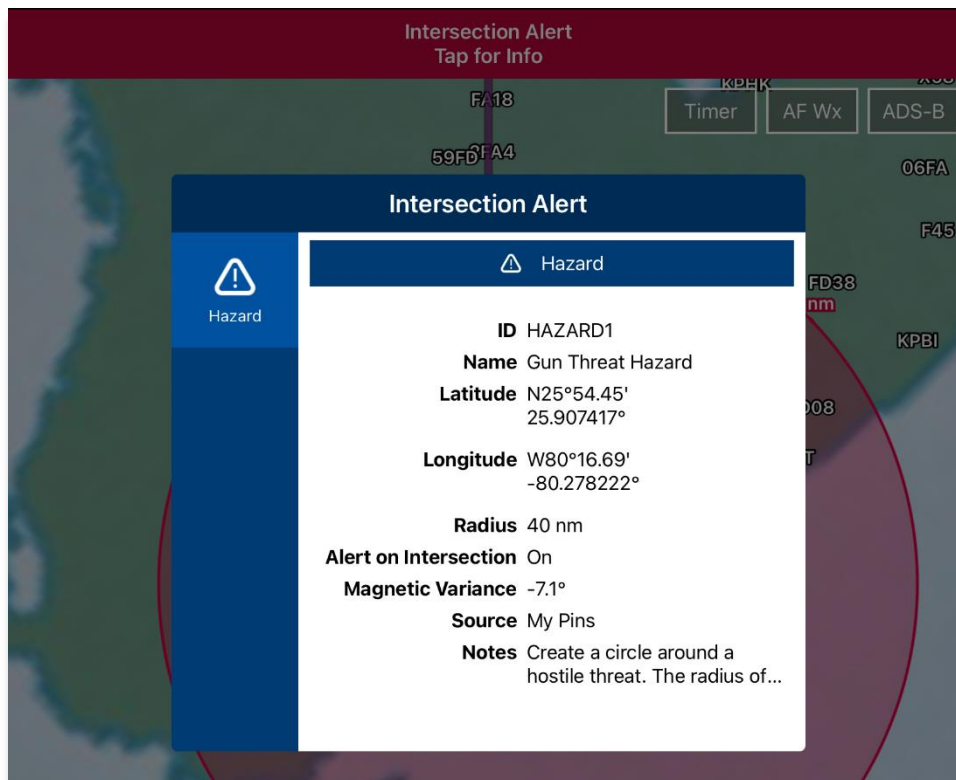

To drop a hazard at your current location or any location of your choice, follow these steps below:

1. Tap **Map** on the **Main Menu**.
2. Long-press a **point** on the Map view.
3. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map or the Route Panel to directly display the Identifier Menu.
4. The Nearest popup will appear, select your desired point.
5. The Identifier Menu will appear. Select **Actions** from the side menu, if necessary.
6. Tap **Drop Hazard**.
7. The Hazard popup will appear with fields for Name\*, Radius in nm or km (based on which distance unit is set in Settings), Alert on Intersection, Latitude\*, Longitude\*, and Notes. Fill in the required fields.

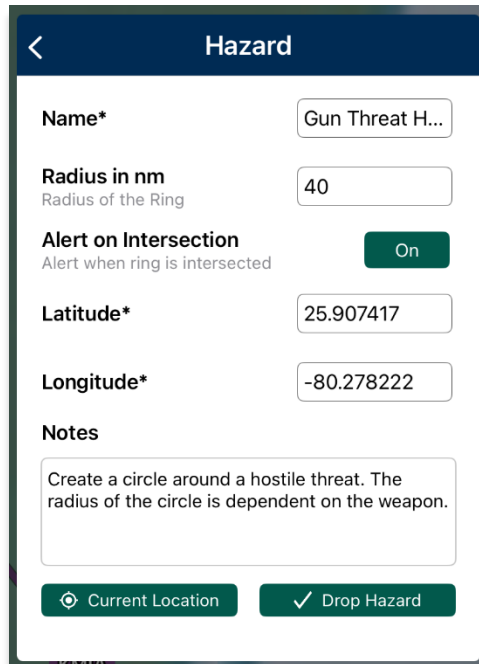

**NOTE:** If users set their Coordinates Unit to MGRS, the Latitude and Longitude fields will remain disabled, and a MGRS field will appear.




**NOTE:** If an invalid MGRS is entered, the Latitude and Longitude fields will be left blank.

8. Tap **Current Location** to set your current position as the coordinates.
9. Once the required fields have been filled, the Drop Hazard button will be selectable. Tap **Drop Hazard** and your hazard will display on the Map.

#### 14.4.12.1.5 Add to Route

1. Tap **Map** on the **Main Menu**.
2. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map or the Route Panel to directly display the Identifier Menu.
3. The Nearest popup will appear, select your desired point.
4. The Identifier Menu will appear. Select **Actions** from the side menu, if necessary.
5. Tap **Add to Route**.
6. A new point will be added to the current route.
7. Once the point has been added, the popup changes to *Remove from Route*. By tapping **Remove from Route**, the point will be deleted from the route.

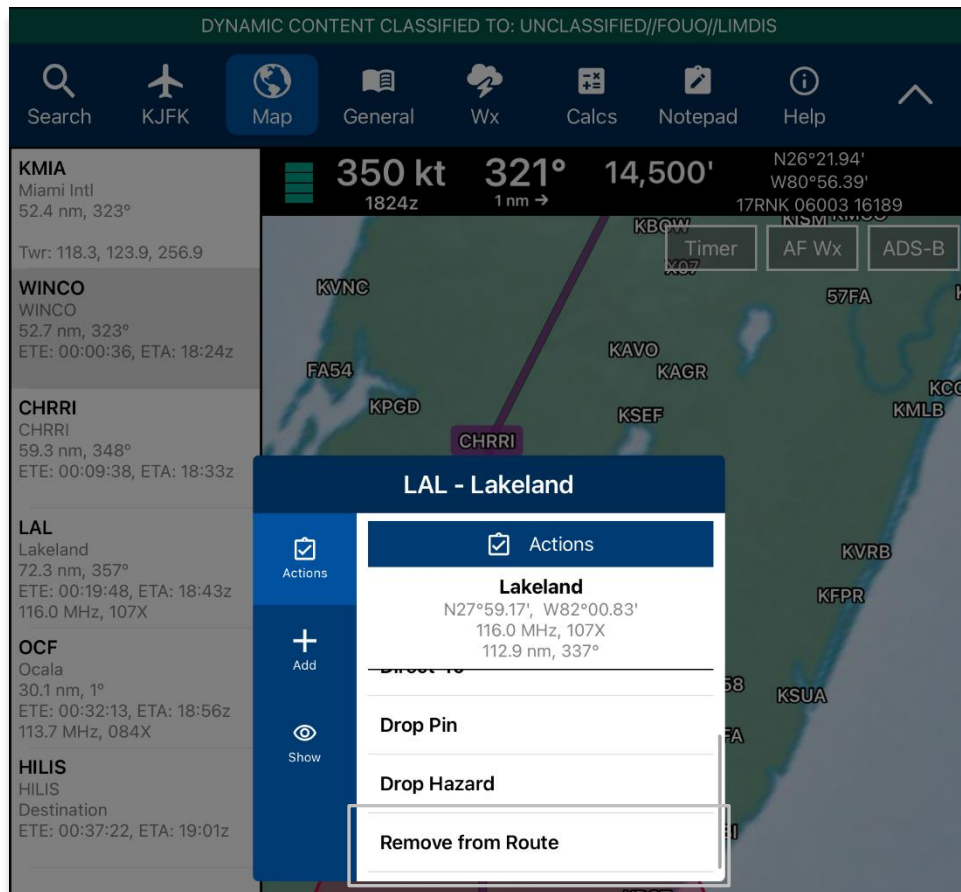

### 14.4.12.2 Add

The Add submenu provides users the option to add the following procedures to their route:

- Departure Procedure (DP)
- Standard Terminal Arrival Procedure (STAR)

#### 14.4.12.2.1 Add Departure Procedure (DP) or Standard Terminal Arrival Route (STAR) to Route


Aero App enables users to add Departure Procedure (DP) and Standard Terminal Arrival Route (STAR) to their flight route.

1. Select an airport from the Route Panel or the Map view.
2. The Identifier Menu will appear. Select **Add** from the side menu.
3. Select **DP** or **STAR**.



**NOTE:** DP and/or STAR options may not be available for select airports. Choose the appropriate departure and/or arrival airports to display procedure options.

4. The procedure selection popup will display. Tap the Procedure drop-down and select desired **Procedure**.

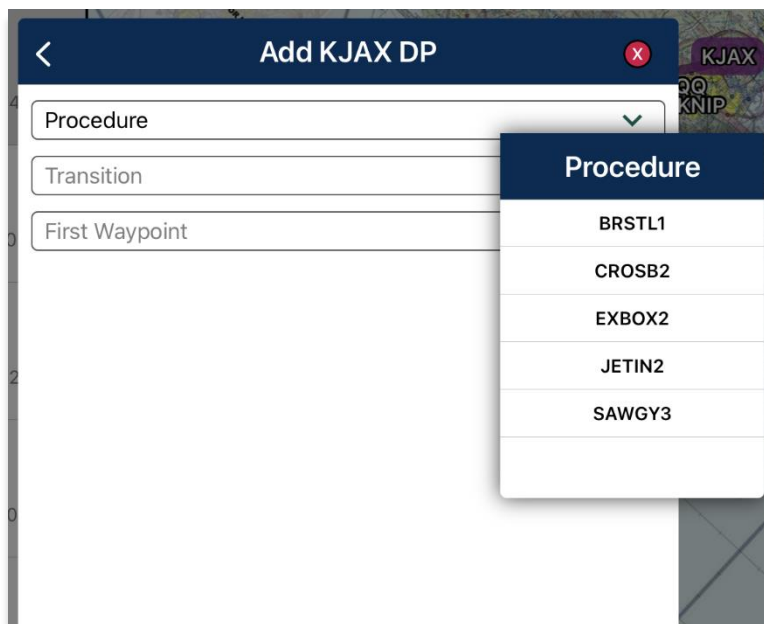

5. Transition will become selectable. Tap the Transition drop-down and select desired **Transition** point.
6. First Waypoint will become selectable. Tap the First Waypoint drop-down and select desired **First Waypoint**.
7. The Procedure preview will appear and Add to Route will become selectable. Tap **Add to Route**.

<
Add KJAX DP
X

Procedure: EXBOX2
✓

Transition: OMN
✓

First Waypoint: SAWGY
✓

(EXBOX2.EXBOX) 22083  
EXBOX TWO DEPARTURE (RNAV)

AL 5570 (FAA)

JACKSONVILLE INTL (JAX)  
JACKSONVILLE, FLORIDA

**TOP ALTITUDE:**  
3000

**TAKEOFF MINIMUMS:**  
Rwy 8, 14, 26, 32: Standard with minimum climb of 500' per NM to 540.

**NOTE: RNAV 1.**  
NOTE: Turbojets only.  
NOTE: DME/DME/IRU or GPS Required.  
NOTE: RADAR Required.  
NOTE: If unable to accept climb rate, advise ATC on initial contact.

NOTE: Chart not to scale.

D-ATIS 125.65  
CLNC DEL 119.5  
CTDC 290.275  
GND CON 121.9  
JACKSONVILLE TOWER 118.3  
JACKSONVILLE DEP CON 124.9

DEPARTURE ROUTE DESCRIPTION

**TAKEOFF RUNWAY 8:** Climb heading 077° to 540, then climb to assigned altitude on heading 077° or as assigned by ATC, then...

**TAKEOFF RUNWAY 14:** Climb heading 137° to 540, then climb to assigned altitude on heading 137° or as assigned by ATC, then...

**TAKEOFF RUNWAY 26:** Climb heading 257° to 540, then climb to assigned altitude on heading 257° or as assigned by ATC, then...

**TAKEOFF RUNWAY 32:** Climb heading 317° to 540, then climb to assigned altitude on heading 317° or as assigned by ATC, then...

... expect radar vectors to SAWGY, then on track 181° to EXBOX. Maintain 3000 or as assigned by ATC, expect clearance to filed altitude within ten (10) minutes after departure.

**ORMOND BEACH TRANSITION (EXBOX2.OMN):**

EXBOX TWO DEPARTURE (RNAV)  
(EXBOX2.EXBOX) DBAN15

JACKSONVILLE, FLORIDA  
JACKSONVILLE INTL (JAX)

✓ Add to Route


8. The procedure will be added to your flight route.



Add DP to Route



Add STAR to Route

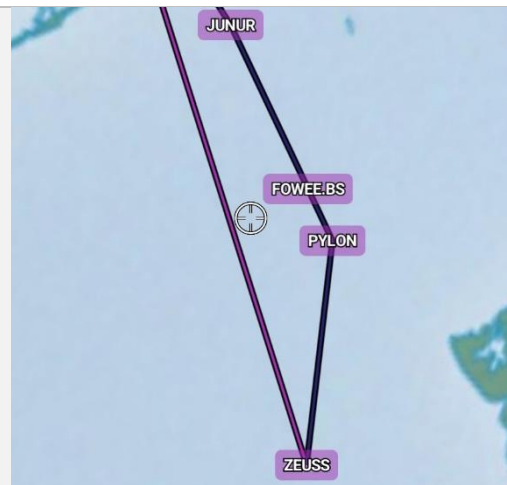



### 14.4.12.3 Show

The Show menu offers the following options and will be further elaborated in the sections below:

- Show on Map
- IAP on Map
- Info and Wx
- MVA
- Nearest
- Orbit

#### 14.4.12.3.1 Show on Map

Show on Map pans the Map view to the selected point or identifier.


1. Tap **Map** on the **Main Menu**.
2. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map or the Route Panel to directly display the Identifier Menu.
3. The Nearest popup will appear. Select your desired point.
4. The Identifier Menu will appear. Select **Show** from the side menu.
5. Tap **Show on Map**.
6. The screen will pan to the selected location.



#### 14.4.12.3.2 Instrument Approach Procedure (IAP) on Map


Aero App enables users to display Instrument Approach Procedures (IAPs) on the Map, perfectly georeferenced. Overlaying an IAP on the Map provides enhanced safety for landing and depicts topographical features and hazards. Points are georeferenced on the Map when Georeference data is loaded.

1. Tap **Map** on the **Main Menu**.
2. Long-press a desired point on the Map. Alternatively, users can tap an ICAO on the Map or the Route Panel to directly display the Identifier Menu.
3. The Nearest popup will appear. Select your desired point.
4. The Identifier Menu will appear. Select **Show** from the side menu.
5. Tap **IAP on Map**.
6. A list of IAPs for the identifier will be displayed. Select an **IAP filter** from the segmented button group.
7. IAPs are grouped by runways. Select desired **IAP** then the IAP will overlay on the Map.
8. To adjust the transparency of the IAP, tap on the chart and drag the slider from left to right. By default, IAP transparency is set to 100%.

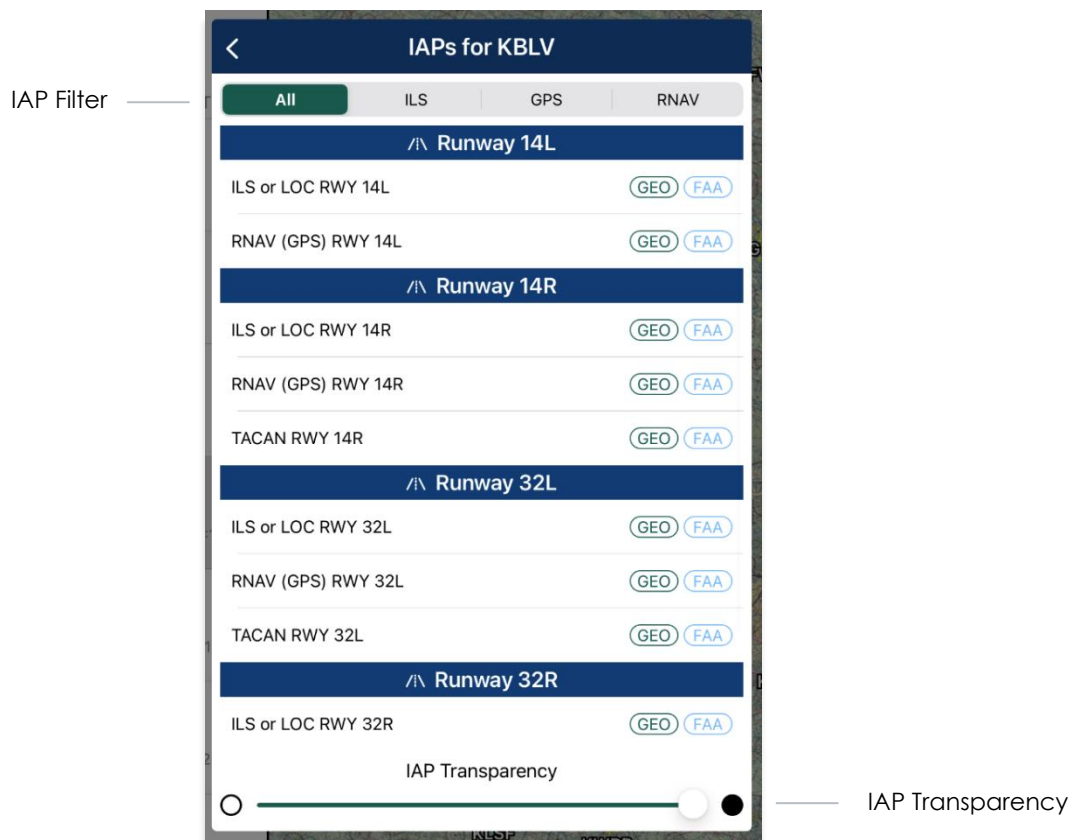



9. To remove the IAP from the Map, tap the red popup **X**.

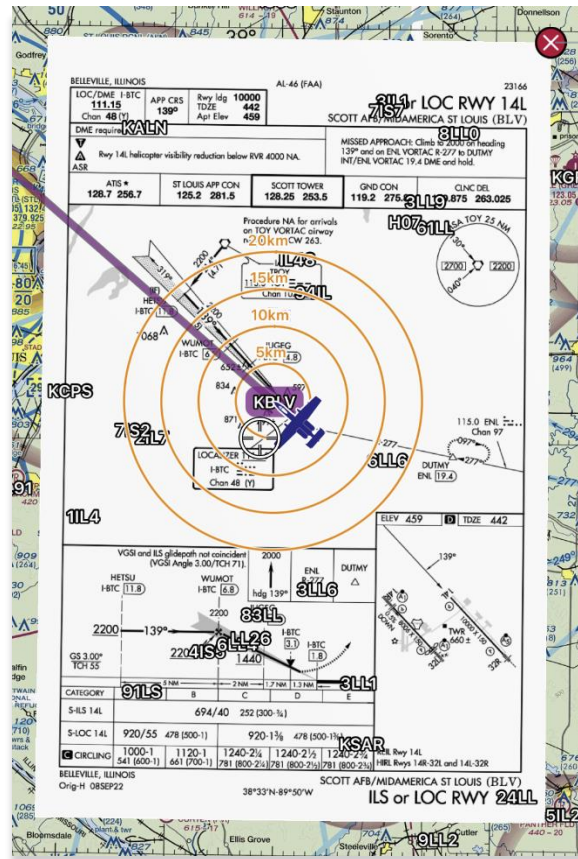

Remove IAP



**NOTE:** A small number of Instrument Approach Procedures (IAPs) are not georeferenced and therefore cannot be shown on the Map.


#### 14.4.12.3.3 Info and Wx (Information and Weather)

The Information and Weather (Info and Wx) option can be accessed when tapping an identifier on the Map or the Route Panel. Users have the option to view airport information such as Info, APD, IAP, Dep, Arr, Min, Other, Host Nation, and Wx through the Info and Wx button. Refer to [Section 14.3](#) for additional information of each tab. Identifiers that are not an airport such as NavAids, Waypoints, User Waypoints, Pins, and others, will display the identifier's information.


#### 14.4.12.3.4 Minimum Vectoring Altitude (MVA)

Aero App enables users to display Minimum Vectoring Altitude (MVA) on the Map.


1. Tap **Map** on the **Main Menu**.
2. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map or the Route Panel to directly display the Identifier Menu.
3. The Nearest popup will appear. Select your desired point.
4. The Identifier Menu will appear. Select **Show** from the side menu.
5. Tap **MVA**.
6. Select an **MVA** from the list provided.

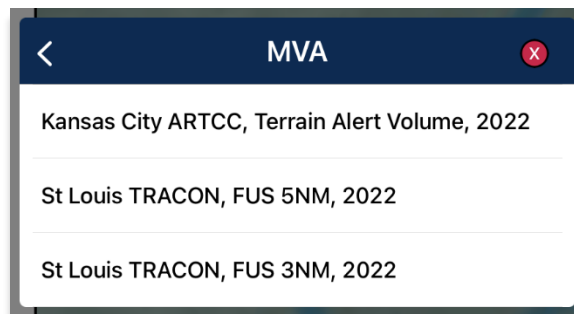

7. The respective **MVA** will overlay on the Map.

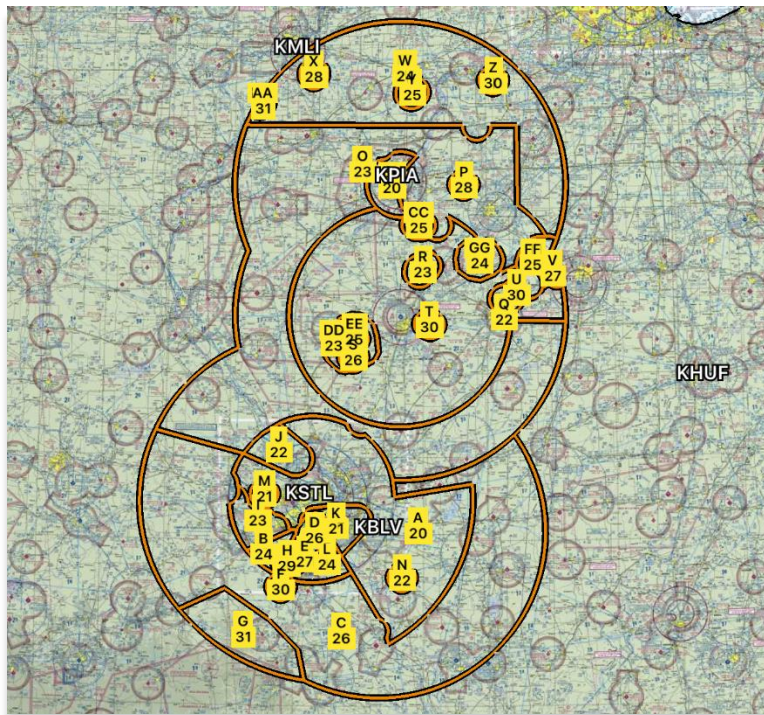


8. Tap inside area to hide MVA.
9. Tap **Hide MVA**.

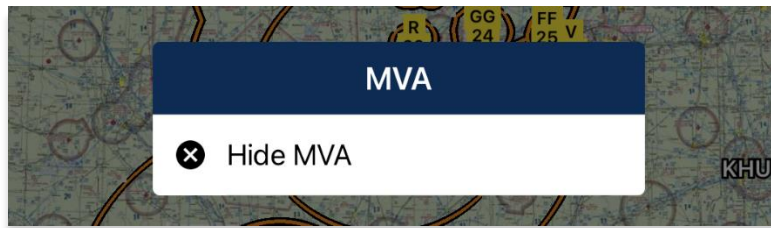

#### 14.4.12.3.5 Nearest

The Nearest feature enables users to view nearby Airports, NavAids, Waypoints, and User Waypoints. Once a desired point is selected, the Identifier Menu will display.

1. Tap **Map** on the **Main Menu**.
2. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map or the Route Panel to directly display the Identifier Menu.
3. The Nearest popup will appear. Select your desired point.
4. The Identifier Menu will appear. Select **Show** from the side menu.
5. Tap **Nearest**.
6. Your current point and a list of the nearest Airports, NavAids, Waypoints, and User Waypoints will display. Select a desired point and the Identifier Menu will display.

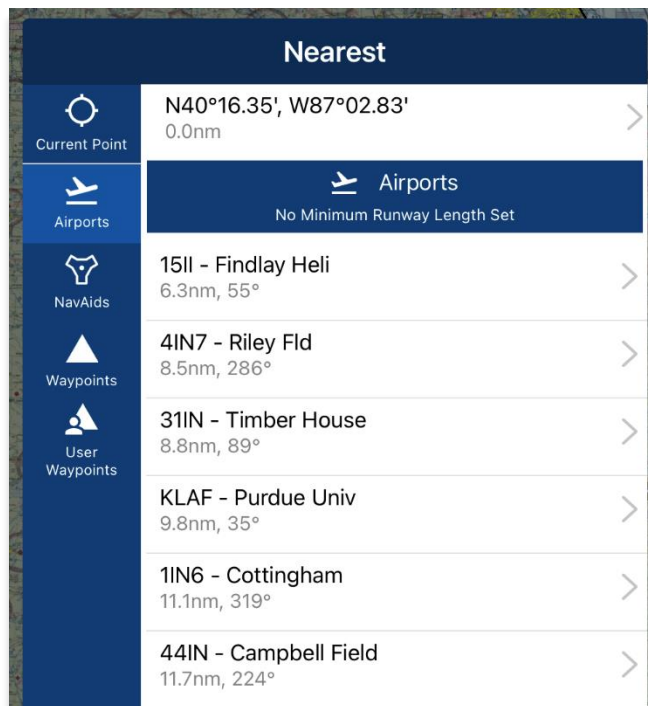

#### 14.4.12.3.6 Orbit

The Orbit feature provides awareness to pilots flying their mission. Users can select a point on the Map, set their desired configuration, then an orbit will surround the selected point. Certain fields will be pre-populated using the location's values. If necessary, modify pre-populated fields to desired preference.

1. Tap **Map** on the **Main Menu**.
2. Long-press a desired point on the Map. Alternatively, users can tap an identifier on the Map or the Route Panel to directly display the Identifier Menu.
3. The Nearest popup will appear. Select your desired point.
4. The Identifier Menu will appear. Select **Show** from the side menu.
5. Tap **Orbit**.
6. The Orbit popup will appear. Each field has pre-filled values based on the selected point.

The screenshot shows the 'Orbit' configuration menu. It has a dark blue header with a back arrow, the title 'Orbit', and an information icon. The menu is organized into sections with blue headers:

- Alignment**: Features a toggle for 'Magnetic' (selected) and 'True'.
- Magnetic Variance**: A text input field containing '7W'.
- Range Rings**: Features a radio button (selected) and a text input field for 'Orbit Distance (nm)' set to '40'. Below this is a row of buttons for 'Distance (nm)': '0' (selected), '2.5', '5', '10', and '25'.
- Azimuth**: Features a toggle for 'Azimuth' (selected) and a row of buttons for 'Degrees': '10', '30' (selected), '45', and '90'.
- Options**: Features a row of buttons for 'Line Width': 'Light', 'Medium' (selected), and 'Bold'. Below this are four color selection circles: teal, blue, red (with a checkmark), and orange. At the bottom is a 'Transparency' slider with a white knob positioned about two-thirds of the way across.

A green 'Show' button with a checkmark is at the bottom of the menu.

7. *Alignment* determines the direction in which the orbit is pointing. Set the desired direction to **Magnetic** or **True**.
8. *Magnetic Variance* is pre-populated, and the value is based on the selected point. If necessary, enter desired value in the text field.



**NOTE:** Users can enter a positive or negative value followed by a cardinal direction of E or W.



**NOTE:** If the point selected is a NavAid, the Magnetic Variance field will be automatically filled with the slaved magnetic variance. However, if the NavAid does not have a slaved magnetic variance, the normal magnetic variance will be displayed instead.

9. The *Range Rings* section determines the number of rings for the selected point and the distance between each ring. Select desired value for each field.
10. The *Azimuth* section determines the angle between the ownship and true north. The Azimuth field is enabled by default. Select the desired degrees.

**Orbit**

Alignment: **Magnetic** True

Magnetic Variance: 5W

**Range Rings**

Orbit Distance (nm): 50


Distance (nm): 0 2.5 5 **10** 25

**Azimuth**


Azimuth: On

Degrees: 10 30 **45** 90

11. The *Options* section includes additional options used to configure your orbit to the desired display on the Map. Modify each field to desired configuration.
12. *Transparency* modification is available to users. Adjust transparency using the slider to the desired value.

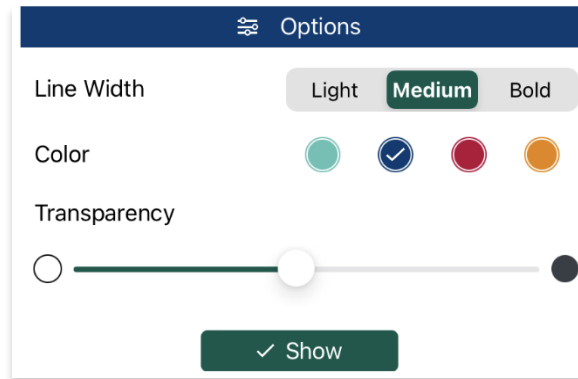

13. To modify the orbit, tap on the Orbit displayed on the Map.
14. Users are given the following options:

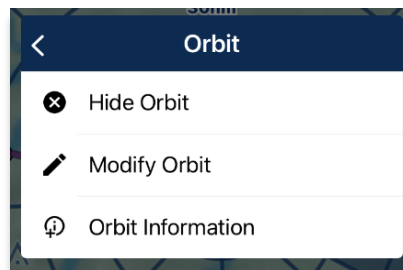

- **Hide Orbit** – hides the Orbit from the Map.
- **Modify Orbit** – displays the Orbit popup to make desired modifications.
- **Orbit Information** – displays relevant Orbit information.



**NOTE:** Only one orbit can be displayed at one time on the Map.




**NOTE:** Distance is measured in nm or km, respective to which distance unit users have set in their Settings.




#### 14.4.12.3.6.1 Orbit Altitude

Orbit Altitude enables users to configure their orbit to have visuals on the highest altitude of mountainous terrain and vertical obstructions. Options for Coverage, Line of Sight, and VOR MON are available. Global and Terrain Analysis data is required for downloading prior to use.


1. Enable **Altitude Calculations** to expand options.
2. Orbit Coverage provides three orbit coverage option. Coverage is selected by default. Select between *Terrain* or *Terrain + VO*s.

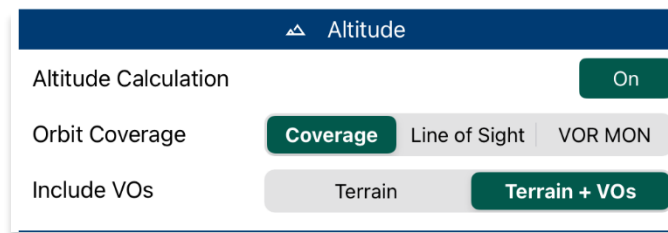

3. Tap **Show** once desired coverage option is selected.
  - **Terrain** – displays the terrain elevation for each sector.

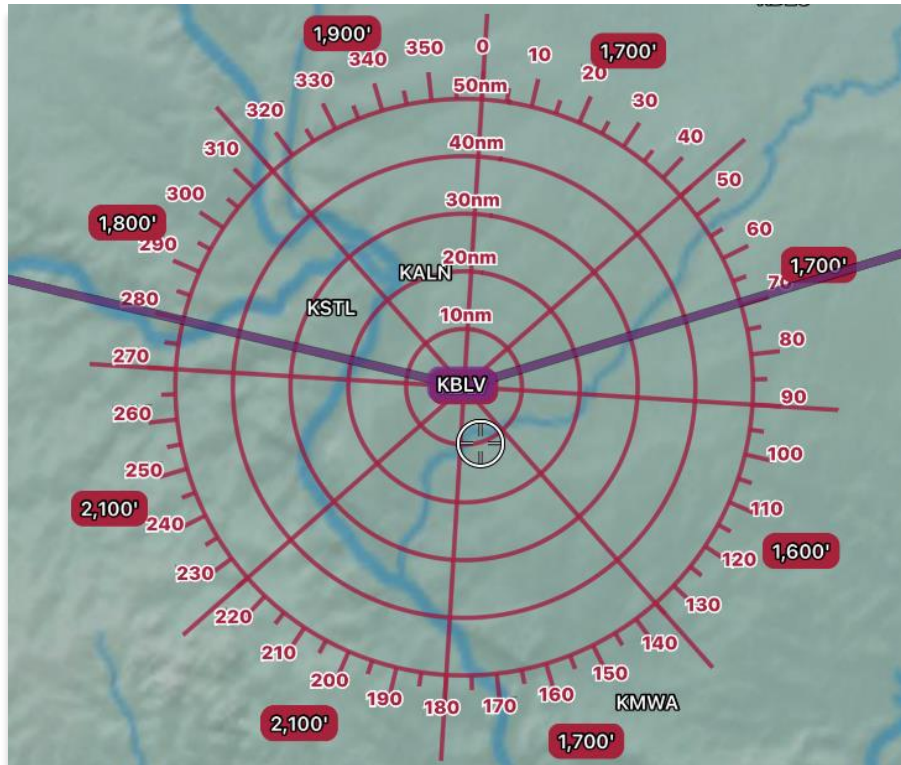

- **Terrain + VOs** – displays the terrain and VOs elevation for each sector.

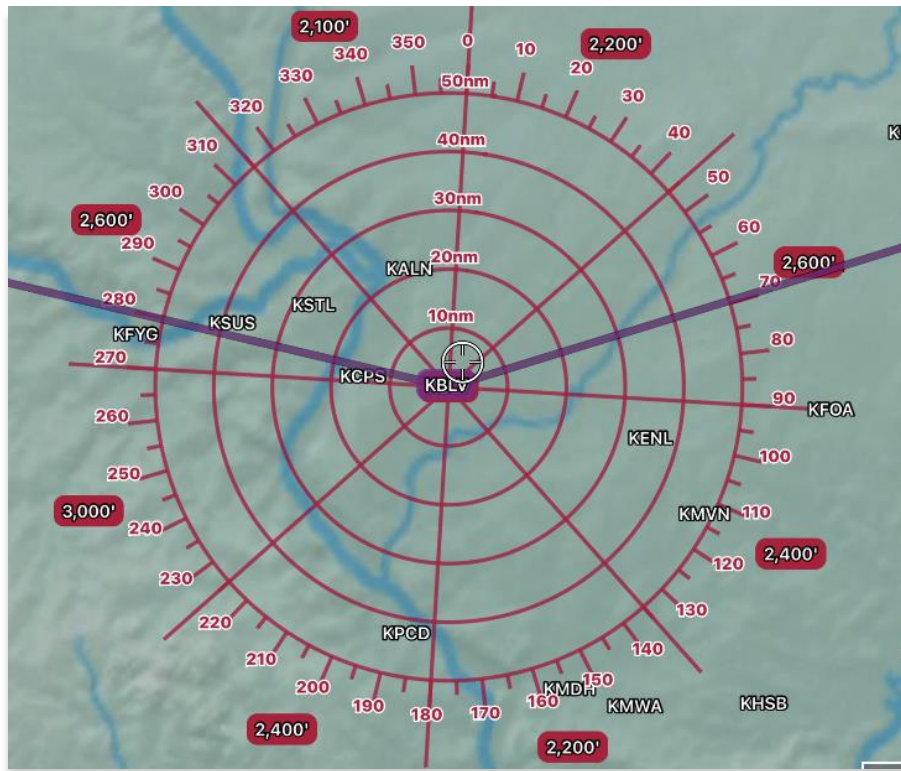


4. Tap to select or toggle the segmented control to **Line of Sight** coverage. Additional fields will be displayed.
5. Fields for Starting Azimuth and Ending Azimuth will display. Values entered will be shaded on the Orbit. Enter the starting and ending azimuth for the line of sight coverage.

| Altitude             |                                                                                                                                        |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Altitude Calculation | <input type="button" value="On"/>                                                                                                      |
| Orbit Coverage       | <input type="button" value="Coverage"/> <input checked="" type="button" value="Line of Sight"/> <input type="button" value="VOR MON"/> |
| Starting Azimuth     | <input type="text" value="060"/>                                                                                                       |
| Ending Azimuth       | <input type="text" value="120"/>                                                                                                       |



6. Tap **Show** once all fields are set to the desired values.

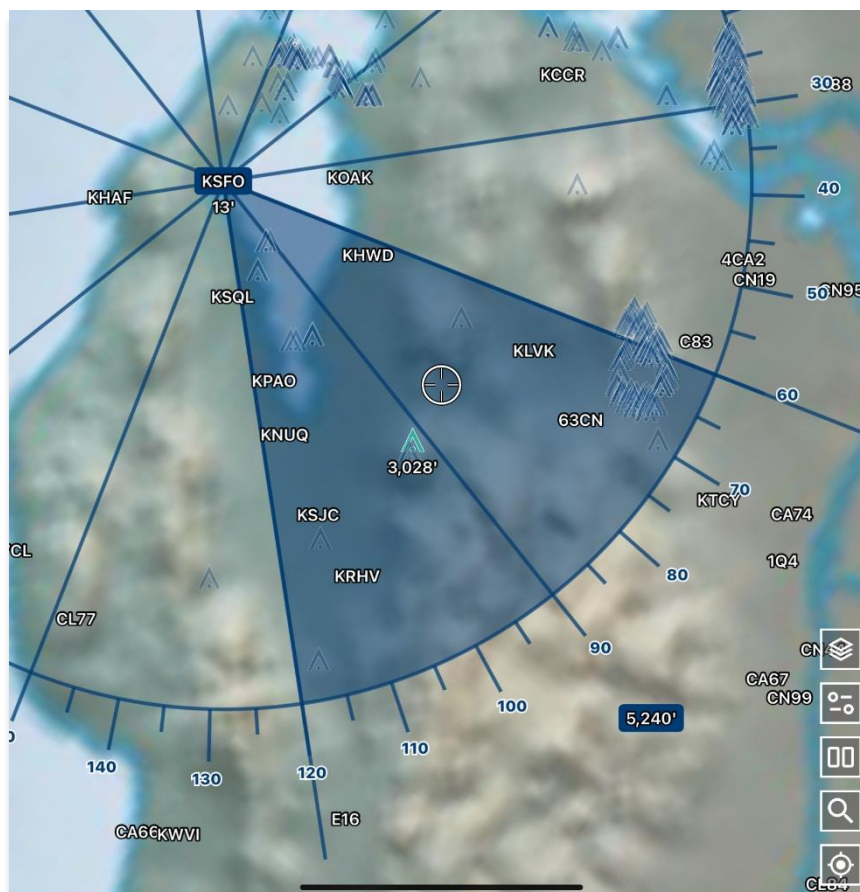

**NOTE:** The value placed beside the shaded area represents the line of sight for that sector.



**NOTE:** The value located below the selected point represents the elevation of that identifier.



**NOTE:** VOs are visible and will populate within the displayed orbit. The highlighted VOs are the highest elevation VOs.

7. Tap to select or toggle the segmented control to **VOR MON** coverage.
8. Fields to include VOs and entering a minimum Altitude will display. Select *Terrain* or *Terrain + VOs*.
9. Enter a **minimum altitude** in the text field.



**NOTE:** Default value for Minimum Altitude field is 5,000'.



**NOTE:** Enter any multiples of 100' from 1,000' to 17,500' above site elevation.

▲ Altitude


Altitude Calculation On

Orbit Coverage Coverage Line of Sight VOR MON

Include VOs Terrain Terrain + VOs

Minimum Altitude 10400

10. Tap **Show** once all fields are set to the desired values.

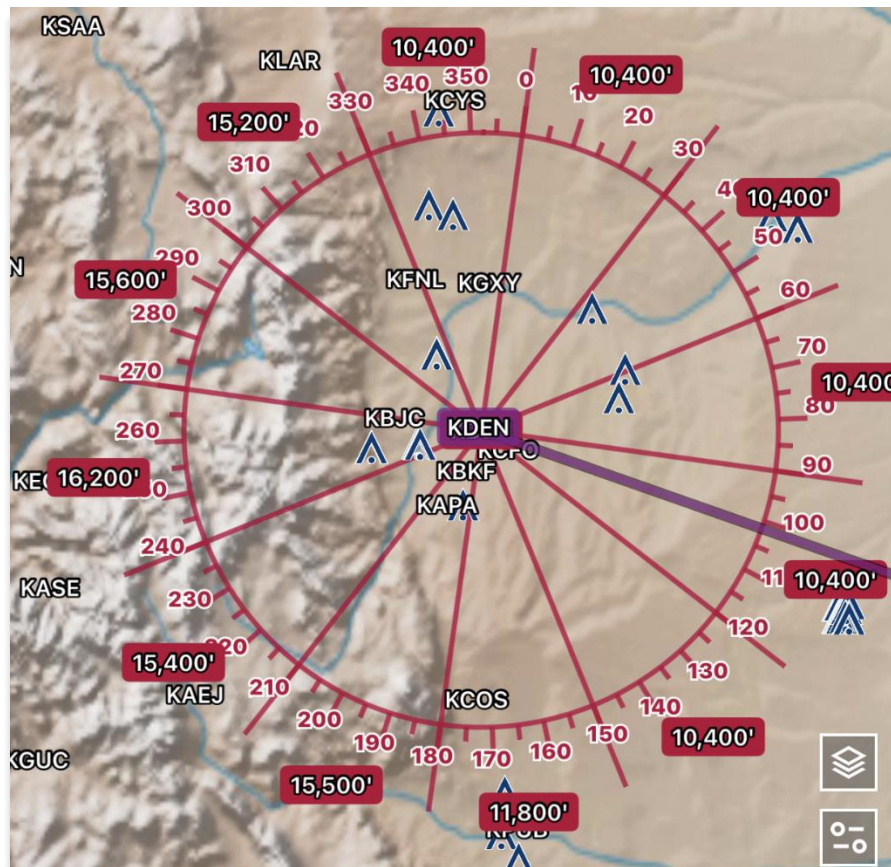



## 14.5 General

General (open book icon) is located on the Main Menu, to the right of the Map menu. The General section includes significant charts and documents such as regional Charts, Supplements, Planning, User Documents, and Legend.




### 14.5.1 Charts

The selection of charts is accessible from the General Main Menu drop-down. Users have the option to display regional charts, Supplements, Planning, Documents and Legend on their view. It is necessary to download the respective region of the chart to display on Aero App.


1. Tap **General** on the **Main Menu**. The General options will be displayed.
2. Select from Charts, Supplements, Planning, Documents, and Legend.




3. Tap on the **ribbon** to display available charts or documents for the selected chart or document type.

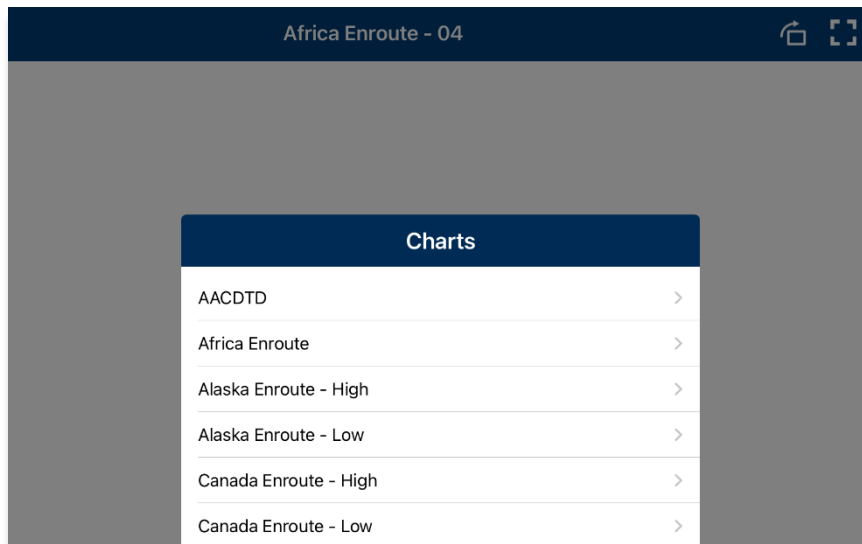


**NOTE:** The thumbnail slider below all documents will allow users to select specific pages for Supplements, Planning, Docs, and Legend charts. Alternatively, users can tap the left or right arrows to turn the page.

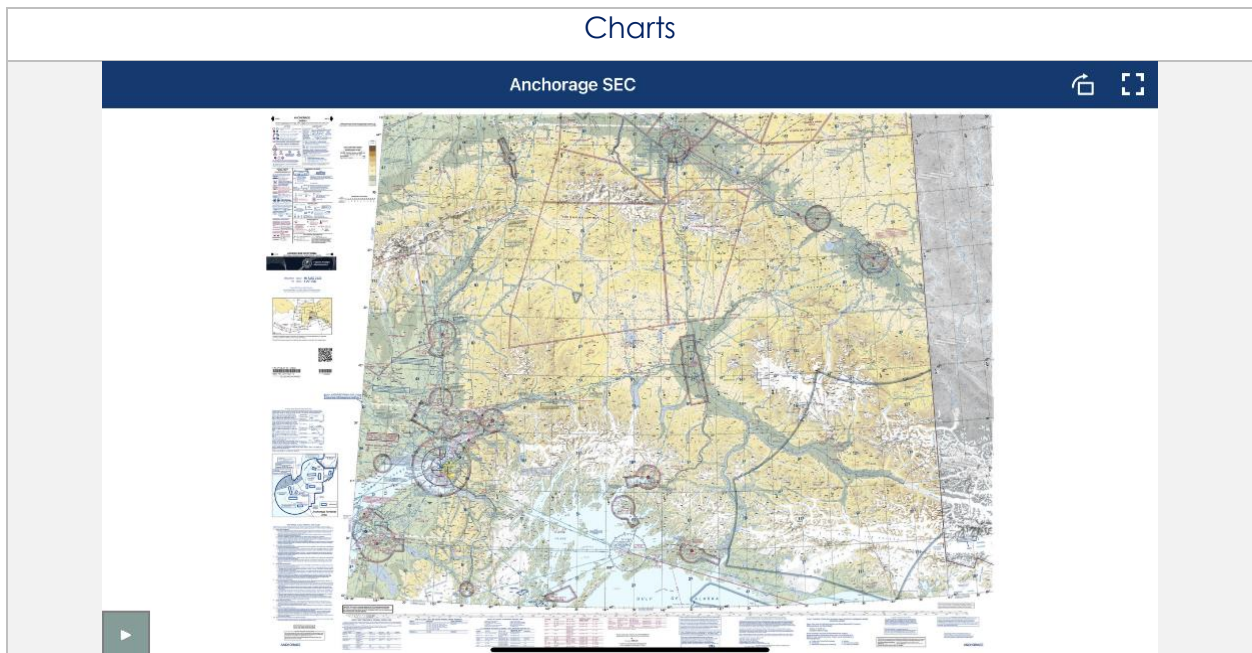

## Supplements

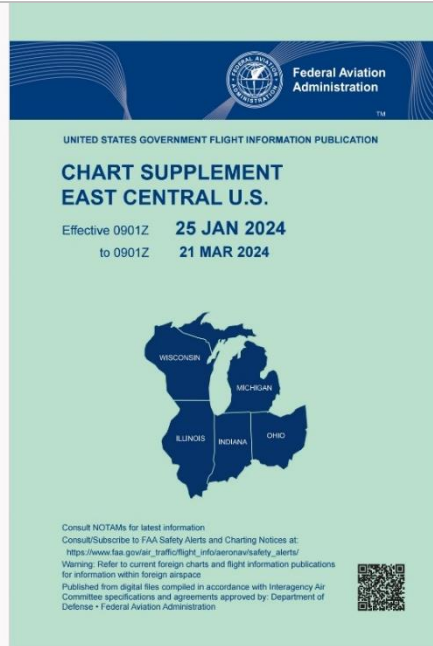

## Area Planning Documents

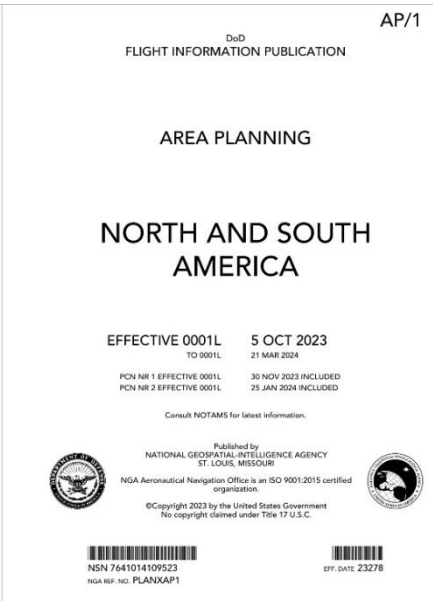

Undo Drawing

Grid View

Share

Draw on  
Charts


Save

Search




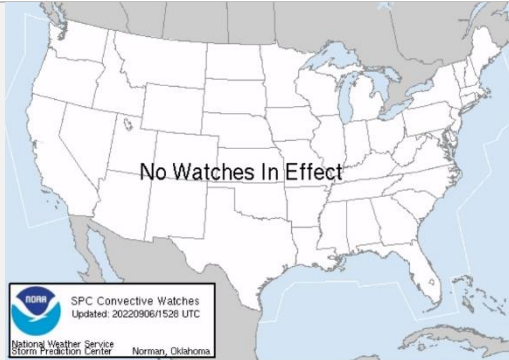
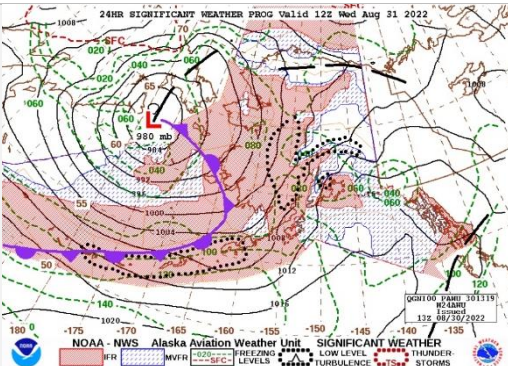
### Terminal Procedure Legend

## 14.6 Weather (Wx) Images

Weather (lightning bolt cloud icon) is located on the Main Menu, positioned between the General and Calcs menus. The Weather (Wx) Images are from the National Oceanic and Atmospheric Administration (NOAA) providing access to weather, hydrologic, and climatic forecasts and warnings for the U.S. and adjoining areas. The images can be panned and zoomed. An internet connection is required to view real-time weather images. Wx images are provided below:

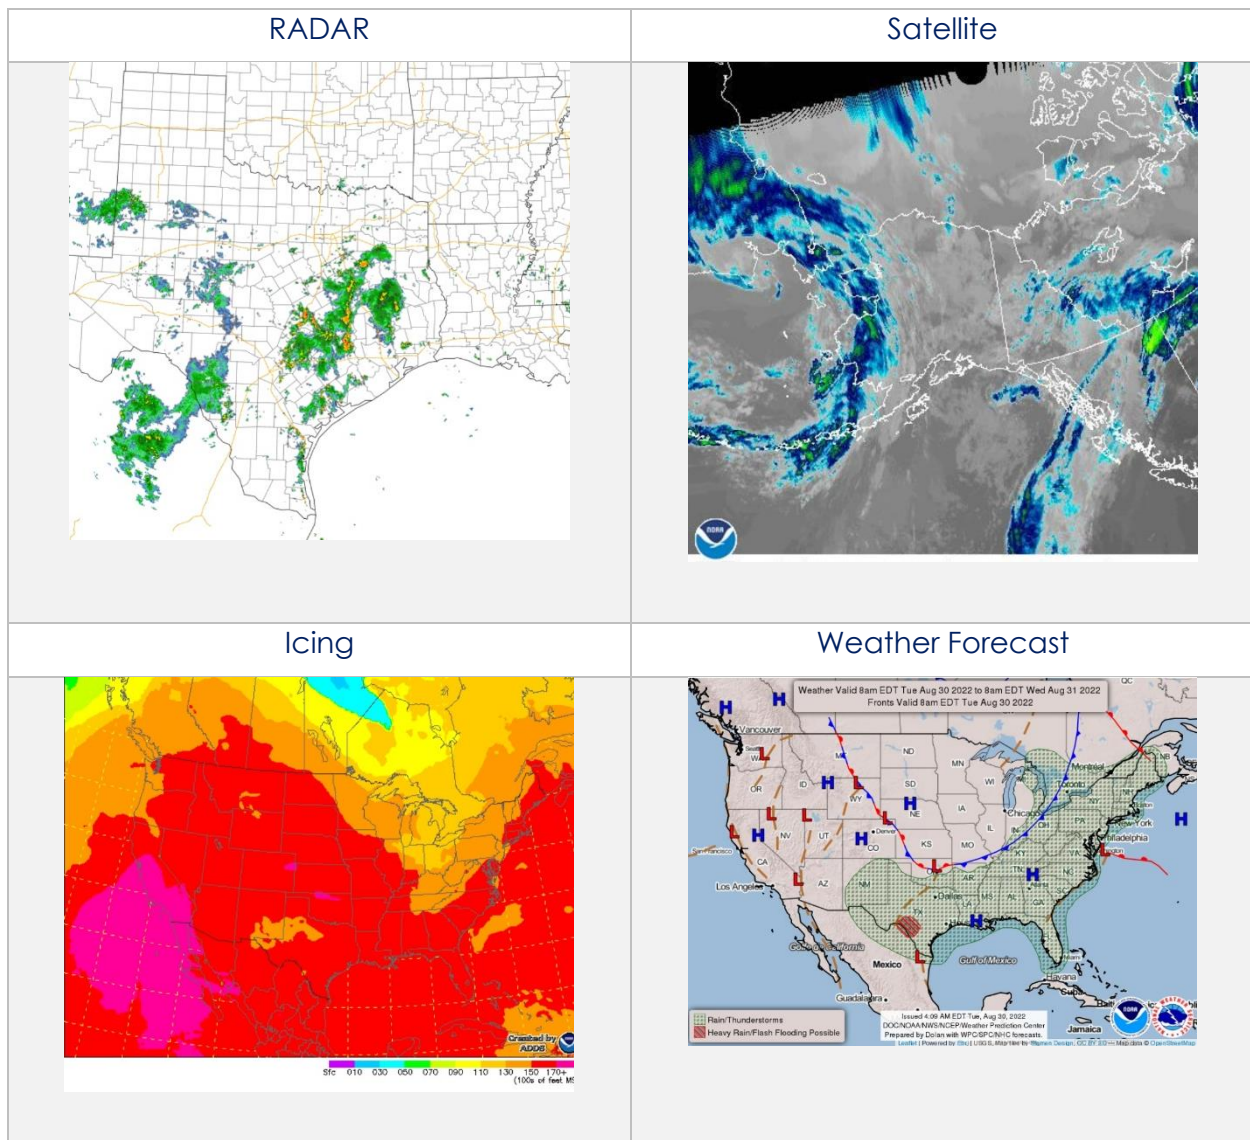


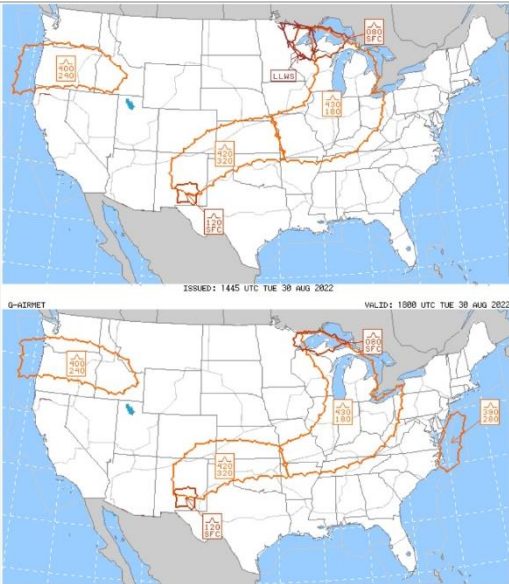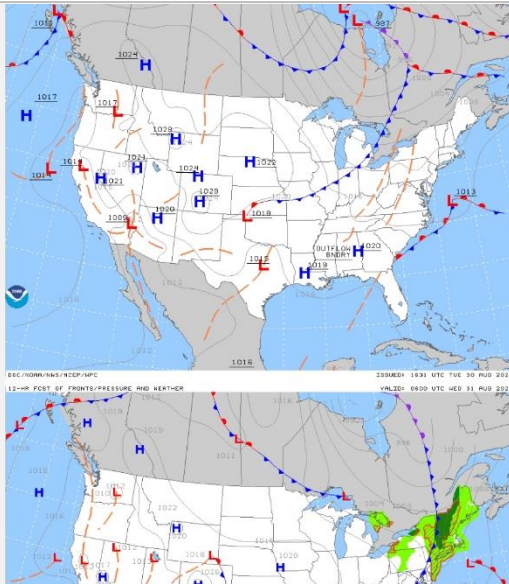

|                                                                                                                           |                                                                                                                       |
|---------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <p>AIRMETs and SIGMETs</p>               | <p>Prog Charts</p>                  |
| <p>Convective SIGMETs and Outlooks</p>  | <p>Current Convective Watches</p>  |
| <p>Alaska</p>                         |                                                                                                                       |

## 14.7 Calcs (Calculations)

The Calcs (calculator icon) menu, also referred to as Calculations, contains features for E6B and Fuel Check. To access these features, tap the Calcs button.

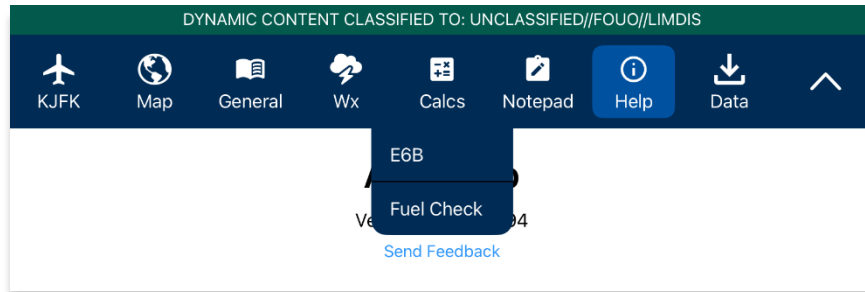

### 14.7.1 E6B Calculator

The electronic calculator enables pilots to perform a variety of calculations for preflight or inflight planning.

#### Altitude

**Altitude** calculates the Pressure Altitude and Density Altitude by entering the Elevation or the Airport ICAO, Altimeter, and Temperature.

 A screenshot of the "Altitude" tab in the E6B application. The interface has a dark blue header with "E6B" and an info icon. Below the header is a tab bar with "Altitude", "Cold Wx", "Conversions", "Coordinates", "Descent", and "Distance". The "Altitude" tab is selected. The main area shows two large blue boxes: "Pressure Altitude" with the value "5,877'" and "Density Altitude" with the value "8,541'". Below these are input fields for "Elevation or Airport:" (5250), "Altimeter:" (29.25), and "Temperature in °F:" (80.6). There is also a "Celsius:" section with an "Off" button.

#### Cold Weather (Wx)

**Cold Wx** corrects Altitude for cold temperature operations. Users can switch between Celsius and Fahrenheit.

 A screenshot of the "Cold Wx" tab in the E6B application. The interface has a dark blue header with "E6B" and an info icon. Below the header is a tab bar with "Altitude", "Cold Wx", "Conversions", "Coordinates", and "Descent". The "Cold Wx" tab is selected. The main area shows a large blue box with the text "Correction = 21'". Below this are input fields for "Height Above Altimeter:" (200), "Temperature in °F:" (13), and a "Celsius:" section with an "Off" button.

## Conversions

**Conversions** are divided into Distance, Pressure, Temperature, and Weight. Tap to select or slide the segmented control to desired conversion category.

1. Tap to select the current unit in the left column and select the desired unit in the right column.
2. Enter a value in the text field.

## Coordinates

**Coordinates** allows users to get a reading on Lat, Lon, MGRS (Military Grid Reference System), GARS (Global Area Reference System), and Radial Off NavAid when you enter coordinates.

1. Select an option from **Lat**, **Lon**, **MGRS**, **GARS**, or **Radial** by tapping or sliding the segmented control left-to-right.
2. Enter coordinates in the text field.
3. Results will populate below.
4. **+ Insert into Route** and **+ Insert at end of Route** will be selectable. Select **+ Insert into Route** and the entered coordinates will be added to your current route.
5. Select **+ Insert at end of Route** and the entered coordinates will be added at the end of your current route.

Once the coordinates have been entered in for one of the tabs, you can tap an output field to automatically switch to the mode with those field values automatically populated.

For example, from the Lat, Lon tab, you can tap on the MGRS output field and the MGRS tab is displayed with the field values from Lat, Lon.

**NavAid Radial Distance** calculates the coordinates using three inputs: namely a NavAid, Radial and Distance.

## Descent

**Descent Rate** is calculated in feet per minute, enter the Descent Angle in degrees and Groundspeed in knots.

The screenshot shows the E6B calculator with the 'Descent' tab selected. The 'Descent Rate' is displayed as 1,329 Feet Per Minute. Below this, there are input fields for 'Descent Angle' (set to 5) and 'Groundspeed' (set to 150). The top navigation bar includes 'Conversions', 'Coordinates', 'Descent', 'Distance', and 'IFR Climb'.

## Distance

**Distance** calculates the Total Fuel by Distance measured in kilometers or nautical miles, respective to which Distance Unit users have set in their Settings. Speed which is measured in knots and Time following the format (hh:mm:ss). Tap or slide the segmented control to the desired distance calculation type.

**Distance** is calculated by the Speed, Time, and Fuel Burn Per Hour. The expected output is Distance measured in kilometers or nautical miles, respective to which distance unit format user have set in their Settings and the Total Fuel in gallons.

The screenshot shows the E6B calculator with the 'Distance' tab selected. The 'Distance' is displayed as 181 nm. Below this, there are input fields for 'Speed' (120), 'Time (hh:mm:ss)' (01:30:30), and 'Fuel Burn Per Hour' (15). The 'Total Fuel' is calculated as 22.6. The top navigation bar includes 'Coordinates', 'Descent', 'Distance', 'IFR Climb', and 'Rwy Winds'.

**Speed** is calculated by Distance, Time, and Fuel Burn Per Hour. The expected output is Speed measured in knots and the Total Fuel in gallons.

The screenshot shows the E6B calculator with the 'Speed' tab selected. The 'Speed' is displayed as 120. Below this, there are input fields for 'Distance (nm)' (181), 'Time (hh:mm:ss)' (01:30:30), and 'Fuel Burn Per Hour' (15). The 'Total Fuel' is calculated as 22.6. The top navigation bar includes 'Coordinates', 'Descent', 'Distance', 'IFR Climb', and 'Rwy Winds'.

**Time** is calculated by Distance, Speed, and Fuel Burn Per Hour. The expected output is Time following the format (hh:mm:ss) and the Total Fuel in gallons.

The screenshot shows the E6B calculator with the 'Time' tab selected. The 'Time' is displayed as 1h 30m 30s. Below this, there are input fields for 'Distance (nm)' (181), 'Speed' (120), and 'Fuel Burn Per Hour' (15). The 'Total Fuel' is calculated as 22.6. The top navigation bar includes 'Coordinates', 'Descent', 'Distance', 'IFR Climb', and 'Rwy Winds'.

## Instrument Flight Rules (IFR) Climb

**IFR Climb** calculates the Climb Angle measured in Degrees and Climb Rate measured in Feet per Minute by providing the Climb in ft/km and ft/nm; respective to which Distance Unit users have set in their Settings. As well as providing the Groundspeed measured in knots.

| E6B            |          |                                               |                                                       |             |
|----------------|----------|-----------------------------------------------|-------------------------------------------------------|-------------|
| Descent        | Distance | IFR Climb                                     | Rwy Winds                                             | Winds Aloft |
|                |          | <b>Climb Angle</b><br><div>1.9°</div> Degrees | <b>Climb Rate</b><br><div>1,333</div> Feet Per Minute |             |
| Feet/NM Climb: |          |                                               | <input type="text" value="200"/>                      |             |
| Groundspeed:   |          |                                               | <input type="text" value="400"/>                      |             |

## Runway (Rwy) Winds

**Runway Winds** calculates Headwind and Crosswind by typing in Runway Direction in degrees, and Wind Direction/Speed.

| E6B               |          |                                         |                                                                   |             |
|-------------------|----------|-----------------------------------------|-------------------------------------------------------------------|-------------|
| Descent           | Distance | IFR Climb                               | Rwy Winds                                                         | Winds Aloft |
|                   |          | <b>Headwind</b><br><div>↓ 9</div> Knots | <b>Crosswind</b><br><div>← 12</div> Knots                         |             |
| Runway Direction: |          |                                         | <input type="text" value="29"/>                                   |             |
| Wind Dir/Spd:     |          |                                         | <input type="text" value="80"/> @ <input type="text" value="15"/> |             |

## Winds Aloft

**Winds Aloft** calculates Heading (Hdg), Ground Speed (GS), and Wind Correction Angle (WCA) by typing in Nearby Airport (ICAO), Course (degrees), True Airspeed (knots), and Wind Direction/Speed.

| E6B             |          |                                      |                                                                     |                                      |
|-----------------|----------|--------------------------------------|---------------------------------------------------------------------|--------------------------------------|
| Descent         | Distance | IFR Climb                            | Rwy Winds                                                           | Winds Aloft                          |
|                 |          | <b>HDG</b><br><div>40°</div> Degrees | <b>GS</b><br><div>441</div> Knots                                   | <b>WCA</b><br><div>41°</div> Degrees |
| Nearby Airport: |          |                                      | <input type="text" value="KBLV"/>                                   |                                      |
| Course:         |          |                                      | <input type="text" value="5"/>                                      |                                      |
| True Airspeed:  |          |                                      | <input type="text" value="250"/>                                    |                                      |
| Wind Dir/Spd:   |          |                                      | <input type="text" value="150"/> @ <input type="text" value="300"/> |                                      |




**NOTE:** See reference notes located at the bottom of the E6B popup.

## 14.7.2 Fuel Check


The Fuel Check feature calculates fuel burn and estimates the time remaining until the fuel is consumed fully. Fuel Check includes fields for Duration (hh:mm), Starting Fuel (lbs), and Remaining Fuel (lbs).

1. Tap **Calcs** on the **Main Menu**. The Calcs options will be displayed.
2. Select **Fuel Check**. The Fuel Check popup will appear.
3. Tap the **Duration** field. Enter desired duration for the fuel check in hours and minutes.
4. Enter the exact fuel amount in the **Starting Fuel** field.
5. Tap **Start** to begin the timer.
6. Tap **Cancel** to stop the timer.

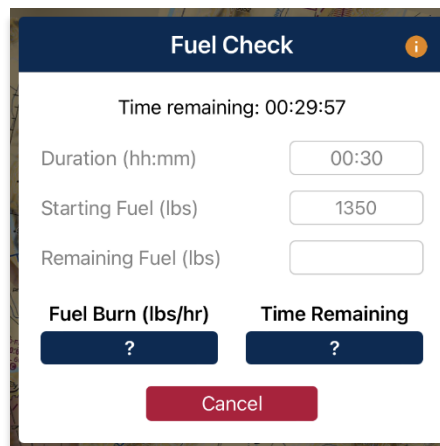

The screenshot shows the 'Fuel Check' popup with a dark blue header. Below the header, it displays 'Time remaining: 00:29:57'. There are three input fields: 'Duration (hh:mm)' with '00:30', 'Starting Fuel (lbs)' with '1350', and 'Remaining Fuel (lbs)' which is empty. At the bottom, there are two dark blue buttons labeled 'Fuel Burn (lbs/hr)' and 'Time Remaining', both showing a question mark. A red 'Cancel' button is at the very bottom.

7. Once the timer has ended, users will be prompted to enter the remaining fuel. In the *Remaining Fuel* field, enter the **remaining fuel** in pounds.
8. The calculations will populate the Fuel Burn and Time Remaining results field based on the entered values. Tap **Reset** to clear the calculations.

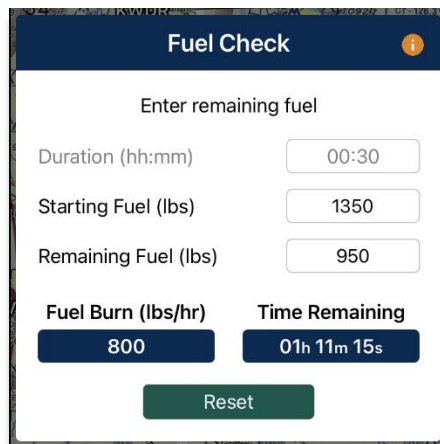


The screenshot shows the 'Fuel Check' popup with the same layout as before, but with updated values. The 'Remaining Fuel (lbs)' field now contains '950'. The 'Fuel Burn (lbs/hr)' button now displays '800' and the 'Time Remaining' button displays '01h 11m 15s'. A green 'Reset' button has replaced the 'Cancel' button at the bottom.

## 14.8 Notepad

Notepad (clipboard with pencil icon) is located on the Main Menu, positioned between the Calcs and Help menus. The Notepad feature enables users to enter notes using their fingertips or with a stylus. The notepad contains three reusable pages. The notepad view includes Undo and Clear options.

- **Undo** – undoes the most recent markings on the notepad
- **Clear** – erases all markings from the selected notepad page

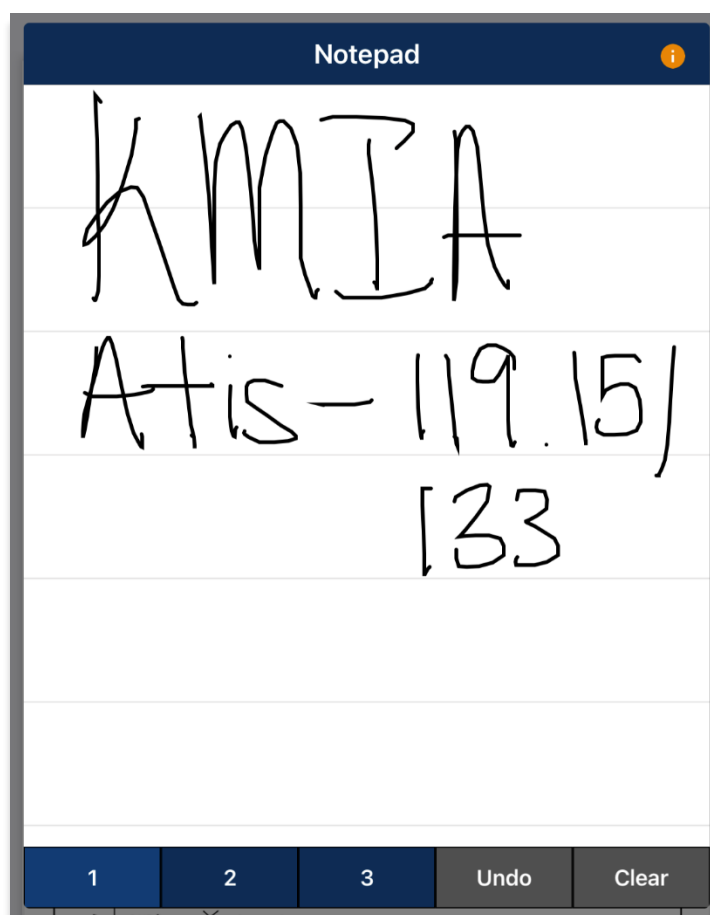


**NOTE:** Any notepad markings are automatically saved upon exiting the view.



## 14.9 Help

Help (information icon) is located on the Main Menu, positioned between the Notepad and Data menus. The Help menu contains the following options:

- **What's New** – contains app updates such as information on new features, app enhancements, and important updates. Global must be loaded in Active Cycle to view the What's New page. When a new cycle is loaded in Active Cycle, the What's new popup will display. Refer to [Section 13.2](#) for additional information.
- **Web Links** – contains a collection of links to reference relevant resources. Global must be loaded in Active Cycle to view the Web Links page.
- **User Manual** – includes a link to the [aeroapp.info](http://aeroapp.info) webpage to view different sources of Aero App user guides. Refer to [Section 14.9.1](#) for additional information.
- **About** – contains information on third party libraries, app version number, and the required OS to successfully use Aero App. Below the app version number is a link to send feedback to the Aero App Support Team.

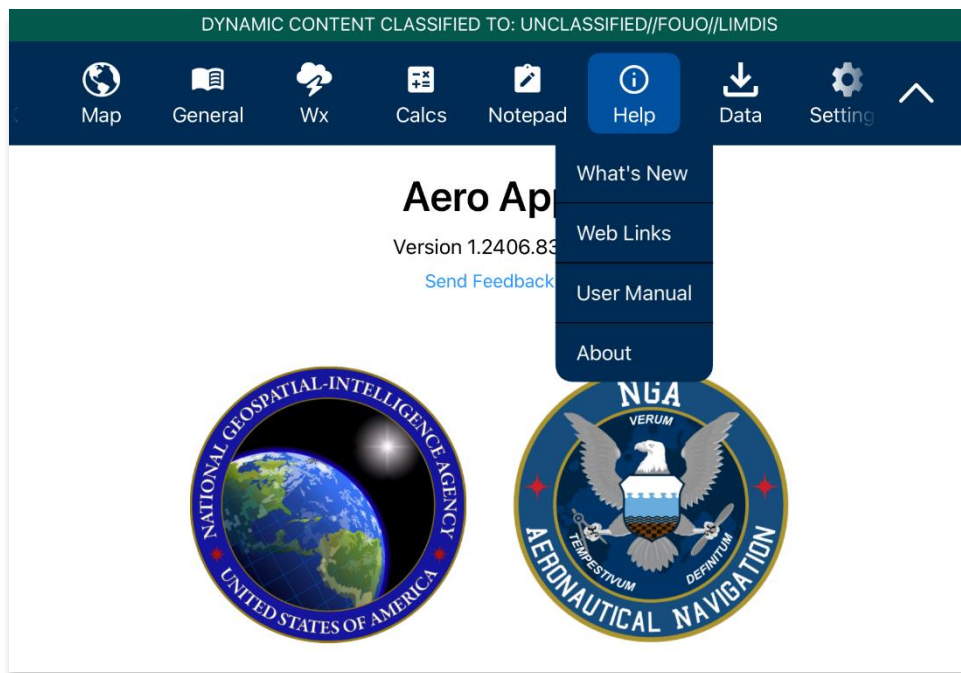





### 14.9.1 User Manual Access

The User Manual tab includes a link that redirects users to the Aero App website ([aeroapp.info](http://aeroapp.info)).


1. Tap **Help** on the **Main Menu**. The Help options will display.
2. Select **User Manual**.
3. Tap the **aeroapp.info** link and users will be redirected to the Aero App homepage.

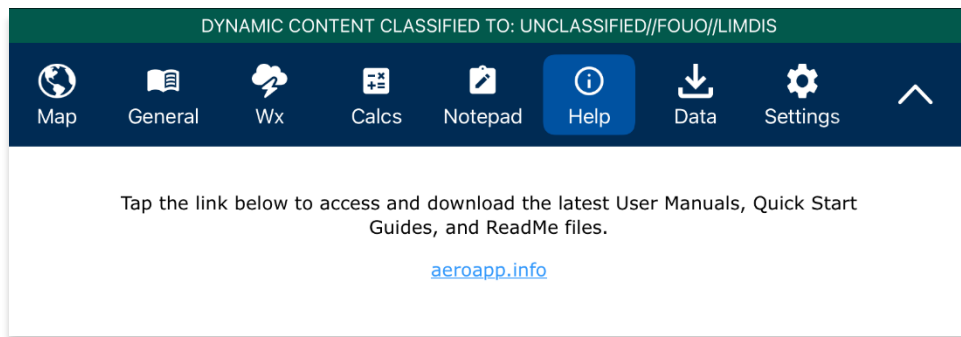


4. Navigate to the *Downloads* menu. Option placement will vary depending on display size.
  - On large screens, hover over **Downloads** on the menu ribbon to reveal additional download options.

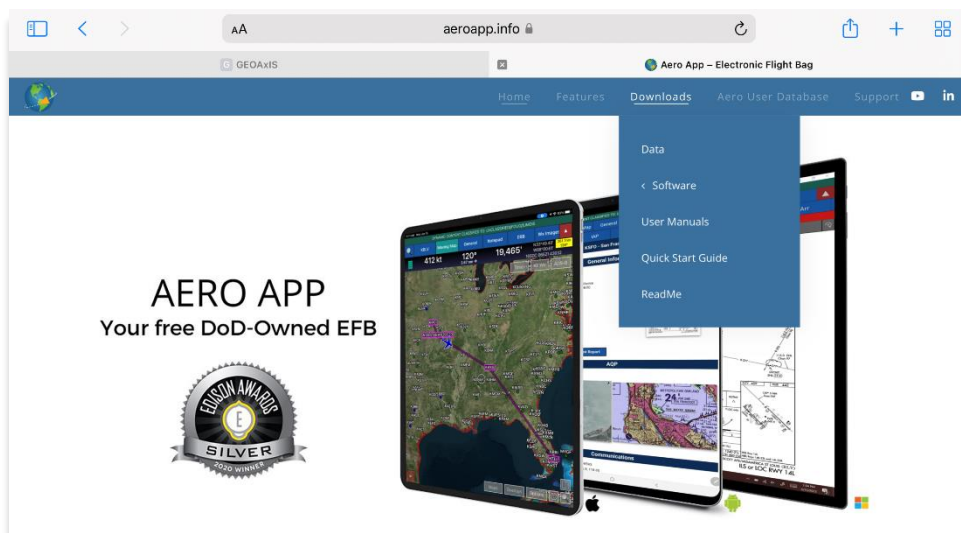

- On smaller screens, tap the hamburger button and select **DOWNLOADS** to display additional download options.

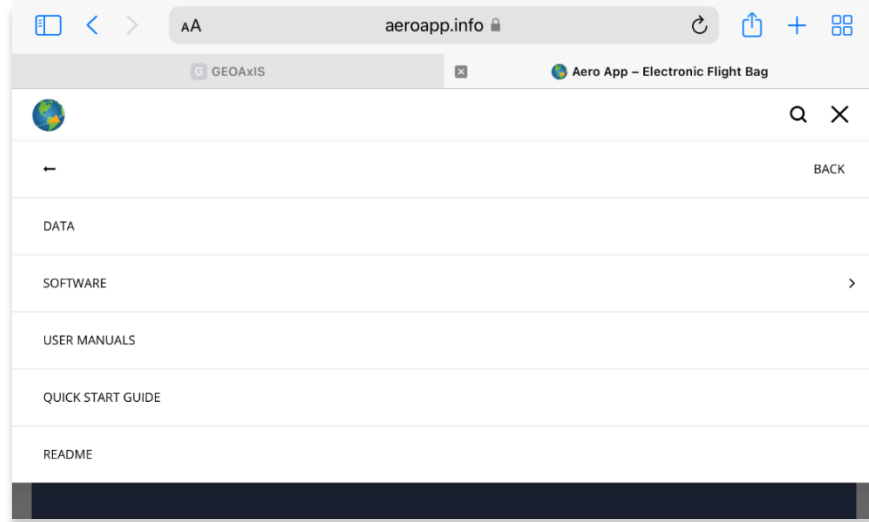


5. Select **Documentation** then **User Manual**.
6. Users are provided with several platforms to choose from. Tap **Aero App for iOS** to reveal related user manuals.
7. Select desired user manual version and you will be redirected to the PDF.

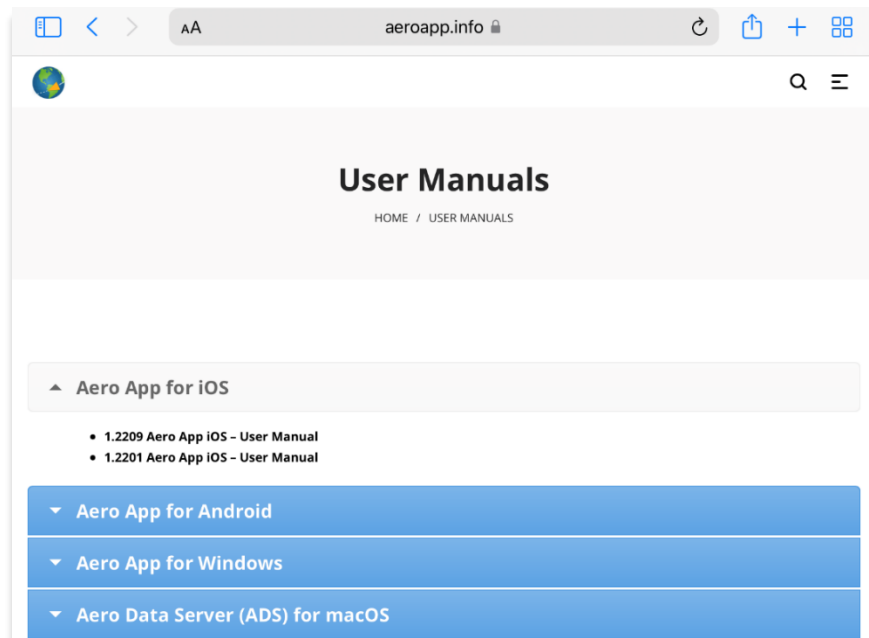

**NOTE:** The Aero App User Manual can be uploaded into Aero App. Refer to [Section 11.8](#) for additional information.

## 14.10 Data

Data (download icon) is located on the Main Menu, positioned between the Help and Settings menus. The Data Status screen enables users to manage cycles. Refer to [Section 13](#) for additional information.

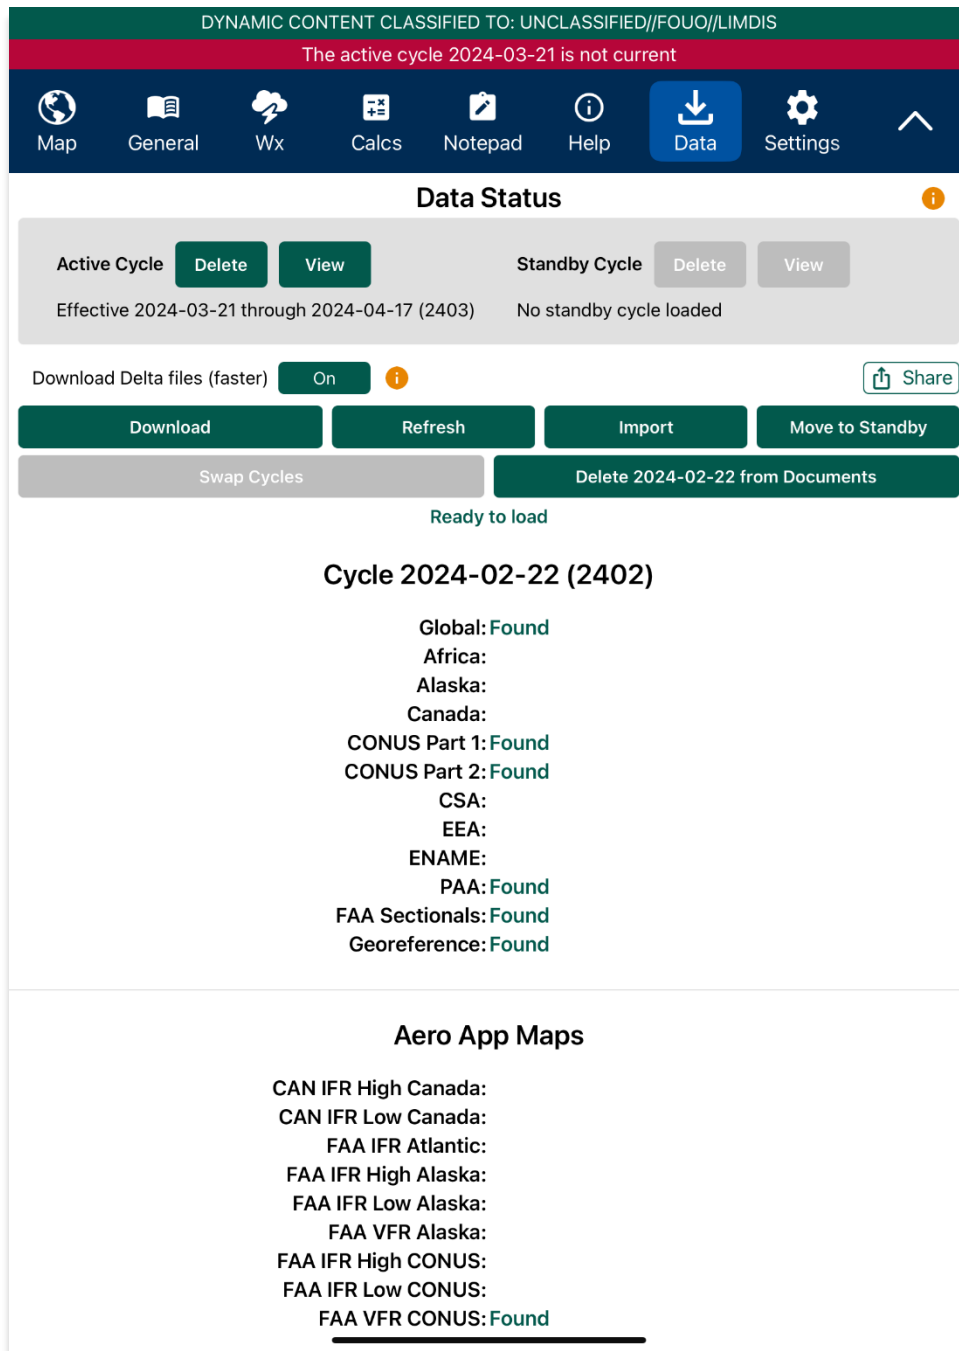

## 14.11 Settings

Settings (gear icon) is located on the Main Menu, positioned to the right of the Data menu. Settings is a tool that enables users to customize the behavior of Aero App. Various setting options are divided into Miscellaneous, Reset, Route, and User Interface.

### 14.11.1 Miscellaneous

Miscellaneous contains the setting options to customize select Aero App features and views.

1. Tap **Settings** on the **Main Menu**.
2. Select **Miscellaneous** from the side menu.
3. The following options are available:
  - **Airport Ring on APD and IAP** – verifies the georeferencing by showing a small ring around the Airport center.
  - **Home Field** – sets an ICAO as the default location on the Map upon opening the Map page and GPS is not available. This feature will take effect when the app is either rebooted or reopened and Map is selected for use.
  - **Minimum Runway Length (ft)** – filters Airports based on the specified runway length. The value must be in ft.
  - **Ownship on APD and IAP** – displays ownship on FAA Airport Diagrams and Instrument Approach Procedures.
  - **Secret** – classifies your device as containing SECRET material.



**NOTE:** Once Aero App has been updated to SECRET, the action cannot be undone.



**NOTE:** Aero App must be uninstalled and reinstalled to revert to UNCLASSIFIED.

---

- **Switch to APD on Landing** – switches the screen to display an APD upon landing. When this feature is enabled, Speed (ft) will display. Enter desired value in kt. Once your ownship has reached the specified speed, the screen will switch to APD.

### 14.11.2 Reset

Reset clears all chart markups.

1. Tap **Settings** on the **Main Menu**.
2. Select **Reset** from the side menu.
3. The following options are available:
  - **Clear All Chart Markups** – clears all APD and IAP markups.
  - **Clear All PDF Markups** – clears all Supplement, Planning Document, Legend, Giant Report, and Host Nation markups.

### 14.11.3 Route


The Route setting contains route configuration options.

1. Tap **Settings** on the **Main Menu**.
2. Select **Route** from the side menu.
3. The following option is available:
  - **Snap Route to Current Leg** – automatically scrolls to the current leg in route and highlights the current flight leg on the Route Panel.

### 14.11.4 User Interface

The User Interface setting allows users to customize the general appearance of the app and the format in which information is presented to the user.

1. Tap **Settings** on the **Main Menu**.
2. Select **User Interface** from the side menu.
3. The following options are available:
  - **Big Buttons on Main Menu** – enlarges the Menu button size; useful when wearing gloves.

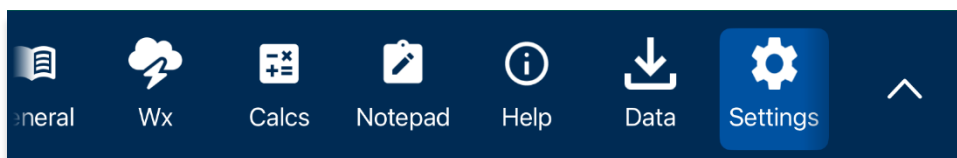


- **Confirm on Delete** – confirms deletion of an item in the route.
- **Coordinates Unit** – displays coordinates in Military Grid Reference System or Lat/Lon format.
- **Display Text for Main Menu** – displays text below each Main Menu option.



- **Distance Unit** – displays distance in km or nm.
- **Main Menu at Top** – relocates the Main Menu to the top or bottom of your screen.




- **Popup Close on X** – displays an X to exit a view.

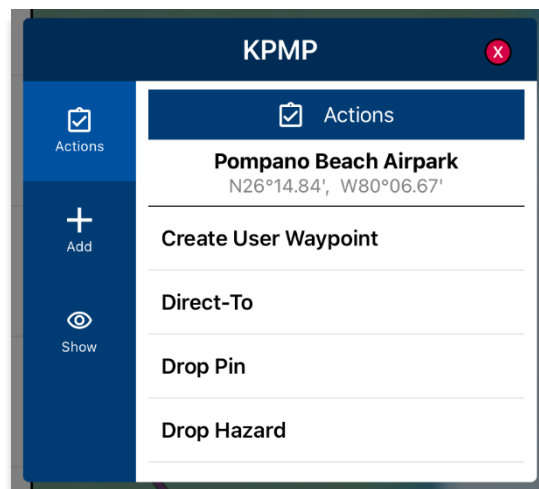

## 15 Appendix A | Uninstall Aero App

This section will describe how to uninstall Aero App from your iPad.

1. Navigate to the *Home Screen* from your iPad.
2. Located and hold Aero App until the *Remove App* button displays.
3. Tap on the **Remove App** button. A confirmation popup will display.
4. Select **Delete App** from the given options.

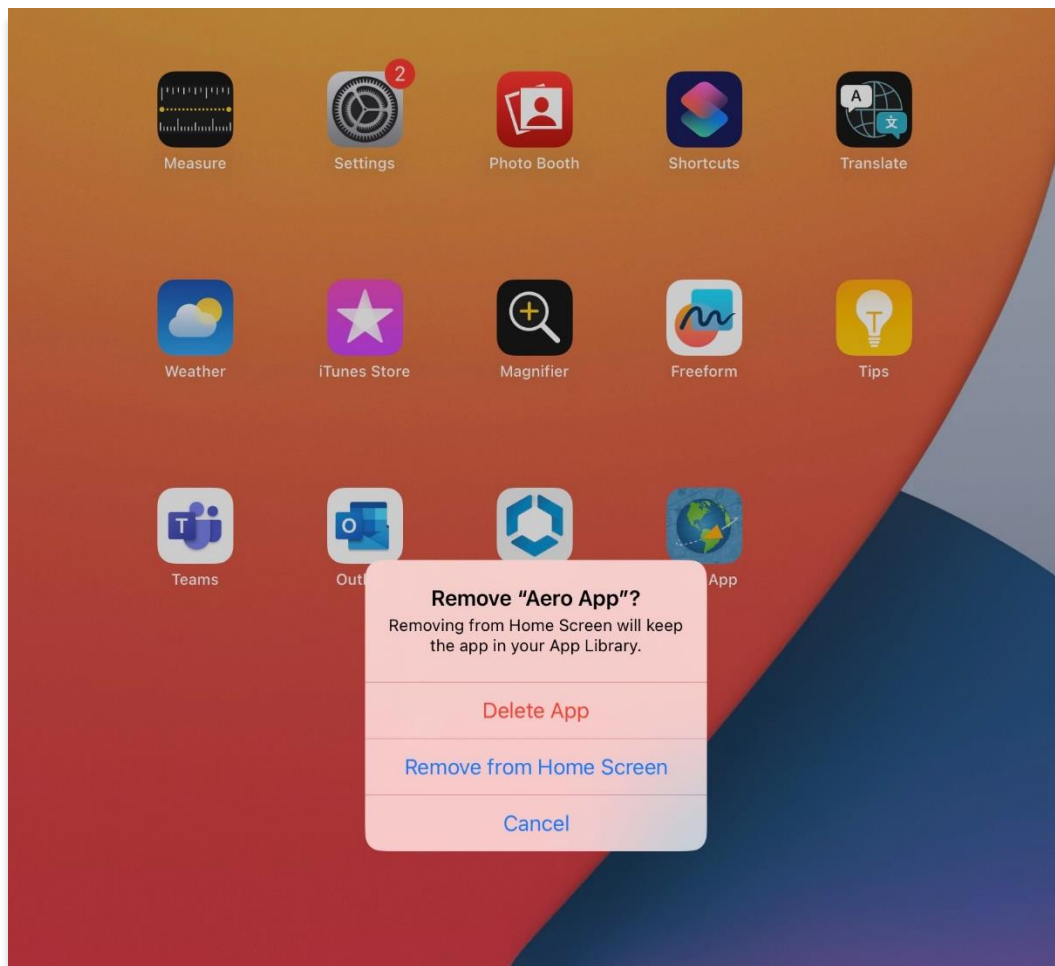

## 16 Appendix B | User Waypoints and Coordinates

Enter Waypoints using Latitude and Longitude coordinates.

Coordinate formats include:

| <b>DD.DDD,DDD.DDD</b>   |                         | <b>DDMM.MM,DDMM.MM</b>   |                           |
|-------------------------|-------------------------|--------------------------|---------------------------|
| Input Example           | Means                   | Input Example            | Means                     |
| 37.12345, -121.12345    | 37.12345°N, 121.12345°W | 3723.45, -11834.45       | 37°23.45N, 118°34.45W     |
| <b>NDD.DDD,WDDD.DDD</b> |                         | <b>NDDMM.MM,WDDMM.MM</b> |                           |
| Input Example           | Means                   | Input Example            | Means                     |
| N37.12345, W121.12345   | 37.12345°N, 121.12345°W | N3713.4536, W12145.901   | 37°13.4536°N, 121°45.901W |
| <b>DD.DDDN,DDD.DDDW</b> |                         | <b>DDMM.MMN,DDMM.MMW</b> |                           |
| Input Example           | Means                   | Input Example            | Means                     |
| 37.12345N, 121.12345W   | 37.12345°N, 121.12345°W | 3713.4536N, 12145.901W   | 37°13.4536°N, 121°45.901W |



**NOTE:** If you enter the values in degrees and decimal minutes, you need to ensure that there are at least four digits before the decimal point, e.g., for 1 degree and 12.5 minutes use 0112.5 because 112.5 will be interpreted as 112.5 degrees.



**NOTE:** When using E6B, you can leave spaces between degrees and decimal minutes. This is not possible when utilizing search boxes for the creation of routes.



**NOTE:** When adding MGRS to route, a minimum of six characters is required for a valid MGRS entry.



## 17 Appendix C | Hazards and Pins SQLite Files

This appendix includes key specifications, schemas, and examples of SQLite databases for Hazards and Pins. Aero App uses a structured database, or SQLite file, comprised of two tables: mapPins and hazards, to read and display pins and hazards on the Map.

In addition to dropping their own pins and hazards on the Map, users can create or modify SQLite files to share their pins and/or hazards with others to display on their Aero App. This SQLite file must be saved as *pins-{name}.sqlite*, where *{name}* is replaced by the user. If the file does not follow that naming convention, Aero may not read the file, or it may cause existing Pins and Hazards to overwrite on Aero App. The sections ahead provide further details on creating a SQLite file.

### 17.1 Specifications for Hazards

The following specifications apply to Hazards.

- **NOT NULL** – denotes the field is required
- **UNIQUE** – denotes the value must be distinct
- **INTEGER** – whole numbers only
- **REAL** – allows decimal numbers
- **TEXT** – allows alphanumeric character data

| Key        | Key Type                                | Definition                                                                                                                                                                                                                                                                                |
|------------|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| id         | INTEGER<br>PRIMARY KEY<br>AUTOINCREMENT | The id column serves as the primary key, and the "AUTOINCREMENT" attribute ensures that a unique value is automatically assigned to this column for each new row inserted into the table.                                                                                                 |
| identifier | TEXT<br>NOT NULL<br>UNIQUE              | The identifier field is required and must differ from other identifiers in this column. It is recommended to follow a naming convention such as <i>HAZARD#</i> (starting from 1), where "#" represents a unique number. Users should avoid using white spaces or leaving the field blank. |
| name       | TEXT<br>NOT NULL                        | The name column can contain any character from the ASCII table. However, it is recommended to limit it to alphanumeric characters and spaces.                                                                                                                                             |
| radius     | REAL                                    | The radius column represents the distance from the center of the ring to its outer edge that pilots should                                                                                                                                                                                |

|       |                     |                                                                                                                                                                                                                          |
|-------|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|       |                     | avoid when flying. If the radius column is left empty or a negative value is entered, the radius of the ring will be automatically adjusted to 0.                                                                        |
| alert | INTEGER<br>NOT NULL | The alert column indicates whether Intersection Alert is active or not. 1 is used to represent true while 0 is used to represent false.                                                                                  |
| notes | TEXT                | The notes column is intended for additional information or context regarding hazards.                                                                                                                                    |
| lat   | REAL<br>NOT NULL    | The lat column represents the latitude of the hazard. Latitude cannot be greater than 90 or less than -90 but can be equal to either value.                                                                              |
| lon   | REAL<br>NOT NULL    | The lon column represents the longitude of the hazard. Longitude cannot be greater than 180 or less than -180 but can be equal to either value.                                                                          |
| mgrs  | TEXT                | The mgrs column can contain any alphanumeric characters, symbols, or spaces. It is used solely for display purposes and is not used to derive a location, since the location is determined solely by the lat/lon values. |

Here's the schema for the Hazards table. This schema includes the keys for each column mentioned earlier, with the necessary data types and constraints.

```
CREATE TABLE IF NOT EXISTS hazards (
    id INTEGER PRIMARY KEY AUTOINCREMENT,
    identifier TEXT NOT NULL UNIQUE,
    name TEXT NOT NULL,
    radius REAL,
    alert INTEGER NOT NULL,
    notes TEXT,
    lat REAL NOT NULL,
    lon REAL NOT NULL,
    mgrs TEXT);
```

### 17.1.1 Hazards SQLite Table

Here's an example of a SQLite table for Hazards:

| Browse Data Database Structure Edit Pragmas Execute SQL |            |                   |        |        |                                            |           |             |        |  |
|---------------------------------------------------------|------------|-------------------|--------|--------|--------------------------------------------|-----------|-------------|--------|--|
| Table: hazards                                          |            |                   |        |        |                                            |           |             |        |  |
| id                                                      | identifier | name              | radius | alert  | notes                                      | lat       | lon         | mgrs   |  |
| Filter                                                  | Filter     | Filter            | Filter | Filter | Filter                                     | Filter    | Filter      | Filter |  |
| 1                                                       | 0 HAZARD1  | Gun threat hazard | 10.0   | 1      | Create a circle around a hostile threat... | 33.434278 | -112.011583 | null   |  |

### 17.2 Specifications for Pins

Users must refer to the provided schema to create a table and input the desired values for each column. For Pins, the following specifications apply.

- **NOT NULL** – denotes the field is required
- **UNIQUE** – denotes the value must be unique
- **INTEGER** – whole numbers only
- **REAL** – allows decimal numbers
- **TEXT** – allows alphanumeric character data
- **BLOB** – stores large objects such as images

| Key        | Key Type                                | Definition                                                                                                                                                                                                                                                                                                                                               |
|------------|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| id         | INTEGER<br>PRIMARY KEY<br>AUTOINCREMENT | The id column serves as the primary key, and the "AUTOINCREMENT" attribute ensures that a unique value is automatically assigned to this column for each new row inserted into the table.                                                                                                                                                                |
| pinType    | INTEGER<br>NOT NULL                     | The pinType field serves to indicate the type of geographic pin. Specifically, 0 is used to represent pin, 1 represents landmark, 2 represents emergency marker, and 3 represents photo pin. Landmark and avoidance point share the same pinType value, which is 1. If connectToOwnship is enabled, then it's landmark, otherwise it is avoidance point. |
| identifier | TEXT<br>NOT NULL                        | The identifier field is required and must differ from other identifiers in this column. It is recommended to follow a naming                                                                                                                                                                                                                             |

|                  |                     |                                                                                                                                                           |
|------------------|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
|                  | UNIQUE              | convention such as <i>PIN#</i> (starting from 1), where "#" represents a unique number. Users should avoid using white spaces or leaving the field blank. |
| name             | TEXT<br>NOT NULL    | The name column can contain any character from the ASCII table. However, it is recommended to limit it to alphanumeric characters and spaces.             |
| notes            | TEXT                | The notes column is intended for additional information or context regarding pins.                                                                        |
| lat              | REAL<br>NOT NULL    | The lat column represents the latitude of the pin. Latitude cannot be greater than 90 or less than -90 but can be equal to either value.                  |
| lon              | REAL<br>NOT NULL    | The lon column represents the longitude of the pin. Longitude cannot be greater than 180 or less than -180 but can be equal to either value.              |
| timestamp        | INTEGER<br>NOT NULL | The timestamp column indicates the number of seconds since epoch time of when the pin was created.                                                        |
| radius           | REAL                | Option is set to 0 and are not read from.                                                                                                                 |
| radiusCircle     | INTEGER<br>NOT NULL | Option is set to 0 and are not read from.                                                                                                                 |
| radiusWarning    | INTEGER<br>NOT NULL | Option is set to 0 and are not read from.                                                                                                                 |
| connectToOwnship | INTEGER<br>NOT NULL | Option is set to 0 and are not read from.                                                                                                                 |
| imageBlob        | BLOB                | The imageBlob column is intended to associate pins to relevant photos and can be viewed through Aero App. This field is required for Photo Pins.          |

Here's the schema for the Pins table. This schema includes the keys for each column mentioned earlier, with the necessary data types and constraints.

```
CREATE TABLE IF NOT EXISTS mapPins (
    id INTEGER PRIMARY KEY AUTOINCREMENT,
    pinType INTEGER NOT NULL,
    identifier TEXT NOT NULL UNIQUE,
    name TEXT,
    notes TEXT,
    lat REAL NOT NULL,
    lon REAL NOT NULL,
    timestamp INTEGER NOT NULL,
    radius REAL,
    radiusCircle INTEGER NOT NULL,
    radiusWarning INTEGER NOT NULL,
    connectToOwnship INTEGER NOT NULL,
    imageBlob BLOB);
```

### 17.2.1 Pins SQLite Table

Here's an example of a SQLite table for Pins.

| Browse Data Database Structure Edit Pragas Execute SQL |         |            |        |            |           |            |            |        |              |               |                  |           |  |
|--------------------------------------------------------|---------|------------|--------|------------|-----------|------------|------------|--------|--------------|---------------|------------------|-----------|--|
| Table: mapPins                                         |         |            |        |            |           |            |            |        |              |               |                  |           |  |
| id                                                     | pinType | identifier | name   | notes      | lat       | lon        | timestamp  | radius | radiusCircle | radiusWarning | connectToOwnship | imageBlob |  |
| Filter                                                 | Filter  | Filter     | Filter | Filter     | Filter    | Filter     | Filter     | Filter | Filter       | Filter        | Filter           | Filter    |  |
| 1                                                      | 1       | 0 PIN1     | C17    | Parked C17 | 38.545178 | -89.835211 | 1694455715 | 0      | 0            | 0             | 0                | 0 null    |  |


## 18 Appendix D | PDF Viewer

Aero App users have access to a PDF file that includes Chart Supplements, Giant Reports, Planning Books, Legends, or User Documents.

### 18.1 Multiple Page

There are multiple instances where users will have access to a PDF, including Chart Supplements, Giant Reports, Planning Books, Legends, or user documents.


1. Open a PDF from the options mentioned above.
2. Tap on the **grid view** icon.
3. Swipe up or down to see all pages.

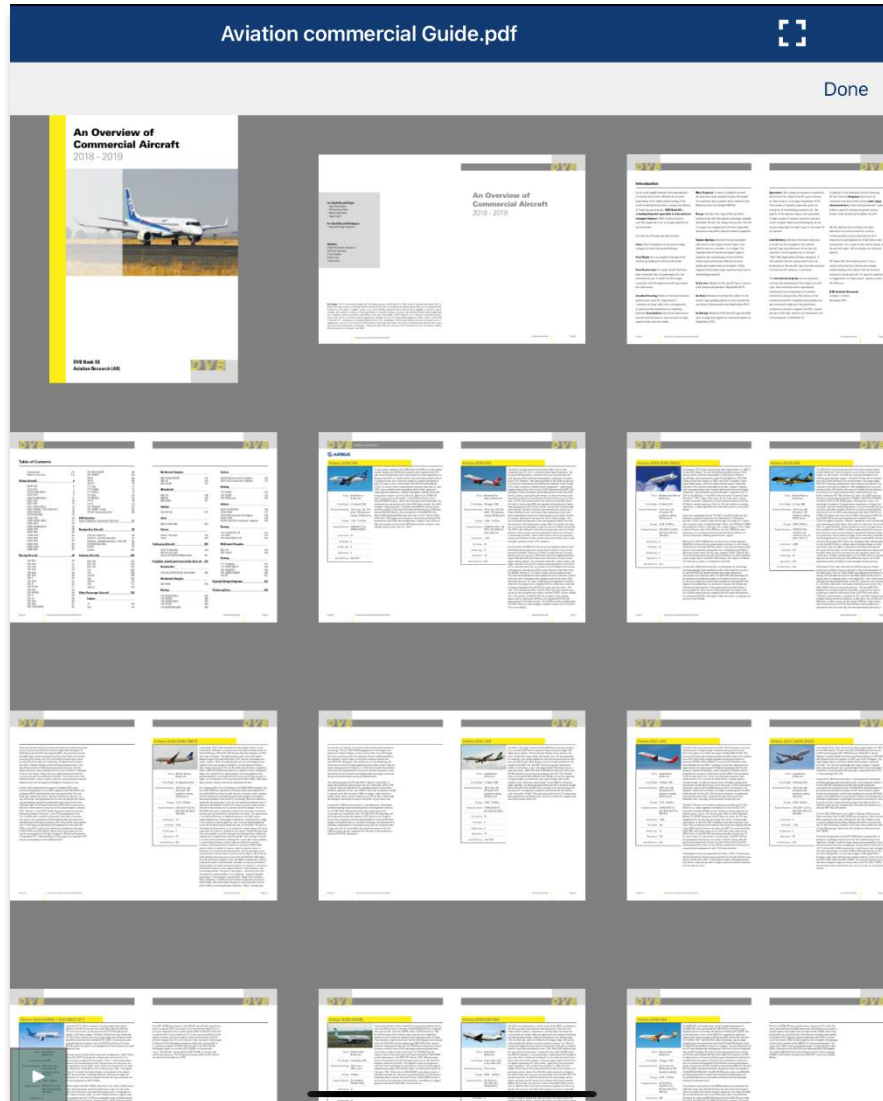

## 18.2 PDF Search

The PDF Search feature enables users to search keywords in a PDF file.


1. Navigate to desired PDF file.
2. Tap the **PDF Search** button.
3. Enter keyword(s) to search.
4. Select from the results.
5. The keyword will be highlighted on the selected page.

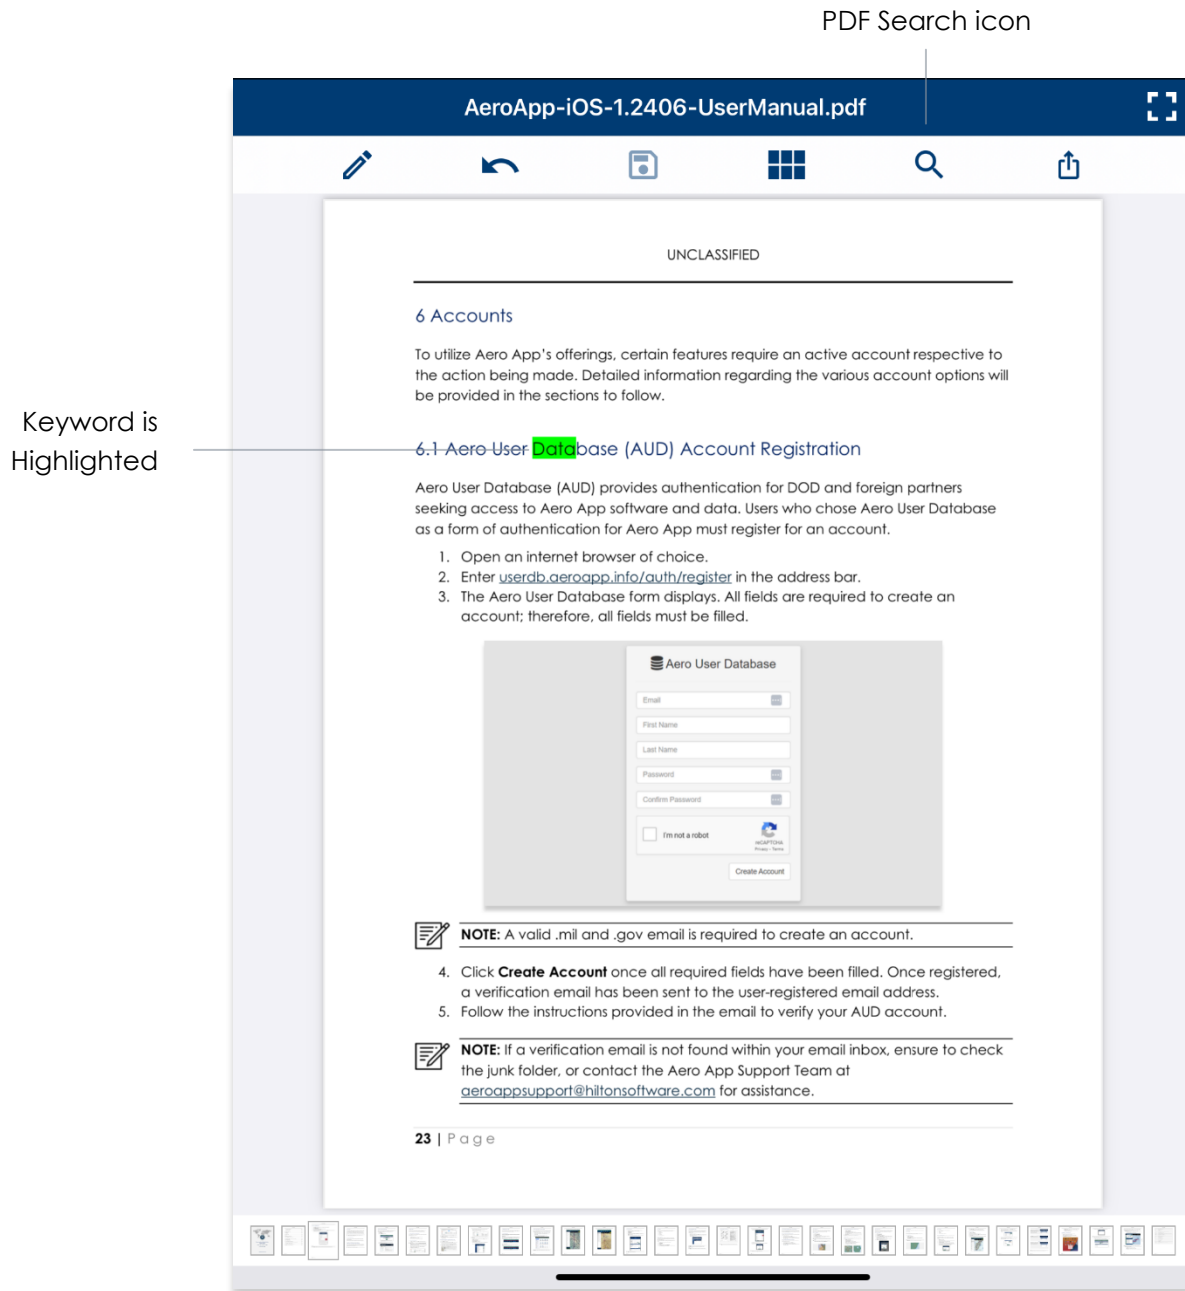

## 18.3 PDF Markup

Users can draw and highlight text on a PDF. The markings will be saved on Aero App and can be later accessed.


1. Navigate to your desired PDF file.
2. Tap on the **Pencil** Icon to enable drawing mode.
3. Make the desired markings anywhere on the PDF file.
4. Tap the **Pencil** Icon again to disable drawing mode.
5. Tap the **Reverse** Icon to undo your recent markup.
6. Tap the **Diskette** Icon to save all markups on your PDF file.
7. Long-press on your desired text in the body of your document.
8. A magnified view will appear, select **Highlight** and your text will be highlighted.

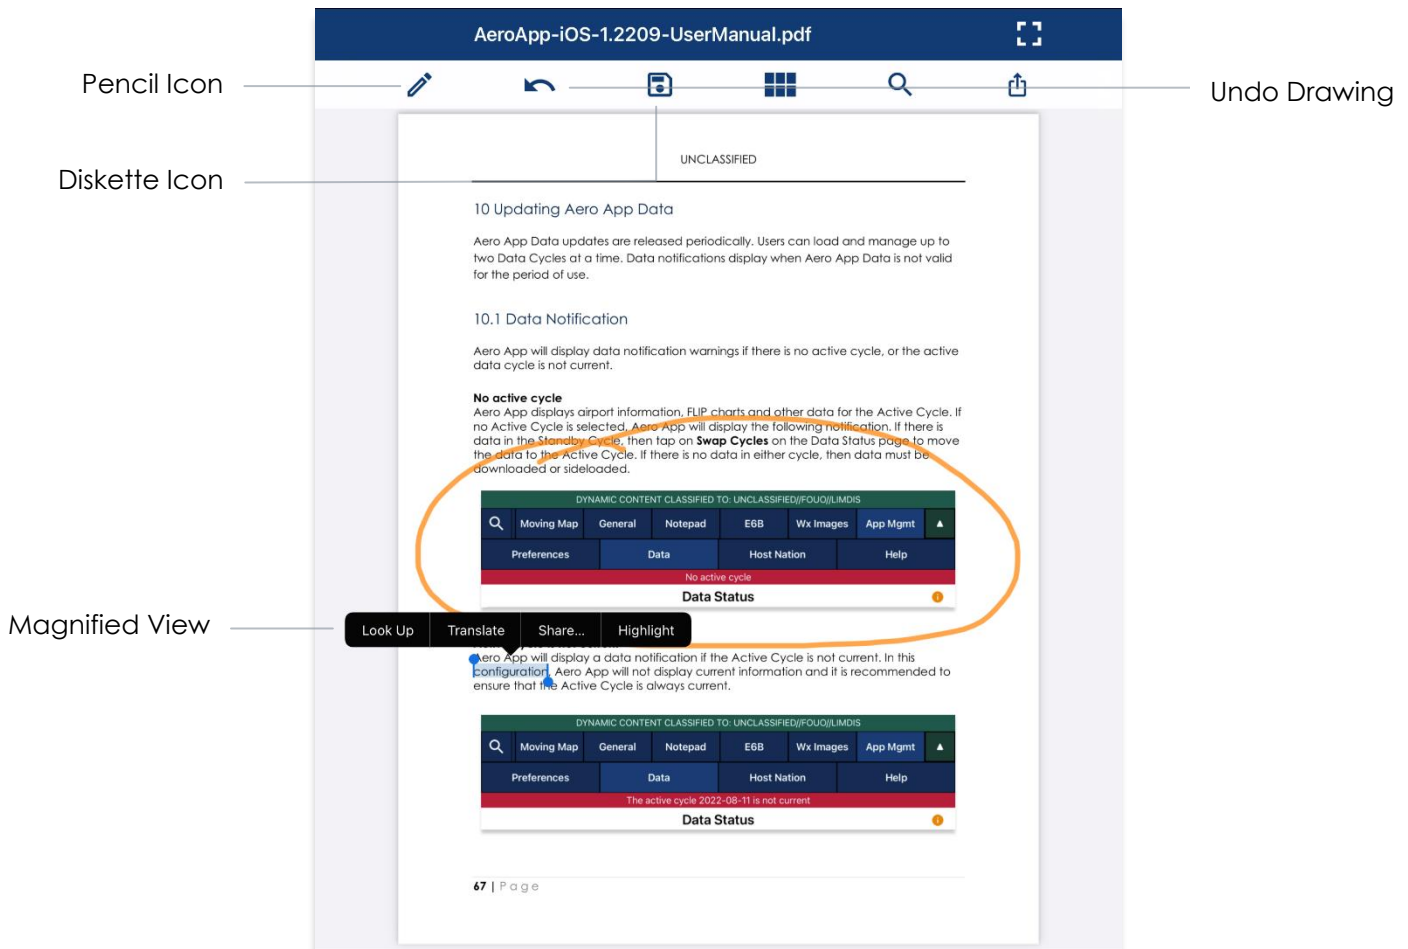




## 18.4 Share or Copy

1. Display desired PDF.
2. Tap on the **Share** icon.
3. Users will be presented with additional PDF options such as Copy, Markup, Print, Add Tags, and Save to Files. Select desired option.

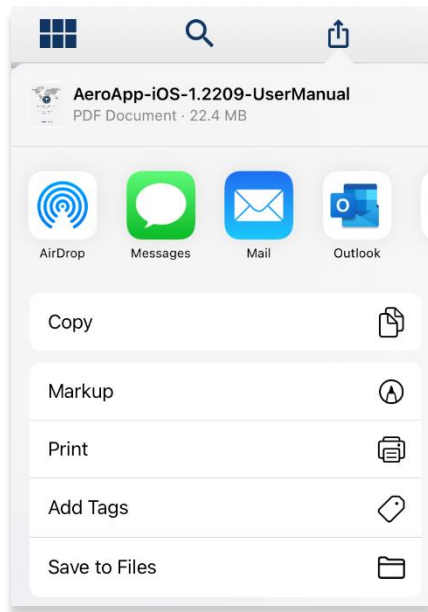

## 18.5 Print

1. Display selected PDF.
2. Tap the **Share** button, then select **Print**.
3. Adjust the print configurations to desired preference.
4. Tap **Print**.

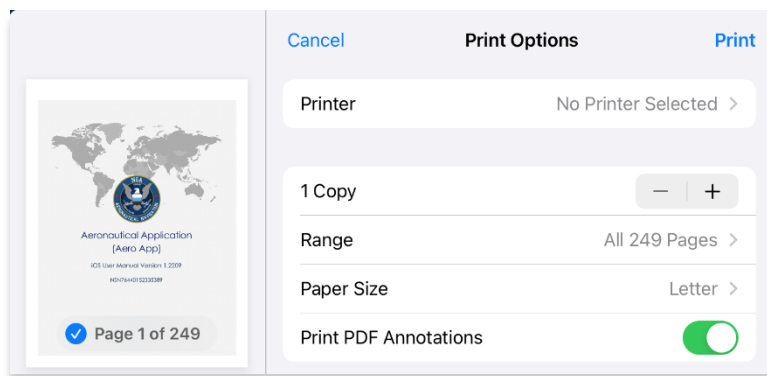

## 19 Appendix E | FAA Addendum

The sections ahead will elaborate on the additional features Aero App offers FAA users.


### 19.1 Downloading FAA Data

Pilots with Aero User Database (AUD) credentials and who have access to FAA as their government foreign partner will have access to the FAA data. To obtain FAA features, the FAA partner must be selected, and Global and CONUS Part 1 cycle must be included when downloading data.

### 19.2 FAA Special Procedure

FAA Special Procedures are available for certain ICAOs within CONUS. With FAA data loaded, users can view FAA Special charts through Active Point Search, the Route, or on the Map. Airport charts such as IAP, DEP, ARR will include FAA Special labels.

1. Search for an airport of choice.
2. Tap **Active Point** on the **Main Menu**. The Active Point options will display. Alternatively, users can tap an ICAO from the Route or the Map, select Show from the Identifier Menu, and tap Info and Wx.
3. Select desired airport chart type (IAP, DEP, or ARR). The selected chart will display.
4. Tap on the **ribbon** located at the top of the view to switch between charts.

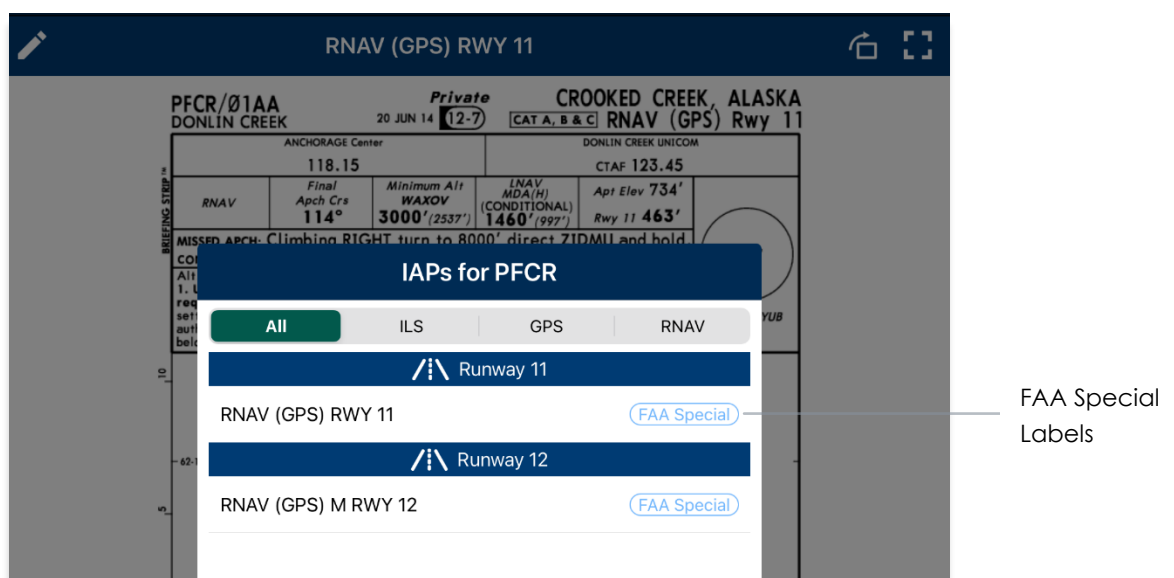

## 19.3 ILS-1 Maneuvers

Aero App supplies Instrument Landing System (ILS-1) to FAA users which provides short-range assistance when approaching a runway.

1. Tap an ICAO from the Map or Route Panel to directly display the Identifier Menu. Alternatively, users can select an ICAO from the Nearest popup.
2. The Identifier Menu will appear. Select **Show** from the side menu.



**NOTE:** The ILS feature may not be available for certain airports, therefore the ILS option will be disabled.


3. Tap **ILS-1**.
4. The ILS-1 popup will appear with a list of runways. Select desired runway and the ILS-1 creation popup will display.

| ILS-1 KBLV |         |
|------------|---------|
| IBTC       | RWY 14L |
| IOXK       | RWY 14R |
| IBLV       | RWY 32L |
| IJDU       | RWY 32R |


5. Enter values in their respective text fields.
6. Tap to enable Back Course to reverse the position of the ILS-1.

| IOXK        |             |
|-------------|-------------|
| Arc 1       | 10.0 nm 35° |
| Arc 2       | 18.0 nm 10° |
| Back Course | Off         |
| ✓ Show      |             |

7. Tap **Show** and the ILS-1 will overlay on the Map.

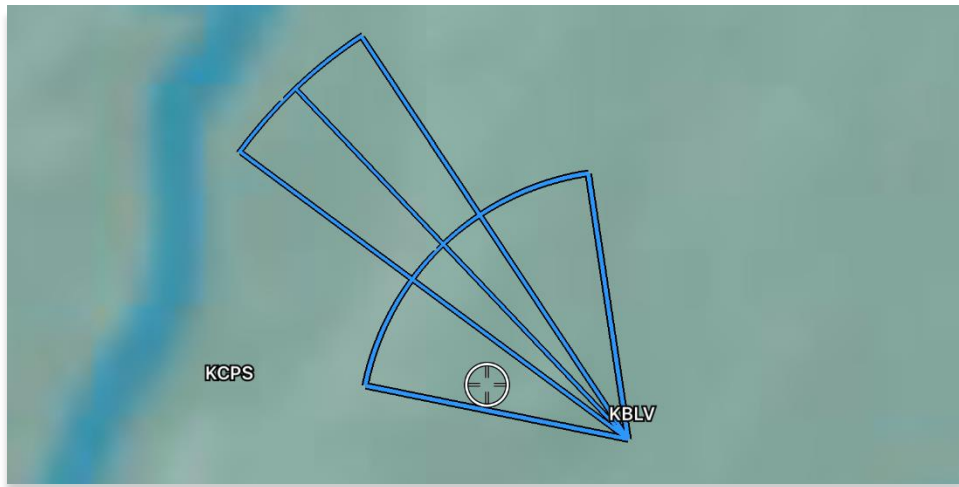

8. To remove the pattern, tap on the ILS-1 maneuver on Map and tap **Hide ILS-1**. The overlay will disappear from the Map.

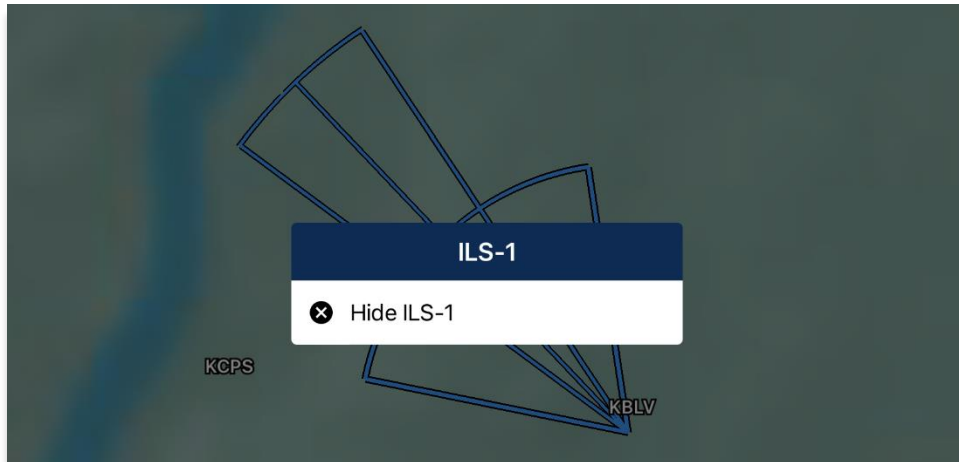

## 19.4 Add Instrument Approach Procedure (IAP) to Route


Aero App enables users to add Instrument Approach Procedures (IAP) to their route.

1. Ensure that a route is loaded in the Route Panel.
2. Tap **Map** on the **Main Menu**.
3. Select the destination airport on the **Route Panel** or the **Map**.




**NOTE:** Select airports will have IAPs available.

4. Select **Add** from the side menu.
5. Tap **IAP**.
6. A list of IAPs for the identifier will be displayed. Select an **IAP filter** from the segmented control.
7. IAPs are grouped by runways. Select desired **runway**.
8. Once selected, the Initial Fix will become selectable. Tap the drop-down button and select an **initial fix**.
9. Tap **Add to Route**.

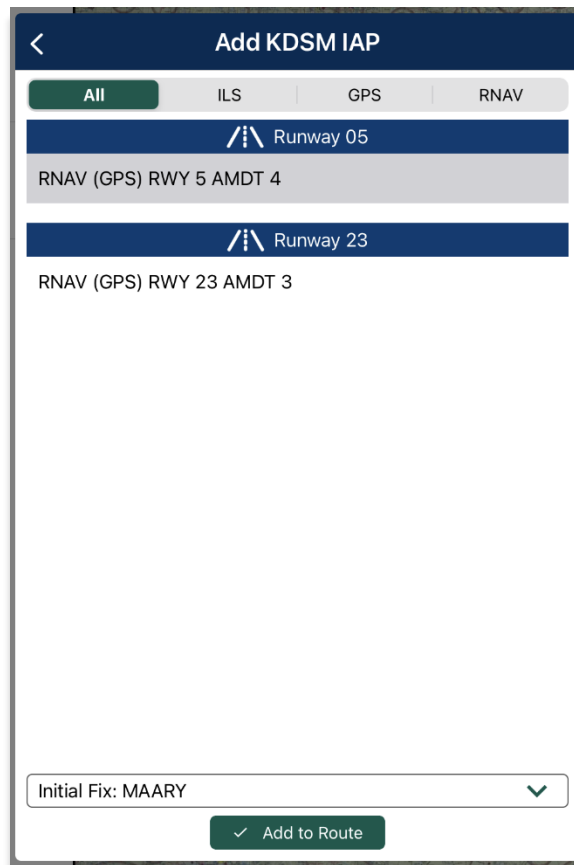

10. The procedure will populate to the Route Panel and the Map.

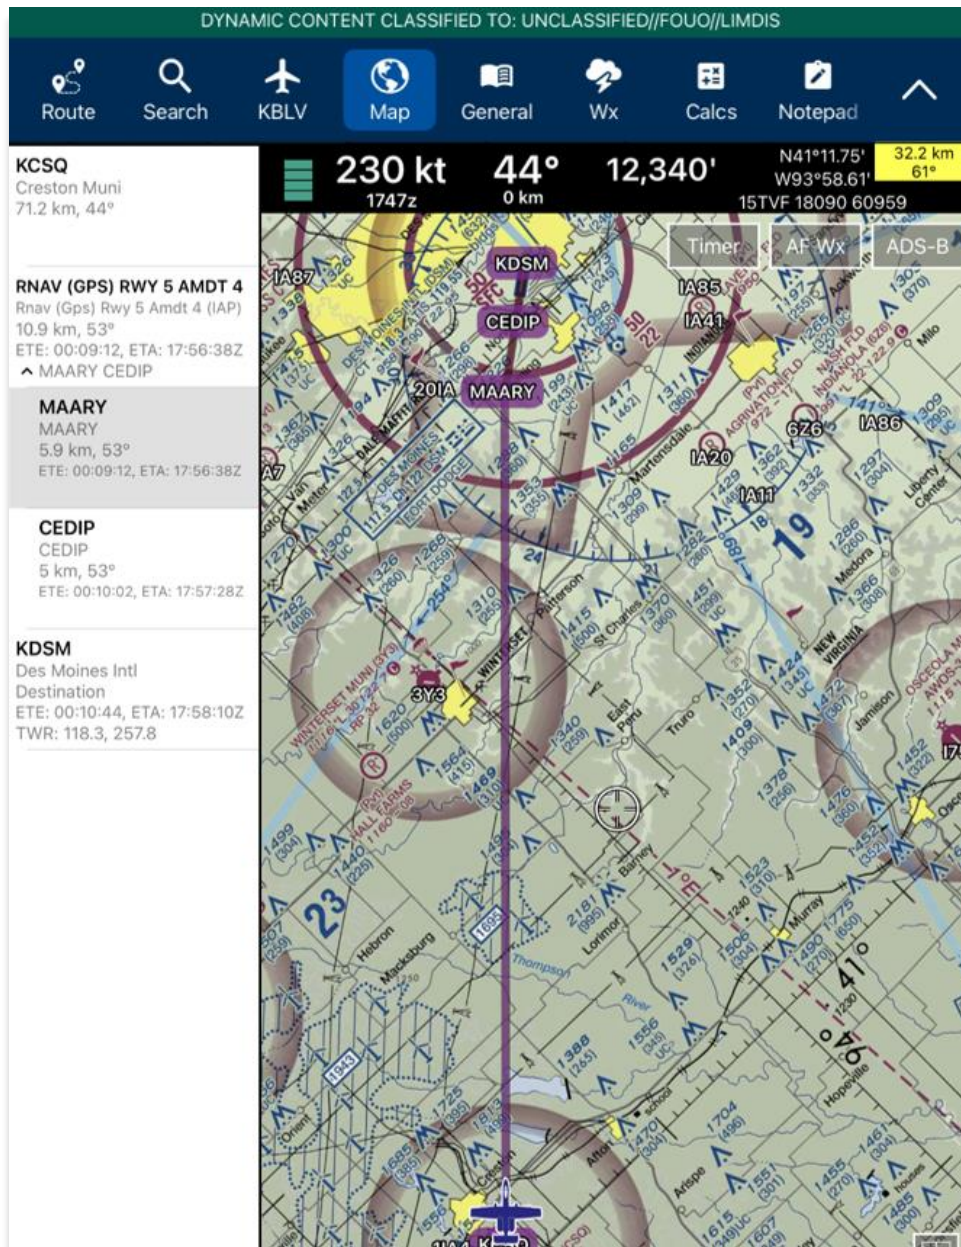

## 19.5 Departure Procedures (DPs) and Standard Terminal Arrival Routes (STARs)

Aero App allows FAA users to include Departure Procedures (DPs) and Standard Terminal Arrival Routes (STARs) when planning their flight route. To access these features, users need to download Global and CONUS Part 1 data from the FAA partner.

### 19.5.1 Add FAA Uncertified Procedure to Route

Users have the option to add FAA uncertified procedures to their flight route. Uncertified procedures will not have charts but can still be added to the route.

1. Choose an airport of choice from the **Route Panel** or the **Map** (Airport should be part of the route).
2. The Identifier Menu will appear. Select **Add** from the side menu.
3. Select **DP** or **STAR**.



**NOTE:** DP and/or STAR options may not be available for select airports.

4. The procedure selection popup will display. A segmented controller located at the top of the view displays options for **FAA and FLIP** and **FAA – Uncertified**. Select **FAA – Uncertified**.

Source Filter

Add KLAS DP

FAA and FLIP FAA - Uncertified

Procedure

Transition

First Waypoint

Add KLAS STAR

FAA and FLIP FAA - Uncertified

Procedure

Transition

Last Waypoint

5. Tap the Procedure drop-down and select desired **Procedure**.
6. The Transition field will become selectable. Tap the Transition drop-down and select desired **Transition**.
7. The First Waypoint (for DP) or Last Waypoint (for STAR) field will become selectable. Tap the First Waypoint or Last Waypoint drop-down and select desired **Waypoint**.



**NOTE:** When there is only one option available in a field, that option is automatically selected.

8. Tap **Add to Route**.

Back arrow | Add KLAS DP

FAA and FLIP | FAA - Uncertified

Procedure: NIITZ4

Transition: IWANS

First Waypoint: FLAAR

Uncertified Procedure chart not available

✓ Add to Route

Back arrow | Add KLAS STAR

FAA and FLIP | FAA - Uncertified

Procedure: JAYSN3

Transition: BYRDY

Last Waypoint: WAPID

Uncertified Procedure chart not available

✓ Add to Route



## 19.5.2 Show DPs and STARs


Aero App enables users to preview Departure Procedures (DPs) and Standard Terminal Arrival Route (STARs) on the Map.

1. Choose an airport of choice from the **Route Panel** or the **Map** (Airport should be part of the route).




**NOTE:** DP and/or STAR options may not be available for select airports.


2. The Identifier Menu will appear. Tap **Show** from the side menu.
3. Scroll to the bottom of the popup to display additional options. Select **DPs** or **STARs**.
4. The Show <identifier> DPs or Show <identifier> STARs popup will appear. A segmented controller located at the top of the view displays options for **All**, **FAA** and **FLIP**, and **FAA – Uncertified**. Select desired source.

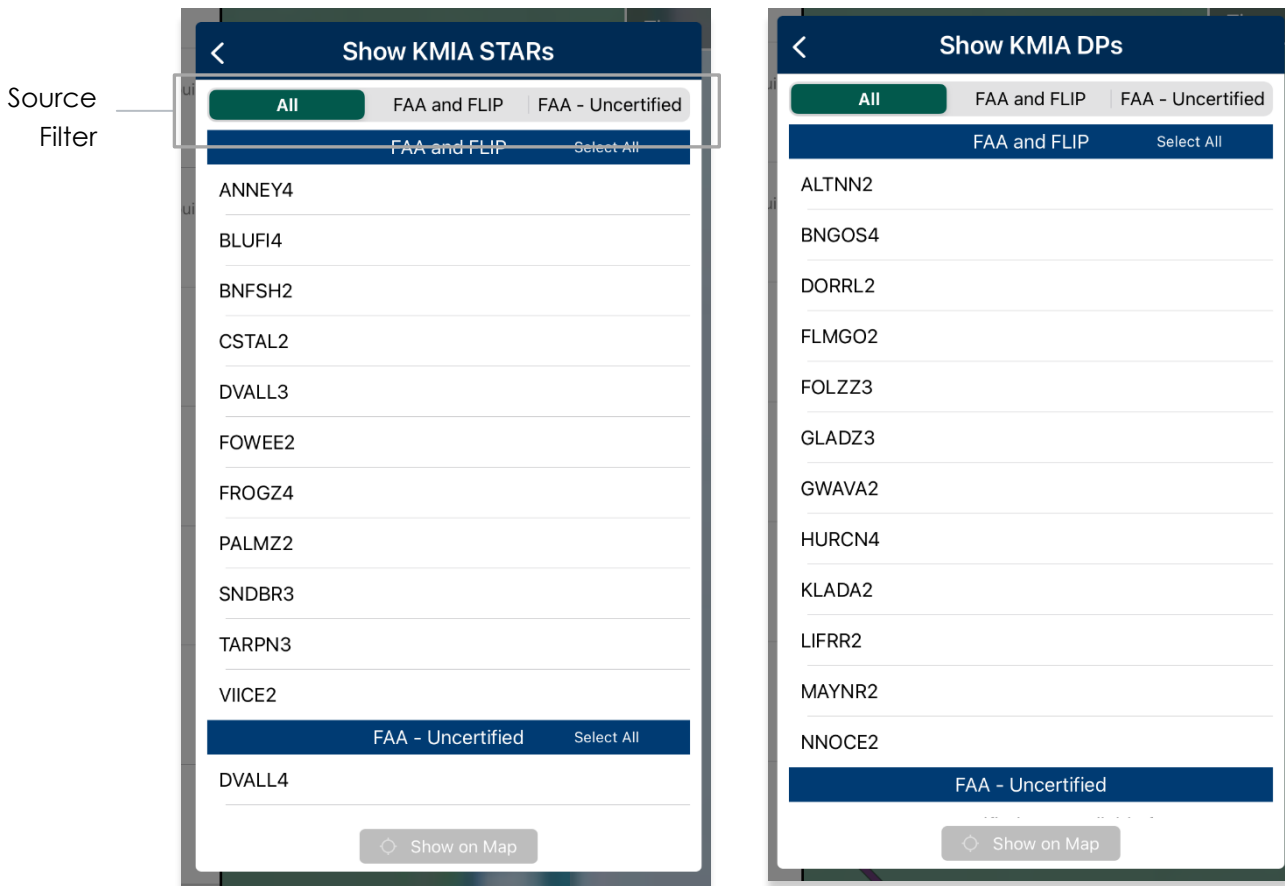

5. Tap to select **individual procedures** or tap **Select All** on the section header.
6. Tap **Deselect All**, to clear selections, if necessary.
7. The Show on Map button will become selectable. Tap **Show on Map**.
8. The procedure will be previewed on the Map.

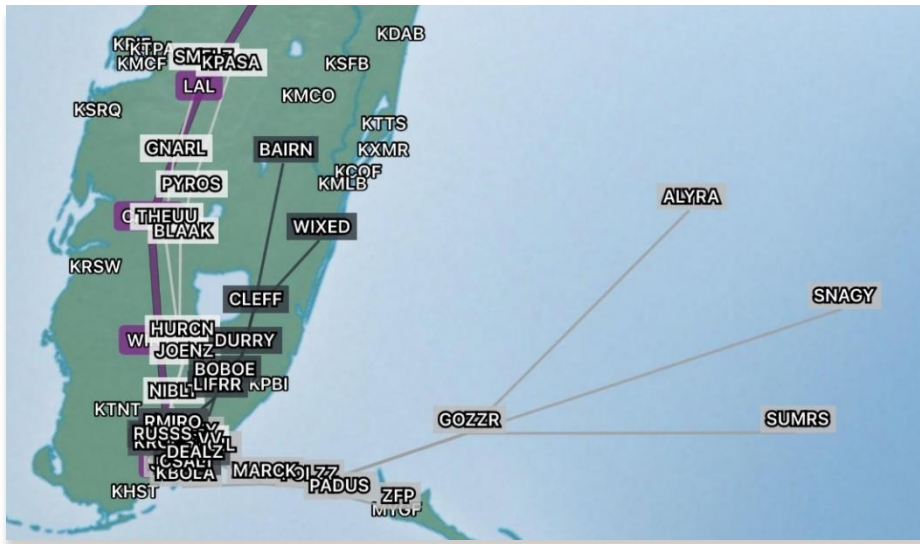



9. Tap a procedure on the Map.
10. A popup will display with options to Add <procedure> or Hide <procedure>. Select **Add <procedure>**.

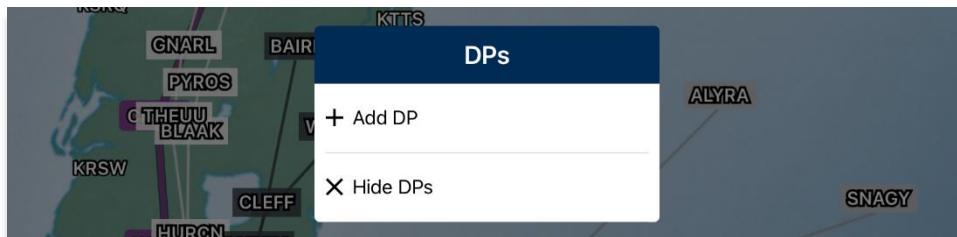

**NOTE:** The Hide <procedure> option hides procedure previews from the map.

11. The Add <procedure> popup displays a list of procedures selected to preview on the Map. Select desired procedure.

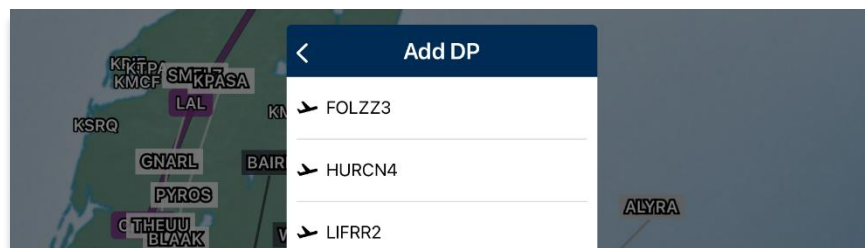


- 
-  **NOTE:** When there is only one option available in a field, that option is automatically selected.
- 

- [illegible]


1. Ensure that a route is loaded in the Route Panel.
2. Tap **Map** on the **Main Menu**.
3. Select a desired point on your route. The Identifier Menu will appear.
4. Select **Add** from the side menu.
5. Select **Controlling Obstacle**. The Select Procedure popup menu will appear.
6. Tap to select or slide the segmented controller to desired procedure (IAP, Dep, or Arr).
7. Select desired chart.



8. Notice the *Start* and *End* dropdown buttons become selectable. Tap **Start** to display *Start Fix* options. Select desired **Start Fix**.

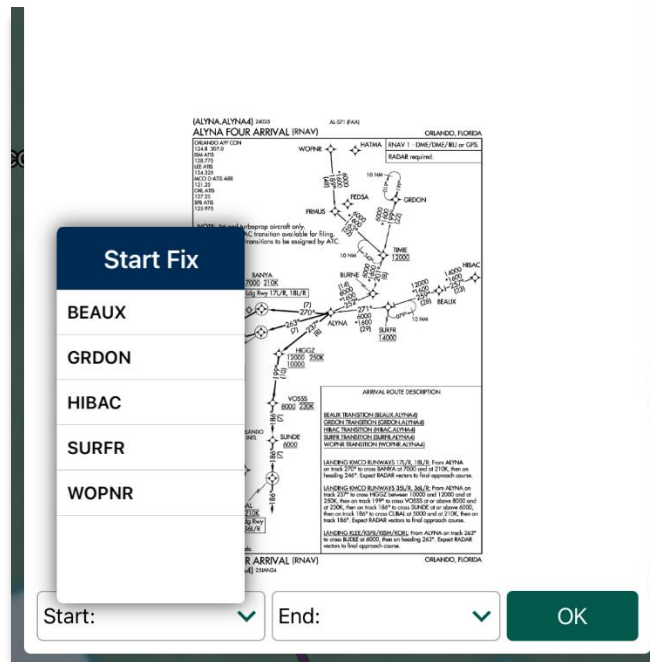

9. Tap **End** to display *End Fix* options. Select desired **End Fix**.

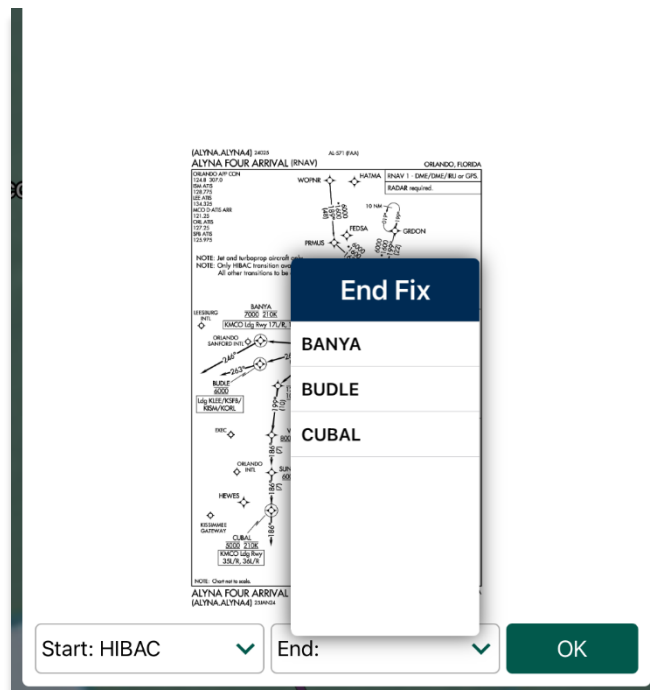



**NOTE:** The selected fix will filter the options for the opposite fix (e.g. selecting a Start Fix will filter options for End Fixes).



**NOTE:** In the case a fix was not selected, the default display for IAP includes all intermediate segments, final segments, missed approach segments with aircraft category D or no aircraft category specified, fixes, runways, and obstacles for visible segments.




**NOTE:** In the case a fix was not selected, the default display for Dep/Arr includes all primary segments, fixes, runways, and obstacles for visible segments.




**NOTE:** If a procedure does not have start/end fixes, the Start/End dropdown buttons will remain disabled and all segments, runways, fixes, and obstacles for visible segments will be shown.

10. Tap **OK** once selections are complete. Your controlling obstacle will overlay on the Map.

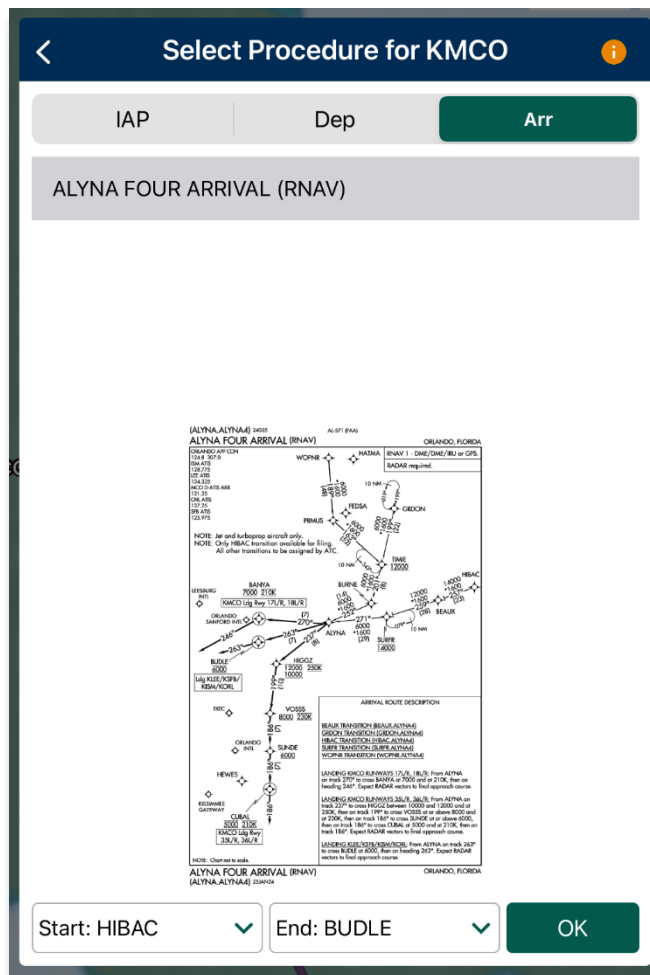

The controlling obstacle will display all its respective points. Users have the option to select and deselect desired points to show on the Map. Tap the Controlling Obstacle overlay, and the following options will display:


- **Modify Overlay** – provides overlay configuration options such as:
  - **Show Obstacle Labels** – when enabled, each VO will display a red label containing its respective name and height in feet.

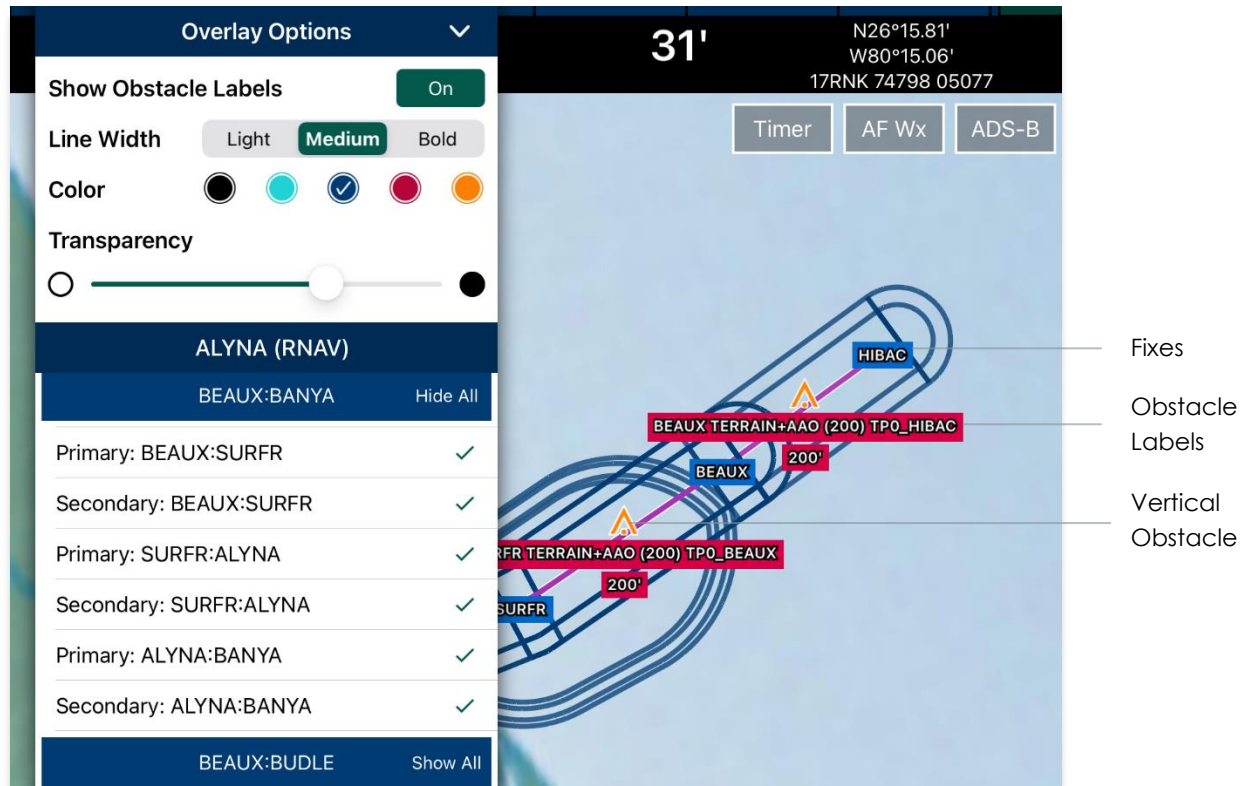

**NOTE:** Selecting a vertical obstacle (orange obstacle icon) will display its respective obstacle information.

- **Line Width** – options to adjust the line weight
- **Color** – options to switch the overlay's line color
- **Transparency** – options to adjust the translucency of the overlay display

- **Hide All/ Show All/ or individual selections** – hide All deselects all points and Show All selects all points for the respective category. Users have the option to individually select desired points. Every action will update the display on the Map in real-time.

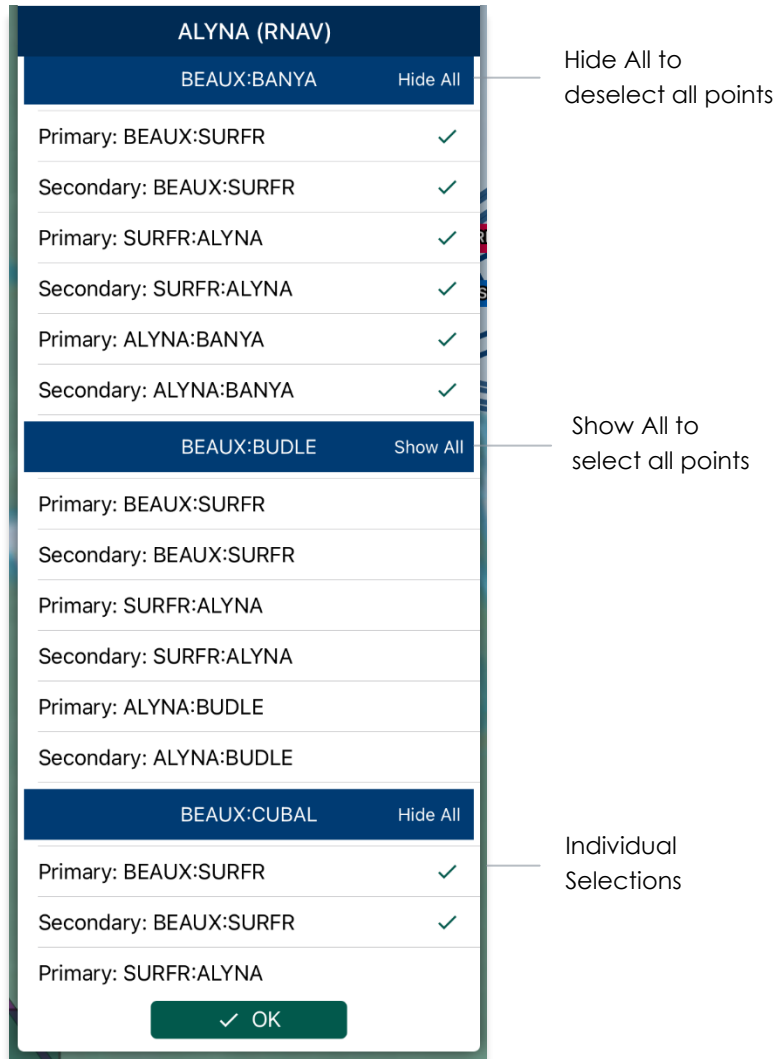

- **Hide Overlay** – stores away overlay
- **Overlay Info** – provides a collection of obstacles that includes its respective segment, entry and exit fix, AGL, MSL, and type.




**NOTE:** The blue labels on the overlay are the names of the fixes.




## 19.7 Authorized Aircraft Service Centers

Aero App enables users to overlay Authorized Aircraft Service Centers on the Map. Authorized Aircraft Service Centers are locations where aviation services supply immediate transportation to emergency and non-emergency situations from locations globally. Authorized Aircraft Service Centers are presented by blue wrench icons displayed on the Map.

1. Tap **Map** on the **Main Menu**.
2. Navigate to **Map Manager** located at the lower right of the Map view. The Map Manager popup will appear.
3. Select **Overlays** from the navigation bar
4. Select **Aero Overlays** from the side menu, if necessary.
5. Tap to enable **Service Centers** and wrench icons will populate the available locations of the Map.

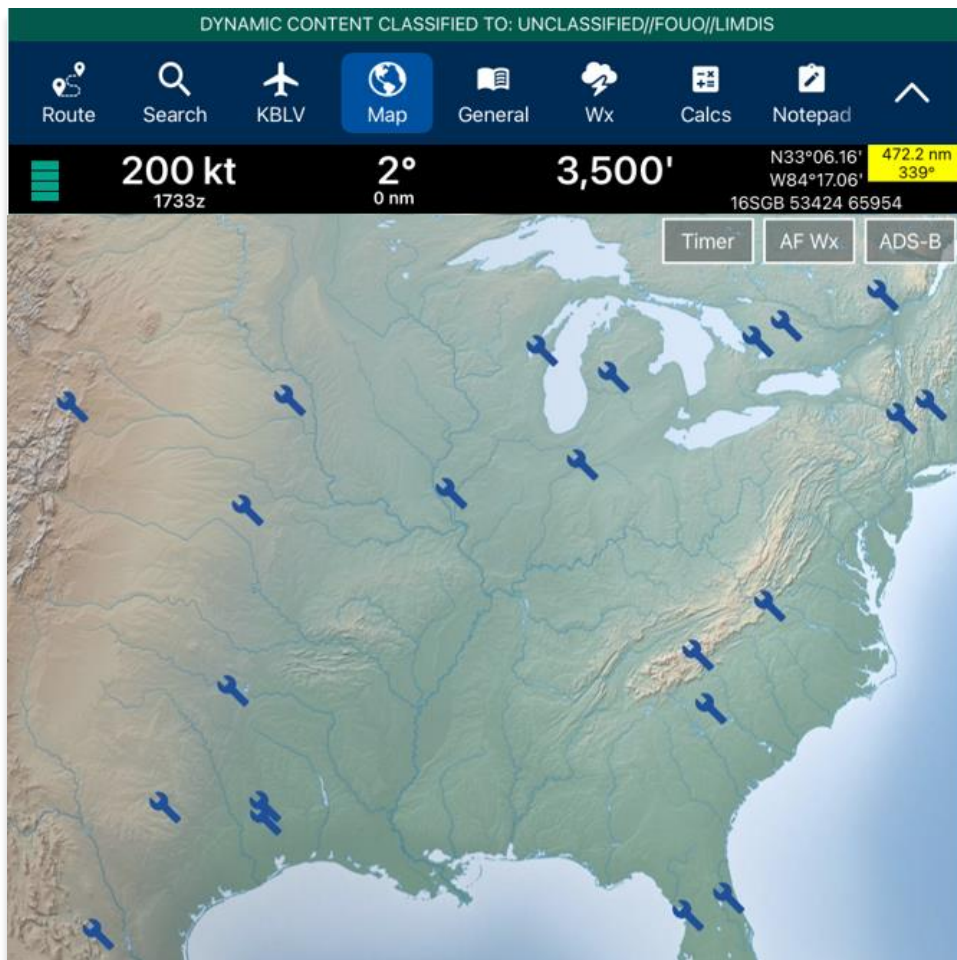


- By tapping the **Service Centers** icon, a popup will display with the respective service center information.

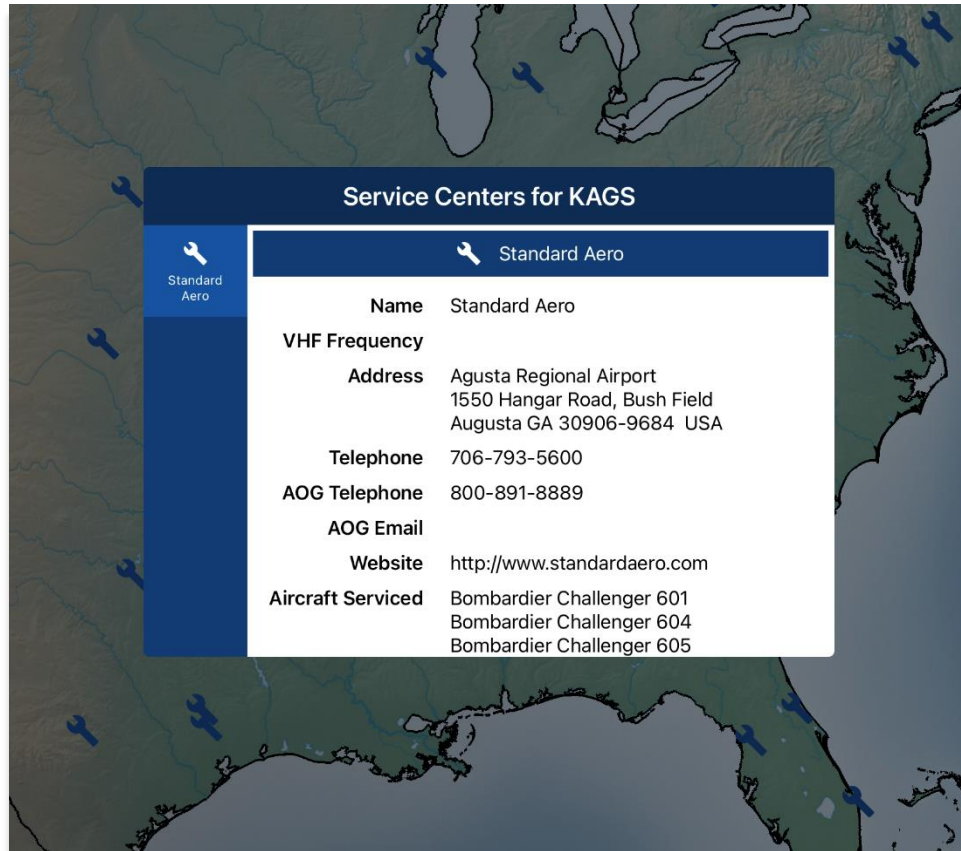


## 19.8 Import and Display Scheduled Flight Inspection Itineraries

Aero App enables users to import their Flight Operations Management Systems (FOMS) itineraries to Aero App which grants users the ability to overlay the route on the Map.

1. To share an itinerary with Aero App, launch the FOMS app and navigate to an itinerary item.
2. Tap on the **Share** button and select desired method of sharing.
3. From your device, navigate to the appropriate platform which the itinerary item was shared to.
4. Tap **Save** and select **Aero App**.
5. To verify if the files have been properly imported, navigate to the **Map Manager** on the Map.
6. Select **Overlays** from the navigation bar.
7. Select **Aero Overlays** from the side menu.

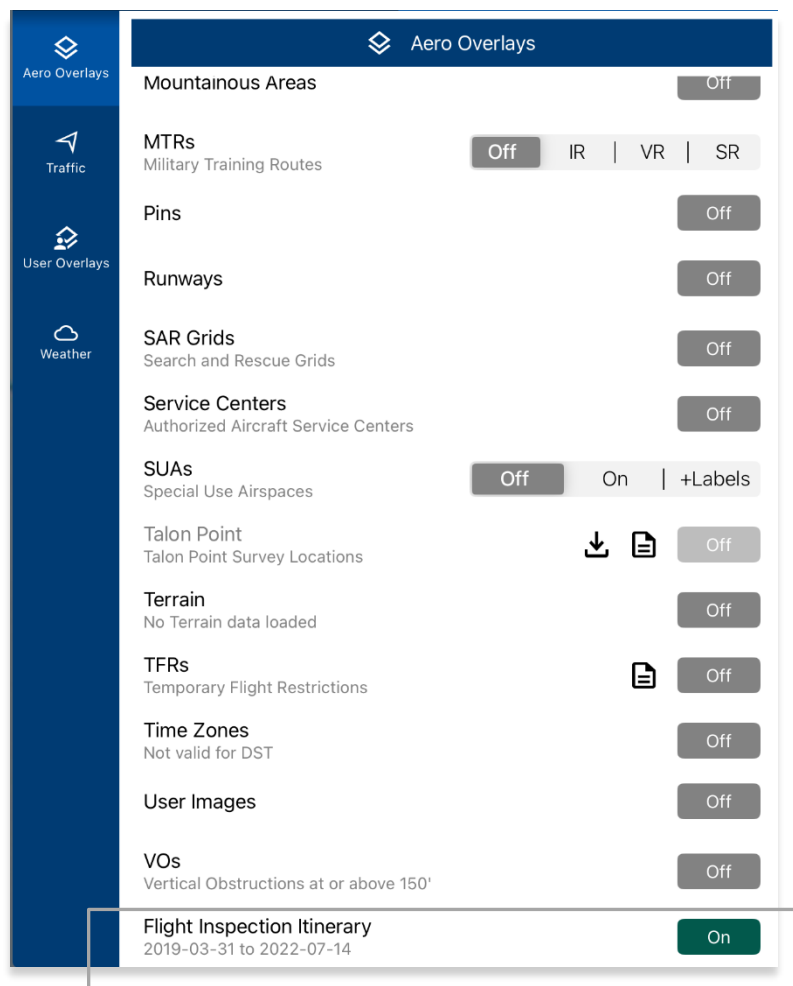

8. Locate the Flight Inspection Itinerary then tap to enable the option. The route will be displayed on the Map.

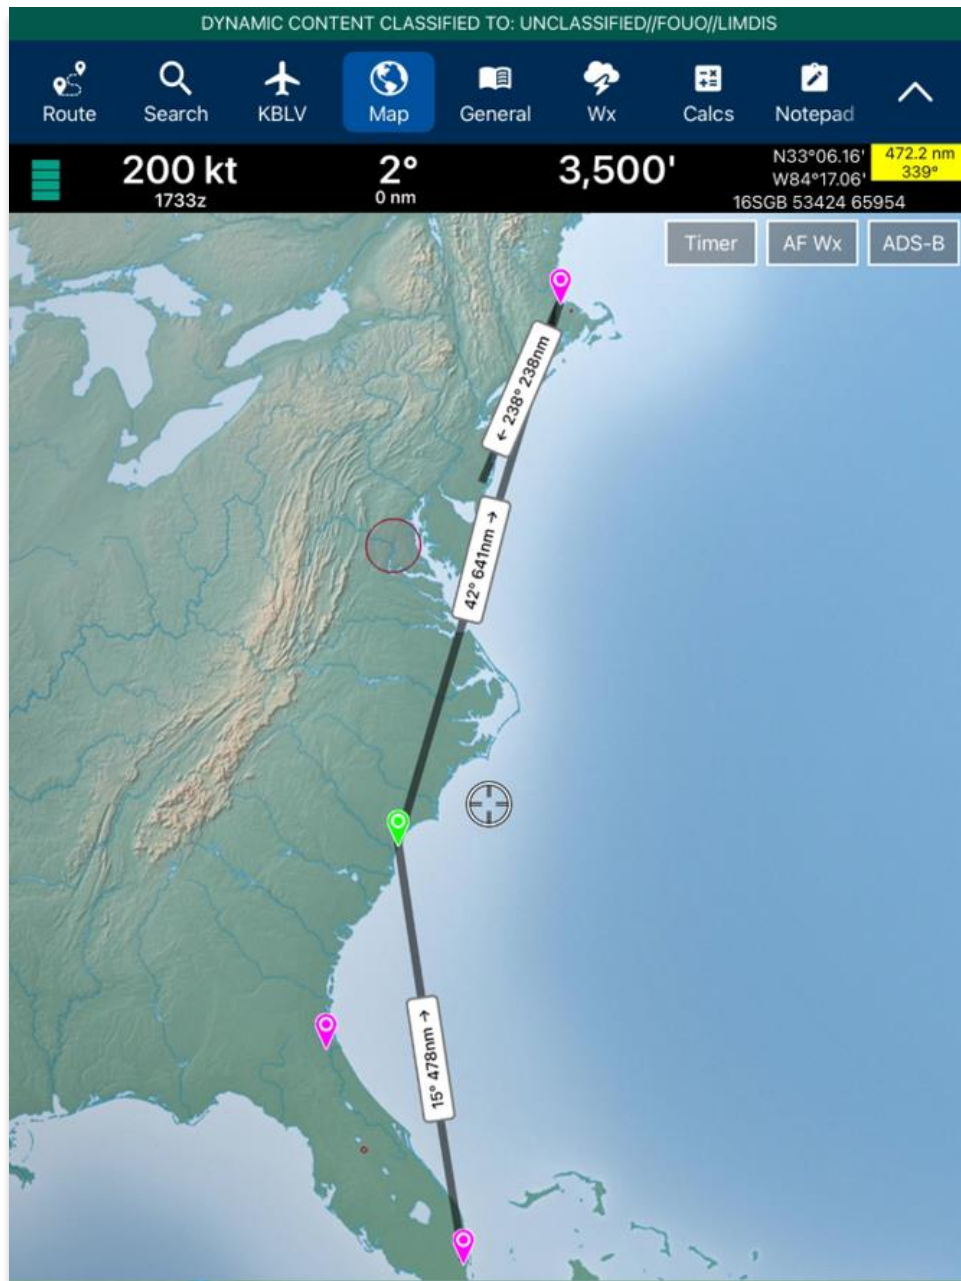


**NOTE:** One Flight Inspection Itinerary can be loaded at a time. Loading a new Flight Inspection Itinerary will result in deleting the previous itinerary.

## 19.9 Add KML Coordinates to Route

Aero App enables users to add KML coordinates to route. KML routes can be obtained from [flightaware.com](http://flightaware.com) then sideloaded into Aero App.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Navigate to the **Route Manager** located at the bottom of the view.
3. Select **Actions** from the side menu, if necessary.
4. Tap **Load**.
5. Locate and tap the desired KML route. The route will populate to the *Route Panel* and the *Map*.

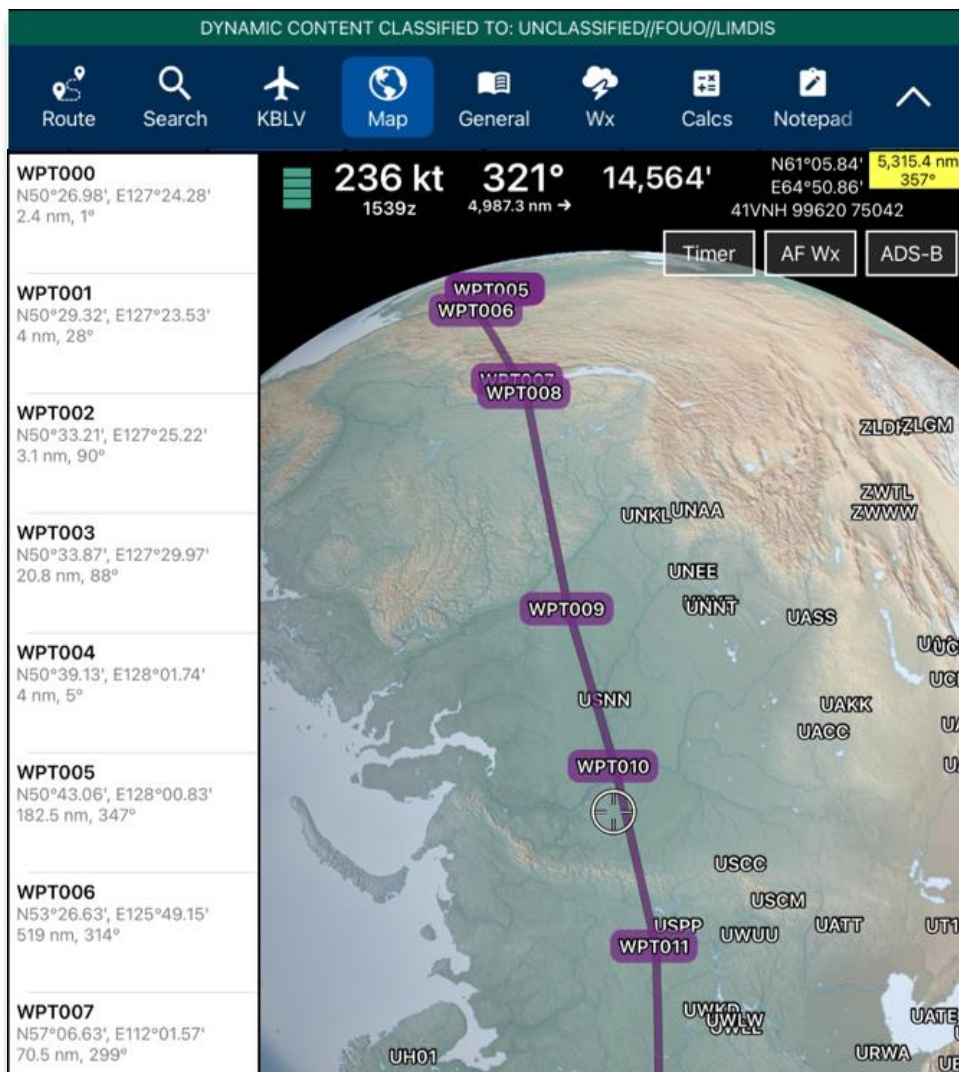

6. To delete a KML route, swipe right-to-left- to reveal the delete button. Tap **Delete**.



### 19.9.1 Show KML Coordinates in Show Routes

Users can display KML coordinates in Show Routes. Ensure that KML coordinates are sideloaded into Aero App.

1. Tap **Route** on the **Main Menu**. The Route Panel will expand.
2. Navigate to the **Route Manager** located at the bottom of the view.
3. Select **Show** from the side menu.
4. Select **Routes**. The *Show Routes* will be displayed.
5. Select desired KML route. The route will populate to the *Route Panel* and the *Map*.



## 20 Appendix F | Acronyms and Glossary

|             |                                                                                                                               |
|-------------|-------------------------------------------------------------------------------------------------------------------------------|
| A/FD        | Airport Facility Directory                                                                                                    |
| ADDS        | Aviation Digital Data Service                                                                                                 |
| ADS         | Aero Data Server                                                                                                              |
| ADS-B       | Automatic Dependent Surveillance-Broadcast                                                                                    |
| AF Wx       | Air Force Weather                                                                                                             |
| AirDrop     | Ad-hoc service in Apple's macOS and iOS operating systems which enables the transfer of files among supported Apple computers |
| AIRMET      | Airmen's Meteorological Information                                                                                           |
| Alt Min     | Alternate Minimums                                                                                                            |
| AP          | Area Planning                                                                                                                 |
| APD         | Airport Diagram                                                                                                               |
| App Mgmt    | Application Management                                                                                                        |
| AQP         | Advanced Qualification Program                                                                                                |
| AR          | Air Refueling Route                                                                                                           |
| ARR         | Airport Arrival Procedure                                                                                                     |
| ARTCC       | Air Route Traffic Control Center                                                                                              |
| ASPS        | Aeronautical Source Packaging Service                                                                                         |
| AUD         | Aero User Database                                                                                                            |
| AvGas       | Aviation Gasoline                                                                                                             |
| AWS         | Amazon Web Services                                                                                                           |
| Breadcrumbs | GPS points along a flight path                                                                                                |
| CAC Card    | Common Access Card                                                                                                            |
| CONUS       | Contiguous United States                                                                                                      |
| CRD         | Common Route Definition                                                                                                       |
| CSA         | Caribbean and South America                                                                                                   |
| Delta       | Upgrades from previous data cycles that only include changes                                                                  |
| Dep         | Airport Departure Procedures                                                                                                  |
| DINS        | Defense Internet NOTAM Service                                                                                                |
| DLA         | Defense Logistics Agency                                                                                                      |
| Docs        | User-defined content loaded into document library                                                                             |
| DOD         | Department of Defense                                                                                                         |
| DP          | Departure Procedures                                                                                                          |
| DSN         | Defense Switched Network                                                                                                      |
| DVD         | Digital Versatile Disc                                                                                                        |
| E6B         | Aviator's calculator                                                                                                          |
| EEA         | Eastern Europe and Asia                                                                                                       |
| EFB         | Electronic Flight Bag                                                                                                         |
| E-IPL       | Electronic – Instrument Procedure Library                                                                                     |
| ENAME       | Europe, North Africa, and Middle East                                                                                         |
| ETA         | Estimated Time of Arrival                                                                                                     |
| ETE         | Estimated Time Enroute                                                                                                        |
| FAA         | Federal Aviation Administration                                                                                               |
| FIR         | Flight Information Region                                                                                                     |
| FIS-B       | Flight Information Services-Broadcast                                                                                         |
| FLIP        | Flight Information Publications and Flight Information Products                                                               |

|            |                                                                                                                                                           |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ft         | Foot                                                                                                                                                      |
| GARS       | Global Area Reference System                                                                                                                              |
| GB         | Gigabyte                                                                                                                                                  |
| GEOAxis    | Credentials authentication provider for the government                                                                                                    |
| GEOINT     | Geospatial Intelligence                                                                                                                                   |
| GPS        | Global Positioning System                                                                                                                                 |
| GS         | Ground Speed                                                                                                                                              |
| Hdg        | Heading                                                                                                                                                   |
| IAP        | Instrument Approach Procedures                                                                                                                            |
| iBook      | E-book application by Apple                                                                                                                               |
| ICAO       | International Civil Aviation Organization that assigns airport code or location indicator as an alphanumeric code designating aerodromes around the world |
| IFR        | Instrument Flight Rules                                                                                                                                   |
| iOS        | Mobile operating system created by Apple                                                                                                                  |
| IP         | Internet Protocol                                                                                                                                         |
| IPA        | iOS application archive file which stores an iOS app                                                                                                      |
| IR         | Instrument Routes                                                                                                                                         |
| KG         | Kilogram                                                                                                                                                  |
| KM         | Kilometer                                                                                                                                                 |
| KML        | Keyhole Markup Language                                                                                                                                   |
| KMZ        | Keyhole Markup Language Zipped                                                                                                                            |
| Kt         | Knot                                                                                                                                                      |
| LAHSO      | Land and Hold Short Operations                                                                                                                            |
| Lat, Lon   | Latitude and Longitude                                                                                                                                    |
| Lbs        | Pounds                                                                                                                                                    |
| LIFR       | Low Instrument Flight Rules                                                                                                                               |
| M          | Meter                                                                                                                                                     |
| macOS      | Current series of Unix-based graphical operating systems by Apple                                                                                         |
| MDM        | Mobile Device Management                                                                                                                                  |
| METAR      | Meteorological Aerodrome Report. Aviation Routine Weather Report, a format for reporting weather information                                              |
| Mgmt       | Management                                                                                                                                                |
| MGRS       | Military Grid Reference System                                                                                                                            |
| Map        | Navigation system displaying the receiver's current location at the center of a map                                                                       |
| MTR        | Military Training Routes                                                                                                                                  |
| NavAid     | A device or system that provides a navigator with navigation data                                                                                         |
| NEXRAD     | Next-Generation Radar                                                                                                                                     |
| NGA        | National Geospatial-Intelligence Agency                                                                                                                   |
| NGA GEOINT | NGA web-based capabilities for online, on-demand discovery, and access to geospatial intelligence                                                         |
| NIPRnet    | Non-Secure Internet Protocol Router Network                                                                                                               |
| NM         | Nautical Mile                                                                                                                                             |
| NOAA       | National Oceanic and Atmospheric Administration                                                                                                           |
| NOTAM      | Notice to Airmen                                                                                                                                          |
| NSN        | National Stock Number                                                                                                                                     |
| OCONUS     | Outside Contiguous US                                                                                                                                     |
| PAA        | Pacific, Australasia, and Antarctica                                                                                                                      |
| PDF        | Adobe Portable Document                                                                                                                                   |



---

|            |                                                                                |
|------------|--------------------------------------------------------------------------------|
| PIREP      | Pilot Report                                                                   |
| PKI        | Public Key Infrastructure                                                      |
| POC        | Point of Contact                                                               |
| Prog Chart | A map displaying the likely weather forecast for a future time                 |
| RNAV       | Area navigation, a method of IFR navigation                                    |
| SAR        | Search and Rescue                                                              |
| SD Card    | Secure Digital High-Capacity card                                              |
| Shapefile  | Geospatial vector data format for geographic information system (GIS) software |
| SID        | Standard Instrument Departure                                                  |
| SIGMET     | Significant Meteorological Information                                         |
| SM         | Statute Mile                                                                   |
| SQLite     | Relational database management system                                          |
| SR         | Slow Speed Low Altitude Routes                                                 |
| STAR       | Standard Terminal Arrival Route                                                |
| SUA        | Special Use Airspace                                                           |
| TAC        | Terminal Area Chart                                                            |
| TAF        | Terminal Aerodrome Forecast                                                    |
| TFRs       | Temporary Flight Restrictions                                                  |
| TO Min     | Takeoff Minimums                                                               |
| UIR        | Upper Information Region                                                       |
| USB        | Universal Serial Bus                                                           |
| VFR        | Visual Flight Rules                                                            |
| VO         | Vertical Obstruction                                                           |
| VR         | Visual Routes                                                                  |
| Waypoint   | A set of coordinates that identify a point in physical space                   |
| WCA        | Wind Correction Angle                                                          |
| Wx         | Weather                                                                        |
| XTK        | Crosstrack                                                                     |